

Video Cassette Recorder

Operating Instructions



SLV-SE840N

Hi-Fi SHOWVIEW[®]

SLV-SE740N

Hi-Fi SHOWVIEW[®]

SLV-SX740N

Hi-Fi SHOWVIEW[®]

SLV-SE640N

Hi-Fi

SLV-SE440K

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Mains lead must only be changed at a qualified service shop.

Precautions

Safety

- This unit operates on 220 – 240 V AC, 50 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the mains as long as it is connected to the mains, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

Installing

- Do not install this equipment in a confined space such as a book or similar unit.
- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about three hours before operating the unit.

Caution

Television programmes, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

Compatible colour systems

This VCR is designed to record using the PAL (B/G or D/K) or MESECAM (B/G or D/K) colour system and play back using the PAL (B/G or D/K) or MESECAM (B/G or D/K) and NTSC 4.43 colour systems. Recording of video sources based on other colour systems cannot be guaranteed.

SHOWVIEW is a registered trademark of Gemstar Development Corporation. The SHOWVIEW system is manufactured under license from Gemstar Development Corporation.

Table of contents

Getting Started

- 4** Index to parts and controls
- 11** Step 1 : Unpacking
- 12** Step 2 : Setting up the remote commander
- 16** Step 3 : Connecting the VCR
- 20** Step 4 : Setting up the VCR with the Auto Set Up function
- 23** Step 5 : Selecting the TV system
- 24** Setting the clock
- 26** Downloading the TV tuner's preset data (SLV-SE840N, SE740N and SX740N only)
- 27** Selecting a language
- 28** Presetting channels
- 31** Changing/disabling programme positions
- 36** Setting the Canal Plus decoder

Basic Operations

- 39** Playing a tape
- 42** Recording TV programmes
- 46** Recording TV programmes using the Dial Timer (SLV-SE840N only)
- 51** Recording TV programmes using the ShowView® system (SLV-SE840N, SE740N and SX740N only)
- 55** Recording TV programmes using the timer

Additional Operations

- 58** Playing/searching at various speeds
- 60** Setting the recording duration time
- 61** Synchronized Recording (not available on SLV-SE640N and SE440K)
- 63** Checking/changing/cancelling timer settings
- 65** Recording stereo and bilingual programmes (not available on SLV-SE440K)
- 68** Searching using the index function (not available on SLV-SE440K)
- 70** Adjusting the picture
- 71** Reducing the VCR's power consumption
- 72** Changing menu options

Editing

- 74** Connecting to a VCR or stereo system
- 76** Basic editing
- 77** Audio dubbing (SLV-SE840N only)

Additional Information

- 78** Troubleshooting
- 82** Specifications
- 84** Index

Back Cover


Quick Start Guide

Index to parts and controls

Refer to the pages indicated in parentheses () for details.

Front panel

For SLV-SE840N

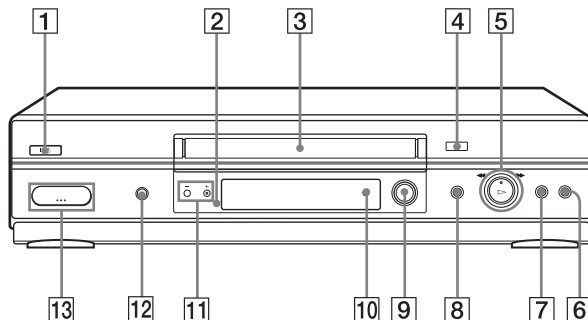

1 I/⏻ (on/standby) switch

2 Remote sensor (12)

3 Tape compartment

4 ≡ (eject) button (39)

5 ▷ (play) button* (39) (58)/▶▶ (fast-forward)/◀◀ (rewind) (40) (58)/Playback Dial (40) (58)

6 ■ (stop) button (22) (39) (76) (77)

7 || (pause) button (39) (50) (76) (77)

8 REC ● (record) button (43) (60) (76)

9 ⌚ DIAL TIMER (46)

10 AUDIO DUB button (77)

11 PROGRAM +/- buttons* (47) (59) (70)

12 SYNCHRO REC (Synchronized Recording) button (62)


13 ↶ LINE-2 L (left) ↷ R (right) jacks (covered)* (74) (75) (77)

How to open the jack cover

1 Press the bottom of the cover.

2 Hook your finger on the top edge of the cover and pull it open.

* The ▷ (play), PROGRAM + buttons and jack cover have a tactile dot.

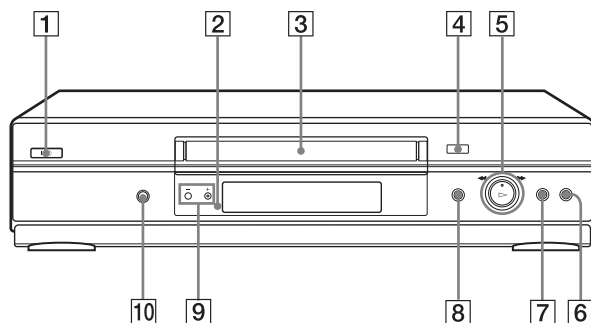


- 1** I/⏻ (on/standby) switch
- 2** Remote sensor (12)
- 3** Tape compartment
- 4** ≡ (eject) button (39)
- 5** ▷ (play) button*¹ (39) (58)/▶▶ (fast-forward)/◀◀ (rewind) (40) (58)/Playback Dial (40) (58)
- 6** ■ (stop) button (22) (39) (76) (77)

- 7** || (pause) button (39) (76) (77)
- 8** REC ● (record) button (43) (60) (76)
- 9** PROGRAM +/- buttons*¹ (59) (70)
- 10** SYNCHRO REC (Synchronized Recording) button*² (62)

*¹ The ▷ (play) and PROGRAM + buttons have a tactile dot.

*² not available on SLV-SE640N

For SLV-SE440K

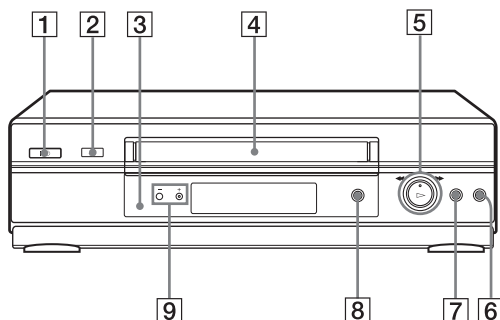

1 I/⏻ (on/standby) switch

2 ⏏ (eject) button (39)

3 Remote sensor (12)

4 Tape compartment

5 ▷ (play) button* (39) (58)/▶▶ (fast-forward)/◀◀ (rewind) (40) (58)/Playback Dial (40) (58)

6 ■ (stop) button (22) (39) (76) (77)

7 || (pause) button (39) (76) (77)


8 REC ● (record) button (43) (60) (76)

9 PROGRAM +/- buttons* (59) (70)

* The ▷ (play) and PROGRAM + buttons have a tactile dot.


Display window

For SLV-SE840N, SE740N and SX740N

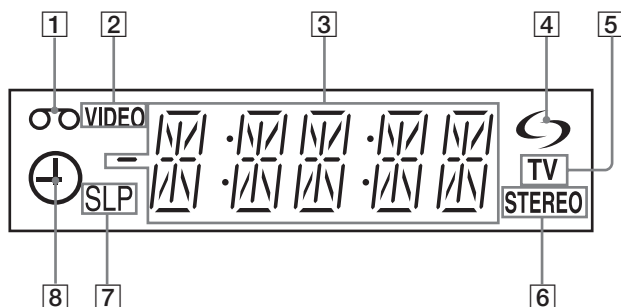

- | | |
|--|--|
| 1 Tape indicator | 5 TV indicator (45) |
| 2 VIDEO indicator (17) (43) | 6 STEREO indicator (65) |
| 3 Time counter/clock/line/programme position indicator (40) (42) (76) | 7 Tape speed indicators (42) |
| 4 ↻ (smartlink) indicator (18) | 8 Timer/recording indicator (43) (48) (53) (56) |

For SLV-SE640N and SE440K

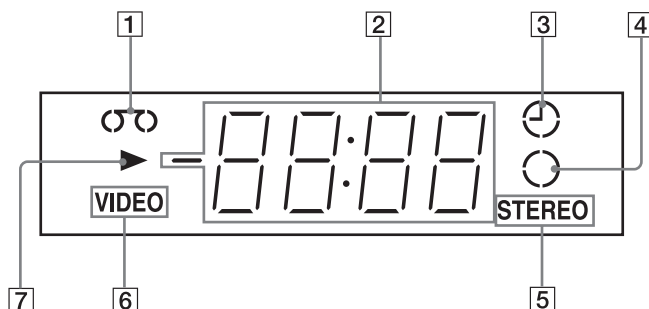


- | | |
|--|------------------------------------|
| 1 Tape indicator | 5 STEREO indicator* (65) |
| 2 Time counter/clock/line/programme position indicator (40) (42) (76) | 6 VIDEO indicator (17) (43) |
| 3 Timer indicator (48) (53) (56) | 7 Playback indicator |
| 4 Recording indicator (43) | |

* not available on SLV-SE440K


continued

Rear panel

For SLV-SE840N, SE740N, SX740N and SE640N

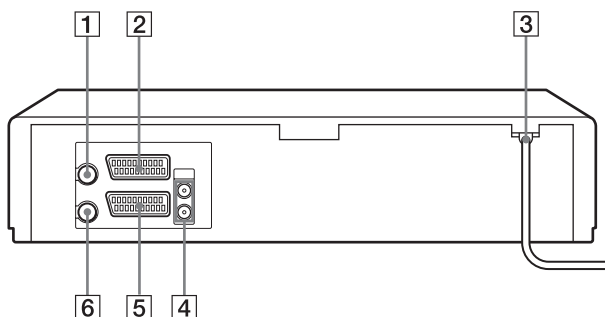

For SLV-SE440K

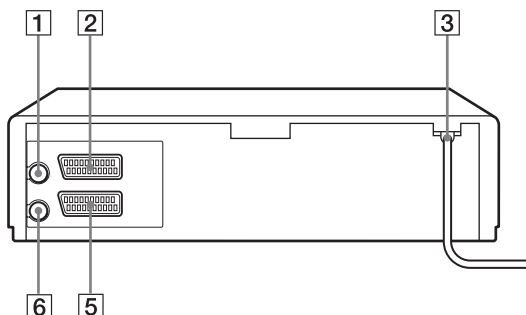


1 ⏏ (in from antenna) connector (16) (17)

2 LINE-3 (DEC/EXT) connector*¹
LINE-2 (DEC/EXT) connector*²
(19) (36) (75)

3 Mains lead (16) (17)

4 AUDIO (OUT/SORTIE) R/D (right)
L/G (left) jacks*³ (19)

5 LINE-1 (EURO AV) connector (17) (36) (74)


6  (out to tv) connector (16) (17)

*¹ SLV-SE840N

*² SLV-SE740N, SX740N, SE640N and SE440K

*³ not available on SLV-SE640N


Remote commander

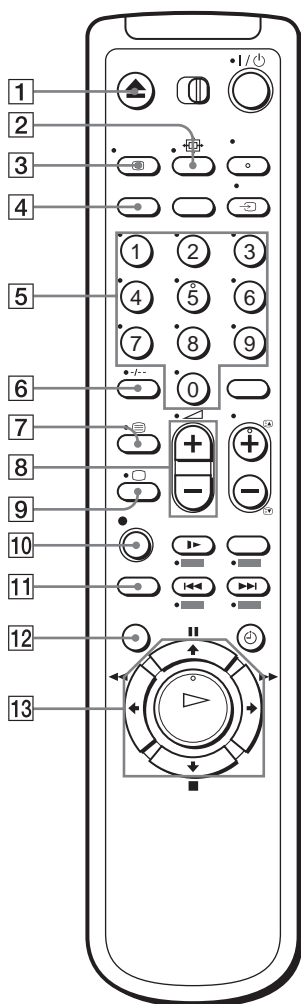

- 1 ▲ (eject) button (39)
- 2 ⬆⬆⬆⬆ (wide) button (*for TV*) (14) (15)
- 3 ⓘ+ DISPLAY button (14) (40) (43)
- 4 COUNTER/REMAIN button (43)
- 5 Programme number buttons*¹ (13) (44)
- 6 -/- (ten's digit) button (13) (44)
- 7 ⓘ (Teletext) button (*for TV*)*² (14)
- 8 ▲ (volume) +/- buttons (*for TV*) (13)
- 9 □ TV power on/TV mode select button (*for TV*)*² (13)
- 10 ● REC (record) button (43) (60)
- 11 SP (Standard Play)/LP (Long Play) button (42)
- 12 MENU button (24) (63)
- 13 || (pause)/⬆ button (24) (39)
 ■ (stop)/⬇ button (24) (39)
 ◀◀ (rewind)/⬅ button (24) (39) (58)
 ▶▶ (fast-forward)/➡ button (24) (39) (58)
 ▷ (play)/OK button*¹ (24) (39) (58)

*¹ The ▷ (play), AUDIO MONITOR, number 5 and PROG + buttons have a tactile dot.

*² SLV-SE840N only

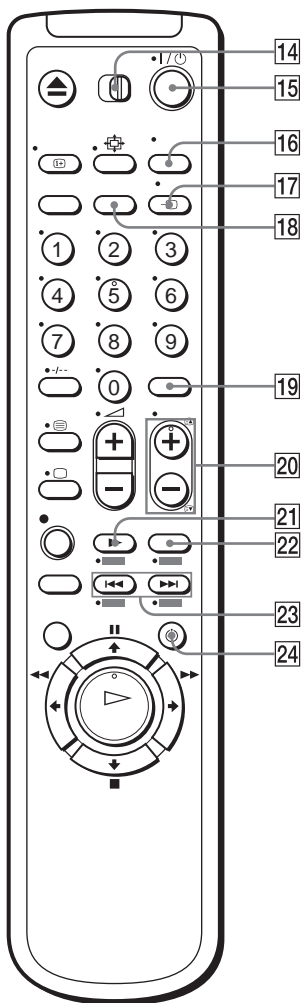

14 TV / VIDEO remote control switch (12)

15 I/⏻ (on/standby) switch (13) (14) (53)

16 AUDIO MONITOR button*1*3 (14) (66)

17 TV/VIDEO button (13) (17) (43)

18 CLEAR button (40) (52) (63)

19 INPUT SELECT button (42) (56) (76)

20 PROG (programme) +/- buttons*1 (13) (42)

Teletext page access buttons (for TV)*2 (14)

21 SLOW button*4 (58)

22 x2 button*4 (58)

23 Index search buttons*3*4 (68)

24 TIMER button (51) (55)

*1 The ▷ (play), AUDIO MONITOR, number 5 and PROG + buttons have a tactile dot.

*2 SLV-SE840N only


*3 not available on SLV-SE440K

*4 FASTTEXT buttons (for TV) (SLV-SE840N only)


Step 1 : Unpacking

Check that you have received the following items with the VCR:


- Remote commander

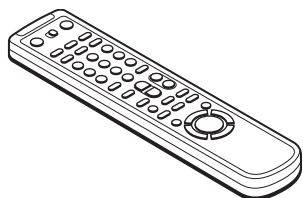

- R6 (size AA) batteries

 

- Aerial cable

 

Note

- The supplied remote commander is for the exclusive use of this VCR.

How to use this manual

The instructions in this manual are for the 5 models: SLV-SE840N, SE740N, SX740N, SE640N and SE440K. Check your model name by looking at the rear panel of your VCR.

SLV-SE840N is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, “SLV-SE840N only.”


This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the VCR having the same or similar names.

Step 2 : Setting up the remote commander


Inserting the batteries


Insert two R6 (size AA) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.

Insert the negative (–) end first, then push in and down until the positive (+) end clicks into position.

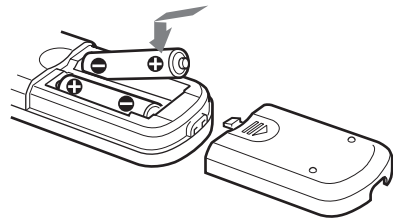


Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV. If the TV does not have the  symbol near the remote sensor, this remote commander will not operate the TV.

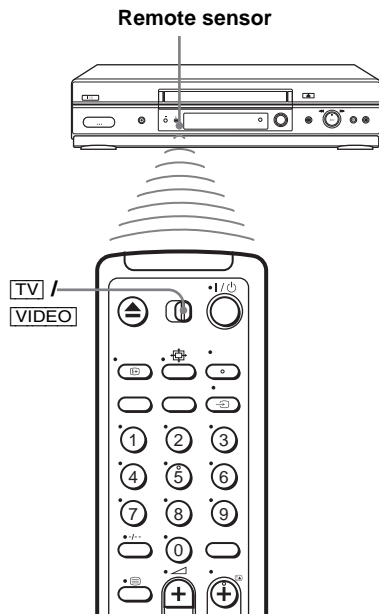



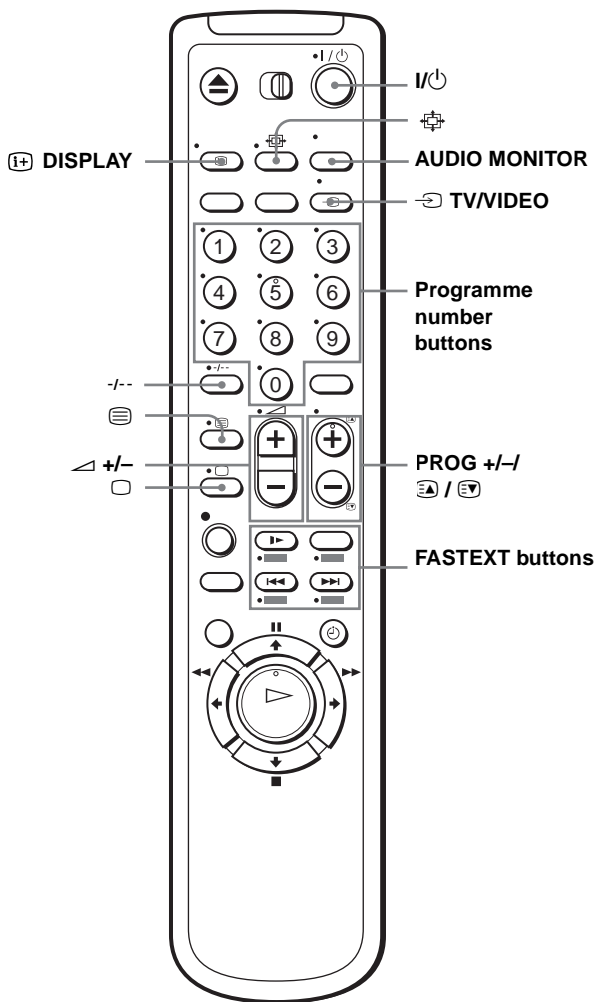


To operate	Set TV / VIDEO to
the VCR	VIDEO and point at the remote sensor at the VCR
a Sony TV	TV and point at the remote sensor at the TV



TV control buttons

To	Press
Set the TV to standby mode	I/⏻
Select an input source: aerial in or line in	TV/VIDEO
Select the TV's programme position	Programme number buttons, -/-, PROG +/-
Adjust the volume of the TV	△ +/-
Switch to TV (Teletext off)*1	□ (TV)

continued

To	Press
Switch to Teletext* ¹	 (Teletext)
Select the sound* ²	AUDIO MONITOR
Use FASTEXT* ¹	FASTEXT buttons
Call up the on-screen display	 DISPLAY
Change the Teletext page* ¹	 / 
Switch to/from wide mode of a Sony wide TV (For other manufactures' wide TVs, see "Controlling other TVs with the remote commander (SLV-SE840N only)" below.)	 (wide)

Notes




- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery together with an old one.
- Do not use different types of batteries together.
- Do not leave the remote commander in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- Some buttons may not work with certain Sony TVs.



*¹ SLV-SE840N only

*² not available on SLV-SE440K


 








Controlling other TVs with the remote commander (SLV-SE840N only)

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the following table, set the appropriate manufacturer's code number.

1 Set  /  at the top of the remote commander to .

 2 Hold down , and enter your TV's code number using the programme number buttons. Then release .

  Now you can use the following TV control buttons to control your TV:

, , programme number buttons, -/- (ten's digit), PROG +/-,  +/-, ,  (Teletext), FASTEXT buttons, * (wide)*, MENU*, ///*, and OK*.

* These buttons may not work with all TVs.









Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

To switch to wide mode, see the footnotes below this table for the applicable code numbers.

Manufacturer	Code number
Sony	01* ¹ , 02
Akai	68
Ferguson	52
Grundig	10* ¹ , 11* ¹
Hitachi	24
JVC	33
Loewe	45
Mivar	09, 70
NEC	66
Nokia	15, 16, 69* ³

Manufacturer	Code number
Panasonic	17* ¹ , 49
Philips	06* ¹ , 07* ¹ , 08* ¹
Saba	12, 13
Samsung	22, 23
Sanyo	25
Sharp	29
Telefunken	36
Thomson	43* ²
Toshiba	38

    - *¹ Press  (wide) to switch the wide picture mode on or off.
- *² Press  (wide), then press  +/- to select the wide picture mode you want.
- *³ Press  (wide). The menu appears on the TV screen. Then, press /// to select the wide picture you want and press OK.

Tip

- When you set your TV’s code number correctly while the TV is turned on, the TV turns off automatically.


Notes

- If you enter a new code number, the code number previously entered will be erased.
- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.

Step 3 : Connecting the VCR


If your TV has a Scart (EURO-AV) connector, see page 17.


If your TV does not have a Scart (EURO-AV) connector

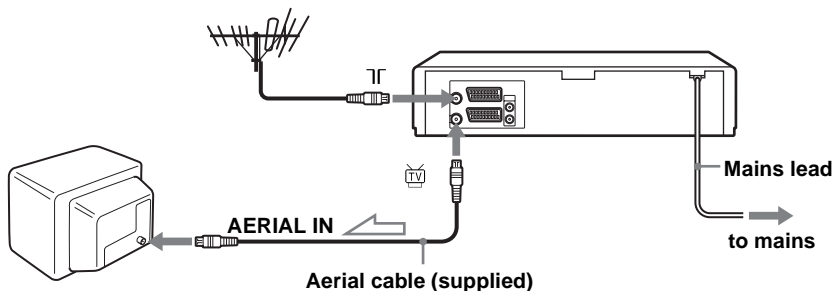


 : Signal flow


1

Disconnect the aerial cable from your TV and connect it to  on the rear panel of the VCR.

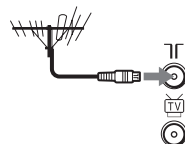

2

Connect  of the VCR and the aerial input of your TV using the supplied aerial cable.

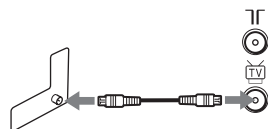


3

Connect the mains lead to the mains.


Note

- When you connect the VCR and your TV only with an aerial cable, you have to tune your TV to the VCR (see page 20).


If your TV has a Scart (EURO-AV) connector

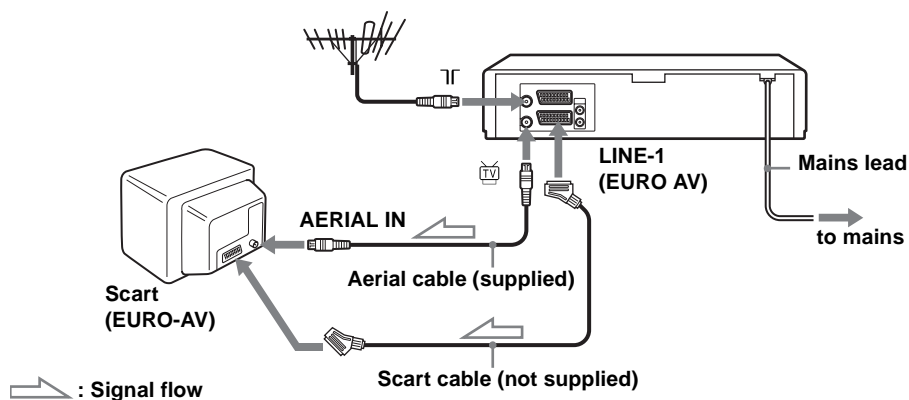

- 1 Disconnect the aerial cable from your TV and connect it to π on the rear panel of the VCR.

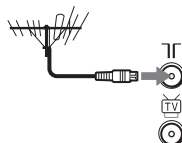

- 2 Connect TV of the VCR and the aerial input of your TV using the supplied aerial cable.

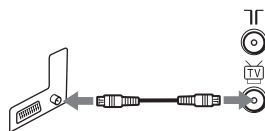

- 3 Connect LINE-1 (EURO AV) on the VCR and the Scart (EURO-AV) connector on the TV with the optional Scart cable.

This connection improves picture and sound quality. Whenever you want to watch the VCR picture, press \rightarrow TV/VIDEO to display the VIDEO indicator in the display window.

 


- 4 Connect the mains lead to the mains.

continued


About the SMARTLINK features (not available on SLV-SE640N and SE440K)

If the connected TV complies with SMARTLINK, MEGALOGIC*¹, EASYLINK*², Q-Link*³, EURO VIEW LINK*⁴, or T-V LINK*⁵, this



VCR automatically runs the

SMARTLINK function after you complete the steps on the previous page (the ∞ indicator appears in the VCR's display window when you turn on the TV). You can enjoy the following SMARTLINK features.

- **TV Direct Rec**
You can easily record what you are watching on the TV when the VCR is turned on. For details, see "Recording what you are watching on the TV (TV Direct Rec) (not available on SLV-SE640N and SE440K)" on page 45.
- **One Touch Play**
With One Touch Play, you can start playback automatically without turning on the TV. For details, see "Starting playback automatically with one button (One Touch Play) (not available on SLV-SE640N and SE440K)" on page 41.
- **One Touch Menu**
When the VCR is turned on, you can turn on the TV, set the TV to the video channel, and display the VCR's on-screen display automatically by pressing MENU on the remote commander.
- **One Touch Timer**
When the VCR is turned on, you can turn on the TV, set the TV to the video channel, and display the timer recording menu (the TIMER PROGRAMMING menu or the SHOWVIEW menu) automatically by pressing  TIMER on the remote commander.
You can set which timer recording menu is displayed using TIMER METHOD in the EASY OPERATION menu (see page 73).
- **NexTView Download**
You can easily set the timer by using the NexTView Download function on your TV. Please refer to your TV's instruction manual.

*¹ "MEGALOGIC" is a registered trademark of Grundig Corporation.

*² "EASYLINK" is a trademark of Philips Corporation.

*³ "Q-Link" is a trademark of Panasonic Corporation.

*⁴ "EURO VIEW LINK" is a trademark of Toshiba Corporation.

*⁵ "T-V LINK" is a trademark of JVC Corporation.


Note

- Not all TVs respond to the functions above.

Additional connections


To a stereo system (not available on SLV-SE640N and SE440K)

You can improve sound quality by connecting a stereo system to the AUDIO R/D L/G jacks as shown on the right.

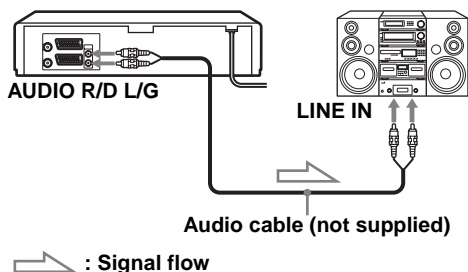

To a satellite or digital tuner with Line Through

Using the Line Through function, you can watch programmes from a satellite or digital tuner connected to this VCR on the TV even when the VCR is turned off. When you turn on the satellite or digital tuner, this VCR automatically sends the signal from the satellite or digital tuner to the TV without turning itself on.

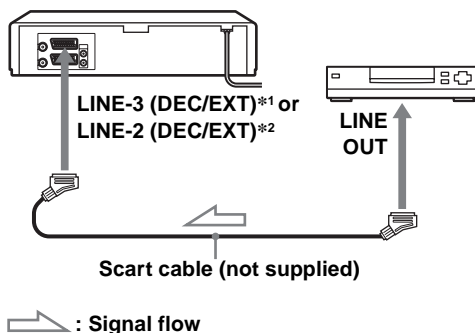

1 Connect the satellite or digital tuner to the LINE-3 (DEC/EXT)*1 or LINE-2 (DEC/EXT)*2 connector as shown above.

2 Turn off the VCR.

To watch a programme, turn on the satellite or digital tuner and the TV.

Notes

- The Line Through function will not operate properly if POWER SAVE in the USER SET menu is set to ECO2. Set POWER SAVE to OFF or ECO1 to ensure proper operation (see page 71).
- You cannot watch programmes on the TV while recording unless you are recording a satellite or digital programme.
- This function may not work with some types of satellite or digital tuners.
- When the VCR is turned off, set the TV to the video channel.

*1 SLV-SE840N


*2 SLV-SE740N, SX740N, SE640N and SE440K

Step 4 : Setting up the VCR with the Auto Set Up function

Before using the VCR for the first time, set up the VCR using the Auto Set Up function. With this function, you can set the language for the on-screen display, TV channels, guide channels for the ShowView system*, and VCR clock* automatically.

1 Turn on your TV and set it to the video channel.
If your TV does not have a Scart (EURO-AV) connector, tune the TV to channel 32 (the initial RF channel for this VCR). Refer to your TV manual for TV tuning instructions. If the picture does not appear clearly, see “To change the RF channel” on page 22.

2 Connect the mains lead to the mains.
The VCR automatically turns on, and the language abbreviations appear on the TV screen.

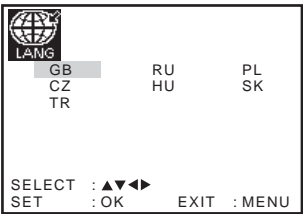

The abbreviations of the languages are as follows:

Abbreviation	Country	Language
CZ	Czecho	Czech
HU	Hungary	Hungarian
PL	Poland	Polish
SK	Slovakia	Slovak
TR	Turkey	Turkish
RU	Russia	Russian

3 Press **↑/↓/←/→** to select the language abbreviation from the table in step 2, then press OK.




The message for the Auto Set Up function appears.

4



Press OK.

The COUNTRY SELECTION menu* appears.

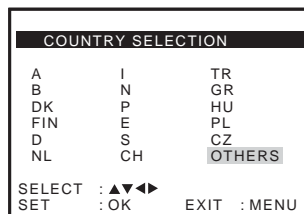

The abbreviations of the countries are as follows:

Abbreviation	Country
A	Austria
B	Belgium
DK	Denmark
FIN	Finland
D	Germany
NL	Netherlands
I	Italy
N	Norway
P	Portugal


Abbreviation	Country
E	Spain
S	Sweden
CH	Switzerland
TR	Turkey
GR	Greece
HU	Hungary
PL	Poland
CZ	Czech
OTHERS	other countries

5



Press **↑/↓/←/→** to select the abbreviation of your country from the table in step 4, then press OK. If your country does not appear, select OTHERS.

- SLV-SE440K
The SYSTEM SELECT menu appears.
- SLV-SE840N, SE740N, SX740N and SE640N
AUTO SET UP starts (SYSTEM SELECT menu is skipped for these models).

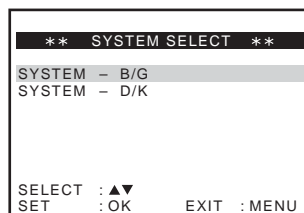

continued

6



Press **↑/↓/←/→** to select the appropriate TV system, then press **OK**.

The VCR starts searching for all of the receivable channels and presets them (in the appropriate order for your local area).

If you want to change the order of the channels or disable unwanted programme positions, see “Changing/disabling programme positions” on page 31.

After the search or download is complete, the current time appears for any stations that transmit a time signal. If the time does not appear, set the clock manually. See “Setting the clock” on page 24.



For SLV-SE640N and SE440K

The clock setting menu appears. See “Setting the clock” on page 24.

To cancel the Auto Set Up function

Press **MENU**.

To change the RF channel

If the picture does not appear clearly on the TV, change the RF channel on the VCR and TV. Select **INSTALLATION** from the menu, then press **↑/↓** to highlight **VCR OUTPUT CH** and press **→**. Select the RF channel by pressing the **↑/↓** buttons. Then, tune the TV to the new RF channel so that a clear picture appears.

Tip

- If you want to change the language for the on-screen display from the one preset in the Auto Set Up function, see page 27.

Notes

- Whenever you operate the Auto Set Up function, some of the settings (ShowView*, timer, etc.) will be reset. If this happens, you have to set them again.
- Auto preset starts automatically only when you plug in the mains lead for the first time after you purchase the VCR.
- After using the Auto Set Up function, the language abbreviations do not appear automatically when you connect the mains lead again. If you want to use the Auto Set Up function again, press **MENU**, then press **↑/↓/←/→** to highlight **INSTALLATION** and press **OK**. Press **↑/↓** to highlight **AUTO SET UP**, then repeat all procedures from step 4.
- Auto preset can be performed by pressing **■** (stop) on the VCR continuously for 5 seconds or more with no tape inserted.

* not available on SLV-SE640N and SE440K


Step 5 : Selecting the TV system

You must select the appropriate TV system for your area.


Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to “Index to parts and controls” for button locations.

1

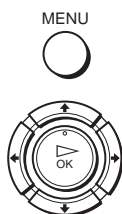


Press MENU, then press **↑/↓/←/→** to highlight **INSTALLATION** and press OK.

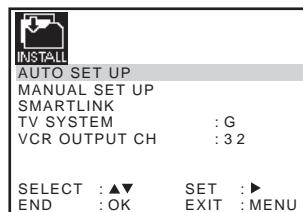

2



Press **↑/↓** to highlight **TV SYSTEM**, then press **→**.

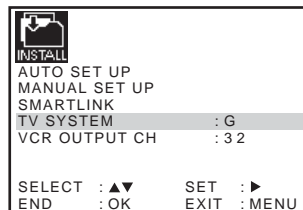

3



Press **→** to select the appropriate TV system. Select “G” for the B/G TV system, or “K” for the D/K TV system.

4



Press MENU to exit the menu.

Setting the clock

You must set the time and date on the VCR to use the timer features properly.

The Auto Clock Set function* works only if a station in your area is broadcasting a time signal.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.

1

MENU




Press MENU, then press **↑/↓/←/→** to highlight **CLOCK SET** and press **OK**.

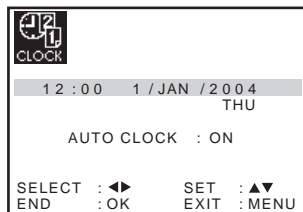

2




Press **↑/↓** to set the hour.

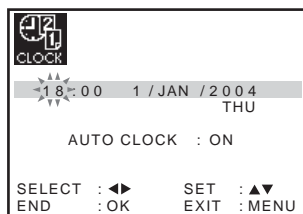

3



Press **→** to select the minutes and set the minutes by pressing **↑/↓**.

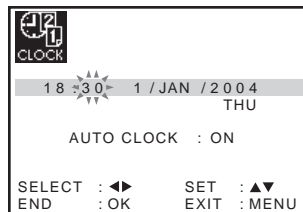


4



Set the day, month, and year in sequence by pressing **→** to select the item to be set, and press **↑/↓** to select the digits, then press **→**.

The day of the week is set automatically.

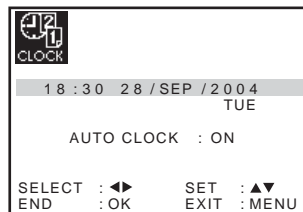


5



Press **↑/↓** to select ON for the setting of the Auto Clock Set function*.

The VCR automatically sets the clock according to the time signal broadcast between the channels PR 1 to PR 5.

If you do not need the Auto Clock Set function, select OFF.

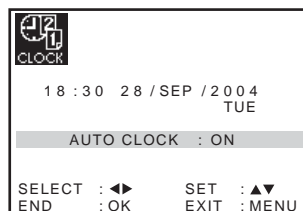

6

MENU



Press MENU to exit the menu.

Tips

- If you set AUTO CLOCK* to ON, the Auto Clock Set function is activated whenever the VCR is turned off. The time is adjusted automatically by making reference to the time signal from the station.
- To change the digits while setting, press **←** to return to the item to be changed, and select the digits by pressing **↑/↓**.

* not available on SLV-SE640N and SE440K

Downloading the TV tuner's preset data (SLV-SE840N, SE740N and SX740N only)

You can download your TV tuner's preset data to the VCR and tune the VCR according to that data using the SMARTLINK connection.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.

1

MENU




Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION and press OK.

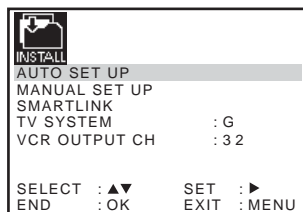

2




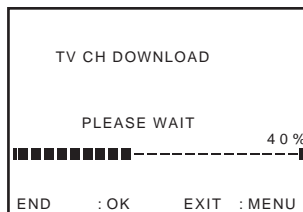
Press **↑/↓** to highlight SMARTLINK, then press **→**.

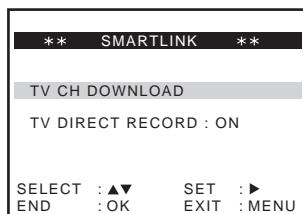

3



Press **↑/↓** to highlight TV CH DOWNLOAD, then press **→**. Press **→** again. The Preset Download function starts and the  indicator flashes in the display window during download.



Selecting a language

You can change the on-screen display language from the one you selected with the Auto Set Up function.


Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to “Index to parts and controls” for button locations.

1



Press MENU, then press **↑/↓/←/→** to highlight LANGUAGE SET and press OK.

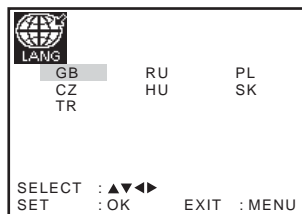

2



Press **↑/↓/←/→** to highlight the abbreviation of the desired language from the table on page 20, then press OK.

Presetting channels

If some channels could not be preset using the Auto Set Up function, you can preset them manually.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.

1

MENU



Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION and press OK.

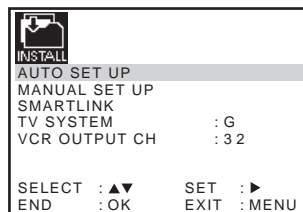

2



Press **↑/↓** to highlight MANUAL SET UP, then press **→**.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	0 2 7	A A B-	OFF
2	0 2 9	L M N-	OFF
3	0 3 0	C D E-	OFF
4	0 3 2	I J K-	OFF
5			

▲▼ ► SWAPPING : OK
 DELETE : CLEAR EXIT : MENU

3



Press **↑/↓** to highlight the row which you want to preset, then press **→**.

To display other pages for programme positions 6 to 80, press **↑/↓** repeatedly.

** MANUAL TUNING **			
PR	:	5	
CH	:	---	
MFT	:	-	
DECODER	:	OFF	
NAME	:	----	

SELECT : ▲▼ SET : ◀▶
 END : OK EXIT : MENU

4



Press \leftarrow/\rightarrow repeatedly until the channel you want is displayed.

** MANUAL TUNING **	
PR	: 5
CH	: 0 3 3
MFT	: -
DECODER	: OFF
NAME	: - - - -
SELECT : \blacktriangle \blacktriangledown SET : \leftarrow \rightarrow	
END : OK EXIT : MENU	

5



Press \uparrow/\downarrow to highlight NAME, then press \rightarrow .

** MANUAL TUNING **	
PR	: 5
CH	: 0 3 3
MFT	: -
DECODER	: OFF
NAME	: \rightarrow - - -
SELECT : \blacktriangle \blacktriangledown SET : \leftarrow \rightarrow	
END : OK EXIT : MENU	

6



Enter the station name.

- 1 Press \uparrow/\downarrow to select a character. Each time you press \uparrow , the character changes as shown below.

A \rightarrow B \rightarrow ... \rightarrow Z \rightarrow 0 \rightarrow 1 \rightarrow ... \rightarrow 9 \rightarrow A

** MANUAL TUNING **	
PR	: 5
CH	: 0 3 3
MFT	: -
DECODER	: OFF
NAME	: \rightarrow A - -
SELECT : \blacktriangle \blacktriangledown SET : \leftarrow \rightarrow	
END : OK EXIT : MENU	

- 2 Press \rightarrow to set the next character.

The next space is flashed.

To correct a character, press \leftarrow/\rightarrow until the character you want to correct is flashed, then reset it.

You can set up to 4 characters for the station name.

7



Press OK to confirm the station name.

8



Press MENU to exit the menu.

continued

If the picture is not clear

If the picture is not clear, you may use the Manual Fine Tuning (MFT) function. After step 4, press **↑/↓** to select MFT. Press **←/→** to get a clear picture, then press **MENU** to exit the menu.

Tips

- To set the programme position for the decoder, see “Setting the Canal Plus decoder” on page 36.
- The VCR must receive channel information for station names to appear automatically.

Notes

- **SYSTEM** is displayed in **MANUAL TUNING** menu (SLV-SE440K only) (see page 28).
- If the TV sound is distorted or noisy, select the appropriate TV system (“G” or “K”) for your area (see page 23).
- When adjusting MFT, the menu may become difficult to read due to interference from the picture being received.

Changing/disabling programme positions

After setting the channels, you can change the programme positions as you like. If any programme positions are unused or contain unwanted channels, you can disable them.

You can also change the station names. If the station names are not displayed, you can enter them manually.

Changing programme positions

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to “Index to parts and controls” for button locations.

1

MENU



Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION and press OK.

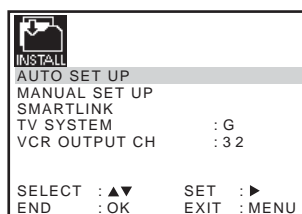

2



Press **↑/↓** to highlight MANUAL SET UP, then press **→**.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	027	AAB-	OFF
2	029	LMN-	OFF
3	030	CDE-	OFF
4	032	IJK-	OFF
5			
▲▼ ► SWAPPING : OK			
DELETE : CLEAR EXIT : MENU			

3



Press **↑/↓** to highlight the row containing the programme position you want to change.

To display other pages for programme positions 6 to 80, press **↑/↓** repeatedly.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	027	AAB-	OFF
2	029	LMN-	OFF
3	030	CDE-	OFF
4	032	IJK-	OFF
5			
▲▼ ► SWAPPING : OK			
DELETE : CLEAR EXIT : MENU			

continued

4



Press OK, then press **↑/↓** to move to the desired programme position.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	0 2 7	AAB-	OFF
2			
3	0 3 0	CDE-	OFF
4	0 3 2	JK-	OFF
5	0 2 9	LMN-	OFF
▲▼ SWAPPING : OK EXIT : MENU			

5



Press OK to confirm the setting.

6

To change the programme position of another station, repeat steps 3 through 5.

7



Press MENU to exit the menu.

Disabling unwanted programme positions

After presetting channels, you can disable unused programme positions. The disabled positions will be skipped later when you press the PROG +/- buttons.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.

1



Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION, and press OK.

INSTALL	
AUTO SET UP	
MANUAL SET UP	
SMARTLINK	
TV SYSTEM	: G
VCR OUTPUT CH	: 3 2
SELECT : ▲▼	SET : ►
END : OK	EXIT : MENU

2



Press **↑/↓** to highlight MANUAL SET UP, then press **→**.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	0 2 7	A A B -	OFF
2	0 2 9	L M N -	OFF
3	0 3 0	C D E -	OFF
4	0 3 2	I J K -	OFF
5			
▲▼ ► SWAPPING : OK			
DELETE : CLEAR EXIT : MENU			

3



Press **↑/↓** to highlight the row which you want to disable.

To display other pages for programme positions 6 to 80, press **↑/↓** repeatedly.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	0 2 7	A A B -	OFF
2	0 2 9	L M N -	OFF
3	0 3 0	C D E -	OFF
4	0 3 2	I J K -	OFF
5			
▲▼ ► SWAPPING : OK			
DELETE : CLEAR EXIT : MENU			

4



Press **CLEAR**.

The selected row will be cleared as shown on the right.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	0 2 7	A A B -	OFF
2			
3	0 3 0	C D E -	OFF
4	0 3 2	I J K -	OFF
5			
▲▼ ► SWAPPING : OK			
DELETE : CLEAR EXIT : MENU			

5

Repeat steps 3 and 4 for any other programme positions you want to disable.

6



Press **MENU** to exit the menu.

Note

- Be sure to select the programme position you want to disable correctly. If you disable a programme position by mistake, you need to reset that channel manually.

continued

Changing the station names

You can change or enter the station names (up to 4 characters). The VCR must receive channel information for station names to appear automatically*.

* not available on SLV-SE640N and SE440K

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.

1

MENU



Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION and press OK.

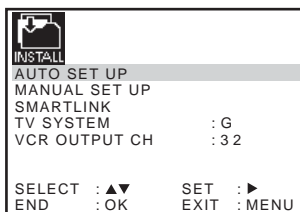

2



Press **↑/↓** to highlight MANUAL SET UP, then press **→**.

** TV STATION TABLE **			
PR	CH	NAME	DEC
1	027	AAB-	OFF
2	029	LMN-	OFF
3	030	CDE-	OFF
4	032	IJK-	OFF
5	033	---	OFF

▲▼ **▶** SWAPPING : OK
DELETE : CLEAR EXIT : MENU

3



Press **↑/↓** to highlight the row which you want to change or enter the station name, then press **→**.

To display other pages for programme positions 6 to 80, press **↑/↓** repeatedly.

** MANUAL TUNING **			
PR	:	5	
CH	:	033	
MFT	:	-	
DECODER	:	OFF	
NAME	:	----	

SELECT : **▲▼** SET : **◀▶**
END : OK EXIT : MENU

4



Press **↑/↓** to highlight NAME, then press **→**.

** MANUAL TUNING **			
PR	:	5	
CH	:	033	
MFT	:	-	
DECODER	:	OFF	
NAME	:	----	

SELECT : **▲▼** SET : **◀▶**
END : OK EXIT : MENU


5



Enter the station name.

- 1 Press **↑/↓** to select a character.
Each time you press **↑**, the character changes as shown below.

A → B → ... → Z → 0 → 1 → ... → 9 → A

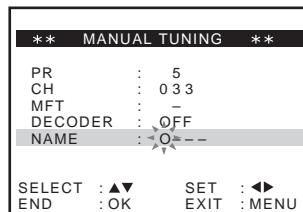

- 2 Press **→** to set the next character.

The next space flashes.

To correct a character, press **←/→** until the character you want to correct flashes, then reset it.

You can set up to 4 characters for the station name.

6



Press **OK** to confirm the new name.

7



Press **MENU** to exit the menu.


Note

- **SYSTEM** is displayed in **MANUAL TUNING** menu (SLV-SE440K only) (see page 34).

Setting the Canal Plus decoder

You can watch or record Canal Plus programmes if you connect a decoder (not supplied) to the VCR.

Connecting a decoder

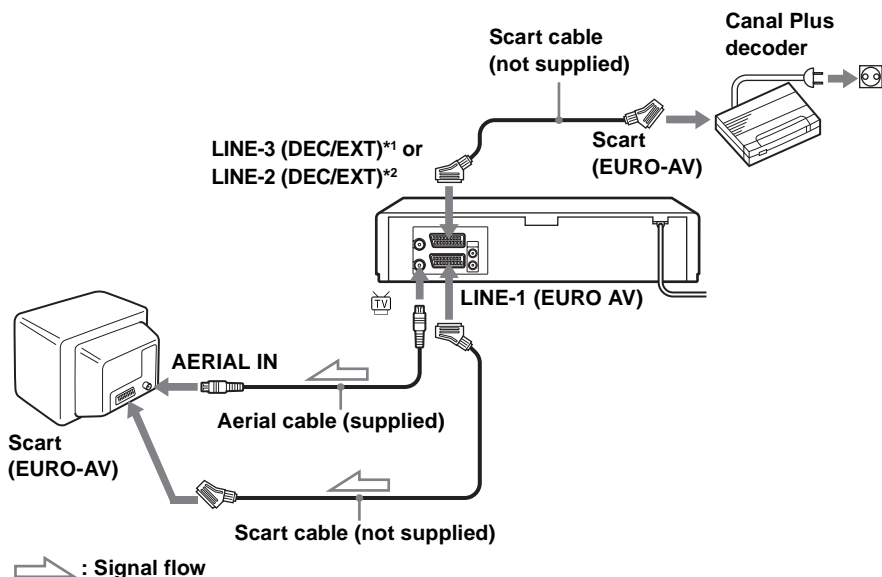

Setting Canal Plus channels



To watch or record Canal Plus programmes, set your VCR to receive the channels using the on-screen display.

In order to set the channels correctly, be sure to follow all of the steps below.


Before you start...

- Turn on the VCR, the TV, and the decoder.
- Set the TV to the video channel.
- Refer to "Index to parts and controls" for button locations.


1 Press MENU, then press **↑/↓/←/→** to highlight INSTALLATION and press OK.

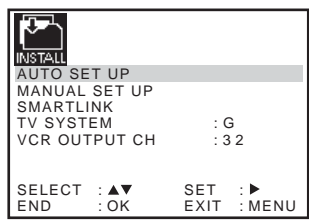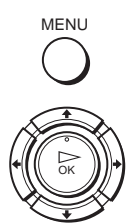


2 Press **↑/↓** to highlight MANUAL SET UP, then press **→**.

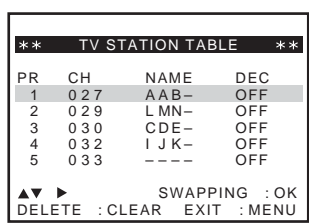


3 Press **↑/↓** to highlight the row which you want to set for the decoder, then press **→**.
To display positions 6 to 80, press **↑/↓** repeatedly.

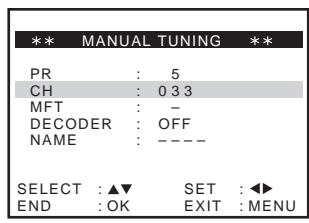

4 Press **↑/↓** to highlight DECODER.

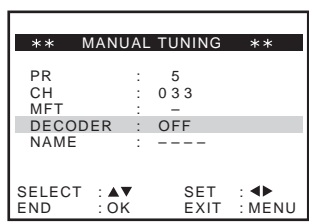

5 Press **→** to set DECODER to ON, then press OK.

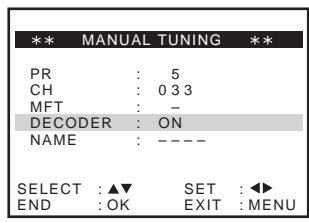


continued



Press MENU to exit the menu.

 Notes

- To superimpose subtitles while watching Canal Plus programmes, make both decoder-VCR and VCR-TV connections using 21-pin Scart cables that are compatible with the RGB signals. You cannot record subtitles on the VCR.
- When you watch Canal Plus programmes through the RFU input of the TV, press  TV/VIDEO so that the VIDEO indicator appears in the display window.
- SYSTEM is displayed in MANUAL TUNING menu (SLV-SE440K only) (see page 37).

*¹ SLV-SE840N

*² SLV-SE740N, SX740N, SE640N and SE440K

 
Playing a tape


Before you start...

- Refer to “Index to parts and controls” for button locations.

1 Turn on your TV and set it to the video channel.

2 Insert a tape.
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



3 Press  (play).
When the tape reaches the end, it will rewind automatically.




Additional tasks

To	Do this
Stop play	Press ■ (stop)
Pause play	Press (pause)
Resume play after pause	Press (pause) or ▷ (play)
Fast-forward the tape	Press ►► (fast-forward) during stop
Rewind the tape	Press ◄◄ (rewind) during stop
Eject the tape	Press ▲ (eject)

Using Playback Dial on the VCR

With Playback Dial, you can operate the following playback options.

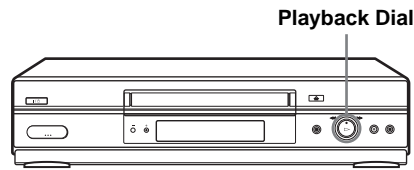

To	Do this
Resume play after pause	Press ▷ (play)
Fast-forward the tape	Quickly turn and release Playback Dial to the right (▶▶ (fast-forward)) during stop
Rewind the tape	Quickly turn and release Playback Dial to the left (◀◀ (rewind)) during stop

Note

- Do not turn Playback Dial forcibly. It may damage Playback Dial.


To set the colour system

If the playback picture has no colour, or streaks appear during playback, set COLOUR SYSTEM in the USER SET menu to conform to the system that the tape was recorded in (see page 72). (Normally set the option to AUTO.)

To use the time counter

Press CLEAR at the point on the tape that you want to find later. The counter in the display window resets to “0:00:00” or “00:00.” Search for the point afterwards by referring to the counter.

SE840N, SE740N, SX740N

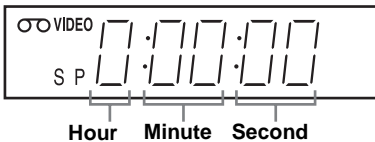

SE640N, SE440K



To display the counter on the TV screen, press **[I+] DISPLAY**.

Notes

- The counter resets to “0:00:00” or “00:00” whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
 - The picture becomes black and white.
 - The picture shakes.
 - No picture appears on the TV screen.
 - Black streaks appear horizontally on the TV screen.
 - The colour density increases or decreases.
- While setting the menu on the TV screen, buttons for playback on the remote commander do not function.

Starting playback automatically with one button (One Touch Play) (not available on SLV-SE640N and SE440K)

If you use the SMARTLINK connection, you can turn on the TV, set the TV to the video channel, and start playback automatically with one button.

1 Insert a tape.


 
The VCR automatically turns on.

If you insert a tape with its safety tab removed, the TV turns on and switches to the video channel. Playback starts automatically.

2 Press (play).

The TV turns on and switches to the video channel automatically. Playback starts.

Tip

- When there already is a tape in the VCR, press  to turn on the VCR first. When you press  (play), the TV turns on, the TV is set to the video channel, and playback starts automatically in one sequence.

Note

- When you use the One Touch Play function, leave the TV on or in the standby mode.

Recording TV programmes

Before you start...

- Refer to “Index to parts and controls” for button locations.

1

Turn on your TV and set it to the video channel.

To record from a decoder, turn it on.

If no picture or sound is reproduced on the TV, press
→ TV/VIDEO on the remote commander to display VIDEO
indicator on the display window.

2

Insert a tape with its safety tab in place.

3

• PROG



 
- To record a normal channel, press PROG +/- until the programme position number or station name you want appears in the display window.



INPUT SELECT



- To record from a decoder or other source connected to one or more of the LINE inputs, press INPUT SELECT until the connected line appears in the display window.




4

SP / LP



Press SP/LP to select the tape speed, SP or LP.

 LP (Long Play) provides recording time twice as long as SP.
However, SP (Standard Play) produces better picture and audio
quality.




5



Press ● REC to start recording.

The recording indicator lights up in the display window.

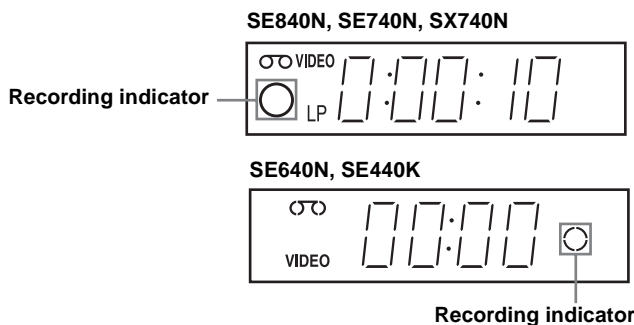


To stop recording

Press ■ (stop).

To check the remaining time

Press (H) DISPLAY twice. With the display on, press COUNTER/REMAIN to check the remaining time. Each time you press COUNTER/REMAIN, the time counter and the remaining time appear alternately.

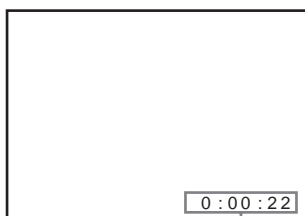

Time counter



Remaining time


In order to get an accurate remaining time indication, be sure TAPE SELECT in the USER SET menu is set according to the tape type you use (see page 72).

To watch another TV programme while recording

- 1 Press ⇨ TV/VIDEO to turn off the VIDEO indicator in the display window.
- 2 Select another programme position on the TV.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the same tape again, cover the tab hole with adhesive tape.

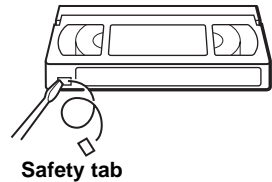

Tips

- To select a programme position, you can use the programme number buttons on the remote commander. For two-digit numbers, press -/-- (ten's digit) followed by the programme number buttons.
- If you connect additional equipment to a LINE connector or jack, you can select the input signal using the INPUT SELECT or PROG +/- buttons.
- The **[+]** DISPLAY information appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you do not want to watch TV while recording, you can turn off the TV. When using a decoder, make sure to leave it on.

Notes

- The **[+]** DISPLAY information does not appear during still (pause) mode or slow-motion playback.
- If a tape has portions recorded in both PAL (MESECAM) and NTSC systems, the time counter reading will not be correct. This discrepancy is due to the difference between the counting cycles of the two video systems.
- You cannot watch a Canal Plus programme while recording another Canal Plus programme.
- When you insert a non-standard commercially available tape, the remaining time may not be correct.
- The remaining time is intended for rough measurement only.
- About 30 seconds after the tape begins playback, the tape remaining time will be displayed.

Recording what you are watching on the TV (TV Direct Rec) (not available on SLV-SE640N and SE440K)

If you use the SMARTLINK connection, you can easily record what you are watching on the TV (other than tapes being played on the VCR).

- 1** Press **I/⏻** to turn on the VCR.
- 2** Insert a tape with its safety tab in place.
- 3** Press **● REC** while you are watching a TV programme or external source.

The TV indicator lights up and the VCR starts recording what you are watching on the TV.

Tip


- The TV indicator appears in the display window after you press **● REC** in some situations such as:
 - when you are watching a source connected to the TV's line input, or
 - when the TV tuner preset data for the programme position is different from the data in the VCR tuner preset.

Notes

- You cannot record what you are watching using this method when the VCR is in the following modes; pause, timer standby, tuner preset, Auto Set Up, and recording.
- When the TV indicator is lit in the display window, do not turn off the TV nor change the TV programme position. When the TV indicator is not lit, the VCR continues recording the programme even if you change the TV programme position on the TV.
- To use the TV Direct Rec function, select SMARTLINK in the INSTALLATION menu, then set TV DIRECT RECORD to ON.

Recording TV programmes using the Dial Timer (SLV-SE840N only)

The Dial Timer function allows you to make timer recordings of programmes without turning on your TV. Set the recording timer to record up to eight programmes, including settings made with other timer methods, that will be broadcast within the next month. The recording start time and recording stop time can be set at one minute intervals.

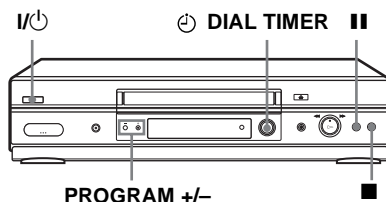

Before you start...

- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.
- Refer to “Index to parts and controls” for button locations.

1


⌚ DIAL TIMER



Press ⌚ DIAL TIMER.

“DATE” and “TODAY” appear alternately in the display window.

If the date and time are not set, “DAY” will appear. See step 2 in the following section, “To set the clock” to set the date and time.

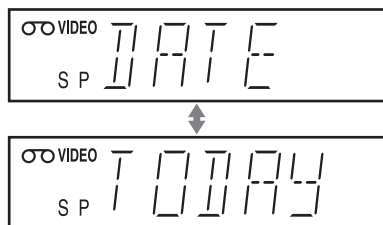

2

⌚ DIAL TIMER



Turn ⌚ DIAL TIMER to set the recording date.



3

DIAL TIMER

Press  DIAL TIMER.

“START” and the current time appear alternately in the display window.




4

 
DIAL TIMER



PROGRAM

Turn  DIAL TIMER to set the recording start time.

You can set the recording start time in 15 minute intervals or adjust the time in one minute intervals by pressing the PROGRAM +/- buttons.




5

DIAL TIMER

Press  DIAL TIMER.

 “STOP” and the recording stop time alternately appear in the display window.




6

 
DIAL TIMER



PROGRAM

Turn  DIAL TIMER to set the recording stop time.

You can set the recording stop time in 15 minute intervals or adjust the time in one minute intervals by pressing the PROGRAM +/- buttons.



continued

 
7

⌚ DIAL TIMER



Press ⌚ DIAL TIMER.

The programme position or LINE input appears in the display window.



8

⌚ DIAL TIMER



Turn ⌚ DIAL TIMER to set the programme position.



INPUT SELECT



To record from a decoder or other source connected to one or more of the LINE inputs, turn ⌚ DIAL TIMER or press INPUT SELECT to display the connected line in the display window.

9

⌚ DIAL TIMER



Press ⌚ DIAL TIMER to complete the setting.

“OK” appears in the display window for about five seconds.

The ⌚ indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment switched on.

To return to the previous step

To return to the previous step, press the PROGRAM + and – buttons on the VCR at the same time during any of the Dial Timer settings.

To stop recording

To stop the VCR while recording, press ■ (stop).

 
 
 
 
 

To use the VCR after setting the timer

To use the VCR before a recording begins, just press I/⏻. The ⌚ indicator turns off and the VCR switches on. Remember to press I/⏻ to reset the VCR to recording standby after using the VCR.


You can also do the following tasks while the VCR is recording:

- Reset the counter (page 40).
- Display tape information on the TV screen (page 43).
- Check the timer settings (page 63).
- Watch another TV programme (page 43).



To set the clock

- 1** Hold down  DIAL TIMER so that “DAY” appears in the display window. However, if the clock has already been set, the current setting appears.
- 2** Turn  DIAL TIMER to set the day.
- 3** Press  DIAL TIMER.
“MONTH” appears in the display window.
- 4** Turn and press  DIAL TIMER to set the month, and then the year.
After you set the year, “CLOCK” appears in the display window again.
- 5** Turn and press  DIAL TIMER to set the hour and minute.
- 6** When you have finished setting the time, press  DIAL TIMER to start the clock.

Tips

- To cancel a Dial Timer setting, press  (stop) on the VCR while you are making the setting.
- The programme is recorded in the current tape speed mode. To change the tape speed, press SP/LP before you complete the setting in step 9.
- To check, change, or cancel the programme setting, see “Checking/changing/cancelling timer settings” on page 63.

  Notes


- If eight programmes have already been set using the ShowView system or the TIMER PROGRAMMING menu, “FULL” appears in the display window for about five seconds.
- The  and  indicators flash in the display window when you complete the setting in step 9 with no tape inserted.
- If you set the clock using the Auto Clock Set function and AUTO CLOCK is set to ON, the clock will adjust itself to the incoming time signal regardless of adjustments made with the Dial Timer. Be sure you have set the Auto Clock Set correctly.
- When the time is set incorrectly, “ERROR” appears in the display window in step 9. Set the timer again from step 1.
- You cannot set the tape speed to AUTO using the Dial Timer. To select AUTO, set the tape speed in the TIMER PROGRAMMING menu (see page 63).

continued

About the Demonstration Mode

The Dial Timer function has a Demonstration Mode that allows the user, such as a salesperson, to enter more than eight examples of timer settings when demonstrating the use of the Dial Timer. It cancels the “FULL” notice which appears if eight programmes have already been set. Do not use the Demonstration Mode for making timer recordings. Doing so may cause the settings to be inaccurate.

To activate the Demonstration Mode

Press **II** (pause) on the VCR while turning the  DIAL TIMER. “DEMO” appears in the display window for a few seconds.

To cancel the Demonstration Mode

Turn the power off and unplug the mains lead. Although the Demonstration Mode is cancelled, the timer settings entered while using the Demonstration Mode will remain. Be sure to manually cancel the timer settings before you use the Dial Timer or any other timer method after reconnecting the mains lead (see page 63).

Recording TV programmes using the ShowView® system (SLV-SE840N, SE740N and SX740N only)

The ShowView system is the feature that simplifies programming the VCR to make timer recordings. Just enter the ShowView number listed in the TV programme guide. The date, times, and programme position of that programme are set automatically. You can preset a total of eight programmes, including settings made with other timer methods.

Before you start...

- Check that the VCR clock is set to the correct time and date.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.
- Turn on your TV and set it to the video channel.
- Set TIMER METHOD to SHOWVIEW or VARIABLE in the EASY OPERATION menu (see page 73).
- Refer to “Index to parts and controls” for button locations.

1


TIMER



Press TIMER.


- When you set TIMER METHOD to VARIABLE:

The TIMER METHOD menu appears on the TV screen. Press / to select SHOWVIEW, then press OK.

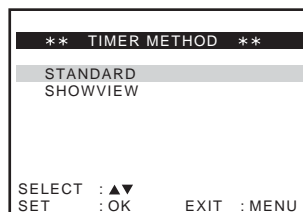


- When you set TIMER METHOD to SHOWVIEW:

The SHOWVIEW menu appears on the TV screen.

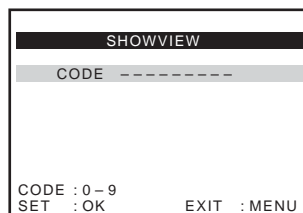


continued

 2



Press the programme number buttons to enter the ShowView number.

If you make a mistake, press CLEAR and re-enter the correct number.

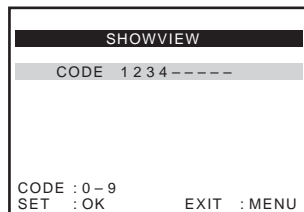

3



Press OK.

The date, start and stop times, programme position, tape speed and VPS/PDC setting appear on the TV screen.

INPUT SELECT




CLEAR



- If “--” appears in the “PR” (programme) column (this may happen for local broadcasts), you have to set the appropriate programme position manually. Press **↑/↓** to select the desired programme position.
- To record from a decoder or other source connected to one or more of the LINE inputs, press INPUT SELECT to display the connected line in the “PR” position.

You will only have to do this operation once for the referred channel. The VCR will then store your setting.

If the information is incorrect, press CLEAR to cancel the setting.

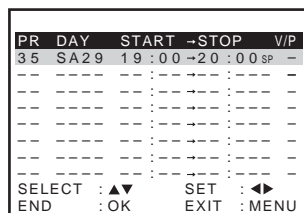


4



If you want to change the date, tape speed and the VPS/PDC setting:

- 1 Press **←/→** to select the item you want to change.
 - 2 Press **↑/↓** to reset it.
- To record the same programme every day or the same day every week, see “Daily/weekly recording” on page 53.
 - To use the VPS/PDC function, set V/P to ON. For details about the VPS/PDC function, see “Timer recording with VPS/PDC signals” on page 53.

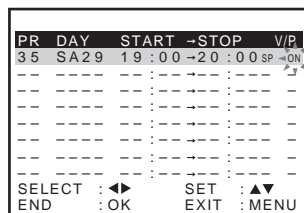

5

MENU



Press MENU to exit the menu.



Press **I/⏻** to turn off the VCR.

The **⏻** indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment switched on.

To stop recording

To stop the VCR while recording, press **■** (stop).

Daily/weekly recording

In step 4 above, press **↓** to select the recording pattern. Each time you press **↓**, the indication changes as shown below. Press **↑** to change the indication in reverse order.

today → DLY (Monday to Sunday) → W-SA (every Saturday) → W-SU (every Sunday) → 1 month later → (dates count down) → today

Timer recording with VPS/PDC signals

Some broadcast systems transmit VPS (Video Programme System) or PDC (Programme Delivery Control) signals with their TV programmes. These signals ensure that your timer recordings are made regardless of broadcast delays, early starts, or broadcast interruptions.

To use the VPS/PDC function, set V/P to ON in step 4 above. You can also use the VPS/PDC function for a source connected to one or more of the LINE inputs.

To use the VCR after setting the timer

To use the VCR before a recording begins, just press **I/⏻**. The **⏻** indicator turns off and the VCR switches on. Remember to press **I/⏻** to reset the VCR to recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 40).
- Display tape information on the TV screen (page 43).
- Check the timer settings (page 63).
- Watch another TV programme (page 43).


 
To use the Auto Tape Speed function

In step 4 above, press **↓** to select AUTO. When you are recording a programme in the SP mode and the remaining tape length becomes shorter than the recording time, the recording tape speed is automatically changed to the LP mode. Note that some noise will appear on the picture when the tape speed is changed. To operate this function correctly, the “TAPE SELECT” setting in the USER SET menu must be accurate (see page 72).

Tips

- To set the line input video source, you can also use the INPUT SELECT button.
- You can set the extended time for the ShowView setting by 10, 20, 30, 40, 50, or 60 minutes. Set SHOWVIEW EXTEND in the EASY OPERATION menu to the desired extended time on page 73.
- To check, change, or cancel the programme setting, see “Checking/changing/cancelling timer settings” on page 63.

Notes

- If the VPS/PDC signal is too weak or the broadcasting station failed to transmit VPS/PDC signals, the VCR will start recording at the set time without using the VPS/PDC function.
- The  and  indicators flash in the display window when you press **I/⏮** with no tape inserted.
- When you set TIMER METHOD to STANDARD in the EASY OPERATION menu, the SHOWVIEW menu does not appear on the TV screen. Select SHOWVIEW or VARIABLE.

Recording TV programmes using the timer

You can preset a total of eight programmes, including settings made with other timer methods.

Before you start...

- Check that the VCR clock is set to the correct time and date.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.
- Turn on your TV and set it to the video channel.
- Set **TIMER METHOD*** to **STANDARD** or **VARIABLE** in the **EASY OPERATION** menu (see page 73).
- Refer to “Index to parts and controls” for button locations.

1

TIMER



Press **TIMER**.

For SLV-SE640N and SE440K

The **TIMER PROGRAMMING** menu appears on the TV screen.



PR	DAY	START	→STOP	V/P
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
SELECT : ▲▼	SET : ◀▶			
END : OK	EXIT : MENU			

For SLV-SE840N, SE740N and SX740N

- When you set **TIMER METHOD** to **VARIABLE**:

The **TIMER METHOD** menu appears on the TV screen. Press to select **STANDARD**, then press **OK**.

** TIMER METHOD **				
STANDARD				
SHOWVIEW				
SELECT : ▲▼	SET : OK			
SET : OK	EXIT : MENU			


- When you set **TIMER METHOD** to **STANDARD**:

The **TIMER PROGRAMMING** menu appears on the TV screen.

PR	DAY	START	→STOP	V/P
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
SELECT : ▲▼	SET : ◀▶			
END : OK	EXIT : MENU			

continued

1 Press ➡ to select each item in turn.

To correct a setting, press  to return to that setting and reset.

[illegible]

- To record the same programme every day or the same day every week, see “Daily/weekly recording” on page 56.
- To use the VPS/PDC function*, set V/P to ON. For details about the VPS/PDC function, see “Timer recording with VPS/PDC signals” on page 53.
- To record from a decoder or other source connected to one or more of the LINE inputs, press INPUT SELECT to display the connected line in the “PR” position.

[MENU](#)



Press MENU to exit the menu.

- | / Ⓢ



Press **I/⏻** to turn off the VCR.

The \oplus indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment switched on.

To stop recording

To stop the VCR while recording, press **■** (stop).

Daily/weekly recording

In step 2 above, press **↓** to select the recording pattern. Each time you press **↓**, the indication changes as shown below. Press **↑** to change the indication in reverse order.

today → DLY (Monday to Sunday) → W-SA (every Saturday) → W-SU (every Sunday) → 1 month later → (dates count down) → today

To use the VCR after setting the timer

To use the VCR before a recording begins, just press **I/⏻**. The **⊖** indicator turns off and the VCR switches on. Remember to press **I/⏻** to reset the VCR to recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 40).
- Display tape information on the TV screen (page 43).
- Check the timer settings (page 63).
- Watch another TV programme (page 43).

To use the Auto Tape Speed function

In step 2 above, press **↓** to select AUTO. When you are recording a programme in the SP mode and the remaining tape length becomes shorter than the recording time, the recording tape speed is automatically changed to the LP mode. Note that some noise will appear on the picture when the tape speed is changed. To operate this function correctly, the “TAPE SELECT” setting in the USER SET menu must be accurate (see page 72).

Tips

- To set the line input video source, you can also use the INPUT SELECT button.
- Even if you set TIMER METHOD* to SHOWVIEW in the EASY OPERATION menu, you can set the timer manually. Press MENU to select TIMER PROGRAMMING, then go to step 2.
- To check, change, or cancel the programme setting, see “Checking/changing/cancelling timer settings” on page 63.

Notes

- When setting the timer with VPS/PDC* signals, enter the start and stop times exactly as indicated in the TV programme guide. Otherwise, the VPS/PDC function will not work.
- If the VPS/PDC* signal is too weak or the broadcasting station failed to transmit VPS/PDC signals, the VCR will start recording at the set time without using the VPS/PDC function.
- The **⊖** and **○○** indicators flash in the display window when you press **I/⏻** with no tape inserted.
- The VPS/PDC function* is automatically set to off for the timer recording of a satellite programme.

* not available on SLV-SE640N and SE440K

Playing/searching at various speeds

Before you start...

- Refer to “Index to parts and controls” for button locations.

Playback options


To	Do this
View the picture during fast-forward or rewind	During fast-forward, hold down ►► (fast-forward). During rewind, hold down ◀◀ (rewind).
Play at high speed	<ul style="list-style-type: none">• During playback, briefly press ►► (fast-forward) or ◀◀ (rewind). The tape continues to play at high speed.• During playback, hold down ►► (fast-forward) or ◀◀ (rewind). When you release the button, normal playback resumes.
Play at twice the normal speed	During playback, press ×2.
Play in slow motion	During playback, press ►► SLOW.

To resume normal playback

Press ▷ (play).

Using Playback Dial on the VCR

With Playback Dial, you can operate the following playback options.

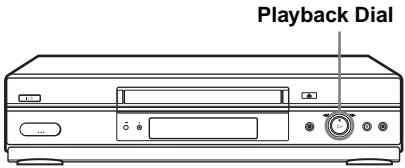

To	Do this
View the picture during fast-forward or rewind	During fast-forward, turn and hold Playback Dial to the right (►► (fast-forward)). During rewind, turn and hold Playback Dial to the left (◀◀ (rewind)).
Play at high speed	<ul style="list-style-type: none">• During playback, quickly turn and release Playback Dial to the right (►► (fast-forward)) or left (◀◀ (rewind)). The tape continues to play at high speed.• During playback, turn and hold Playback Dial to the right (►► (fast-forward)) or left (◀◀ (rewind)). When you release Playback Dial, normal playback resumes.

Tip

- Adjust the picture using the PROGRAM +/- buttons on the VCR if:
 - Streaks appear while playing in slow motion.
 - Bands appear at the top or bottom while pausing.
 - The picture shakes while pausing.To set tracking to the centre position, press both buttons (+/-) at the same time.

Notes

- The sound is muted during these operations.
- In the LP mode, noise may appear or there may be no colour.
- If the playback mode mark does not appear on the TV screen, press (i+) DISPLAY.
- The picture may show noise when playing at high speed in reverse.
- Do not turn Playback Dial forcibly. It may damage Playback Dial.

Setting the recording duration time

After you have started recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

Before you start...

- Refer to “Index to parts and controls” for button locations.

1 While recording, press ● REC.

 
The ⊖ indicator appears in the display window.



2 Press ● REC repeatedly to set the duration time.


In SP mode

Each press advances the time in increments of 30 minutes.



In LP mode

 Each press advances the time as shown below.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press ● REC repeatedly to set a new duration time.

To cancel the duration

Press ● REC repeatedly until the ⊖ indicator disappears and the VCR returns to the normal recording mode.

To stop recording

To stop the VCR while recording, press ■ (stop).

Note

- You cannot display the current tape time in the display window when setting the recording duration time.

Synchronized Recording


(not available on SLV-SE640N and SE440K)

You can set the VCR to automatically record programmes from equipment such as a satellite tuner by connecting the equipment to the LINE-3 (DEC/EXT)*¹ (or LINE-2 (DEC/EXT)*²) connector. The connected equipment must have a timer function for this feature to work.

When the connected equipment turns on, the VCR also automatically turns on and starts recording a programme from LINE-3 (DEC/EXT)*¹ (or LINE-2 (DEC/EXT)*²).

How to connect for Synchronized Recording


Connect the LINE-3 (DEC/EXT)*¹ (or LINE-2 (DEC/EXT)*²) connector of the VCR to the **TV Scart** connector of the satellite tuner. Then connect the LINE-1 (EURO AV) connector of the VCR to the TV. Then connect the TV to the TV.

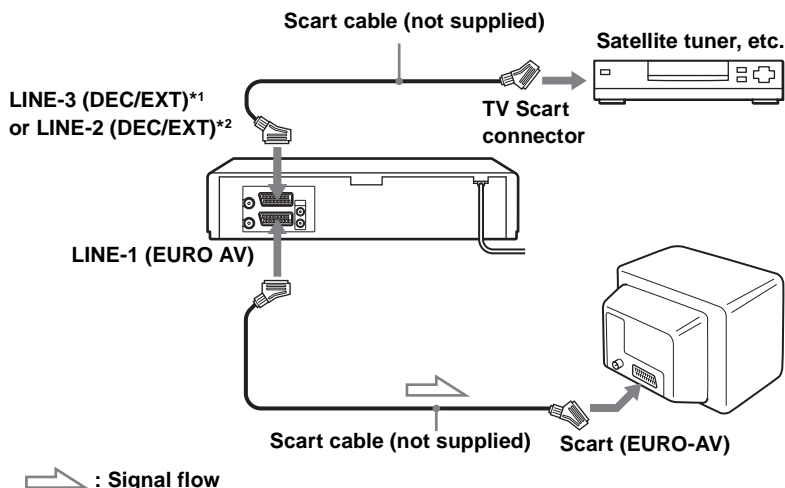

Recording programmes using the Synchronized Recording function

Before you start...

- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Refer to “Index to parts and controls” for button locations.

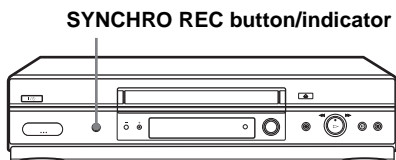

- 1** Press INPUT SELECT or PROG +/- to display “L3*¹ (or L2*²)” in the display window.
- 2** Set the timer on the connected equipment to the time of the programme you want to record, then turn it off.
- 3** Press SP/LP to select the tape speed.
- 4** Hold down SYNCHRO REC on the VCR for more than two seconds.
The SYNCHRO REC indicator lights up in red and the VCR stands by for recording.

The VCR automatically turns on and starts recording when it receives an input signal from the connected equipment.

The VCR automatically stops recording when the tape reaches the end or when the connected equipment stops transmitting an input signal.

To cancel the Synchronized Recording function

Press SYNCHRO REC on the VCR. The SYNCHRO REC indicator disappears.

To stop recording

Press ■ (stop) while recording.

Notes

- This function may not work with some types of satellite tuners.
- Some TVs or other equipment with timer functions will automatically turn off if no operation is performed within a certain amount of time. In this case, the Synchronized Recording also stops automatically.
- When the connected equipment turns on while the SYNCHRO REC indicator lights up in red, recording starts automatically.
- If the settings for timer recording and Synchronized Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished.
- The Auto Clock Set function does not work while the VCR stands by for Synchronized Recording.

*¹ SLV-SE840N

*² SLV-SE740N and SX740N

Checking/changing/cancelling timer settings

Before you start...

- Turn on your TV and set it to the video channel.
- Refer to "Index to parts and controls" for button locations.

1 Press **I/⏻** to turn on the VCR.

2 Press MENU, then press **↑/↓** to highlight **TIMER PROGRAMMING** and press OK.

- If you want to change or cancel a setting, go on to the next step.
- If you do not need to change or cancel the settings, press MENU, then turn off the VCR to return to recording standby.

PR	DAY	START	→STOP	V/P
35	SA 29	19 : 00	→20 : 00	SP ON
29	SA 29	21 : 00	→21 : 30	--
30	SA 6	12 : 00	→13 : 30	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
SELECT : ▲▼		SET : ◀▶		
END : OK		EXIT : MENU		

3 Press **↑/↓** to select the setting you want to change or cancel, then press **→**.

The PR number on the selected row flashes.

PR	DAY	START	→STOP	V/P
35	SA 29	19 : 00	→20 : 00	SP ON
29	SA 29	21 : 00	→21 : 30	--
30	SA 6	12 : 00	→13 : 30	--
11	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
--	--	--	--	--
SELECT : ◀▶		SET : ▲▼		
END : OK		EXIT : MENU		

4 • To change the setting, press **←/→** to select the item you want to change, then press **↑/↓** to reset it.



• To cancel the setting, press CLEAR.

5 Press MENU to exit the menu.

If any settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished. If the programmes start at the same time, the programme listed first in the menu has priority.

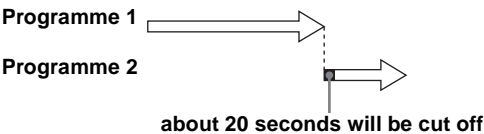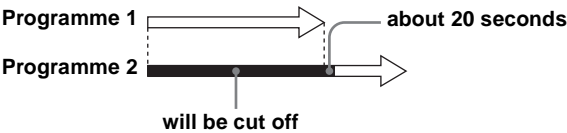

Recording stereo and bilingual programmes (not available on SLV-SE440K)

In the ZWEITON (German stereo) system

This VCR automatically receives and records stereo and bilingual programmes based on the ZWEITON system. When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To select bilingual sound while recording

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO
Standard sound*	MONO	STEREO

* Usually the main channel heard from both the left and right in bilingual programmes

To select stereo programme while recording

To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Left channel	LCH	STEREO
Right channel	RCH	STEREO
Standard sound*	LCH + RCH	STEREO

* Usually the mixed sound of left and right channels in stereo programmes

continued

In the NICAM system

This VCR receives and records stereo and bilingual programmes based on the NICAM system (NICAM appears on the TV screen). When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To record a NICAM programme, NICAM in the USER SET menu should be set to ON (initial setting). To check the menu setting, see page 73 for details.

To select the sound while recording

Press AUDIO MONITOR to select the sound you want.

Stereo programmes

To listen to	On-screen display	Display window
Stereo	NICAM, STEREO	STEREO
Left channel	NICAM, LCH	STEREO
Right channel	NICAM, RCH	STEREO
Left and right channels*	NICAM, LCH + RCH	STEREO

* Usually the mixed sound of left and right channels

Bilingual programmes

To listen to	On-screen display	Display window
Main	NICAM, MAIN	STEREO
Sub	NICAM, SUB	STEREO
Main and sub	NICAM, MAIN/SUB	STEREO
Standard sound*	NICAM, MONO	STEREO

* Usually the main sound (monaural)

Selecting the sound during Hi-fi playback


Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Left channel	LCH	STEREO
Right channel	RCH	STEREO
Mix sound*	MIX	STEREO
Mono sound	MONO	No indicator

* The mixed sound of left and right channels, and the normal mono audio track

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

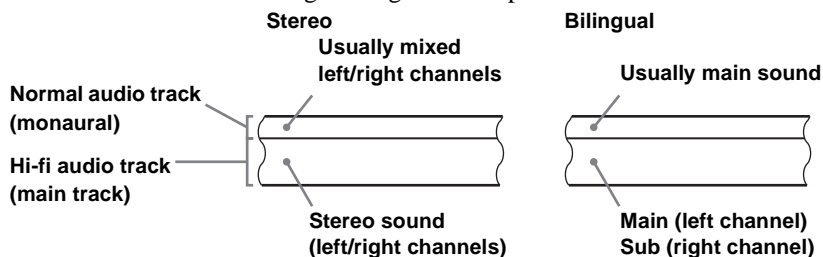

Notes

- To listen to playback sounds in stereo, you must use the Scart or AUDIO OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.

Searching using the index function (not available on SLV-SE440K)

The VCR automatically marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording.

To find a specific recording by scanning (Index scan)

- 1 Insert an indexed tape into the VCR.
- 2 Press **⏮/⏭** (index search). The VCR starts scanning each recording for five seconds in the corresponding direction.



- 3 Press **▶** (play) to start playback when you find the desired point.

To search a specific recording (Index search)

- 1 Insert an indexed tape into the VCR.
- 2 Press **⏮/⏭** (index search) twice.
 - To search ahead, press **⏭** (index search) twice.
 - To search backwards, press **⏮** (index search) twice.



- 3 Press **⏮/⏭** (index search) depending on the direction where your desired programme is located.

Each time you press the button, the number increases or decreases up to ± 20 , respectively.

- 4 The VCR starts searching, and playback starts automatically from that point.

To stop searching

Press **■** (stop).

Notes


- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the programme position during recording pause.
- When you press **⏮** (index search), if there is nothing recorded before the selected index signal, playback may not start exactly at the index signal.

Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape, distortion may occur if the recording is in poor condition. In this case, manually adjust the tracking.

During playback, press PROGRAM +/- on the VCR to display the tracking meter. The distortion should disappear as you press one of the two buttons. To resume automatic tracking adjustments, eject the tape and re-insert it.

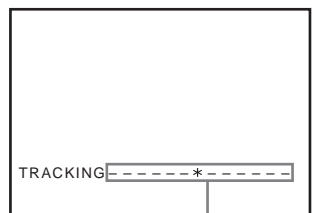


Tracking meter


Adjusting the picture sharpness (Smart trilogic)

You can automatically adjust the sharpness of the picture.

- 1 During playback, press MENU, then press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to highlight USER SET and press OK.
- 2 Press \uparrow/\downarrow to highlight SMART TRILOGIC, then press \rightarrow .

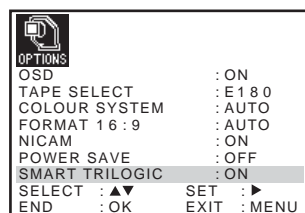


- 3 Press \uparrow/\downarrow to set SMART TRILOGIC to ON or OFF.
 - ON: Picture sharpness is automatically adjusted.
 - OFF: Adjust the picture sharpness manually.
 - To soften the picture, press \leftarrow .
 - To sharpen the picture, press \rightarrow .
- 4 Press MENU to return to the original screen.

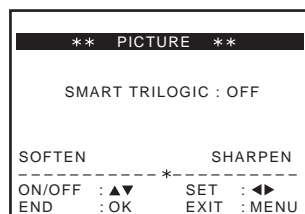

Reducing the VCR's power consumption

You can turn off the indicators in the display window when the VCR is off (standby mode) to reduce the VCR's power consumption.


- 1** Press MENU, then press **↑/↓/←/→** to highlight USER SET and press OK.
- 2** Press **↑/↓** to highlight POWER SAVE.
- 3** Press **→** to set to ECO1 or ECO2, then press OK.
 - ECO1: To reduce the power consumption.
 - ECO2: To reduce the power consumption to a minimum.

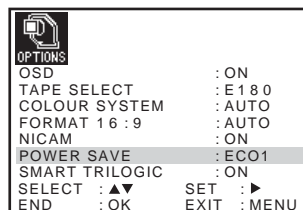

To turn on the indicators in the display window



Set POWER SAVE to OFF in step 3.

 Notes

- When the VCR stands by for recording, the  indicator in the display window remains lit even when POWER SAVE is set to ECO1 or ECO2.
- The Line Through function will not operate properly if POWER SAVE is set to ECO2. Set POWER SAVE to OFF or ECO1 to ensure proper operation.

Changing menu options

- 1 Press MENU, then select USER SET or EASY OPERATION and press OK.

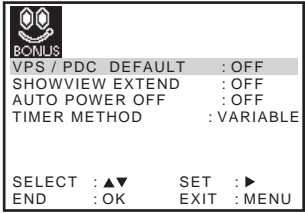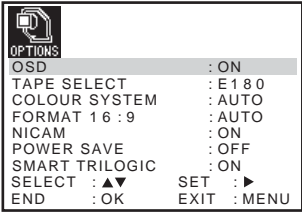

- 2 Press **↑/↓** to select the option.
- 3 Press **→** to change the setting, then press OK.

Menu choices

Initial settings are indicated in bold print.

USER SET

Menu option	Set this option to
OSD	<ul style="list-style-type: none"> • ON to display the menu on the TV screen. • OFF to disappear the menu from the TV screen.
TAPE SELECT	<ul style="list-style-type: none"> • E180 to use an E-180 or shorter type tape. • E240 to use an E-240 type tape. • E260 to use an E-260 type tape. • E300 to use an E-300 type tape.
COLOUR SYSTEM	<ul style="list-style-type: none"> • AUTO to set the colour system automatically. • PAL to play back a tape recorded in the PAL colour system. • MESECAM to play back a tape recorded in the MESECAM colour system. <p>If you press ▲ (eject) or turn the VCR off, COLOUR SYSTEM will be reset to AUTO.</p>
FORMAT 16:9	<ul style="list-style-type: none"> • AUTO when you use a wide screen TV. The VCR automatically detects if programmes being played back or recorded are in normal or wide screen format. • ON if the VCR cannot detect wide screen TV programmes with AUTO. The VCR always plays back and records in wide screen format. • OFF if you are not using a wide screen TV.

Menu option	Set this option to
NICAM* ¹	<ul style="list-style-type: none"> • ON to record NICAM broadcasts on the hi-fi audio track. • OFF to record standard sound on the hi-fi audio track. <p>For details, see page 65.</p>
POWER SAVE	<ul style="list-style-type: none"> • ECO1 to turn off the indicators in the display window to conserve the VCR's power. • ECO2 to turn off the indicators in the display window during standby mode to reduce the VCR's power consumption to a minimum. For using the Line Through function and Canal plus function, select ECO1 or OFF. • OFF to turn on the indicators in the display window while the VCR is standing by.
SMART TRILOGIC	<ul style="list-style-type: none"> • ON to automatically adjust the sharpness of the picture. • OFF to manually adjust the sharpness of the picture.

EASY OPERATION

Menu option	Set this option to
VPS/PDC DEFAULT* ²	<ul style="list-style-type: none"> • OFF to deactivate the VPS/PDC function. • ON to activate it.
SHOWVIEW EXTEND* ²	<ul style="list-style-type: none"> • OFF to deactivate the ShowView Extend function. • 10/20/30/.../60 (minutes) to extend the time of the ShowView setting by the selected amount of time.
AUTO POWER OFF	<ul style="list-style-type: none"> • OFF to deactivate the Auto Power Off function. • 2HOUR/3HOUR to turn the VCR off automatically if no signal is received and you do not press any of the buttons during this time.
TIMER METHOD* ²	<ul style="list-style-type: none"> • VARIABLE to display the TIMER METHOD menu for selecting STANDARD or SHOWVIEW when pressing the ⏸ TIMER button. • STANDARD to display the TIMER PROGRAMMING menu when pressing the ⏸ TIMER button. • SHOWVIEW to display the SHOWVIEW menu when pressing the ⏸ TIMER button. <p>For details, see pages 51 and 55.</p>

*¹ not available on SLV-SE440K


*² not available on SLV-SE640N and SE440K

Connecting to a VCR or stereo system

How to connect to record on this VCR


Connect the line outputs of the other VCR to the input connector of this VCR. Refer to the examples A through C and choose the connection that best suits your VCR.

Example A

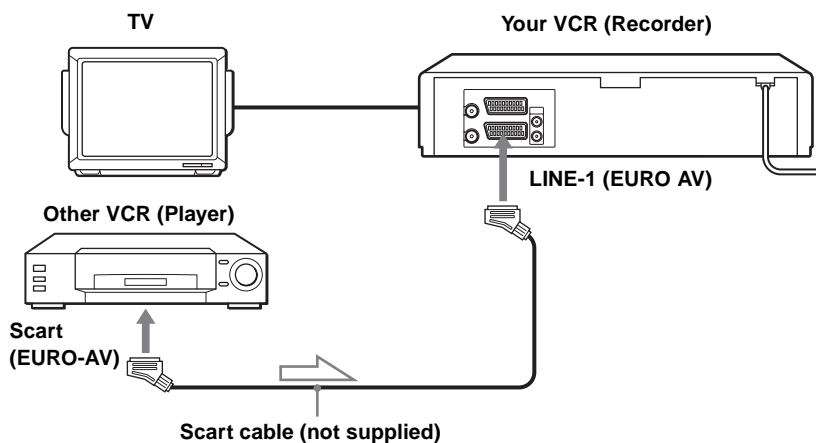


: Signal flow

Example B (SLV-SE840N only)

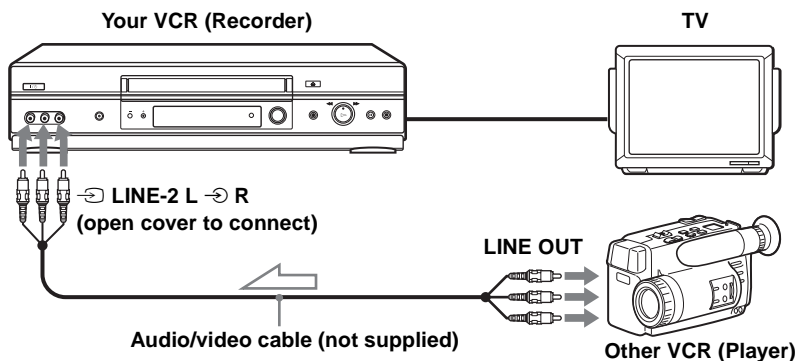

: Signal flow

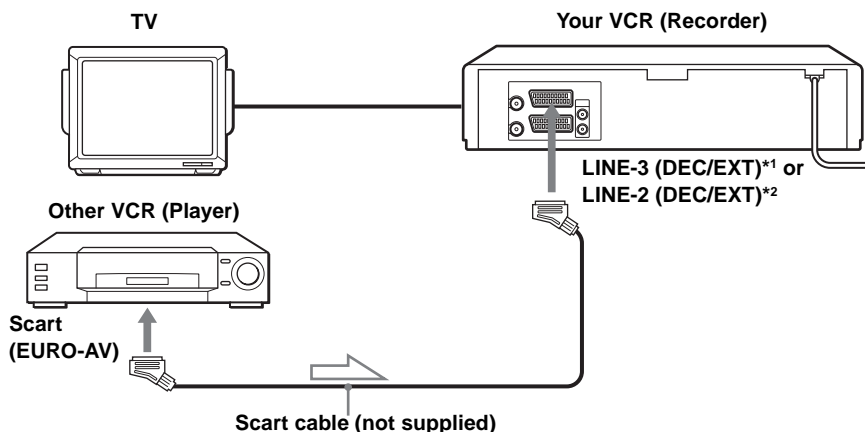

 : Signal flow

How to connect to a stereo system (SLV-SE840N only)

Connect the \Rightarrow LINE-2 L \Rightarrow R jacks on this VCR to the audio output jacks on the stereo system, using an audio cable (not supplied).

Notes

- Make sure you connect the plugs to jacks of the same colour.
- If the other VCR is a monaural type, leave the red plugs unconnected.
- If you connect this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- If the other VCR does not have a Scart (EURO-AV) connector, use an adequate cable instead and connect the cable to the line out jacks of the other VCR.
- When you connect another VCR to the LINE-3 (DEC/EXT)*¹ or LINE-2 (DEC/EXT)*² connector, press INPUT SELECT to display “L3”*¹ or “L2”*² in the display window.

*¹ SLV-SE840N


*² SLV-SE740N, SX740N, SE640N and SE440K

Basic editing

When recording on this VCR

Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT to display the connected line in the display window.
- Press SP/LP to select the tape speed, SP or LP.

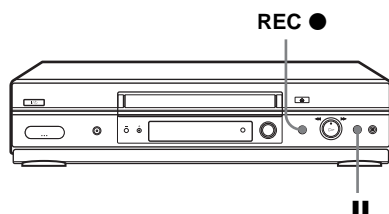

- 1** Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2** Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press **||** (pause) to set it to playback pause.
- 3** Press REC ● on this VCR to set it to recording pause.
- 4** To start editing, press the **||** (pause) buttons on both VCRs at the same time.

To stop editing

Press the **■** (stop) buttons on both VCRs.



Tip


- To cut out unwanted scenes while editing, press **||** (pause) on this VCR when an unwanted scene begins. When it ends, press **||** (pause) again to resume recording.


Audio dubbing (SLV-SE840N only)

This feature lets you record over the normal audio track. The monaural sound previously recorded is replaced while the original hi-fi sound remains unchanged. Use this feature to add commentary to a tape that you have recorded with a camcorder.

Before you start...

- Open the  LINE-2 L  R jacks cover on the front panel and connect a playback source.
- Turn on the TV and set it to the video channel.

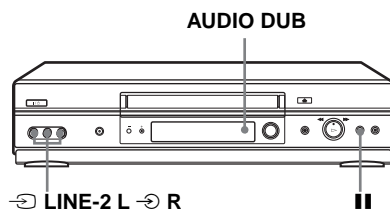

- 1** Insert a source tape into your stereo system (or the playback VCR). Search for the point to start playback and set it to playback pause.
- 2** Insert a prerecorded tape with its safety tab in place into this (recording) VCR. Search for the start of the section to be replaced and press **||** (pause).
The VCR enters pause mode.
- 3** Press AUDIO DUB.
“A_DUB” and the  indicator appears in the display window.
- 4** To start editing, press the **||** (pause) buttons on this VCR and the stereo system (or other VCR) at the same time.
After you use this feature, the audio in playback mode is automatically set to monaural.

To stop editing

Press **■** (stop) on this VCR and the stereo system (or other VCR).

Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The I/⏻ (on/standby) switch does not function.	<ul style="list-style-type: none"> Connect the mains lead to the mains securely.
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> Moisture condensation has occurred. Turn the power off, unplug the mains lead and leave the VCR to dry for over three hours.
	The VCR is plugged in but the display window remains dark.	<ul style="list-style-type: none"> Set POWER SAVE in the USER SET menu to OFF (see page 71).
Clock	The clock has stopped and “-:-” appears in the display window.	<ul style="list-style-type: none"> The clock stops if the VCR is disconnected from the mains. Reset the clock (and timer).
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. If the VCR is connected to the TV with the Scart cable, make sure the VIDEO indicator is lit in the display window. Use the TV/VIDEO button on the remote commander to light up the VIDEO indicator.
	The picture is not clear.	<ul style="list-style-type: none"> Existing broadcasts may interfere with the VCR. Reset the RF channel output of your VCR (see page 22). Adjust the tracking with the PROGRAM +/- buttons <u>on the VCR</u>. The video heads are dirty (see the last page of Troubleshooting). Clean the video heads using a Sony video head cleaning cassette. If a Sony cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available liquid type cleaning cassette other than Sony's, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony service facility for more information.
	The picture has no colour.	<ul style="list-style-type: none"> The COLOUR SYSTEM option in the USER SET menu is set to the wrong position. Set the option to conform to the system that the tape was recorded in.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.

	Symptom	Remedy
Playback	The picture has no sound.	<ul style="list-style-type: none"> • The tape is defective. • If you made A/V connections, check the audio cable connection.
	The sound from a tape recorded with the VCR is not in stereo or the STEREO indicator in the display window is flashing.	<ul style="list-style-type: none"> • Adjust the tracking. • The video heads are dirty. Clean the video heads using a Sony video head cleaning cassette as explained above.
Recording	No TV programme appears on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. • Existing broadcasts may interfere with the VCR. Reset the RF channel output of your VCR (see page 22). • Select the correct source with the INPUT SELECT button. Select a programme position when recording TV programmes; select a line input when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> • Make sure the aerial cable is connected securely. • Adjust the TV aerial. • Make sure the TV system is correctly set for your TV. • Make sure TV SYSTEM (B/G or D/K) in the INSTALLATION menu is set to the same system in your local area.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole (see page 44).
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole (see page 44).
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> • Make sure the tape is not at its end.
Timer recording	The timer does not operate.	<ul style="list-style-type: none"> • Check that the clock is set. • Make sure a tape has been inserted. • Check that the safety tab has not been removed. • Make sure the tape is not at its end. • Make sure a programme has been set for timer recording. • Make sure your timer settings are past the current time. • Check that the decoder is turned on. • Check that the satellite tuner is turned on. • The clock stops if the VCR is disconnected from the mains. Reset the clock and timer. • Turn the power off and unplug the mains lead.

continued

	Symptom	Remedy
Timer recording	The SHOWVIEW menu or the TIMER PROGRAMMING menu does not appear.	<ul style="list-style-type: none"> Check that TIMER METHOD in the EASY OPERATION menu is set correctly (see page 73).
	The VPS/PDC function does not operate properly.	<ul style="list-style-type: none"> Check that the clock and the date are set correctly. Check that the VPS/PDC time you set is the correct one (there might be a mistake in the TV programme guide). If the broadcast you wanted to record did not send the good VPS/PDC information, the VCR will not start recording. If the reception is poor, the VPS/PDC signal might be altered and the VCR might not start recording.
Synchronized Recording	The SYNCHRO REC button turns off while recording or does not go back to recording standby mode.	<ul style="list-style-type: none"> The tape has reached its end. Insert a new tape and press SYNCHRO REC again.
	The Synchronized Recording function does not work.	<ul style="list-style-type: none"> The connected equipment was not turned off. Turn off the connected equipment and press SYNCHRO REC again. There was a power failure. Press SYNCHRO REC again.
	The programme recorded with the Synchronized Recording function is incomplete.	<ul style="list-style-type: none"> If the settings for timer recordings and Synchronized Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished. There was a power failure. Press SYNCHRO REC again.
Canal Plus	You cannot watch Canal Plus programmes when the VCR is in standby mode.	<ul style="list-style-type: none"> Check that DEC is set to ON for this channel in the TV STATION TABLE menu. Make sure the Canal Plus Scart cable is plugged securely.
	A Canal Plus programme is always recorded scrambled.	<ul style="list-style-type: none"> Make sure the Canal Plus Scart cable is plugged securely. Check that DEC is set to ON for this channel in the TV STATION TABLE menu.

	Symptom	Remedy
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> Check that a tape is not already in the tape compartment.
	The remote commander does not function.	<ul style="list-style-type: none"> Make sure you are pointing the remote commander at the remote sensor on the VCR. Replace all the batteries in the remote commander with new ones if they are weak. Make sure the [TV] / [VIDEO] remote control switch is set correctly.
	The selected input line connector number does not appear in the display window.	<ul style="list-style-type: none"> Press INPUT SELECT to display the connected line.
	The tracking meter does not appear on the TV screen.	<ul style="list-style-type: none"> The recording condition of the tape is very poor and tracking cannot be adjusted.
	You cannot control other TVs.	<ul style="list-style-type: none"> Set your TV's code number. The code number may change when you replace the batteries of the remote commander.
	The display window becomes dim.	<ul style="list-style-type: none"> The display window automatically becomes dim when the VCR is in standby or timer recording mode.
	The VCR needs to be cleaned.	<ul style="list-style-type: none"> Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzene.
	The Line Through function does not operate.	<ul style="list-style-type: none"> Set POWER SAVE in the USER SET menu to OFF (see page 71).

Symptoms caused by contaminated video heads

• Normal picture



• Rough picture



initial
contamination

• Unclear picture



• No picture (or black & white screen appears)



terminal

Specifications

System

Channel coverage

PAL (B/G, D/K)

VHF E2–E12, R1–R12

UHF E21–E69, R21–R69

CATV S1–S41, S01–S05

RF output signal

UHF channels 21–69

Aerial out

75-ohm asymmetrical aerial socket

Tape speed

SP: PAL/MESECAM

23.39 mm/s

(recording/playback)

NTSC 33.35 mm/s

(playback only)

LP: PAL/MESECAM

11.70 mm/s

(recording/playback)

NTSC 16.67 mm/s

(playback only)

EP: NTSC 11.12 mm/s

(playback only)

Maximum recording/playback time

10 hrs. in LP mode (with E300 tape)

Rewind time

Approx. 1 min. (with E180 tape)

Inputs and outputs

LINE-1 (EURO AV)

21-pin

Video input: pin 20

Audio input: pins 2 and 6

Video output: pin 19

Audio output: pins 1 and 3

LINE-2 (DEC/EXT)/LINE-3 (DEC/EXT)

21-pin

Video input: pin 20

Audio input: pins 2 and 6

↺ LINE-2 L ↺ R*¹

VIDEO IN, phono jack (1)

Input signal: 1 Vp-p, 75 ohms,

unbalanced, sync negative

AUDIO IN, phono jack (2)

Input level: 327 mVrms

Input impedance: more than 47 kilohms

AUDIO (OUT/SORTIE) R/D L/G*²

Phono jack (2)

Rated output level: 327 mVrms

Load impedance: 47 kilohms

Output impedance: less than 10 kilohms

*¹ SLV-SE840N only

*² not available on SLV-SE640N and SE440K

General

Power requirements

220 – 240 V AC, 50 Hz

Power consumption

- SLV-SE440K

15 W

1.2 W (POWER SAVE is set to ECO2, minimum)

- SLV-SE640N

17 W

1.2 W (POWER SAVE is set to ECO2, minimum)

- SLV-SE840N, SE740N and SX740N

17 W

1.3 W (POWER SAVE is set to ECO2, minimum)

Operating temperature

5° C to 40° C

Storage temperature

–20° C to 60° C

Dimensions including projecting parts and controls (w/h/d)

Approx. $360 \times 95 \times 255$ mm

(SLV-SE440K)

Approx. $430 \times 96 \times 255$ mm

(SLV-SE840N, SE740N, SX740N and SE640N)

Mass

Approx. 2.8 kg (SLV-SE440K)

Approx. 3.1 kg (SLV-SE840N, SE740N, SX740N and SE640N)

Supplied accessories

Remote commander (1)

R6 (size AA) batteries (2)

Aerial cable (1)

Design and specifications are subject to change without notice.

Index

A

- Adjusting
 - picture 70
 - tracking 70
- Aerial hookup 16
- Audio dubbing 77
- Audio monitor 66
- Audio track 67
- Auto Clock Set 22
- Auto Set Up 20

C

- Canal Plus 36
- Changing the programme position 31
- Changing the station name 34
- Cleaning the video heads 78
- Clock setting 24
- Colour system
 - compatible colour systems 2
 - setting 40
- Connecting
 - the VCR and your TV 16, 17
 - to a satellite tuner 19
 - to a stereo system 19, 74
 - to a TV with a Scart (EURO-AV) connector 17
- Counter 40
- Country selection 21

D

- Demonstration 50
- Dial Timer 46
- Disabling the programme positions 32
- Dubbing. *see* Editing

E

- Editing 74

H

- Hi-fi audio track 67

I

- Index scan 68
- Index search 68

L

- Language selection 27
- LP mode 42

M

- Manual fine tuning 30
- Monaural 66

N

- NICAM broadcasts 66
- Normal audio track 67

O

- Optional setting 72

P

- PDC (Programme Delivery Control) 53
- Playback 39
 - at various speeds 58
 - selecting the sound 66
 - slow motion 58
- Power save 71
- Preset download 26
- Presetting channels 28

R

- Recording 42
 - bilingual programmes 65
 - duration time 60
 - saving 44
 - stereo programmes 65
 - timer setting 55
 - using the Dial Timer 46
 - using the ShowView system 51
 - what you are watching on the TV 45
 - while watching another programme 43
- RF channel 20, 22

S

- Safety tab 44
- Scart connection 17
- Searching
 - at various speeds 58
 - using the index function 68
- ShowView
 - recording 51
- Smart trilogic 70
- SMARTLINK
 - NexTVView Download 18
 - One Touch Menu 18
 - One Touch Play 18, 41
 - One Touch Timer 18
 - TV Direct Rec 18, 45
- SP mode 42
- Stereo 65
- Synchronized Recording 62

T

- Timer setting 55
 - cancelling 63
 - changing 63
 - checking 63
 - daily/weekly recording 53, 56
 - using the Dial Timer 46
 - using the ShowView system 51

V

- VPS (Video Programme System) 53

W


- Wide screen format 72

Z

- ZWEITON broadcasts 65

Quick Start Guide

1 Connecting the VCR

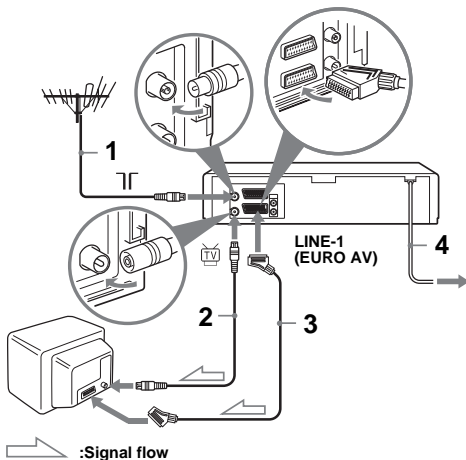

- 1 ... Connect the aerial to RF of the VCR.
- 2 ... Connect TV and the aerial input of your TV using the supplied aerial cable.
- 3 ... For better picture and sound, connect LINE-1 (EURO AV) to your TV using a Scart cable if your TV has a Scart (EURO-AV) connector.
- 4 ... Connect the mains lead to the mains.

2 Using the Auto Set Up function

- 1 ... Turn on your TV and set it to the video channel.
If your TV does not have a Scart (EURO-AV) connector, tune the TV to channel 32 (the initial RF channel of this VCR). Refer to your TV's manual for TV tuning instructions. If the picture does not appear clearly, see "To change the RF channel."
- 2 ... Connect the mains lead to the mains.

- 3 ... Press **↑/↓/←/→** to select a language, then press OK.
- 4 ... When the COUNTRY SELECTION menu appears, press **↑/↓/←/→** to select a country, then press OK.
When all of the receivable channels are preset, the menu disappears from the TV screen. You can rearrange the programme position in any order (see "Changing/disabling programme positions").

3 Setting the clock

- 1 ... Press MENU, then press **↑/↓/←/→** to highlight CLOCK SET and press OK.
- 2 ... Press **↑/↓** to set the hour, then press **→**.
- 3 ... Press **↑/↓** to set the minutes. Set the day, month, and year in sequence by pressing **→** to select the item to be set, and press **↑/↓** to select the digits, then press OK.
- 4 ... Press MENU.

Now you can operate your VCR.