



5 LED DYNAMO HURRICANE LANTERN

Model 95120

OPERATING INSTRUCTIONS



3491 Mission Oaks Blvd., Camarillo, CA 93011
Visit our Web Site at www.harborfreight.com

Copyright© 2006 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts please call 1-800-444-3353.

Due to continuing improvement, actual product may differ slightly from the product described herein.

THANK YOU for choosing a **HARBOR FREIGHT TOOLS** product. For future reference, please complete the owner's record below:

Model _____ **Serial No.** _____ **Purchase Date** _____

SAVE THE RECEIPT AND THESE INSTRUCTIONS. It is important that you read the entire manual to become familiar with the unit BEFORE you use.

Technical Specifications

| | |
|---------------------|--|
| Material: | ABS housing, top cover and handle; thermoplastic lens and steel bars |
| Light Duration: | ~30 seconds of cranking handle=15 to 30 minutes |
| Housing Dimensions: | 7" OD x 10-3/4" H |
| Battery: | Internal non-replaceable NiMH battery |
| Weight: | 1.75 Lbs. |

Safety Warnings and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this product!



READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!

- 1. Keep work or usage area clean.** Cluttered areas invite injuries.
- 2. Store idle equipment.** When not in use, the Hurricane Lantern must be stored in a safe and clean location. Always lock up products and keep out of reach of children.
- 3. Use the right product for the job.** There are certain applications for which the Hurricane Lantern was designed. Do not modify the Hurricane Lantern and do not use it for a purpose for which it was not intended.

4. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any broken or damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
5. **Do not operate product if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the product.
6. **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair and clothing away from the Hurricane Lantern.** Loose clothes, jewelry, or long hair can be caught in the Hurricane Lantern, causing personal injury.
7. **Do not expose the Hurricane Lantern to rain or wet conditions.** Water entering electrically powered equipment will increase the risk of electric shock.


Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking your Hurricane Lantern, check to make sure that the product is intact and undamaged. Your Hurricane Lantern requires no assembly. If any parts are missing or broken, please call **HARBOR FREIGHT TOOLS** at **1-800-444-3353**.

Operation

1. The Hurricane Lantern has a push button On/Off. Press the On/Off Button to OFF before charging the Hurricane Lantern. Pull out the Handle as shown in Figure 1.
2. Grasp the Handle and crank it continuously clockwise for at least 30 seconds. Thirty seconds of cranking the Handle will generate roughly 15 to 30 minutes of light. When finished cranking, fold the Handle back into its slot as shown.
3. Press the On/Off Button to ON to turn on the Hurricane Lantern.

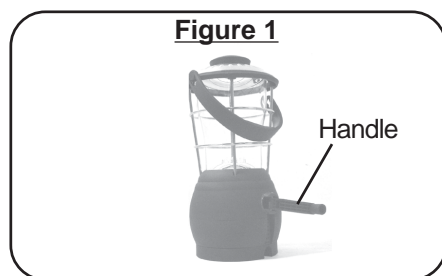

The LED light is expected to have a long working life.
The Hurricane Lantern has no replacement parts.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.