



Congratulations

on purchasing our high quality product.

Please read the manual carefully to find out all features and how your telephone works, so you can get the best out of your new phone.


■ Safety Precautions

To reduce the risk of electrical shock and injury, please follow these basic safety precautions before using the phone.

- 1. Carefully read and observe the instructions in this manual.
- 2. Follow all warnings marked on the unit.
- 3. When cleaning, unplug the phone first, then use a damp cloth to wipe. Do not use liquid or aerosol
- 4. Do not place objects on the line cord that may cause damage.
- 5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
- 6. Avoid spilling of any liquid on the phone.
- 7. Unplug this phone from the wall outlet and refer servicing to qualified service personnel only.
- 8. Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with
- polarity symbols (this instruction is found in the installing batteries section.) 9. Use only the batteries indicated in the User's Manual. Never use other ordinary batteries or
- conventional alkaline batteries. Otherwise this may not only cause personal injuries but also damage to the unit.
- 10. Do not mix exhausted batteries with full batteries. Exhausted batteries shall not be disposed of with the usual household waste or in a fire.
- 11. If you are sure you will not be going to use the handset over a month, please take out the batteries from the battery compartment.
- 12. Use only the power supply indicated in the User's Manual
- 13. Keep the phone out of the reach of children.
- 14. Use the phone only in the described manner.
- 15. Stop using the phone if it becomes damaged.

Unpacking


Once you have unpacked your phone, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

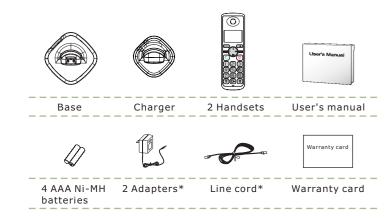


*The shape of the plugs can vary according to each country's specification


■ Phone Layout and Keys Function

Handset

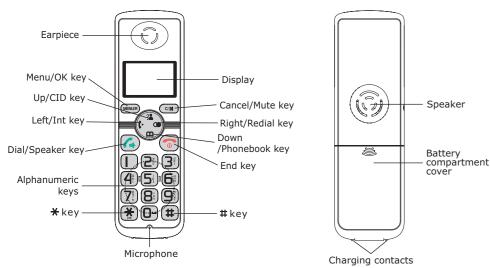

Base

 

 

Charger

■ Keys Description

Dial/Speaker key Make/Answer a cal

Activates the speakerphone if pressed during a call.

<u></u>

End/Power key

Long press to activate power on/off, as described in par. Turning Handset On/Off.

Rear and bottom View

Line Jack

Power Jack

Page button

Navigation key:

² [≜] Up/CID key

Down/Phonebook key

Scroll up through lists and menu options. Increase the earpiece/speakerphone volume during a call. Enter the CID book, as described in par. CID Book

Decrease the earpiece/speakerphone volume during a call. Enter the Phonebook, as described in par. **Phone Book**.

INT key

Set up an internal call to another handset. Transfer an incoming call to another handset

Scroll down through lists and menu options.

Set up a conference call with an external line and an internal handset.

Redial key

Enter the redial book, as described in par. Last Number Redial. Insert a pause when pre-dialing a number

MENU/R

Menu/OK key (left)

Cancel/Mute key (right)

Enter the menu functions in standby mode. Confirm selections & actions Performs "Flash" function.



Return to the previous menu. Enter to mute during a call. Delete an incorrect character/digit.



Press and hold to turn on/off keypad lock function. Set up a conference call, as described in par. Calling with more than one Handset.

Signal Icon

Keypad Lock

kevpad is locked.

Indicates whether the current

signal exists or not. If the

handset is too far from the base.

This icon appears when the

To phone wall outlet

To AC wall

To AC wall

this icon will blink on the LCD.

■ LCD Window Icons Description



New Call Indicates you have missed one or more calls

Off Hook Indicates the line is engaged



Hands-free Indicates the handsfree function



is enabled.





Battery Icon

Indicates battery charge level

■ Connecting Lines


- 1. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet
- 2. Connect the modular ends of the AC power adapters to the power jack of the base and charger, then plug the AC adapter into standard AC wall outlets.

■ Installing Batteries

The rechargeable Ni-MH batteries (AAA size) come with your phone. Install the battery before using your

- 1. Slide the battery cover in the direction of the arrow and pull it out.
- 2. Insert new batteries as indicated, matching correct polarity (+,-).
- 3. To replace the battery cover, slide the cover up until it snaps in place.



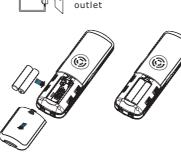

■ Charging Handset

! Important Note: Before initial operation, YOU SHOULD FULLY CHARGE THE HANDSET for about 15 hours.

To charge the handset, you should place it on the base or charger.

Result: When you place the handset on the base or charger, the handset automatically turns on.

■ Turning Handset On/Off

If the handset is in power off mode, when you place the handset on the base or charger, it automatically turns on. To turn the handset on or off in standby mode, follow these steps:

1. To turn on the handset when it's off, press and hold the 🕤 key until you switch the display on. On power up, the handset will enter subscription mode and search for a registered base. A message as shown below will be displayed to the user, and the signal icon will flash.



2. To turn off the handset, keep the key pressed until the display disappears.

If the handset is successful in finding a base, the handset will enter the standby mode, the display will show handset number or the handset name (if you have one saved as described on par. HS Name), signal icon, battery icon and current time. If the handset is unsuccessful in finding a base, the handset will behave according to the Out of Range condition.

When battery power is very low, if you place the handset on the base, the display will show as below. YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.



Basic Functions

All descriptions in this manual assume that the handset is in standby mode. Set the telephone to standby mode by pressing the [6] key.

Making a Call

1. Pick up the handset and press the 4 key.

Result: The **✓** icon appears on the LCD.

- 2. Dial a telephone number
- 3. To end the call, either press the 🕤 key or replace the handset on the base.

To make a call to the last number you dial

Receiving a Call

When a new call is received, the call information will appear

If the caller can be identified, the caller's phone number is displayed.

- 1. To answer the call, press the 💪 key. If you have activated the Auto Answer function, when the handset is on the base, simply lift it up to answer.
- 2. To end the call, either press the 👩 key or replace the handset on the base

■ Muting the Microphone

party cannot hear you.

Adjusting Audio Volume

During a conversation, you can use the 🔼 or key to adjust the level of the earpiece (or the handsfree speakerphone one, if activated) volume from VOL1 to VOL5. The selected volume will be displayed on the LCD.

You can select your own external (from the 5. Press 🔏 or 🕮 key to choose MELODY or telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

- 2. Press 🛣 or 🕮 key repeatedly to choose **HS** SETTING menu, then press the key
- 4. Use 🔼 or 🕮 key to choose INT RING/EXT RING, press the MENUR key.

You can enter the desired phone number in standby mode, which allows you to make corrections before dialing. Follow these steps:

1. Enter a telephone number (up to 32 digits).

Check it. You can also use the key to insert a pause.

ou make a mistake while entering ber, press the Mekey to clear the la

the 😉 key.

Result: After you hang up, the LCD displays

one may continue for 4 seconds after

During a conversation, you can temporarily switch your phone's microphone off, so that the other

Example: You want to say something to another person in the room but do not want

the other party to hear you.

■ Ringer Setting

- 1. Press the MENUR key.
- 3. Press a or key to choose RING SETUP, and press the MENUR key.

2. When the number appears correctly, press

can also add the entry to the phonebook. the call duration

You can select the ringer volume by use lacksquare or lacksquare key when the phone rings lacksquare

displayed. the key to enter ADD TO PB menu.

To mute your microphone, press the key during the conversation. The "CALL MUTED" appears on the LCD.

To unmute the microphone, press the key again. You will restore the normal condition.

You can also select the earpiece volume or the speaker volume by the AUDIO SETUP in Menu under HS SETTING, as described in par. HS

VOLUME, press the MENUR key.

Result: You can select the ring tone from Melody 1 to 10 or adjust the volume from Volume 1 to 5, or off. When you adjust the ring tone or volume, the phone plays the selected melody or sounds the selected loudness.

6. Press the MENUR key to confirm.

■ Last Number Redial

2. Press the 🕼 key to dial out the number

Your phone allows you to retrieve the last 10

Search for and dial a number in

2. If you want to scroll through the memory,

find out the number you want to dial.

3. Press the 4 key to dial out the number.

press 🔼 or 🕮 key repeatedly until you

numbers are found, "**EMPTY**"

1. Press the 🕦 key in standby mode.

dialed.

quickly.

Redial Book

1. Press the (key in standby mode.

Result: The LCD displays the last number you

- 1. Press the 🗷 key.
- numbers you have dialed and recall them 2. Scroll to the desired number by using the or
 key.
 - 3. When the number appears on the display,
 - ADD TO PB: allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in par."Adding the Phone
 - already entered in the appropriate field). DELETE: allows you to delete the selected number

4. To exit, press the key.

which the call was made (and the caller doesn't

OUT OF AREA - This message will display when someone calls from an area where the telephone company is not offering the caller identification

PRIVATE - If the caller has exercised the option to prevent his name and number from being sent,

View and dial any of the CID numbers

1. Press the MENUR key.

Add CID Number to Phone Book

- 1. Press the MENUR key. 2. Press the key again to choose the **CID BOOK**, and if available, the numbers are
- 3. Use 🔼 or 🕮 key to view the numbers. When the desired number displays on the LCD, press

Key Lock locked mode. This feature is useful to avoid

The handset supports multiple predefined 3. Use 🔼 or 🕮 key to choose the LANGUAGE,

1. Press the MENUR key.

2. Press 🔏 or 🕮 key repeatedly to choose **HS** SETTING, press the MENUR key.

■ HS Name

1 to 5 reflects the handset is the Nth handset by the following steps:

■ CID Book

When you receive a call, if the caller's information is transmitted from the network on hide it), the caller's phone number is displayed. Moreover, if you missed one or more calls, the icon will appear on the LCD. If the CID memory is full, the 2 icon will flash on the LCD.

services or is not yet providing number delivery to vour area.

the message will show on the LCD.

- 2. Press the key again to choose the **CID BOOK**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the 🔼 key in standby
- 3. Use 🔼 or 🕮 key to view the numbers, you can make a call by a press of the key. You

If you turn on this feature, all keys will be locked. To unlock the keys, keep the 🕏 key pressed again You can answer calls by using the [4] key. But when you hang up, the phone returns to the

pressing keys by mistake. To lock the keys, in the standby mode just keep the 🚼 key pressed till the display shows "HS **LOCKED**" and the **1** icon.

■ Selecting a Language

languages. You can change the language used to display the menu messages.

"HS N" is the default name of the handset after registration of handset. The handset number N= which is registered to the base. The HS Label is displayed in the standby mode. You can modify it

- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose **HS SETTING**, press the MENUR key.

Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number in

- the redial book.
- press the $\[mathbb{MENUR}\]$ key to choose the desired option:
- Book Entries" (obviously, you will find the number
- DELETE ALL: allows you to delete the whole redial

Net step 3, when you select **DELETE** of **D**

4. Press the key, you are prompted to enter the name

5. Enter the name and press the key, then you can modify the number you want to store

6. Press the MENUR key, you are able to select the ring tone from Melody 1 to Melody 10, press the key to confirm and exit, you will hear a confirm beep

Delete a number in the CID Book

1. Press the MENUR key.

- 2. Press the key again to choose CID BOOK, and if available, the numbers are displayed. 3. Scroll to the number you want to delete by
- 4. When the desired number appears on the display, press the MENUR key. 5. Use (1) or (1) key to choose **DELETE**, press

the key. The display will show "CONFIRM

?". Press the key to confirm, you will hear a beep and the LCD shows the next number

Delete all numbers in the CID Book

MENUR key to confirm.

using 🔼 or 🔳 key.

1. Press the MENUR key.

and if available, the numbers are displayed.

2. Press the key again to choose **CID BOOK**,

3. Press the key and use and use key to choose **DELETE ALL** menu, then press the MENUR key.

Result: You hear a beep and the phone returns to the standby mode after clearing all the CID numbers.

4. The display shows "CONFIRM?", press the

till the key lock icon $\widehat{\mathbf{f}}$ disappears from the display.

then press the MENUR key.

press the MENUR key.

- 4. The languages will be displayed. Use 2 or key to scroll through the options. Each language will be displayed in its own native
- 5. Press the weak key to select the required language and you will hear a confirm beep.

3. Use 🔼 or 🕮 key to choose **HS LABEL**, then

You can enter the handset name (up to 6 characters) by using the alphanumeric keys (use the key to delete the previous character if necessary), then press well key to confirm and exit. The handset name will be

Auto Answer

just picking up the handset from the base without pressing any key.

- 1. Press the well key.
- 2. Press 🔁 or 🕮 key repeatedly to choose HS SETTING, press the MENUR key.

Paging

making it ring with a special tone. It's useful to or any key on the handset. locate a lost handset

Press the key on the bottom of the base (less than 5 seconds), all the handsets registered to the base will ring for about 60 seconds.

Dial Mode

You can select to change the dial mode by the 4. You can press 18 or 10 key to select the following steps:

- 1. Press the MENUR key.
- 2. Press 🔼 or 🕮 key repeatedly to choose **BS** SETTING, and press the MENUR key.
- 3. Press the makey to choose the **DIAL MODE**, then press the MENUR key.

Handsfree

speakerphone built in the handset. In this mode you can simply put your handset on a icon will disappear. surface (e.g. a desk) and enjoy the comfort of the handsfree conversation.

To turn the feature on, press the key during a call (line engaged). The \square icon appears on the LCD.

■ Flash Signal

sends the Flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company

With this feature, you can answer a call by 3. Use a or wkey to choose AUTO ANSWER,

enable/ disable the function, then press the key, you will hear a confirm beep.

You can page the handset from the base unit
To stop paging, press the
key on the base again

required dial mode options (TONE/PULSE) and

press the MENUR key. A confirm beep will be heard. f you are not sure which dialing mode shou se selected, please contact your local service

During a call, you may turn on the <u>To turn the feature off</u>, and keep on talking in normal mode, press the 🚱 key again. The 🚓

efore putting the handset near your ears, ure you have turned the speakerphone off adjust the speakerphone volume, see pl

When the line is engaged, pressing the well key To use the said special services, just press the well key while the line is engaged: the display will show

Advanced Functions

Menu Map

1. CID BOOK

2. PHONE BOOK ADD ENTRY CHANGE ENTRY **DELETE ENTRY** DELETE ALL **PB STATUS**

3. BS SETTING TERMINATE HS

DIAL MODE **FLASH TIME** BS DEFAULT

4. HS SETTING

ALARM AUDIO SETUP RING SETUP TONE SETUP LANGUAGE **HS LABEL AUTO ANSWER** DATE & TIME SELECT BS **HS DEFAULT**

5. REGISTER

6. Repeat if necessary.

* If you want to set a VIP number, you should

select a special ring tone for it. The ring tone

should be different from the external ring you

have set. You can set up to 9 VIP ring tones

If you make a mistake while entering a name or a number, use the SM key to correct it. Each time you press the key, the last character or digit is deleted.

associate with 9 VIP numbers/groups.

■ Phone Book

The phonebook built in your cordless phone allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number

To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order					
0	(spc)	0	&	/		
1	_	1	@	_	?	
2	Α	b	С	2		
3	d	Е	F	3		
4	G	Н	I	4		
5	J	K	L	5		
6	М	N	0	6		
7	Р	q	R	S	7	
8	Т	U	V	8		
9	W	Х	V	Z	9	

Adding the Phone book Entries

- 1. Press the well key.
- 2. Press the makey to choose **PHONE BOOK**, press the MENUR key.
- 3. Press key again to choose **ADD ENTRY**.
- 4. The display shows "NAME ?". Enter the name you want to use, then press the well key to confirm. The display shows "NUMBER ?". Enter the desired number (up to 20 digits), press the MENUR key.
- 5.*Use \square or \square key to select the ring you like to associate with the number, press the wear key

- then press the MENUR key.
- 4. Use 🔼 or 🕮 key to choose **ON/OFF** to

- 4. Press 🔼 or 🕮 key repeatedly until the entry you want to edit displays, press the weak key to

Viewing the Phone book Entries

name is displayed

1. Press the MENUR key.

press the MENUR key.

menu, press the MENUR key.

1. In the standby mode, press the ukey.

Dialing a Number from Phone book

key to dial out the number.

Editing the Phone book Entries

2. Press 🔼 or 🕮 key repeatedly until the desired

3. Press the key to show the relevant number.

Find out the number you want to dial. Refer to

"Viewing the Phone book Entries". Then press the

2. Press the makey to choose PHONE BOOK,

3. Press the m key to choose CHANGE ENTRY

5. If necessary, press the key to clear the digit(s) then enter the desired name and number, press the MENUR key to save.

BS Settings

Terminate HS

This function allows you to delete a handset registration from the base.

- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose BS **SETTING** menu, then press the MENUR key. 3. Press the key again to choose **TERMINATE**
- HS. The display shows "PIN?" to prompt you to enter the PIN Code (The default PIN Code is "0000"). Then press the MENUR key.
- 4. Use the 🍱 or 🕮 key to select a handset. If you select the current handset or a nonexistent handset, a warning tone will be heard.
- 5. Press the key to confirm, and the selected handset will behave according to the unregistered condition.

Flash Time

You can select to change the Flash time by the following steps:

- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose **BS SETTING** menu, then press the key.
- menu. Press the MENUR key. 4. The display shows the current setting. Use the

3. Use 🔼 or 🕮 key to choose the **FLASH TIME**

or key to select **SHORT/LONG**, press the MENUR key.

Modify PIN

This function allows you to change the PIN number of the currently active Base. The default PIN is 0000.

■ HS Settings

Setting Alarm

You are able to set the alarm on the handset and adjust the alarm settings.

- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose **HS** SETTING menu, then press the weak key.
- 4. The display shows the current set. Use the
- to enter the time in HH:MM format.
- 6. Press the week key, a beep sounds and the error conditions, a warning tone will sound display shows **SNOOZE ON/OFF**, you can when an incorrect key is pressed. press a or key to enable or disable the 1. Press the key. snooze function on the alarm and press the MENUR key.
- 7. When the alarm sounds, press any key to switch it off.

alarm to ring, the alarm will be silent. If you choose **SNOOZE ON**, the alarm

Audio Setup

You can also use the menu to adjust the audio

1. Press the MENUR key.

6. Use 🔼 or 🕮 key to select the ring you like to associate with the number, press the would key to

Deleting the Phone book Entries

- 1. Press the MENUR key. 2. Press the m key to choose PHONE BOOK, press the MENUR key.
- 3. Press 🔼 or 🕮 key to choose **DELETE ENTRY**. Press the MENUR key.
- 4. Press 🔼 or 🗆 key repeatedly until the name you want to delete displays, then press the MENUR key. The display shows "CONFIRM ?". You can press the key to delete it or press the c/x
- 5. At step 3, if you choose **DELETE ALL** menu and press the would key, the display will show "CONFIRM ?". You can press the well key to delete all the entries or press the key to

The PB Status shows the number of phone book entries already stored. When the PB STATUS shows on the LCD, press the key to enter it.

1. Press the MENUR key.

- 2. Press a or E key repeatedly to choose BS **SETTING** menu, then press the key.
- 3. Use 🔼 or 🕮 key to choose MODIFY PIN menu, press the MENUR key.
- 4. The display shows "PIN?" to prompt you to enter the old PIN. Enter it then press MBNJR key. If the old PIN code is correct, you will be prompted to enter a new PIN code, otherwise a warning beep will sound and the handset will return to MODIFY PIN menu
- Enter the new PIN, press the well key. You will be requested to confirm the PIN code. Enter the new PIN again then press the well key to confirm and exit.

BS Reset

This function allows you to reset the Base setting to the factory default.

- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose **BS SETTING** menu, then press the key.
- 3. Press 🔼 or 🕮 key to choose **BS DEFAULT**, press the would key. You will be prompted to enter the PIN code
- 4. Enter the PIN code (the default PIN is 0000), then press the wear key. If the PIN code is correct all base settings will be returned to the factory default, otherwise the settings

Result: After resetting, the handset will return to standby mode

2. Press 🔏 or 🕮 key repeatedly to choose **HS**

3. Press the m key to choose **AUDIO SETUP**,

4. Use a or key to choose **SPEAKER VOL** or

5. The display shows the current setting. Use the

(VOLUME 1-VOLUME 5), press the well key.

Every time you press a key, your handset

acknowledges it with a key tone. You can

disable the key tones for a silent use. In certain

2. Press 😘 or 🕮 key repeatedly to choose **HS**

3. Use 🔼 or 🕮 key to choose **TONE SETUP**

4. Press the weak key again to choose **KEY TONE**.

5. You can use 🔼 or 🕮 key to choose **ON** or

OFF to enable or disable the function.

SETTING menu, then press the well key.

menu, press the MENUR key.

6. Press the well key.

or key to choose the volume level

SETTING menu, then press the key.

press the MENUR key.

Key Tone

EARPIECE V, press MENUR key.

- 3. Press the MENUR key again to choose **ALARM**.
- or 🕮 key to select **ON/OFF**, press the
- 5. If you select **ON**, the display indicates you

- 1. Date Format
- 1. Press the key.

Setting Date & Time

2. Press 🔏 or 🕮 key repeatedly to choose **HS SETTING** menu, then press the key.

1. Press the MENUR key.

press the MENUR key.

warning tone

settings to the factory default.

1. Press the MENUR key.

heard.

HS Reset

2. Press 🔏 or 🕮 key repeatedly to choose **HS**

SETTING menu, then press the MENUR key.

3. Press 😘 or 🕮 key to choose the **SELECT BS**,

4. You can use (2) or (11) key to select the base

you want, then press the MENUR key. If you select

a non-existent base, the handset will sound a

5. The display will show **SELECT BS X**. Press the

This function allows you to reset the handset

2. Press 🔏 or 🕮 key repeatedly to choose **HS**

SETTING menu, then press the well key.

3. Press ? or key to choose the **HS**

4. Enter the PIN code (the default one is 0000),

be heard and the settings will remain.

prompted to enter the PIN code

standby mode

registration state.

condition

DEFAULT menu, press the key. You will be

then press the well key. If the PIN code is

validated all handset settings will return to the

factory default, otherwise a warning tone will

Result: After resetting, the handset will return to

4. If the base is found, you will be prompted to

enter the PIN code (the default one is 0000).

Enter it then press the MBNUR key. If the PIN code

is correct, the Registration tone will sound and

then the base assigns a number to the handset.

otherwise a warning tone will sound, and then

the handset returns to the previous

5. If the base is not found, the handset will

behave according to the Out of Range

key to confirm. A confirm tone will be

- 3. Press 🔼 or 🕮 key to choose DATE & TIME, press the MENUR key.
- 4. Press the MENUR key to choose DATE FORM.
- 5. You can use 🔼 or 🕮 key to choose the Date format (**DD-MM/MM-DD**), press the well key to
- 2. Setting date & time
- 1. Press the MENUR key.
- 2. Press 🔏 or 🕮 key repeatedly to choose **HS** SETTING menu, then press the MENUR key.
- 3. Press a or we key to choose DATE & TIME, press the MENUR key. 4. Press (2) or (11) key to choose **SET DATE** or
- SET TIME menu, press the MENUR key. 5. Enter the current date or time by numeric

keypad and press the key to save and exit.

Selecting a Base

those already registered to the handset. You can access the options by scrolling the menu. Registration

This function allows you to select a base from

the number 1 and 2. You can register up to 5 handsets to the same base in order to share the same line with other people

Before registering a handset to the base, you

should press and hold the (4) key on the bottom

The supplied handsets are already registered with

of the base for about 5 seconds then release it. 1. Press the key.

handsets.

want to call.

Making an internal call

answer the internal call.

- 2. Press 🔏 or 🕮 key repeatedly to choose REGISTER, then press the MENUR key.
- 3. Use (2) or (11) key to scroll through the Base names list, press the well key to choose a base to your necessary. The handset will search for the requested base and the relevant information will flash on the LCD.

If you have more than one handset registered to

the same base, you can make internal calls and

transfer an external call between the registered

1. Press the key, the LCD displays as follows,

12345

2. If the handset entered is valid, the called

3. At the end of your conversation, press the [7]

Call transfer between handsets

You can transfer an external call between the

handsets those are registered to the same base.

caller while you are having a conversation.

1. When you are on the line, the telephone will

automatically display the name and number of the

Caller ID info displayed

Caller 1

second caller.

4361234

Caller two's information

Caller 2

2915678

Caller 1

is displayed

handset will ring and display HSX CALLING.

The handset user can press the key to

then enter the number of the handset you

Calling with more than one Handset

- 1. During an external call, press the 🕩 key then enter the number of the handset you want to transfer the call to.
- 2. If the called party can answer your call, he/she can press the [4] key to talk with you. At this time you can inform him/her of the incoming
- 3. When the called handset answers, press the 🙃 key or replace the handset to the base to complete the transfer.

Setting up a 3-way conference call

When you have both an external call and an intercom call in progress, you can set up a threeway conference call like this:

- 1. During an external call, press the 🕩 key and then the number of the handset you want to ioin the 3-way call.
- 2. The called party press 4 key to answer.
- 3. The calling party can press the 🚼 key to start the 3-way call.

4. Either of the two internal handsets can press

the 📦 key to leave the conference call at any If one of the handsets drops the conference

Caller ID on call waiting When you subscribe to Call Waiting service from 2.Press the key to answer the second caller.

your local telephone company, the telephone 3. When you have finished, press the key to will display the name and number of the second continue with your conversation with the first

Feature List

• 1.8GHz DECT technology with GAP

• 9 VIP ring tones setting for phonebook

• 10 ring tones and volume selectable (5

• Receiver/Speaker volume adjustable (5

• TONE/PULSE dialing mode selectable

. Phonebook with up to 50 entries

• Redial book with up to 10 entries

Key tone ON/OFF selectable

• Full handsfree speakerphone

3-way conference call

levels+off)

Internal call

Call transfer

PIN protection

• Redial, Flash, Pause

• FLASH time selectable

levels)

Predialing

Mute

- Up to 5 handsets for optional for one base · Real time clock (set time) Up to 4 bases for optional for one handset
 - Keypad lock

Call duration display

- 13 languages selectable
- Auto answer ON/OFF selectable
- Alarm clock include snooze option Handset Name setting
- LCD and keypad backlight

Caller ID

- FSK and DTMF dual system Caller ID
- Caller ID list with up to 40 entries Incoming calls can be called back/added

to phonebook/deleted

The caller ID feature is only available if subscribe to a Caller Display service fi

Troubleshooting

Symptom	Check & Remedy			
No operation	Check that the power adapter is properly connected. Check that the telephone line cord is properly connected. Check that the handset batteries in full power. Check that the handset batteries are installed properly.			
No dial tone	Check that the telephone line cord is properly connected. Check that the power adapter is properly connected.			
Nothing appears on the display	Check that the handset batteries are installed properly. Check that the handset batteries in full power. Check that the handset is on.			
Handset seems to have very short battery life	Check the charge contacts. Consistently short battery life may indicate that replacement of the batteries is new Make sure the right batteries be used.			
Caller's number is not displayed	 Make sure you have subscribed to a Caller ID service via your network provider. The caller may have withheld their details. Let the phone ring a couple of times as there may be a delay in receiving the Caller ID information. 			


Technical Specifications

Frequency Range	1.88~1.90GHz	
Channels	120 Duplex channels	
Carrier Power	<250mW	
Modulation	GFSK	
Frequency Stability	< \pm 50 KHz	
Charging time	15 hours	
Ambient temperature	Normal: 15° C ~ 35° C, Extreme: 0° C ~ 40° C	
Humidity	0%~90%	
Dimensions (mm)	Base: 132.1 x 132.1 x 68.5; Handset: 159.3 x 48.4 x 28.9	
Power Supply	Base input: 7.5V, 300mA; Handset input: Ni-MH 1.2V x 2, 600mAh	

Design and specifications are subject to change without notice.

▼ If you subscribe to a DSL service Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:

- Noise is heard during conversations.
- Caller ID features do not function properly.

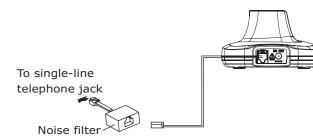

Warranty and Service Information

For Warranty and Product support contact Authorized SANYO DISTRIBUTOR

Alcom Electronics Pte Ltd - Singapore

Phone: (65) 68412668 Fax: (65) 68412628

Alcom Communications Sdn Bhd - Malaysia

Fax: (60) 3 7803 0660

Phone: (60) 3 7803 7676

Email: support@alcom.com.sg Website: www.alcomonline.com

Due to continuous product development all features and specifications are subject to change without prior notice.