RadioShack

installing batteries



63-1058 laser level

Your RadioShack Laser Level is a high quality laser level incorporating advanced laser optics and microelectronics. The machined aluminum body of the laser level is equipped with two high quality bubbles, one horizontal and one vertical. Every laser level must pass a critical vibration test before leaving the factory. This test assures the accuracy of the laser within 0.2 inches (5.08mm) at a distance of 30 feet (9.1m).


Your laser level requires two AAA batteries (not supplied). Batteries are available at your local RadioShack store or online at www.radioshack.com.

2. level body.

1. Remove the battery cover by turning counter-clockwise. Replace when finished. Arrange the batteries in the compartment as indicated by the polarity symbols (+ and -) on the laser

battery notes

- When the laser beam dims, or stops operating properly, replace the batteries.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type. Do not mix batteries of different types, capacities, or chemistries.
- If you do not use your laser pointer for several days, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.

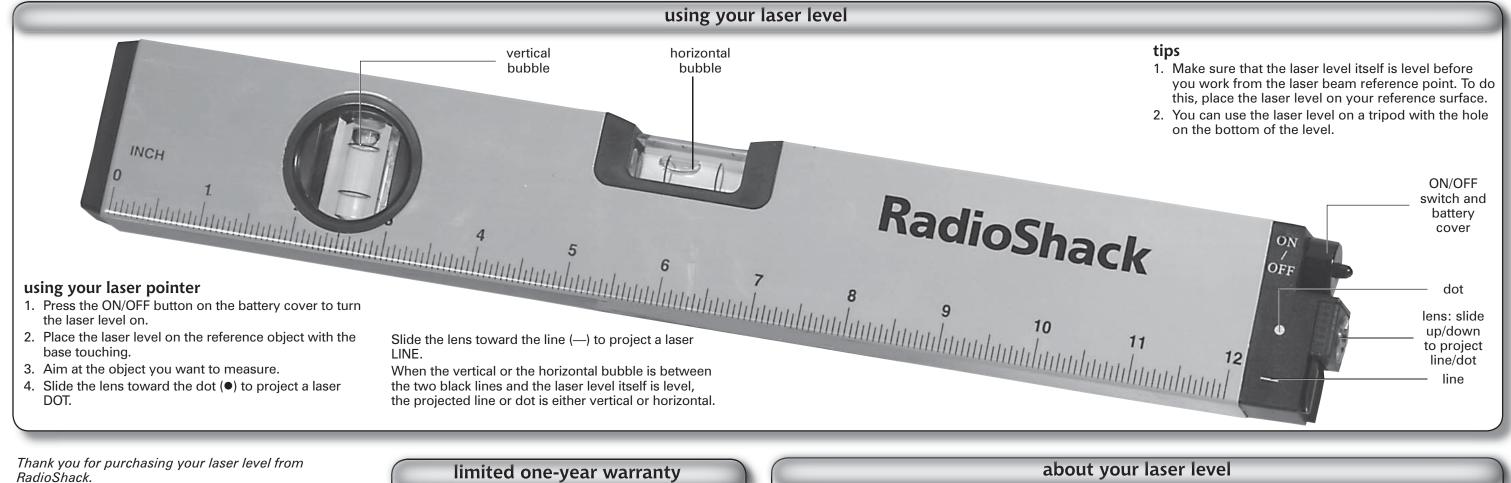

what's included

Laser Level **User's Guide**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations 200 Taylor Street, 6th Floor, Fort Worth, TX 76102 04/04



Actual product may vary from the images found in this document.

Please read this user's guide before nstalling, setting up and using your new product www.radioshack.com

©2004. RadioShack Corporatior All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

Printed in China

important safety precautions

- Warning! Never point the laser at anyone.
- Warning! Follow the instructions on the danger label.
- Warning! Never look directly into the laser beam.
- Warning! Keep laser pointer away from children.
- Warning! Use of controls or adjustments, or the performance of procedures other than specified herein, can result in hazardous radiation exposure.
- Warning! Laser light, when reflected by a mirror-like surface, can also be dangereous.

product specifications

IndexGuided
650±10nm (Class IIIA Product)
<5mW
>600 feet
25 hrs (alkaline)
Dot or Horizontal
Aluminum
e and improvement without notice.

caring for your laser level

- Keep the laser level dry. If it gets wet, wipe it dry immediately.
- Use and store the laser level only in normal temperature environments. Handle the laser level away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the laser level's internal components can cause a malfunction and might invalidate its warranty.
- If your laser level is not performing as it should, take it to your local RadioShack store for assistance.

