
Fisher-Price®

H0779 Instructions

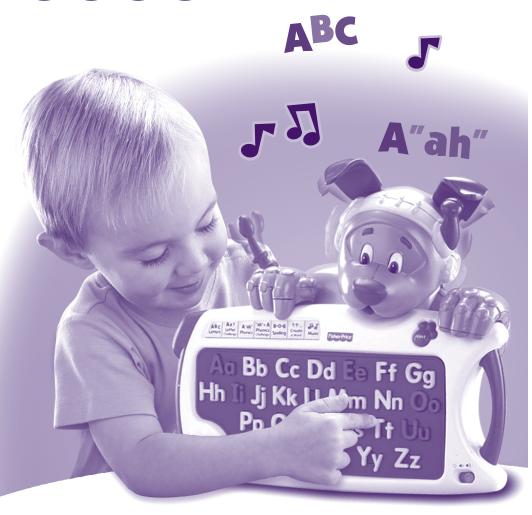


Please keep this instruction sheet for future reference, as it contains important information.

Requires three "C" (LR14) alkaline batteries (not included).
Adult assembly is required for battery installation.
Tool required for battery installation: Phillips screwdriver

(not included).



Battery Installation

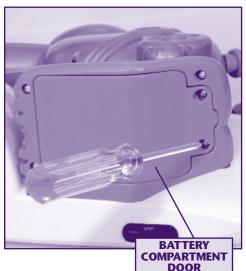


- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) alkaline batteries.

Hint: We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or motions from this toy become faint or stop, it's time for an adult to change the batteries!

 Battery Safety Information



Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.

- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

A Fun Learning Friend!



Meet Fetch, a phenomenal friend who's a phonics hound! And discover how much fun it can be to learn phonics and other reading readiness skills.



- Locate the power/volume switch on the front of the toy.
- Slide the switch to the desired position: **Off**; on with low volume **◄** or on with high volume **◄** .

Hint: If your child does not press any of Fetch's buttons for a while, Fetch says "see you later" and turns off automatically (sleep mode). Press any button to resume play.

• When your child is finished playing with this toy, slide the power/volume switch to the **Off** position.



Seven Ways to Make Learning Fun!



Letters

Press any letter to hear Fetch say the name of the letter - "P".



Letter Challenge

Fetch will ask you to find a letter. Press the correct letter and Fetch congratulates you. Press the wrong letter and Fetch encourages you to try again. Press the "Hint" button at any time for some help.

Find the letter "P".



Phonics

Press any letter to hear Fetch say the phonetic sound of that letter.

Puh – P makes the sound - "puh" as in pig.



Phonics Challenge

Fetch will ask you to find a letter.

Find the letter that makes this sound - "puh" as in pig.



Spelling

Fetch will ask you to spell a word. Press the correct letters and Fetch congratulates you. Press the wrong letters and Fetch encourages you to try again. Press the "Hint" button at any time for some help.

Paw is spelled p-a-w. Help me spell paw. Find P.



Create a Word

Fetch invites you to create a three-letter word.

D-O-G - dog! Spectacular!



Music

Fetch invites you to press a letter to make music. Press consonants to build a song note-by-note. Wait a moment and Fetch plays them back to you. Press a vowel to hear a whole song as Fetch barks along. Press the "hint" button to play back the last song.



Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help. Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at 1-800-432-KIDS (5437), 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052, U.S.A.

For countries outside the United States:

CANADA Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2004 Mattel, Inc. All Right Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA H0779pr-0920