

COBY MPC832 Setup Guide

# Thank you for choosing a COBY MP3 player!



~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.

~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

# **Requirements**

#### Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)

If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website www.microsoft.com/windows/windowsmedia/player/download/download.aspx

# **Getting Started**

## Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.



# 2) Put an audio CD into the CD-ROM drive of your computer.

 If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the "**Rip**" tab and select which "Title" to rip.

To rip the entire album, check the top check box.

<b>@ ?</b>	Now Playing	Library		Rio Burn	Syr	ĸ	URGE	Sign In	
J + Music + Coming H	iome (D:)	_		R					[] • <sup>9</sup> j •
G Coming Home (D:)	Album		V	Title	Length	Rip Status	Contribut	ting Artist	Composer
	Audio CD (D:)		_						
		Coming Home	1	I Call It Love	3:19	Stopped	Lionel Ri	chie	Herman
		Lionel Richie	2	Sweet Vacation	3:54		Lionel Ri	chie	Lionel Ri
		Soul and R&B	23	Why	4:01		Lionel Ri	chie	Chucki
		2006	4	What You Are	4:12		Lionel Ri	chie	Jermain
		00000	V 5	Up All Night	3:36		Lionel Ri	chie	Chuckii
			0	I'm Coming Home	4:18		Lionel Ri	chie	Chuckii
			7	All Around the World	3:34		Lionel Ri	chie	Lionel Ri
			8	Out of My Head	3:15		Lionel Ri	chie	Lionel Ri
			9	Reason to Believe	4:46		Lionel Ri	chie	Dallas A
			10	Stand Down	4:02		Lionel Ri	chie	Dallas A
			11	I Love You	4:12		Lionel Ri	chie	Lionel Ri

## 3) Set the Rip Options (optional).

Click the "**Rip**" button to set the Rip options. The recommended Rip settings are:

- ♦ Select "Bit Rate > 128 Kbps"
- Select "More Options" to change the directory to which WMP saves your ripped music files + WMP will save your music to your "My Documents > My Music" default folder.

	Rip	Burn	Syn	C	U	R©E	Sign I	n
	Rip 'Coming I	Home' (D:)						
V	Format		•	Windo	ows Media	a Audio		
	Bit Rate		)	Windows Media Audio Pro				
2	<ul> <li>Rip CD Automatically When Inserted</li> <li>Eject CD After Ripping</li> </ul>		ted 🕨	Windows Media Audio (Variable Bit Rate) Windows Media Audio Lossless				
1			_	✓ mp3				
V	More Options			WAV	(Lossless	)	К	
V	Help with Rip	ping		Ripped	to libr	Lionel	Richie	Ch
V	6 I'm Con	ning Home 4	:18	Ripped	to libr	Lionel	Richie	Ch

## 4) Start ripping the CD.

Click the "**Rip**" button and select "Rip" to start converting the audio CD to MP3/WMA

The ripping process will take a few minutes to complete. WMP will save the converted music files in your "My Documents > My Music" default folder.

3	Now Playing	Library	Rip	Burn	Sync
J + Music + C	Coming Home (D:)		Rip 'Coming	Home' (D:)	
G Coming Ho	me (D:) Album		Format	45	•
	Audio CD (D:)		Bit Rate		•
		oming Home E onel Richie E oul and R&B V	Rip CD Auton Eject CD Afte	natically When Inserted er Ripping	•

	Now Playing	Library		Rip Burn	Syr	ic UF
Husic + Coming H	lome (D:)					
G Coming Home (D:)	Album			Title	Length	Rip Status
	Audio CD (D:)					
		Coming Home	<b>□</b> • 1	I Call It Love	3:19	Ripped to libr
	6 0 L	ionel Richie	2	Sweet Vacation	3:54	Ripped to libr
	S S	Soul and R&B	<b>V</b> 3	Why	4:01	Ripping (30%)
	2	2006	✓ 4	What You Are	4:12	Pending
	CAVE 2	and a constant	V 5	Up All Night	3:36	Pending
			✓ 6	I'm Coming Home	4:18	Pending

#### Transfer MP3/WMA Files to Your COBY Player

Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.

1) Launch the WMP11 program.

#### 2) Connect your COBY player to a USB port on the computer.

+ WMP11 will detect your COBY player automatically.



#### 3) Browse your music library to choose songs to sync.



## 4) Select songs to sync to your COBY player.



# 5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

Now Play	ying Library	Rip Bl	Jrn Sync	URGE »
♬ → MP-C951 → Sync	Results 🔲 🕶 🏢	▼ Search	ρ.	
🖃 🕨 Playlists 🔥	Title	Status	Playlist	MP-C951
📝 Create Pl	Files You Added			7.4 GR
Ilcobytest				
under the	Many Rivers To Cross	Synchronized to device	Files You Added	
Now Playing	Homeland and Hip Hop	Synchronized to device	Files You Added	
🖃 🎜 Library	Damaged Goods	Synchronized to device	Files You Added	6 GB remaining
Recently	Two-Headed Boy	Synchronized to device	Files You Added	o cortenanny
Artist	05 - 53rd & 3rd	Synchronized to device	Files You Added	Sync List 👻 📉 📉
<ul> <li>Album</li> </ul>	The Illest (ft. Jean Gr	Synchronized to device	Files You Added	
🎝 Songs 🗉	Hater's Anthem	Synchronized to device	Files You Added	
6 Genre	Hustler's Ambition	Synchronized to device	Files You Added	You can now
📰 Year	Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added	disconnect
😭 Rating	Mos Def & Talib Kweli	Synchronized to device	Files You Added	'MP-C951'.
🗉 🕑 URGE	Revolution 909	Synchronized to device	Files You Added	
💰 Removable D	Daft Punk Is Playing A	Synchronized to device	Files You Added	
🖃 🚨 MP-C951				
Sync Res				
Recently				N
Artist				4
Album				
) Songs				Start Sync
A Conto				

# **Common Troubleshooting**

Problems	Possible Solutions
No Power	*Replace the Battery. *Hold the Play/Pause/Stop button for 5 seconds. *Reset the MP3 player by removing the battery
Song Freezes	*Make sure your WMA file(s) are not DRM protected. *The file is corrupted or damaged. *Unsupported file format (ACC, WAV Etc)
No sound after file transfer	*Ensure that the headphones are attached securely to the player. *Make sure your WMA file(s) are not DRM protected. *Unsupported file format (ACC, WAVEtc)
MP3 Player not recognized by the Computer	*Check the connection. *Switch USB ports. * Reset the MP3 player by removing the battery.

If you are still having difficulties with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

# 1-800-727- 3592