

**EZ-64TW1/EZ-74TW2/EZ-84FM**

**EZ-95FM**

**DP SERIES II (Data Port)**



**2-Way Paging Remote Engine Starting & Keyless  
Entry System with 1-Way Sidekick Remote Control**

## **OPERATING INSTRUCTIONS**

### ***IMPORTANT INFORMATION: Primary and Optional Features***

**PRIMARY:** These are features that must be connected in order for the system to operate properly i.e. Remote Start connections, Flashing Lights, Brake Reset. For programming, the hood pin and program button are required.

**OPTIONAL:** These are features are to be connected only if desired or agreed upon by the customer and the installing dealer i.e. Door Locks, Trunk Pop, Dome Light Illumination, Horn-Honk, Anti-Grind, etc. These features may also require additional parts and/or labor fees. Consult with your installer beforehand to be sure of what is going to be installed with your particular system.

### **TECHNICAL SUPPORT: (800) 998-6880**

Monday - Friday 8:00am - 4:30pm Pacific Std. Time

Web Site: [www.crimestopper.com](http://www.crimestopper.com)

E-mail: [email@crimestopper.com](mailto:email@crimestopper.com)

CRIMESTOPPER SECURITY PRODUCTS, INC.  
1770 S. TAPO STREET, SIMI VALLEY, CA. 93063

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: 1) This device may not cause interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

REV D – 08.2006

# TABLE OF CONTENTS

Operation Cautions & Warnings.....	2
2-Way Paging LED Remote TW1.....	3
2-Way Paging LCD Remote TW2.....	4
2-Way Paging LCD Remote FM.....	5
Using the Remote 1-Way Remote.....	6-7
Remote Engine Starting.....	8-11
Turbo Timer Mode.....	12
Convenience and Safety Features.....	13-14
Transmitter Programming.....	15
2 Vehicle Operation.....	16
Troubleshooting “Before You Call”.....	17-18
Low Battery Warning and replacing the <b>AAA</b> battery on LCD Remote.....	19
Setting the Clock.....	Back Page

## OPERATION CAUTIONS & WARNINGS

**CRIMESTOPPER SECURITY PRODUCTS, INC.** and its **VENDORS** shall not be liable for any accident resulting from the use of this equipment. This system is designed to be professionally installed into a car or vehicle in which all items, such as parking brake and all associated components, door switches, transmission shift linkage, throttle linkage, and all engine safety features, are in perfect working condition.

**DO NOT install the Remote Engine Starting System on MANUAL TRANSMISSION vehicles.** If accidentally left in gear the vehicle could become a self-propelled threat to life and property.

**IT IS ABSOLUTELY THE OWNER’S SOLE RESPONSIBILITY TO:** A) Understand the operation of this system and its safety features. B) Check for proper operation of the system prior to accepting delivery of the vehicle from the installation facility. C) Check and maintain the condition of the vehicle and all items relative to the proper operation of this system and its safety features. D) Always leave the doors and windows closed and locked to protect against accident and theft.

**DO NOT remote start the vehicle in a closed garage.** Make sure that the garage door is open or there is adequate ventilation. Failure to observe this rule could result in **injury or death** from poisonous Carbon Monoxide fumes.

# 2-WAY PAGING LED REMOTE *EZ-64TW1*

## OPERATION:

### BUTTON 1 (Lock Symbol):

- Press and release to Lock doors.
- Press and Hold for more than 3 seconds to activate "Panic" feature.

### BUTTON 2 (Unlock Symbol):

- Press and release to Unlock doors.

### BUTTON 3 (Trunk Symbol):


- Press and Hold for two seconds to activate trunk pop (Optional Feature).

### BUTTON 4 (Start):

- Press and Hold for two seconds to Start/Stop Engine

### BUTTON 5 (Side button)

- Press and Release to show the previous status.
- Press and Hold for 5 second to switch to vehicle #2.

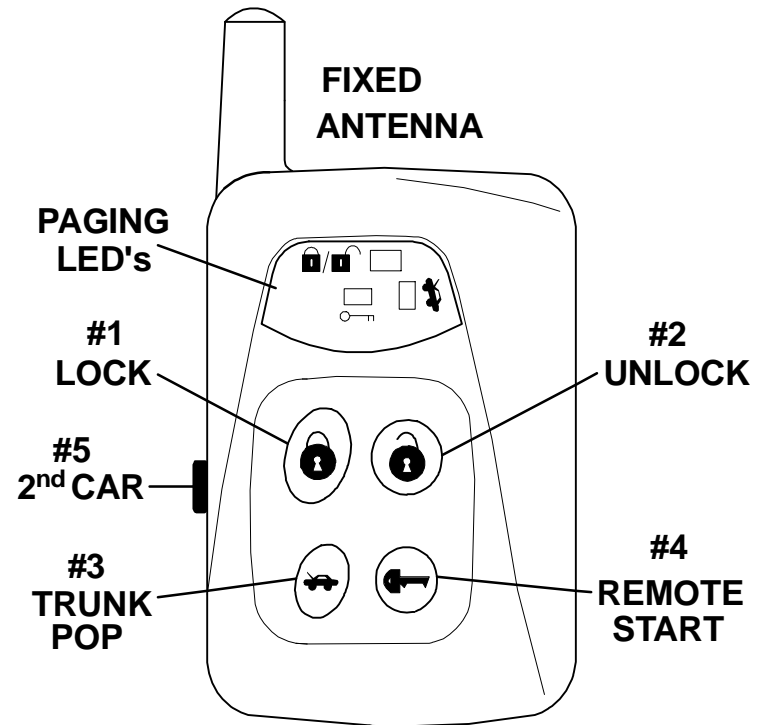

## TWO-WAY PAGER OPERATION & PAGE TONES:

FEATURE	BUTTON	ACTION	BEEPS	LED/FLASH
LOCK	#1 (Lock)	Press & Release	1X then 1X again	Orange / 1X
UNLOCK	#2 (Unlock)	Press & Release	1X then 2X again	Green / 2X
AUX #1	#3 (Trunk)	Press & Hold 2 Sec.	1X then 3X again	Yellow / 1X
REMOTE START	#4 (Start)	Press & Hold 2 Sec.	1X then 3X again	Blue / 3X
ENGINE RUNNING			6X	Blue / 6X
TURN OFF ENGINE	#4 (Start)	Press & Hold 2 Sec.	1X	No Page back
PANIC	#1 (Lock)	Press & Hold 3 Sec.	1X then 2X / 12X	Orange 12X / Green 1X

# 2-WAY PAGING LCD REMOTE EZ-74TW2

## OPERATION:

### BUTTON 1 (LOCK Symbol):

- Press and release to Lock doors.
- Press and Hold for more than 3 seconds to activate "Panic" feature.

### BUTTON 2 (Unlock Symbol):

- Press and release to Unlock doors.

### BUTTON 3 (Trunk Symbol):



- Press and Hold two seconds to activate trunk pop (Optional Feature).

### BUTTON 4 (Start Key Symbol):


- Press and Hold two seconds to Start/Stop engine.

### BUTTON 5 (On side of remote):


- Press and release to light up the LCD screen.
- Press and release twice to recall the last message from the LCD screen.
- Press and Hold two seconds to change from Car 1 to Car 2
- Press 5 times to change the time and enable/disable beep tones from the remote.

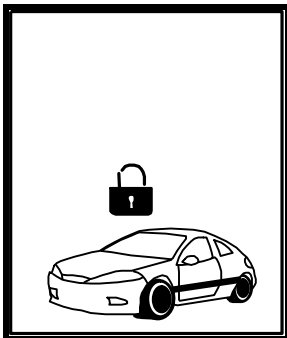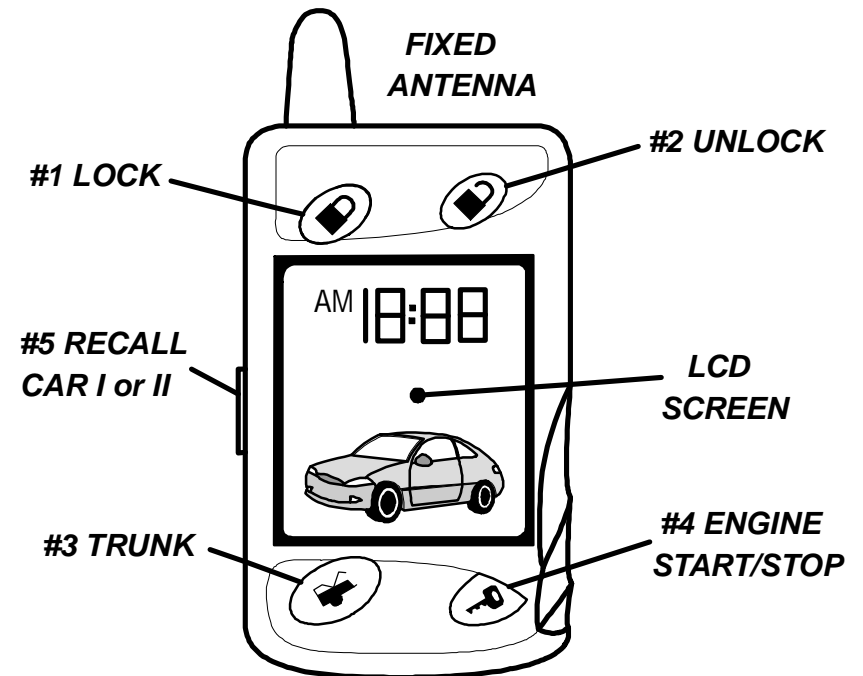


LOCK

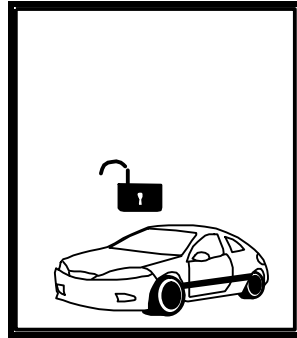


UNLOCK

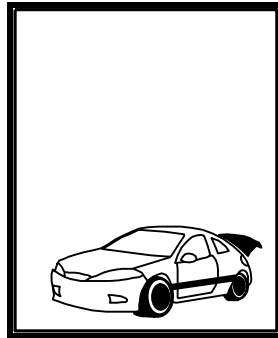


TRUNK POP

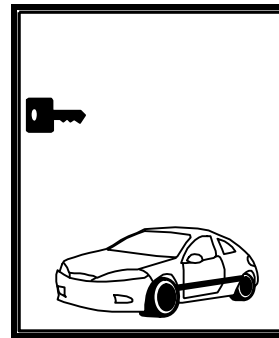

REMOTE START  
(KEY FLASHING)

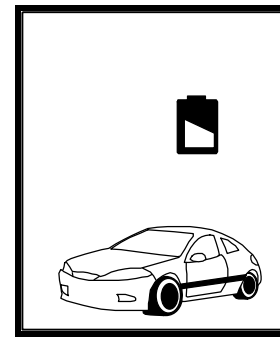

LOW BATTERY

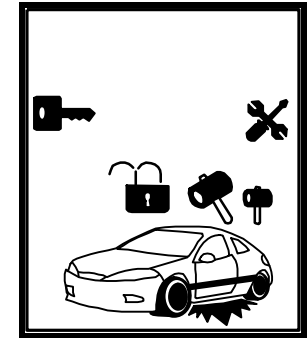

PANIC

# 2-WAY PAGING LCD REMOTE EZ-84FM/95FM

## OPERATION:

### BUTTON 1 (Lock Symbol):

- Press and release to Lock system.
- Press and Hold for more than 3 seconds to activate "Panic" feature.

### BUTTON 2 (Unlock Symbol):

- Press and release to Unlock system.

### BUTTON 3 (Trunk Symbol):



- Press and Release to activate trunk pop (Optional Feature).

### BUTTON 4 (Start Symbol):


- Press and release to Start/Stop Engine.

### BUTTON 5 (On Side of Remote)


- Press and release to recall the last message from the LCD screen.
- Press and Hold 5 seconds to change from Car 1 to Car 2.
- Press 5 times to enable/disable beep tones from the remote.

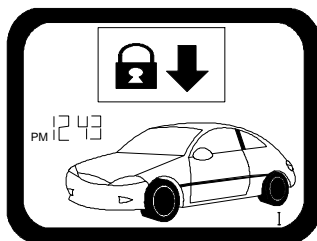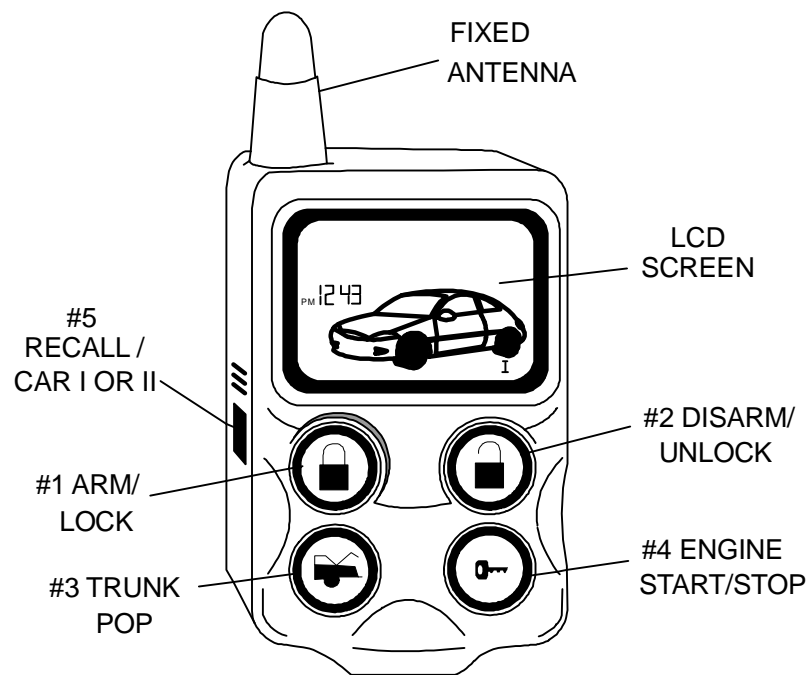


LOCK

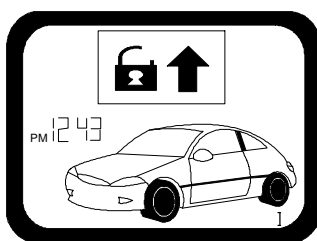


UnLock

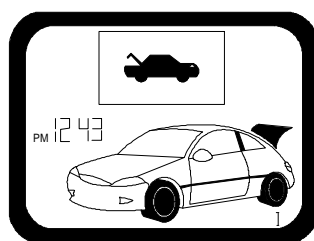

Trunk Pop

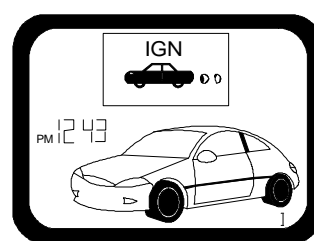

Confirm Remote Start Request

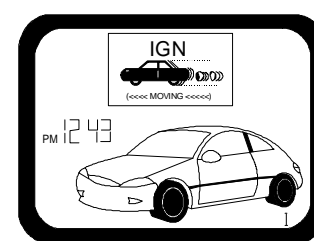

Successful Start

# USING THE 1-WAY REMOTE

## OPERATION:

### BUTTON 1 (Lock Symbol):

- Press and release to Lock doors.
- Press and Hold for more than 3 seconds to activate "Panic" feature.

### BUTTON 2 (Unlock Symbol):

- Press and release to Unlock doors.

### BUTTON 3 (Trunk Symbol):

- Press and Hold for two seconds to activate trunk pop (Optional Feature).

### BUTTON 4 (Start):


- Press and Hold for two seconds to Start/Stop Engine

### BUTTON 5 (Side button)

- Press to switch to vehicle #2. The Blue LED will flash while in 2<sup>nd</sup> vehicle mode.

### FLASHLIGHT

- Press to use built-in flashlight.

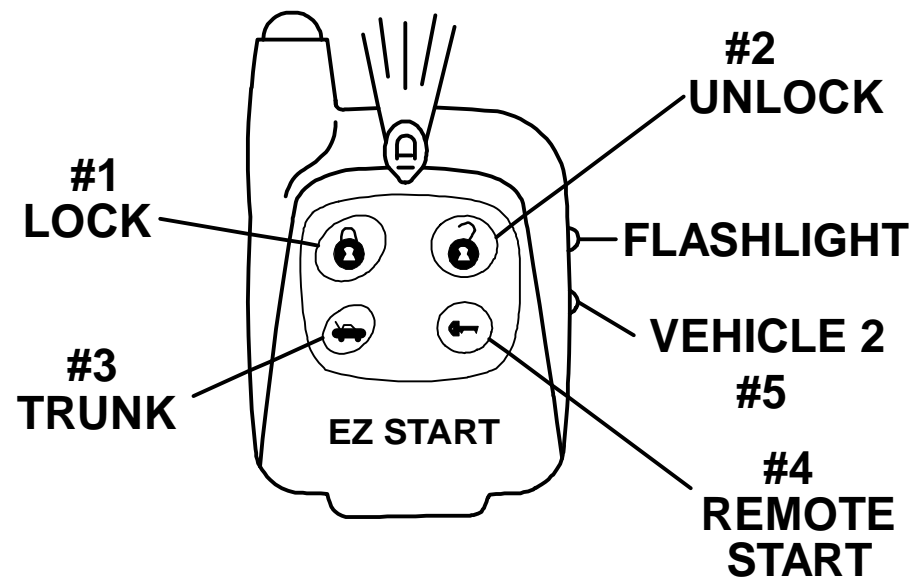

Replacement Battery  
GP23A (12volt)

The transmitter supplied with the EZEE Start system contains four buttons, flashlight, and vehicle 2 switch. The button configuration of the EZEE Start system is Factory-set and unchangeable. See Page 16 for additional information on how to use your remote to operate a second vehicle equipped with a EZEE Start system.

### **NOTE: BUTTON #4 and #3 Remote Start/Trunk**

There is a deliberate delay or 2 presses (Optional) built into the system on button #4 and #3 to help prevent accidental remote starting from the remote being in your pocket or purse. During normal use, if you press button #4 or #3 too quickly, the system may not start the engine or open trunk.

## USING THE 1-WAY REMOTE EZ-95FM

### OPERATION:

#### BUTTON 1 (Lock Symbol):

- Press and release to Lock doors.
- Press and Hold for more than 3 seconds to activate "Panic" feature.

#### BUTTON 2 (Unlock Symbol):

- Press and release to Unlock doors.
- Press 2 times for Driver Door Priority Unlock.

#### BUTTON 3 (Trunk Symbol):


- Press and Hold for ½ second or press twice to activate trunk pop.

#### BUTTON 4 (Start):

- Press and Hold for ½ second or press twice to Start/Stop Engine.

#### BUTTON 5 (Vehicle #2/ 2<sup>ND</sup> Function)

- AUX #2: Press button 5 then press button 1.
- AUX #3: Press button 5 then press button 2.
- AUX #4: Press button 5 then press button 4.
- Press and Hold for 2 sec. for vehicle #2.

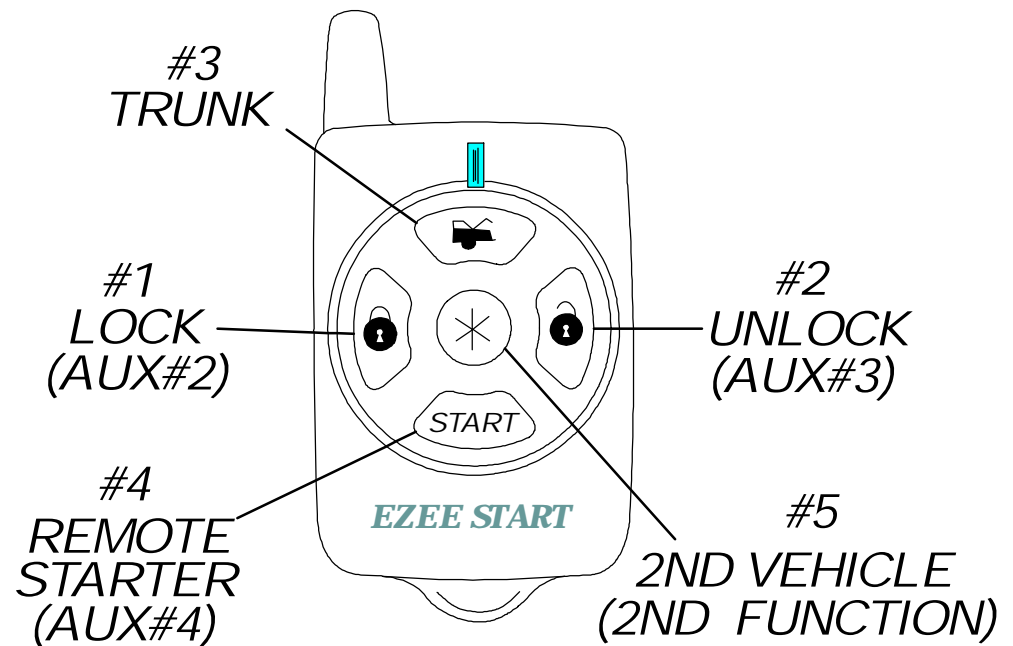

The transmitter supplied with the EZ-84FM/95FM system has five buttons. The button configuration of the EZ-84FM/95FM is Factory-set and unchangeable. See Page 16 for additional information on how to use your remote to operate a second vehicle equipped with a EZEE Start system.


#### **NOTE: BUTTON #4 and #3 Remote Start/Trunk**

There is a deliberate delay or 2 presses (Optional) built into the system on button #4 and #3 to help prevent accidental remote starting from the remote being in your pocket or purse. During normal use, if you press button #4 or #3 too quickly, the system may not start the engine or open trunk.

# REMOTE ENGINE STARTING

## REMOTE ENGINE STARTING - SUCCESSFUL START:

- 1) Press the remote start button for at least 1/2 second (Default) or twice if set for double press.
- 2) Parking lights flash once; return solid, and the Ignition/Acc circuits turn on.
- 3) After a few seconds the Starter Motor engages, Parking lights and Acc circuits will turn off while cranking.
- 4) Engine Starts and Runs. Parking Lights and Acc turn back on, Doors Lock.
- 5) Engine will remain running for programmed run time until reset with Brake pedal. If needed, the engine can be turned off with remote transmitter by pressing and releasing or double press the Start button.

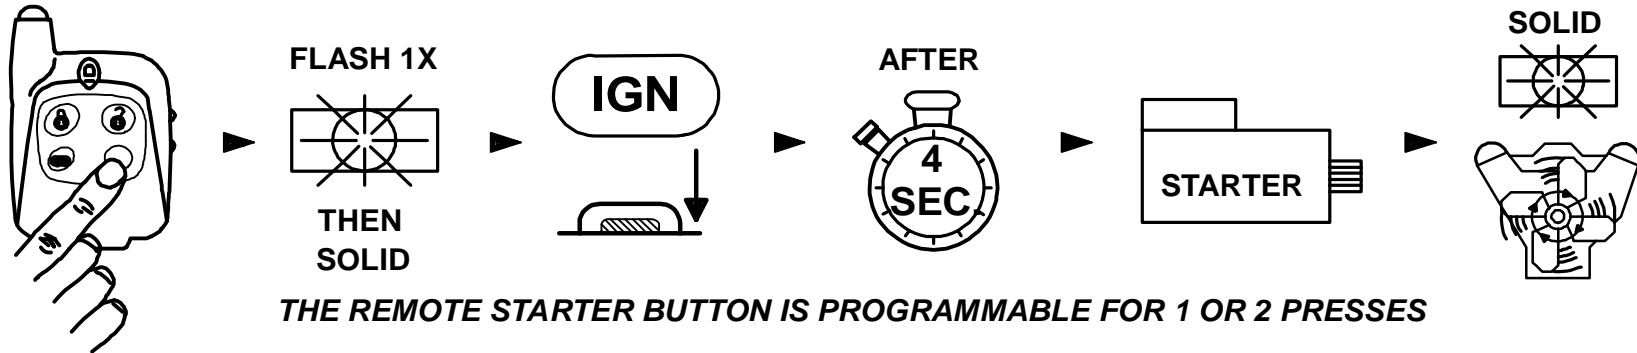

## REMOTE ENGINE STARTING - UNSUCCESSFUL START

In the event that the engine does not start on the first attempt, the system shuts down for a few seconds, and then attempts to restart the engine a 2<sup>nd</sup> and 3<sup>rd</sup> time. For hard starting engines, the unit will allow a starter crank time of up to 10 seconds maximum. This should provide ample cranking time for difficult starts, but is limited to 13 seconds to help prevent damage to the starter from over cranking.

- 1) If engine starts on 2<sup>nd</sup> or 3<sup>rd</sup> attempt, see steps 4 & 5 above of "Successful Start".
- 2) If Third attempt fails to start engine, the system will turn off and doors will remain locked.

*NO FURTHER ATTEMPTS WILL BE MADE AUTOMATICALLY*

## TURNING OFF A REMOTE STARTED ENGINE:

- 1) Engine is running in Remote Start (Parking lights ON).
- 2) Press and release the remote start button.
- 3) Engine & parking lights OFF, Doors re-lock/re-arm.



## REMOTE ENGINE STARTING Cont.

### **ENTERING YOUR REMOTE STARTED VEHICLE:**

- 1) With engine running, Remote Unlock system (If equipped) or open door with key.
- 2) Enter vehicle and be careful not to step on brake pedal! (Remote Start Reset).
- 3) Turn Ignition to ON/RUN position, then press brake pedal to reset the Remote Starter & Shift out of park.
- 4) Remote starter will reset instantly when the brake is pressed. Parking lights will turn off and the ignition key is now controlling your vehicle.

### **REMOTE START RUN TIME RESET:**

You can now reset the engine-run timer to allow for more running time after remote start has already occurred using the remote control. After a successful remote start, press both the Lock & Unlock buttons together for at least 2 seconds. The parking lights will flash 3 times and internal engine timer will reset back to zero minutes.

### **IDLE DOWN MODE:**

This mode allows the unit to take over operation of the parked vehicle while the ignition key is removed and you exit the vehicle. The vehicle is put into a remote running condition before you exit and it will remain running for the programmed run time or until you come back.


#### ***Examples:***

- *You pull up to a convenience store for a quick stop, "Idle Down" mode keeps engine running when you exit the vehicle, (with keys in hand) remote lock doors or arm alarm. When you return, unlock, turn ignition ON and drive away.*

# REMOTE ENGINE STARTING

## IDLE DOWN MODE - EXITING THE VEHICLE:

- 1) With vehicle engine running with key, \*\*press the Remote Start button for at least a 1/2 second or twice if set for double press.
- 2) Parking Lights will turn ON.
- 3) Doors will unlock, or if brake pedal is being depressed, doors will unlock when it is released.
- 4) Turn OFF Ignition and remove key. Engine should remain running.
- 5) Exit vehicle, then remote lock doors if desired.
- 6) Engine will remain running for programmed run time or until you return (whichever comes first).

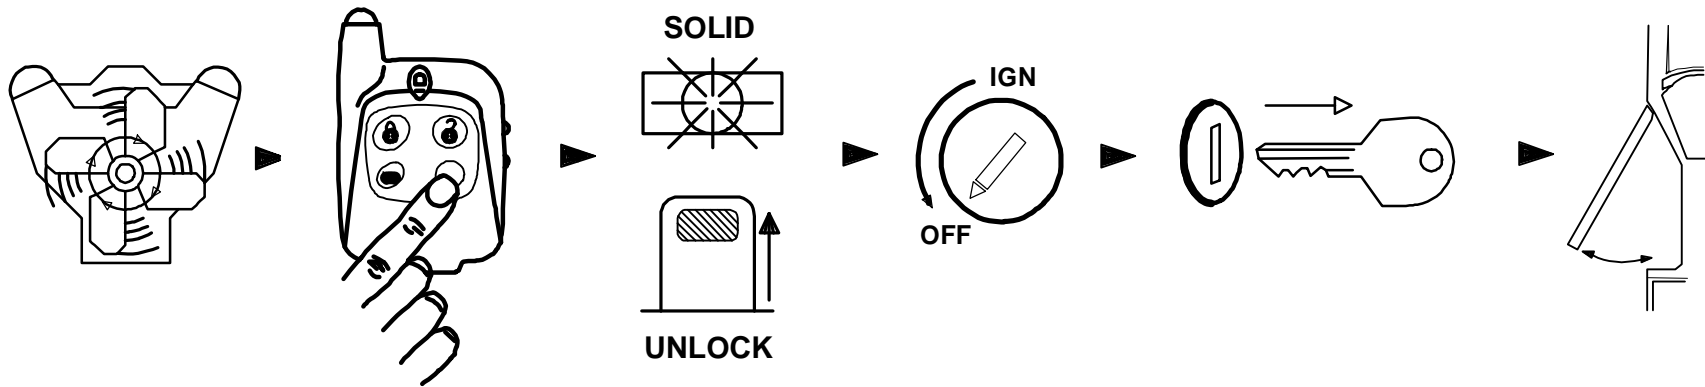

## ENTERING A VEHICLE DURING "IDLE-DOWN" or "INFINITY RUN" MODES:

1. With engine running in "IDLE DOWN" (parking lights ON), unlock door via remote or key.
2. Enter vehicle and be careful not to step on brake pedal! (Remote Start Reset)
3. Turn Ignition to ON/RUN position, then depress brake pedal to reset the Remote Starter. Parking lights will turn off indicating the Remote Start is OFF and Vehicle is running by the Key. Drive away as normal

## INFINITY RUN MODE

This mode can only be activated when "Idle Down" procedure. The Infinity Run mode allows the vehicle engine to remain running *INDEFINITELY after the programmed run time elapses*. This mode will allow the vehicle to be left running and unattended *without* the ignition key in the switch preventing the vehicle from being stolen. This mode can be beneficial to law enforcement or commercial trucks that need to remain running unattended for long periods of time. See next page for Infinity mode steps.

**\*\*Programmable for 1/2 second press or double press. This option is selectable by your installer.**

# REMOTE ENGINE STARTING

## INFINITY RUN MODE – EXITING THE VEHICLE:

- 1) With vehicle engine running with the key, \*\*press the Remote Start button for at least 1/2 second, pause a few seconds, then press and release the remote start button a second time.
- 2) Parking Lights will start flashing, and doors will unlock.
- 3) Turn Ignition switch OFF, remove key and exit the vehicle. Engine should remain running.
- 4) The vehicle's parking lights will flash for the programmed run time of 12, 24, or 36, or 48 minutes and then switch to solid while motor runs indefinitely or until fuel supply runs out.

## SELECTABLE HOURLY COLD-START MODE (1- 4 HOURS)

This mode allows the vehicle to be programmed to self-start every 1, 2, 3 or 4 hours and run for the programmed run time. This can be helpful during extremely cold conditions where engine fluid freeze-up is a concern. **THE VEHICLE MUST BE OUTDOORS OR IN A WELL VENTILATED AREA!** Once this mode is set, the unit will start at the programmed hourly interval and run for the programmed run time. To reset this mode, start the vehicle with the key or the remote control.

## SELECTABLE HOURLY COLD-START MODE – EXITING THE VEHICLE:


- 1) Engine should be running with the Key. \*\* Press the Remote Start button for at least 1 second. Lights will turn on signaling the remote start has turned on and doors will unlock.
- 2) Within 10 seconds press and release the valet/program button once for each hourly increment (1 time = 1 hour, 2X = 2 hours, 3X = every 3 hours, 4X = every 4 hours).
- 3) Parking Lights will turn once the button is pressed and flash for each consecutive button press.
- 4) Turn Ignition switch OFF, remove key and exit the vehicle. Engine should remain running.
- 5) Once outside the vehicle, press and release the remote start button to turn off engine. The parking lights will flash the number of times indicating the hourly increment for confirmation.
- 6) The vehicle will start by itself at the selected hourly increment until driven with key or started via the remote control.

## TURBO TIMER MODE (OPTIONAL)

The optional Turbo Timer mode allows the EZEE Start system to keep a Turbo or Turbo Diesel vehicle running for 1 to 5 minutes [selectively] after you remove the key, exit the vehicle, and lock the doors remotely. This is handy for turbo cool-down without the need for expensive turbo timers. This mode requires the use of an extra part called a momentary switch/button that is not included with the kit. Check with your installer about adding this feature.

*NOTE: The turbo timer button will also trigger a remote start if it is inadvertently pressed when the vehicle is not running. Please note this when installing the button and choose a location out of harm's way.*

- 1) Engine should be running with the key.
- 2) Press and hold down the brake pedal.
- 3) Press your "Turbo Timer" button 1 to 5 times for each minute of run time you desire. (1 press = 1 min.)
- 4) As you release the brake pedal and your system will confirm by flashing the lights the same number of times the button was pressed.
- 5) Turn Ignition switch OFF, remove key and exit the vehicle. Remote lock your doors for safety. The engine should remain running for the selected number of minutes.

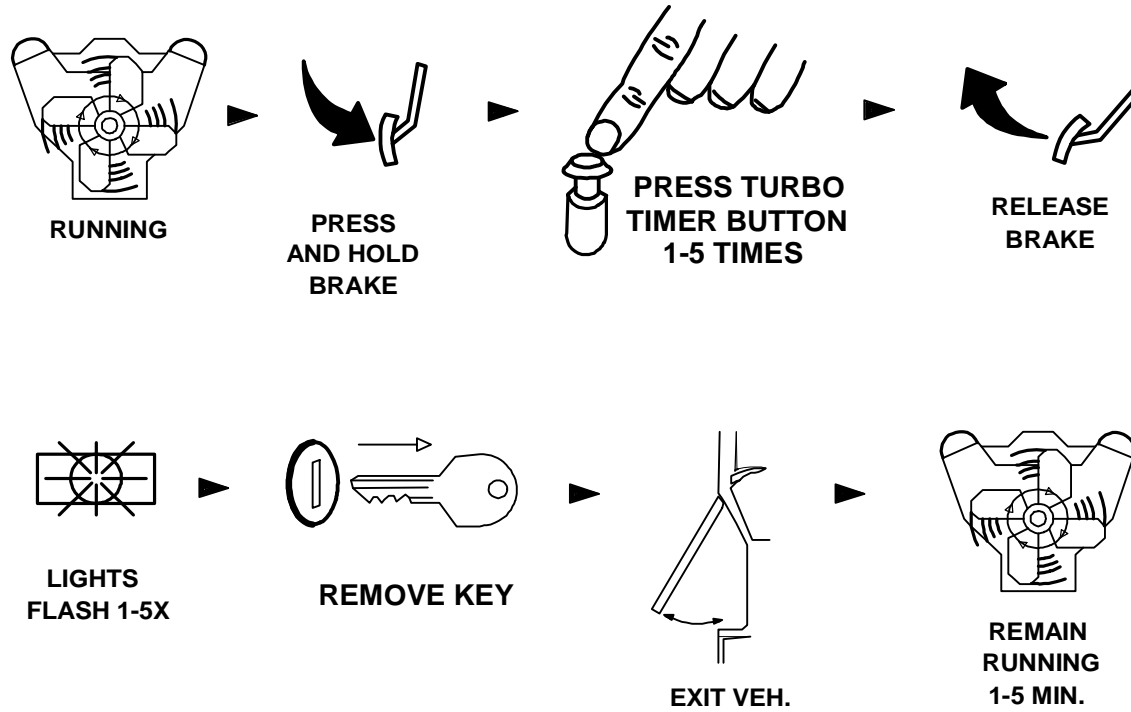

# CONVENIENCE AND SAFETY FEATURES

## **KEYLESS ENTRY (POWER DOOR LOCK CONTROL, Optional)**

This system enables you to remotely lock and unlock the vehicle's doors (if equipped with power locks) via remote control for safety and convenience. Note: This feature may require extra labor and/or parts to install. Press the Lock or Unlock transmitter button as you leave or come near the vehicle. Parking lights will flash once for lock and twice for unlock. If vehicle is running by the remote start system, the lights will flash, but return back to solid.

## **AUTO LOCK/UNLOCK (Improved)**

The Auto Lock feature controls whether the doors will automatically lock/unlock on your vehicle when driving or with turning the Ignition ON/OFF. If the Auto Lock feature is turned on, and your system is in "Tach" mode, then the doors should automatically lock as the engine RPM increase (driving). If the Auto Lock feature is turned on, and your system is in "Smart Tachless" mode, then the doors will lock a few seconds after the Ignition is turned on. When the Auto Lock feature is turned on, the system will always unlock the doors when the Ignition is turned off. With this feature turned OFF, the system will not automatically lock or unlock the vehicle. See your installer for programming information on this feature.

**DOOR LOCK NOTE:** *If your system has been setup with an optional starter kill relay, but you do not have power door locks, note the following: The lock and unlock buttons on the remote control must still be utilized to operate the Starter disable.*

## **REMOTE PANIC (Used only with Optional HORN HONK feature installation)**

For personal safety this unit now includes a panic feature. To sound the vehicle car horn, press the Lock Button on the remote for more than 2 seconds. The vehicle horn will honk along with flashing parking lamps for 1 minute. Reset Remote Panic by pressing either the lock or unlock button. See next section for Horn Honk information.

## **HORN CHIRP/HONK OUTPUT (Optional: with Horn connection & programming)**

This feature, if installed, will provide audible confirmation chirps from the factory horn for lock and unlock. When using this feature, pressing the Lock or Unlock button a 2<sup>nd</sup> time within 3-7 seconds will provide a horn chirp for audible confirmation. The system can also be programmed to provide 3 chirps when a remote start is requested using the remote. Note: Horn honk/chirp feature may require extra labor and/or parts to install.

## **REMOTE TRUNK RELEASE OR DOMELIGHT ILLUMINATION (Optional)**

This EZEE Start system includes an output that can be programmed to remotely release a factory electronic trunk or illuminate the interior light when you unlock your vehicle for lighted entry at night. If you have the optional trunk pop installed, simply press and release the Trunk Button #3 on the transmitter or if option # 6 is turned on you must press Button # 3 twice within 3 seconds, to remotely open trunk. If your system is programmed for Dome Light illumination, then it will work automatically lighting the dome light for 30 seconds when you unlock your vehicle via the remote. The dome light will turn off after 30 seconds, or turning the key on (whichever comes first). The trunk Pop or Dome Light Illumination may require extra labor and/or parts to install.

# CONVENIENCE AND SAFETY FEATURES

## **VALET MODE / STARTER DISABLE OVERRIDE**

Before servicing your vehicle or handing the keys over to a Valet we recommend putting the unit into valet mode. The remote start function WILL NOT operate when in Valet mode. To enter Valet mode, turn the key to the ON position, press and hold Program/Valet switch for 5-6 seconds. The LED will turn on solid and the system is now in valet. Perform this procedure again to exit of Valet mode. The keyless entry will still function normally while in valet mode. In the event of a lost or broken transmitter, perform this step to override the Starter Disable (if installed).

## **ANTI-GRIND / STARTER DISABLE (Optional, relay not included)**

This Optional feature prevents the user from accidentally grinding the starter if the Ignition key is turned too far to the start position while engine is already running from the remote starter. The Anti-Grind/Starter Disable requires the use of an external relay. This system must be programmed to allow the relay to work as a starter disable.

## **PASSIVE STARTER DISABLE (Optional)**

This EZEE START system includes a programmable feature to allow the Optional Starter Disable to activate automatically 1 minute after the ignition is turned off. This programmable feature may provide insurance discounts for "Passive Security" functions, or meet an insurance requirement in your province (CAN).

## **HOOD OPEN SAFETY (Requires grounding hood pin installation)**

Prevents the engine from being Remote Started when hood is open and will shut OFF the engine if opened during while remote started. Eliminates risk of injury to someone working under the hood of the vehicle with a properly working hood pin installed. If Remote Start button is pressed with the hood open, the lights will flash once and the unit will not attempt a start.

## **BRAKE PEDAL RESET**

Prevents starting or shuts off a remote started vehicle when this circuit is active or activated. Prevents unauthorized tampering. This circuit shuts the system down immediately when brake pedal is pressed if the key is not in ignition and turned to the ON position.

## **OEM ALARM INTERFACE**

This feature is designed to Disarm and Re-arm Factory equipped security systems in conjunction with remote start and keyless entry (if needed for your vehicle). This feature will maintain the original integrity and security of your vehicle's factory equipped systems before, during, or after remote start.


## **NOTE:**

When changing, charging, or jumpstarting the vehicle's battery we recommend removing the main power fuses located on the heavy gauge RED wires near the remote start module.

# TRANSMITTER PROGRAMMING

**Note: All transmitter codes must be learned at time of programming!! The unit will learn up to 4 different transmitter codes.**

1. Turn key to the ON position.
2. Press Programming button 4 times, then after a few seconds the unit flashes the parking lights 4 times.
3. Press button #1 & #2 together of the transmitter to be coded. You should get 2 light flashes indicating the unit is waiting for a 2<sup>nd</sup> code, then press button #1 & #2 of a second transmitter, the unit will flash 3 times indicating its waiting for the 3<sup>rd</sup> code and so on. If all 4 codes are learned, the unit will automatically exit code learning mode, otherwise turn key off. See diagram below.

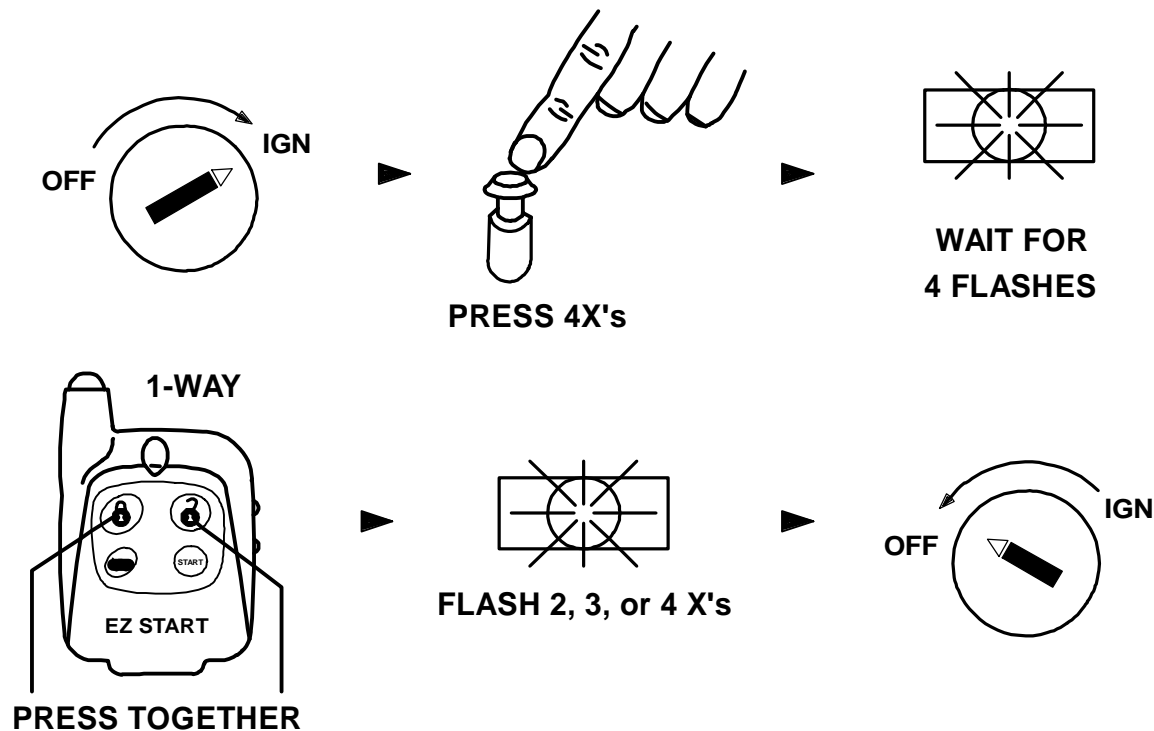

## 2-VEHICLE OPERATION

A single remote can control two different vehicles EZEE Start systems installed. **However, both systems must be the same type. EZ-64TW1/1704TW2 is not compatible with EZ-84FM/95FM.**

**Programming:**

**You must first Program your remote for 2<sup>nd</sup> vehicle operation:**

**(2<sup>nd</sup> Vehicle Programming and Operation instruction):**

### **1 Way sidekick remote**

In step #4 of transmitter programming (see page 15) press side button first, then you have 3 seconds to press lock and unlock at the same time, parking light will flash indicating the remote is programming.

**Operation:**


Press the vehicle #2 side button on your remote first and within 3 seconds press any of the 4 function buttons on your remote. You can keep pressing function buttons to control car #2 as long as it is within the 3-second window. After 3 seconds have elapsed, the remote will revert back to Car #1 operation.

### **1 Way 5 button sidekick remote**


In step #4 of transmitter programming (see page 15) press and hold middle button #5 for 2 sec., then press lock and unlock at the same time, parking light will flash indicating the remote is programming.

**Operation:**

Press vehicle #2 button (middle button) for 2 sec. and within 3 seconds press any of the 4 function buttons on your remote. You can keep pressing function buttons to control car #2 as long as it is within the 3-second window. After 3 seconds have elapsed, the remote will revert back to Car #1 operation.

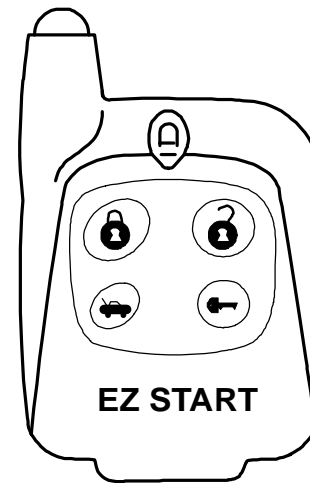

**VEHICLE #2**  
Press side button first, then you have 4 seconds to control vehicle #2.

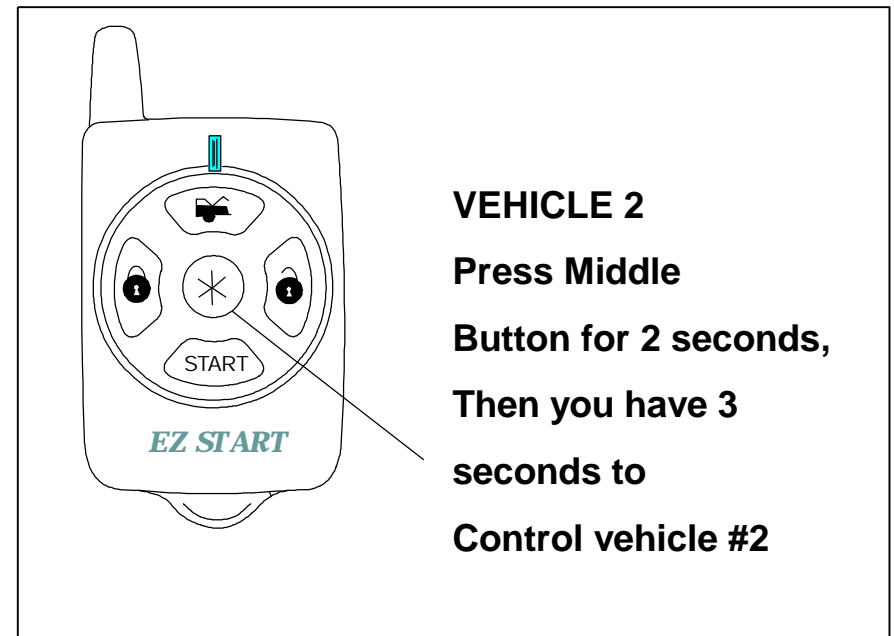

**VEHICLE 2**  
Press Middle Button for 2 seconds, Then you have 3 seconds to Control vehicle #2



## 2-VEHICLE OPERATION Cont.

### **L.E.D Two-way Remote**

In step #4 of transmitter programming (see Page 15), press and hold the side button on the LED remote for 5 seconds. The unit will beep 2 times and a yellow LED will flash (now you are in 2<sup>nd</sup> vehicle operation mode). Press the lock and unlock button at the same time on the LED remote, your vehicle should be programmed for the 2<sup>nd</sup> vehicle.

#### **Operation:**

Press the car vehicle #2 side button on your remote for 5 seconds to enter 2<sup>nd</sup> vehicle mode, press any of the 4 function buttons on your remote. You can keep pressing function buttons to control car #2 as long as it is within the 18-second window. After 18 seconds have elapsed, the remote will revert back to Car #1 operation.

### **LCD Two-way Remote**

In step #4 of transmitter programming (see Page 15), press and hold the side button on the LCD remote for 2 seconds. The unit will beep 1 time and a 2 will display on the screen (now you are in 2<sup>nd</sup> vehicle operation mode). Press the lock and unlock button at the same time on the LCD remote, your vehicle should be programmed for the 2<sup>nd</sup> vehicle.

#### **Operation:**

Press the car vehicle #2 side button on your remote for 2 seconds to enter 2<sup>nd</sup> vehicle mode, a 2 will display on the screen. You are now in 2<sup>nd</sup> vehicle mode. To return to vehicle 1, repeat previous steps and a 1 will display indicating you are in vehicle 1 mode.

## TROUBLESHOOTING: “BEFORE YOU CALL” SECTION

### ***UNIT WILL NOT ATTEMPT A START (KEYLESS ENTRY STILL FUNCTIONS NORMALLY):***

The unit is in Valet mode. Turn Ignition ON, press and hold valet/programming button for 6 seconds then turn key off. Unit is now out of valet mode and should perform a remote start. If optional LED indicator is installed, then it will be on solid when in Valet and OFF when out of Valet.

### ***UNIT FLASHES LIGHTS ONCE AND WILL NOT ATTEMPT A START:***

The unit senses a fault at the Brake (Purple wire is active) or the Hood is OPEN (Gray wire grounded). This is a safety feature of the unit. Check installation for faults and make sure hood is closed and latched and brake wire is not active. Make sure hood is in good condition and is depressed when hood is closed.

## **TROUBLESHOOTING cont.**

### ***NO RESPONSE FROM REMOTE TRANSMITTERS: (4 Parts)***

1. Check for proper power/ground wiring connections at module.
2. Check Antenna Module connection. The antenna module included with this system must be plugged in.
3. Transmitters may need to be programmed to the unit. See transmitter programming steps on Page 15.
4. Check transmitter Batteries and replace if necessary.

### ***UNIT CRANKS VEHICLE BUT ENGINE NEVER STARTS: (2 parts)***

1. In extreme cold or severe weather conditions, the unit may take more than the first attempt to start the vehicle. The remote start unit will make up to 3 attempts to start the engine.
2. In some vehicles, there may be a Factory anti-theft system that will not allow the engine to run without the key in the ignition. These systems may include Factory Security Modules, GM Passkey®/Passlock®, and RF Transponder systems (Ford P.A.T.S. ®). Many late 1990's through 2005 vehicles include some type of Anti-Theft system which may require a bypass module. Check with your installer to make sure that the bypass device (if equipped) is functioning properly.

### ***SYSTEM IS UNSUCCESSFUL AT REMOTE START DURING EXTREME COLD CONDITIONS:***

Please be aware that during sub-freezing conditions your remote starter may take more than one attempt to start or it may not successfully start the vehicle after 3 attempts. During these conditions the vehicle may not properly start even using the key; therefore trying to start by the remote would also be unsuccessful.

### ***VEHICLE STARTS BUT “CHECK ENGINE” LIGHT COMES ON OR ENGINE RUNS BADLY: (2 parts)***

1. Many 1995-UP General Motors cars/trucks require a secondary ignition circuit for the Transmission computer and other on board systems. If the vehicle is started without this wire energized, there may be a “Check Engine” or “Service Engine Soon” light on the dash. This may cause damage if the vehicle is driven in this condition. Check with installer to see if this circuit is present and has been properly connected to the system.
2. In some cases [commonly Nissan vehicles], an additional “Start” (Cranking) circuit is required for the vehicle to run properly. The EZEE Start system includes a wire that can be used for this Starter #2 circuit. Check with your installer for details.

## REMOTE START DIAGNOSTICS


If the system flashes the parking lights one to three times and doesn't attempt remote, it means the following:

- 1 Parking Light Flash = Problem with Brake Switch.**
- 2 Parking Light Flashes = Problem with Hood Switch.**
- 3 Parking Light Flashes = Valet Service Mode.**

## LOW BATTERY WARNING - LCD REMOTE (EZ-64TW1/EZ-74TW2)

**EZ-64TW1 (LED system):** When the battery is low the orange and green LED flash 6 times with any button pressed.

**EZ-74TW2/EZ-84FM/95FM (LCD SYSTEM):** When the battery is low, a low battery icon turns on. We recommend replacing the battery for proper operation.

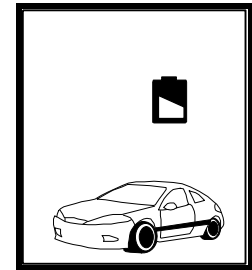

**LOW BATTERY  
WARNING**

### REPLACING THE BATTERY

To replace the battery simply unlock and slide to open the battery door on the back of LCD remote. Carefully remove the low battery. Then insert a new battery (AAA) using the outline on the bottom of the battery compartment as a guide.

#### **EZ-64TW1**

Pager will beep 3 times when new battery is inserted correctly.

#### **EZ-74TW2**

Pager will beep 3 times, vibrate and light up screen when new battery is inserted correctly.

**EZ-84FM/95FM:** Pager will light up screen then beep once. When a new battery is inserted correctly.

**Note:** *If the remote does not beep or respond you must reinsert battery again.*

# SETTING THE CLOCK (2-WAY- LCD REMOTE)

## EZ-74 TW2

1. Press the **Recall** button #5 on the side of the remote control 5 times.
2. The remote will beep and the **AM or PM** display will begin flashing.
3. Press the **Lock** button #1 to **increase** time.
4. Press the **Unlock** button #2 to **decrease** time.
5. Press the **Trunk** button #3 to go to the next item – **AM - PM - Hour- Minutes**.
6. Press the **Start** button #4 to **Disable or Enable Beep**.
7. Press the **Recall** button #5 to **Exit Setup** or wait 7 seconds, the LCD light will turn off.

## EZ-84FM/95FM

1. Press and hold all 4 buttons of remote control for approximately 3 seconds until remote beeps.
2. The minute display will begin flashing. Use the lock and unlock button to change the minute up or down to the correct time and then press button #3 (Trunk) to set the minute value.
3. The hour display should begin flashing. Use the lock and unlock button to change the hour up or down to the correct AM or PM hour.
4. Once the correct time is displayed, wait 6 seconds, the remote will beep twice and the time of day is set.

**CRIMESTOPPER**

[www.crimestopper.com](http://www.crimestopper.com)

[email@crimestopper.com](mailto:email@crimestopper.com)

© 2006 Crimestopper Security Products

**TechWeb**

ONLINE TECHNICAL SUPPORT  
[www.crimestopper.com/techweb05.htm](http://www.crimestopper.com/techweb05.htm)