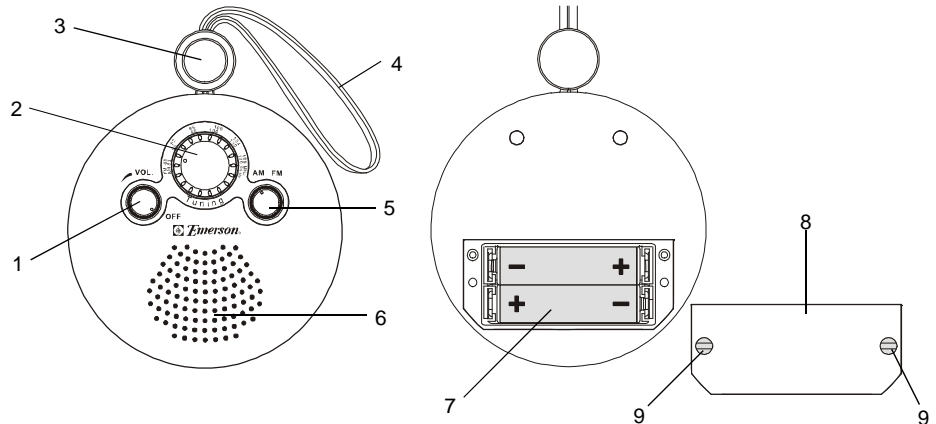


Location Of Controls

- 1.) **VOLUME** Control (Power On/OFF).
- 2.) **TUNING** Control.
- 3.) Carrying Strap Stopper.
- 4.) Carrying Strap/FM Antenna.
- 5.) **AM/FM** Band Select Switch.
- 6.) Speaker.
- 7.) Battery Compartment.
- 8.) Battery Compartment Cover.
- 9.) Battery Cover Secure Screws.

**Battery Installation**

- 1.) Open the battery compartment (located on the rear of the unit) by rotating the screws anti-clockwise.
- 2.) Lift off the cover.
- 3.) Insert 2 "AAA" batteries (not included) according to the polarity diagrams in the compartment.
- 4.) Put the battery compartment cover back. Rotate the screws clockwise to secure.

Battery Precautions

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak.

Listening To The Radio

- 1.) Rotate the On/OFF-VOLume control clockwise to turn the unit 'On'.
- 2.) Rotate the Band switch to select **AM** or **FM**.
- 3.) Tune to an AM or FM station by turning the **TUNING** control.
- 4.) Adjust the **VOL**ume control as desired.
- 5.) To turn the radio 'Off', rotate the On/OFF-VOLume control counter-clockwise until a 'click' is heard.

Antenna Information

AM - The AM antenna is inside the cabinet. It may be necessary to change the position of the radio so that the built in antenna picks up the strongest signal.

FM - The FM antenna is built-in to the carrying strap. Keep the strap fully extended for best FM reception.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U. S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.,
5101 Statesman Drive,
Irving, TX 75063.
1-800-898-9020.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898H