

### 2-year Guarantee

It is in your interest to retain the retailer's receipt as proof of purchase. Please quote the model number if the product develops a fault. This number can be found on the handle of the product.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If a fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting the model number of the product, or write to the address below. You will be asked to return the product (in secure packaging) along with a copy of proof of purchase:

The After Sales Division  
Morphy Richards Ltd  
Mexborough  
South Yorkshire  
England  
S64 8AJ

### Helpline

8.30-5.00 Mon-Thurs  
8.30-4.00 Fri  
UK 0870 060 2614  
Republic of Ireland 1800 409119

For details of the rest of the products in the Morphy Richards range please see our website [www.morphyrichards.com](http://www.morphyrichards.com)

### Registered address:

Morphy Richards Ltd  
Talbot Rd  
Mexborough  
South Yorkshire  
S64 8AJ

Model Number: 21029

Part Number: PC21029 M UK rev2

*Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The company therefore reserves the right to change the specification of its models at any time.*

head  
gear™



*Retro 1800w Dryer*

Model No. 21029

*Instructions and Guarantee*



# Retro 1800w Dryer

## Using your hairdryer

After washing your hair, it's really important to prepare it for styling. If you use lots of heated styling tools on your hair, try to use a heat protection spray before you begin styling. Always dry the excess water from your hair using a towel, then use a widetooth comb to detangle and smooth your hair.

To begin drying, remove the nozzle from your dryer and blast your hair with the dryer on the highest speed setting until your hair is 50% dry – there is no point trying to style your hair until it is almost dry. As your hair begins to dry, switch off your dryer and attach the concentrator nozzle. The nozzle must only be used with low and medium heat settings. Using the nozzle helps to direct the airflow and will give your hair a sleek and smooth finish. If you are blow-drying curly hair into a straight style, use the nozzle to direct air down the shaft of the hair. If you want to create volume instead, tip your head upside down and use your fingers to comb your hair through as you dry it.

As your hair dries, use the dryer on a slower speed setting so as not to blow your style out of place. When you have achieved the style you want and your hair is thoroughly

dry, press the 'Cool Shot' button for a blast of cold air to set your style in place. To switch Cool Shot off and continue drying with hot air, press in 'Cool Shot' button again.

*Don't forget* – to switch off your hair dryer and store it when you have finished drying. If you want to store your hair dryer in the gift box, always make sure the hair dryer has cooled down.

## Wiring

This product is fitted with a 13 amp (BS1363) plug. A 13 amp fuse (BS1362) must be used. If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

***WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged***

*into a live socket outlet.*

## Mains lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this can cause damage.

## Safety information

When using your hairdryer, basic safety precautions should always be followed. Please read these instructions carefully before using the product and keep them in a safe place for future reference.

- 1 Use this appliance for its intended use only.
  - 2 To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
  - 3 This appliance is not intended for use by children or other persons without assistance or supervision, if their physical, sensory or mental capabilities prevent them from using it safely. Keep out of reach of children at all times.
  - 4 Always unplug the appliance when it is not in use.
  - 5 Do not leave the appliance switched on while unattended.
  - 6 Check that the voltage on the rating plate of the hair dryer corresponds with your house electricity supply which must be AC (alternating current).
  - 7 In the event of cable damage, do not attempt to replace the mains cable – return to Morphy Richards.
  - 8 After use, do not store until the product has cooled down.
  - 9 For UK only - Do not take this product into a bathroom or use near a water basin or any other vessels containing water.
- For other European countries – For additional protection, the installation of a residual current device (RCD) having rated residual operation current not exceeding 30mA is advised in the electrical circuit supplying the bathroom. Ask your installer for advice. When the hairdryer is used in a bathroom, unplug it after use as the proximity of water presents a hazard when the hairdryer is switched off.