




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L12710VIT. You'll find the answers to all your questions on the AEG-ELECTROLUX L12710VIT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX L12710VIT**  
**User guide AEG-ELECTROLUX L12710VIT**  
**Operating instructions AEG-ELECTROLUX L12710VIT**  
**Instructions for use AEG-ELECTROLUX L12710VIT**  
**Instruction manual AEG-ELECTROLUX L12710VIT**

232884811.qxd 23/08/2005 09:38 Page 12

LAVAMAT TURBO 12710 VIT  
LAVAMAT TURBO 14710 VIT  
Washer-Dryer  
Instruction Booklet

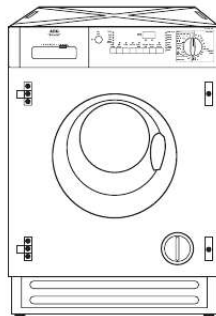

PERFECT IN FORM UND FUNKTION **AEG**  
Electrolux



[Your user manual](#)  
[AEG-ELECTROLUX L12710VIT](#)

**Manual abstract:**

22 STAIN REMOVER . 22 3 132984531.qxd 23/08/2005 09:38 Pagina 4 Contents And in which form? . 23 TRADITIONAL POWDERS 23 TRADITIONAL LIQUIDS 23 COMPACT POWDERS AND LIQUIDS 23 FABRIC CONDITIONERS . 23 Preparing the drying cycle 24 Load . 24 Garments not suitable for drying . 24 Drying symbols on garment labels 25 Duration of the drying cycle . 25 Modification of the drying time 25 Fibre residue 25 Additional drying . 26 How to wash 27 Load the laundry . 27 Add detergent and additive 27 Switching the machine on .  
27 Selection of the desired wash programme . 28 Selection of the SPIN SPEED or RINSE HOLD option 28 Selection of the STAIN, PREWASH or QUICK WASH option 28 Selection of the EXTRA RINSE option . 28 Selection of the DELAY START option . 29 Starting the programme . 29 At the end of the programme 30 How to dry 31 Drying only .  
31 Automatic washing and drying (NON-STOP programme) 31 Programme charts 32-33 Programme chart 34 Drying . 34 Cleaning and maintenance . 35 After each wash 35 Periodical cleaning 35 Exterior . 35 Detergent dispenser drawer . 35 Door seal .  
36 Drain filter 36 Water inlet filter . 36 Emergency emptying out 37 Frost precautions . 37 4 132984531.qxd 23/08/2005 09:38 Pagina 5 Contents Something not working? . 38 Troubleshooting 38 Unsatisfactory washing results . 42 Technical data . 43 Service & Spare Parts 44 Guarantee Conditions . 46-47 Instructions for installation and electrical connection . 48 Safety instructions for the installer . 48 Dimensions of the appliance 49 Front view and side view 49 Rear view 49 Installation 50 Unpacking .  
50 Positioning . 51 Levelling . 51 Water inlet (cold water connection only) 52 Water drainage 52-53 In the interest of the environment 54 Electrical connections 54-55 Permanent connection 55 Building-in . 56-59 5 132984531.qxd 23/08/2005 09:38 Pagina 6 Safety instructions Your safety is of paramount importance, please ensure you read this instruction book before installing or using this appliance. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause injury or serious malfunctioning. Contact your local AEG/ELECTROLUX Service Force Centre. · Never start the machine if the mains cable is damaged or the control panel or worktop are damaged allowing inner components to be accessible. · Unplug the appliance before carrying out any cleaning or maintenance operations. · Never pull the mains cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes and during the drying cycle, the door glass may get hot. · Let the water cool down before carrying out emergency emptying or before opening the door in an emergency..



[Your user manual](#)

[AEG-ELECTROLUX L12710VIT](#)