


2 Band Alarm Clock Radio



28044 | OPERATING INSTRUCTIONS

Illustration

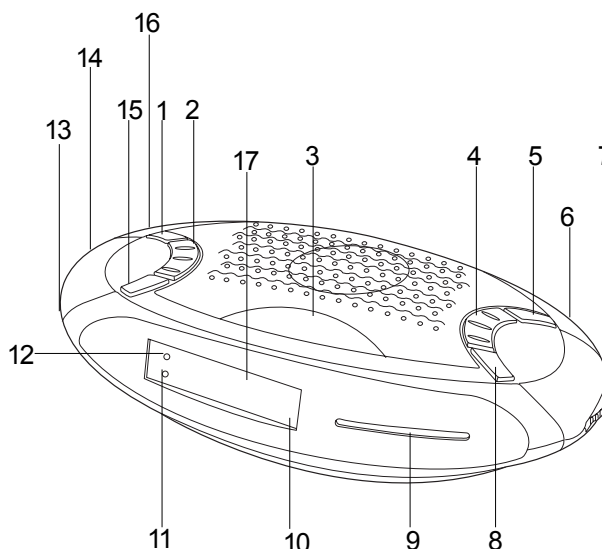

Location of controls

- | | |
|-------------------------------|----------------------------|
| 1 Alarm 1 button | 9 Dial scale with pointer |
| 2 Alarm 2 button | 10 Alarm 2 indicator |
| 3 Snooze button | 11 Alarm 1 indicator |
| 4 Alarm off / time set button | 12 PM indicator |
| 5 Slow button | 13 Volume / buzzer control |
| 6 Band switch | 14 Function switch |
| 7 Tuning control | 15 Sleep button |
| 8 Fast button | 16 Alarm switch |
| | 17 LED clock display |

P.2

Electrical requirements

Check the voltage on the rating plate of your clock radio corresponds with your house electricity supply which must be A.C. (Alternating current).

For clock radios with a fitted plug.

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH A BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO A LIVE SOCKET OUTLET.

Should the fuse in the 13 amp plug require changing a 3 amp BS1362 fuse must be fitted.

Battery back-up facility (unit will work without a battery being fitted)

Your alarm clock radio is equipped with a battery back-up facility.

- 1 Remove the battery compartment cover (located underneath the unit) by pushing in the clip and lifting off.
- 2 Insert a battery size 9 volts PP3/6LR61 (Ensure batteries are inserted correctly)
- 3 Replace the battery compartment cover.

Should a power interruption occur the clock will continue to run, however, time keeping will not be accurate. The display will be extinguished to conserve battery life but the memory will retain details of the clock time and alarm settings.

If the optional battery is not installed in case of the AC power failure the display will blink to indicate the power was interrupted. You will need to reset the clock and alarm.

Battery back-up is designed to operate for a short period only.

If the unit is not to be used for a prolonged period, remove the battery to avoid battery leakage.

In the interests of environmental safety : dispose of batteries safely.

Switching on, and setting the clock time

Before any alarm functions can be used on your alarm clock radio you must first set the clock to the correct time.

- 1 Place the unit on a flat surface. Plug the mains plug into the wall socket and switch on the wall socket.
- 2 The clock LED display (17) will flash.
- 3 Press and hold the TIME SET button (4) and simultaneously hold down the fast button (8) or the slow button (5). The LED clock display (17) will fast forward the minutes and hour segments. Release all buttons when the correct time is set.
- 4 The PM indicator (12) will illuminate to indicate 12.00 midday has been reached.

Radio operation

FM wire aerial

To obtain the maximum FM reception fully extend the wire FM aerial (which is located at the rear of the unit) and alter the direction of the wire for best results.

The aerial for the MW waveband is located inside the unit. To obtain the maximum MW reception rotate the clock radio.

- 1 Slide the FUNCTION switch (14) to the 'ON' position.
- 2 Adjust the VOLUME control (13) to a suitable level.
- 3 Set the BAND switch (6) to either MW or FM as desired.
- 4 Slowly adjust the TUNING control (7) to select your desired station.
- 5 To switch off the radio, slide the FUNCTION switch (14) to the 'OFF' position.

Setting the alarm time

Alarm 1

- 1 Press and hold the ALARM 1 button (1).
- 2 Press the FAST button (8) to advance the setting quickly. When nearing the desired time, release the FAST button.
- 3 Press the slow button (5) to advance the setting slowly to the desired time.
- 4 Release the the ALARM 1 button.
- 5 Set the FUNCTION switch to 'AUTO'.

Alarm 2

- 1 Follow the procedure above for setting alarm 1 using the alarm 2 button instead.

Setting the alarm

- 1 Set the alarm time as detailed above.
 - 2 Set the ALARM switch (16) to ALARM 1, ALARM 2 or ALARM 1 + 2 to activate the appropriate alarm.
- In alarm 1 and 2 both settings are activated.

Wake to buzzer

- 1 Slide the VOLUME control / BUZZER (13) to the 'BUZZER' position.
- The dial will click when the buzzer position is reached.

To wake to radio

- 1 Slide the FUNCTION switch (14) to the 'ON' position.
- 2 Slide the BAND switch (6) to MW or FM.
- 3 Use the tuning control (7) to select desired station.
- 4 Adjust the VOLUME control (13) to the desired level.
- 5 Slide the FUNCTION switch (14) to the 'AUTO' position.

- The appropriate alarm indicator will illuminate on the led display.

Note: The alarm or radio will sound and will continue for 2 hours past the alarm setting.

P.5

Maintenance

Do not expose your clock radio to extremes of temperature. The product should be kept in a warm environment free from dust and damp. For external cleaning use only a soft, clean, damp cloth. Use of detergents may damage the finish.

Technical specification

AC Power supply	:	230v ~ 50Hz
Battery back-up	:	9V DC type 6LR61/PP3 (not included)
Radio	:	FM 88Mhz - 108MHz
	:	MW 530Khz - 1600kHz

Warning labels

WARNING: to reduce the risk of electric shock, do not expose this appliance to rain or moisture.



ATTENTION: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer any servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of 'dangerous voltage' inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

To prevent fire or shock hazard do not expose this apparatus to dripping or splashing.

P.7

To stop the alarm

- 1 Press the SNOOZE button (3) to silence the alarm for approximately 7 minutes. (When pressing and holding the snooze button the clock display will show the last digit of the minute and running second of current time.
- 2 Slide the FUNCTION switch (14) to the 'OFF' position or press the TIME SET / ALARM OFF button (4) to cancel the alarm.

Snooze function

The alarm can be interrupted for a 7 minute period.

- 1 Press the SNOOZE button (3), after 7 minutes the radio or alarm buzzer will sound again.

To set the sleep function

Your clock radio is equipped with a sleep function that will turn the radio on and switch it off automatically after a set period of time from between 1 minute to 59 minutes.

- 1 Make sure the FUNCTION switch is set to 'OFF' or 'AUTO' position, otherwise the clock radio will not turn off after the sleep period ends.

59 minute sleep timer

- 1 Press the sleep button (15) to have the radio play for 59 minutes, before automatically shutting off.

Variable-length sleep timer

- 1 Press and hold the SLEEP button (15), 0:59 will be displayed and the timer will count down. Release the SLEEP button when the desired sleep time is reached.
- 2 Press the TIME SET / ALARM OFF (4) button to cancel the sleep function and turn off the radio before the sleep time ends.

- The fast button will advance the sleep time quickly.
- The slow button will advance the sleep time in increments.

P.6

Guarantee

Morphy Richards products are manufactured to internationally accepted quality standards. In addition to your statutory rights, Morphy Richards guarantee your product to be free from manufacturing and component defects for a period of TWO YEARS from date of purchase.

If your product proves to be defective within 28 days of purchase, your Morphy Richards dealer from whom the product was purchased will be pleased to replace it free of charge.

Should your product develop a defect within the guarantee period but after the replacement period, please return the product to the following address, together with the proof of purchase, brief details of the symptoms and your own name and address.

Registered address
Morphy Richards Limited
Mexborough
South Yorkshire
S64 8AJ

Your post office will provide a certificate of posting. The product will be repaired and returned to you promptly.

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri) UK **0870 060 2614**
Republic of Ireland **1800 409119**
Replacement parts **0870 167 6645**

www.morphyrichards.co.uk



AD28044M UK Rev 1