

Language Master™

Language Learning Library



1. Getting Started	4
1.1 Charging the Battery	4
1.2 Switching On and Off	6
1.3 Setting the Message Language	6
1.4 Using the Backlight	6
1.5 Using the Main Menu	7
1.6 Key Guide	8
1.7 Browsing in the Device	10
2. Quick Guide to Product Features	12
2.1 Dictionaries and Searching	12
2.2 Basic Features	13
2.3 Other Useful Features	14
3. BOOKS Menu	15
3.1 Using Global Search	15
3.2 Using the Dictionaries	17
3.3 Searching Idioms, Usage Examples and Collocations	20
3.4 Misspelling Words	21
3.5 Uncertain Spellings	21
3.6 Inflections/Conjugations	22
3.7 Confusable Words	23
3.8 Usage Examples	23
3.9 Highlighting Words	24
3.10 Adding Words to My Word List	25
3.11 K-Rules in DUDEN - Die deutsche Rechtschreibung Dictionary	26
3.12 Hints on Inputting Words	27
3.13 Viewing Downloaded Dictionaries	28
4. LEARN Menu	29
4.1 PONS Business Englisch	29
4.2 Phrasebook	33
4.3 Grammar Guides	35
4.4 My Word List	36
4.5 Personal Dictionary	40
4.6 Search History	42
5. EXERCISES Menu	43
5.1 Creating User Names	43
5.2 Audio Dictation	44
5.3 Phrase Builder	46
5.4 Picture Card Game	48
5.5 Pronunciation Trainer	50
5.6 Reading Comprehension	53
5.7 Exercise Review	55
6. ORGANIZER Menu	56
6.1 Music Player	56
6.2 Using the Calendar	58
6.3 Using the Calculator	61
6.4 Using the Clock	62
6.5 Using the Alarm	63

 
6.6 Using Memo	64
6.7 Using Voice Memo	65
6.8 Metric Converter	66
6.9 Currency Converter	67
6.10 Using Countdown Timer	68
6.11 Organizer Password	69
7. SETTINGS Menu	70
7.1 Display Settings	70
7.2 Volume Control	70
7.3 Language Settings	70
7.4 Power Management	71
7.5 Disk Management	71
7.6 Host Information	72
7.7 Default Settings	72
8. General Controls	73
8.1 Headphone Jack	73
8.2 USB Port	73
8.3 Inserting microSD Card	73
8.4 Adjusting Sound Volume	74
8.5 Changing Size of Screen Type	74
8.6 Help is Always at Hand	74
8.7 Resetting Your Device	74
9. PC Connections	75
9.1 Connecting to a PC	75
9.2 Using WordBytes 2.0	76
9.3 Copying Files to Your Device	77
9.4 About Your Device Folders	78
9.5 Backing Up Your Data	78
9.6 Restoring Your Data	78
10. Additional Information	79
10.1 Specifications	79
10.2 Product Care	80
10.3 Recycling and Disposal	81
10.4 FCC Notice (U.S. only)	82
10.5 License Agreement (U.S.)	83
11. Warranty Information	84
11.1 Disclaimer of Warranties	84
11.2 Limited Warranty (U.S. only)	84
11.3 Limited Warranty (EU and Switzerland)	85
11.4 Limited Warranty (outside U.S., EU and Switzerland)	85

1. Getting Started

1.1 Charging the Battery


Your device is powered by a built-in rechargeable lithium polymer battery. To charge the battery,

1. **Connect the small end of a USB cable to the Mini-USB port on the device and the wide end to the USB port of your computer.**

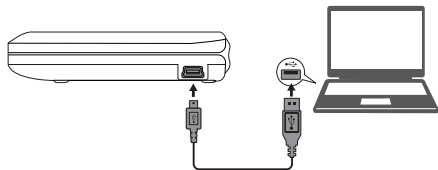

2. **Once connected, you are asked if you want to connect the device to your computer. To charge your device only, press **◀/▶** to select "No" on the pop-up menu and then press **eingabe**.**

 - Alternatively, connect the wide end of the USB cable to the supplied AC power adapter and then connect the adapter to a power outlet.

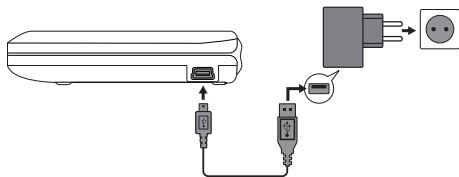

- The battery icon animates during charging and stays solid when the battery is fully charged. It generally takes a few hours to completely charge the battery.



1.1 Charging the Battery

Battery Precautions

- If the device is not used for a long period of time, the battery may lose its charge. Please recharge the battery following the steps described above in order to use your device.
- Rechargeable batteries are only to be charged under adult supervision.
- Use only the supplied chargers to recharge the battery. Improperly charging a battery may damage it or the device.
- Do not use an unauthorized battery. Use only the rechargeable battery that came with your product or that is listed in the user's guide.
- Open the device only to insert or change the battery. All other changes to this device are strictly prohibited and will invalidate the warranty.
- Do not attempt to open the rechargeable battery or battery pack. There are no user serviceable parts inside.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Do not dispose as household waste.

1.2 Switching On and Off

Press  to switch on or off the device.

1.3 Setting the Message Language

The first time you use this device (or following a product reset), you will be promoted to set the message language used for on-screen prompts and menu items.


1. Press ▲ / ▼ to select the language you want.

- You may also press the letter key for the language you want.

2. Press .

 
- You can change the message language at any time in the Settings menu. See *7.3 Language Settings*.

1.4 Using the Backlight


The device is also equipped with a display backlight for using in the dark, press  to switch it on or off.

1.5 Using the Main Menu

Press **menü** to access the main menu at any screens to quickly take you to different books and exercises in your device. The main menu contains five tabs: *Books*, *Learn*, *Exercises*, *Organizer* and *Settings*. Use ◀/▶ to move to another tab. Use ▲/▼ to select the option you want and then press **eingabe**.

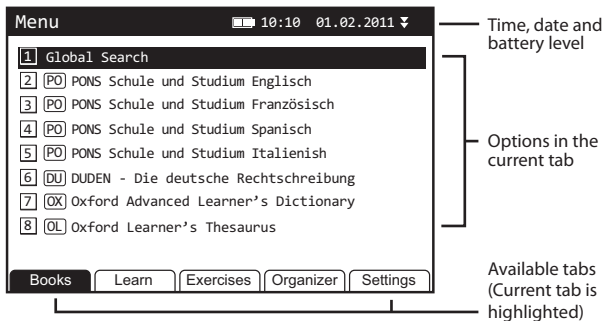

 1.6 Key Guide

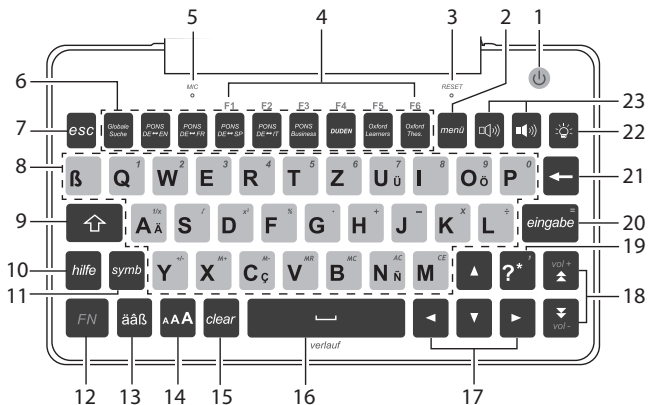

1. Turns on or off.
2. Goes to the main menu.
3. Reset button
4. Soft keys – Hold **FN** and then press **F1** to **F6** that corresponds to the functional label at the bottom of the screen. **Note:** In this user's guide, the key combination is indicated as **FN** + 'functional label', for example: **FN** + **SAVE**.
5. Microphone
6. Goes to Global Search or a specific dictionary indicated on the button.
7. Cancels the current operation and reverts back to the last working prompt, screen or menu. Turns off selection mode in an entry.
8. Input letters and numbers.
9. Shifts to type capital letters.
10. Displays help instructions.
11. Shows the symbol menu for typing a symbol.
12. Performs additional functions in combination with other keys.


1.6 Key Guide

13. Selects accent for characters.
14. Changes the size of screen type.
15. Clears all entries.
16. Types a space.
17. Direction keys – Moves up (▲), down (▼), left (◀) or right (▶).
18. Scrolls up or down one screen at a time.
19. At a word entry screen, types a “?” to stand for an unknown letter in a word.
20. Enters a word, selects an item, submits a response or begins selection mode in an entry.
21. Erases a letter.
22. Turns on or off the screen backlight.
23. Speaks a word or phrase (if pronunciation is available).



Combination Keys

More functions are available by combining keys. **Key 1 + Key 2** means hold **Key 1** while also pressing **Key 2**.

FN +  Shows the search history.

 
 + ▲/▼ Jumps to the top or bottom of entries.

FN + ▲/▼ Adjusts the sound volume.

 + * At a word entry screen, types an asterisk (*) to stand for any series of unknown letters or characters in a word.

1.7 Browsing in the Device


Browsing in a List

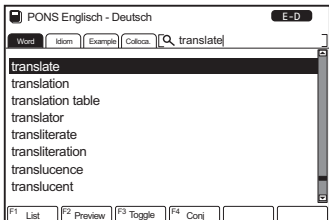


Press ▲ / ▼ to scroll up or down one screen at a time.

In a screen, press ▲ / ▼ to highlight an option and press **eingabe** to select the highlighted option.

 Browsing in an Entry

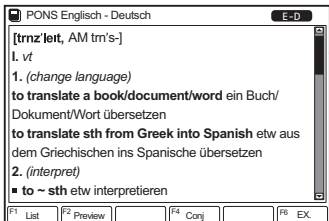


 Press ▲ / ▼ to scroll up or down one line at a time

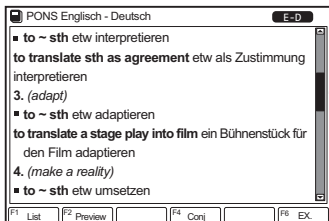

Press ▲ / ▼ to scroll up or down one screen at a time

 1.7 Browsing in the Device

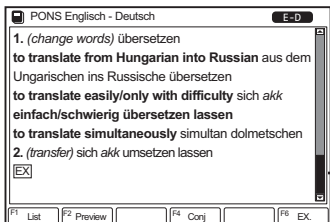

Press  +  /  to jump to the top or the bottom of an entry

Reverting Back

- At any screen, press **menü** to go back to the main menu.
- Press **esc** to cancel the current operation and revert back to the last working prompt, screen or menu.

2. Quick Guide to Product Features

2.1 Dictionaries and Searching

The table shows the possible ways for searching with each dictionary in the device. For details, refer to the sections in this user's guide indicated in the table (for example, 3.1 means referring to section 3.1 *Using Global Search*).

Dictionaries	Search methods						
	Global	Word	Idiom	Example	Collocation	Inflected form	Uncertain spelling
PONS German-English/English-German	3.1	3.2	3.3	3.3	3.3	3.6	3.5
PONS German-French/French-German				-	-		
PONS German-Spanish/Spanish-German				-	-		
PONS German-Italian/Italian-German			-	3.3	-		
DUDEN - Die deutsche Rechtschreibung			3.3	-			
Oxford Advanced Learner's			-	-			
Oxford Learner's Thesaurus			-	-			

2.1 Dictionaries and Searching

Other Dictionary Features

Features	Sections
Spelling corrections	3.4
Looking up inflections or conjugations	3.6
Looking up words in a dictionary entry	3.9
Viewing confusables of a word	3.7
Viewing usage examples of a word	3.8
Saving words for further study or review	3.10, 4.4
Viewing search history	4.6
Accessing a downloaded dictionary	3.13

2.2 Basic Features

Features	Sections
Charging battery	1.1
Adjusting sound levels	8.4
Using display backlight	1.4
Using earphones	8.1
Inserting a microSD card in the device	8.3
Changing size of the screen type	8.5
Changing time and date of the device	6.4
Changing settings (e.g. message language)	7

2.3 Other Useful Features

Features	Sections
Creating your own dictionaries	4.5
Finding translations of useful phrases	4.2
Making references to grammar guides	4.3
Improving your knowledge in business English and learning the business customs in various countries	4.1
Improving your knowledge in foreign languages through exercises	5
Playing mp3 music files	6.1
Making voice memos	6.7
Connecting this device to your PC	9.1
Using the dictionaries of this device on your PC	9.2

3. BOOKS Menu

3.1 Using Global Search

 
Global Search allows searching for all words, examples and phrases saved in the dictionaries. You can use multiple words for searching.

1. To access Global Search, press ▲ / ▼ to select Global Search in the Books menu and then press **eingabe.**

- Or press **Globale Suche** on the top row of the keyboard for direct access.

2. Type a word.

- See 3.12 *Hints on Inputting Words*.
- To refine your search, press **FN** + ◀ / ▶ to select 'Word', 'Idiom', 'Example' or 'Collocation' before you start to type to look up results in the selected search category. See 3.3 *Searching Idioms, Usage Examples and Collocations*.




- Press **FN** + **SOURCE** or **FN** + **TARGET** to limit the search within the selected language. The source language is the one in which you enter words for searching. The target language is the one in which you wish to view the definition or translation. Your current selections show at the top right of the screen.
- With each letter you type, the resulting list of potential matching entries is refreshed. If the letters you typed match an entry in the word list, it is automatically highlighted. Or, press ▲ / ▼ to select another word entry you see in the word list.
- The source of each entry is indicated in the word list.

D-D	DUDEN - Die deutsche Rechtschreibung
D-E	PONS German-English Dictionary
D-F	PONS German-French Dictionary
D-I	PONS German-Italian Dictionary

D-S	PONS German-Spanish Dictionary
E-D	PONS English-German Dictionary
OxT	Oxford Learner's Thesaurus
OxD	Oxford Advanced Learner's Dictionary
F-D	PONS French-German Dictionary
I-D	PONS Italian-German Dictionary
S-D	PONS Spanish-German Dictionary

 - Press **FN** + **PREVIEW** to preview the entries while you are browsing the word list. Repeat this step to cancel this function.

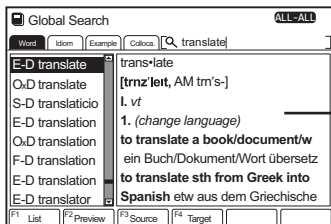

Preview of current entry

- Press **eingabe** to go to the dictionary containing the selected entry.
- See 3.2 *Using the Dictionaries* for details.
- Press **esc** and then **clear** to start a new search.

3.2 Using the Dictionaries

The following instructions apply to the dictionaries in the Books menu.

Note: The functions described below may not be available to all dictionaries or at all times.

1. To access a dictionary, press ▲ / ▼ to select the dictionary you want in the Books menu and then press `eingabe`.

- Or press a corresponding key on the top row of the keyboard for direct access.

2. Type a word.

- See 3.12 *Hints on Inputting Words*.
- To refine your search, press `FN` + ◀ / ▶ to select 'Word', 'Idiom', 'Example' or 'Collocation' (if available) before you start to type to look up results in the selected search category. See 3.3 *Searching Idioms, Usage Examples and Collocations*.



Current language selections

Press `FN` + ◀ / ▶ to refine search

- In a bilingual dictionary, press `FN` + **TOGGLE** to switch between the source and target languages. Your current selections show at the top right of the screen.
 - With each letter you type, the resulting list of potential matching entries is refreshed. If the letters you typed match an entry in the word list, it is automatically highlighted. Or, press ▲ / ▼ to select another word entry you see in the word list.
 - Press `FN` + **PREVIEW** to preview the entries while you are browsing the word list. Repeat this step to cancel this function.
- 3. Press `eingabe` to view the entry.**
- If there are multiple forms within an entry, press ▲ / ▼ to select the one you want and then press `eingabe`.
 - See 1.7 *Browsing in the Device*.
 - Press `FN` + ◀ / ▶ to go to the previous or next entry in a dictionary or in a list of multiple search results.
 - Press `🔊` to hear the headword pronounced (if pronunciation is available). If there is more than one pronunciation available, press ▲ / ▼ to select the one you want and then press `eingabe`.
- 4. Press `esc` and then `clear` to start a new search.**

3.2 Using the Dictionaries

Using Soft Keys

Soft key functions are represented by the labels displayed along the bottom of the screen. These labels change to reflect the various functions available in different features of the device. Press **FN** + **F1** to **F6** that corresponds to the label.

Soft Keys	Features
CLOSE	Closes the current screen.
CONF	Views the confusables. See 3.7 <i>Confusable Words</i> .
CONJ	Shows inflections/conjugations. See 3.6 <i>Inflections/Conjugations</i> .
DICT	Goes to the Oxford Advanced Learner's Dictionary or a dictionary containing the current entry.
EX	Views usage examples. See 3.8 <i>Usage Examples</i> .
K-RULES	Views K-rules in the DUDEN - Die deutsche Rechtschreibung Dictionary. See 3.11 <i>K-Rules in DUDEN - Die deutsche Rechtschreibung Dictionary</i> .
LIST	Goes to My Word List or adds the current entry to My Word List. See 3.10 <i>Adding Words to My Word List</i> .
NEXT	Goes to the next entry.
PREVIEW	Activates or cancels the preview feature.
PREVIOUS	Goes to the previous entry.


3.2 Using the Dictionaries

RANGE	Refines searches by multiple words. Press ▲ / ▼ to select an option from the menu and then press eingabe . All = Look for entries with the search words, whenever they appear. Items following specified order = Look for entries with the search words, in the order as you typed. Input words are in successions = Look for entries with the search words, in the word successions as you typed.
THES	Goes to the Oxford Learner's Thesaurus.
TOGGLE	Switches between the source and target languages.

3.3 Searching Idioms, Usage Examples and Collocations


You may refine your searches to show only entries containing idioms, usage examples or collocations in Global Search and dictionaries.

 1. In **Global Search** or dictionaries, press **FN** + ◀/▶ to select 'Idiom', 'Example' or 'Collocation' (if available).



Press **FN** + ◀/▶ to refine search

 - Some dictionaries contain less options.
2. **Type a word.**
 - See 3.12 *Hints on Inputting Words*.
 - With each letter you type, the resulting list of potential matching entries is refreshed. If the letters you typed match an entry in the word list, it is automatically highlighted. Or, press ▲/▼ to select another word entry you see in the word list.
 3. Press **eingabe**.
 - A preview of the highlighted entry shows immediately in the lower pane of the screen.

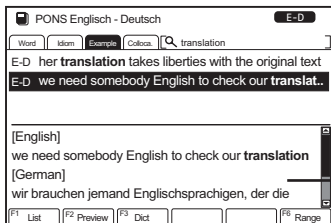

Preview of current entry

- If there are multiple entries, press ▲/▼ to select the one you want.
4. Press **eingabe** to view the selected entry in full screen.
 5. Press **FN** + DICT to go to the dictionary containing the current entry.
 6. Press **esc** to return to the full screen view. Press **esc** again to go to the screen for selecting another entry.
 7. Press **esc** and then **clear** to start a new search.

3.4 Misspelling Words

If the letters you type do not find a match in the list, your word is misspelled or not in the dictionaries. A list of possible spelling corrections is displayed. Press ▲ / ▼ to select the entry you want and then press **eingabe**.

3.5 Uncertain Spellings

If you are uncertain about how to spell a word, type the portion of the word you do know, and type a question mark (?) in place of each unknown letter. Type an asterisk (*) to stand for any missing portion of a word, including prefixes, suffixes, spaces, symbols, or any number of letters. **Note:** If you type an asterisk at the beginning of a word, it may take a little while to find the matching words.

- 1. At any word entry screen, type known letters, a ? in place of each unknown letter, and a * in place of any string of unknown characters.**
 - To type an asterisk, press **↑** + **?***.
- 2. Press **eingabe**.**
- 3. Press ▲ / ▼ to select a word you want from the list and then press **eingabe**.**

3.6 Inflections/Conjugations

 
Inflected Form Searching

The device is equipped with a smart system to retrieve results from an inflected word. For example, when you type “ate”, the device will retrieve results from the word “eat”. For a word with multiple parts of speech (e.g. the word “record” is both a noun and a verb), both definitions will show.

Looking Up Inflections

To look up inflections in the dictionaries, press **FN** + **CONJ** (when inflections are available to a word).

- Some words may have multiple parts of speech or translations, press ▲ / ▼ to select the one you want and then press **eingabe** to view the inflections.
- For verbs, press **FN** + **CONJ** or **FN** + ◀ / ▶ to view more conjugations.

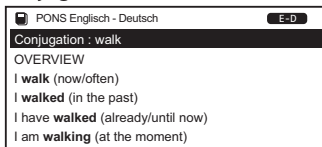

3.7 Confusable Words

 
Confusables are homonyms, homophones and spelling variants that are easy to confuse. When the word you looked up has confusables, the function label **CONF** appears. Press **FN** + **CONF** to view the confusables.

3.8 Usage Examples

Many entries in the dictionaries contain also usage examples. When usage examples are available, **EX** appears.

1. Press **FN** + **EX** to highlight **EX**.

- The usage examples show immediately in the lower pane of the screen as a preview.

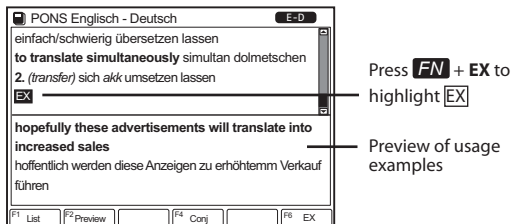

2. If there are multiple usage examples in an entry, press **▲** / **▼** to highlight the previous or next **EX**.
3. Press **eingabe** to view the selected usage examples in full screen.
4. Press **esc** to return to the previous screen. Press **esc** again to return to the dictionary entry.

 
3.9 Highlighting Words

Another way to look up words in the dictionaries is by highlighting them in an entry. **Note:** this feature may not be available on all screens.

1. **At a text screen supporting word selection, press `eingabe`.**

- If the first word on the screen is highlighted, this feature is supported.

2. **Use the direction keys to select an available word you want to learn and press `eingabe`.**



- If the selected word has entries in multiple dictionaries, a pop-up window will show. Press ▲ / ▼ to select the dictionary you want and press `eingabe`.
3. **When done, press `esc` to return to the original dictionary.**
4. **Press `esc` to turn off the highlight.**

3.10 Adding Words to My Word List

As you explore new words, save them in My Word List for further study or review.

1. In a dictionary, type a word you want to look up and add to the word list.
2. Press **FN** + **LIST**.
 - A pop-up menu appears.

Add "xxx" to word list?

Go to My Word List

Cancel

3. Press **▲** / **▼** to select an option, and then press **eingabe**.
 - **Add xxx to word list?** : Adds the current word to My Word List. 'xxx' stands for the current word.
Go to My Word List : Goes directly to My Word List.
Cancel : Cancels the current action.
 - See 4.4 *My Word List* for viewing and editing My Word List.

3.11 K-Rules in DUDEN - Die deutsche Rechtschreibung Dictionary


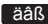





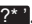




The DUDEN dictionary in the device contains further explanations on the spelling rules (K-rules). When a K-rule is available in an entry, you will see something like **↑ K 72** (72 stands for the rule number). To view the rule:

1. Press **eingabe**.
 - The first word on the screen is highlighted.
2. Use the direction keys to highlight the K-rule symbol.
 - In the above example, highlight **↑ K 72**.
3. Press **eingabe** to view the content.
 - See 1.7 *Browsing in the Device*.
4. Press **FN** + **CLOSE** to return to the dictionary.
5. Press **esc** to turn off the highlight.

Alternatively, press **FN** + **K-RULES** in the DUDEN dictionary to view all rules in a list.

3.12 Hints on Inputting Words

The following instructions apply to all entry screens where word input is allowed. **Note:** Some entry screens may allow only certain types of character inputs.

Inputs	Methods
Capital letters (e.g. A, E)	Hold  and press a letter key.
Accents (e.g. é, î)	Type a letter (e.g., e) and then press  until the accent you want appears (e.g., é).
Numbers (e.g. 1, 2)	Press  + a number key (the numbers are printed at the top right corner of the keys Q-P). Note: In Calculator, Metric Convertor, Currency Converter and Countdown Timer, press the number keys directly. 
Symbols (e.g. @, \$)	Press  . Use the direction keys to select the symbol you want from the pop-up menu and then press  .
Apostrophe (')	Press  +  .
Delete a letter	Press  to delete the letter to the left of the cursor.
Amend a word	Press  /  to move the cursor to the desired position, press  to delete or a letter key to add a letter to the left of the cursor in a word.

3.13 Viewing Downloaded Dictionaries

Your device is not limited to the dictionaries it comes with. Additional dictionaries can be downloaded from Franklin's website and installed in the device. Select this option in the Books menu to access the downloaded dictionaries. If multiple dictionaries are available, press ▲ / ▼ to select the one you want and then press **eingabe** to use it.

Use the supplied WordBytes 2.0 software to install or remove downloaded dictionaries. For details, please refer to the help section of the software.

Note: a microSD card must be inserted in your device to store the downloaded dictionaries.

 
4. LEARN Menu

4.1 PONS Business English

The guide contains a large collection of essential English guides for business. It is divided into three sections: Businesssprachführer Englisch, Überlebenswortschatz und Business Knigge and Business English Wörterbuch.

Accessing the Guide

1. In the Learn menu, press ▲ / ▼ to select **PONS Business English** and then press **eingabe**.
 - Or press **PONS Business** on the top row of the keyboard for direct access.
2. Press ▲ / ▼ to select a section and then press **eingabe**.

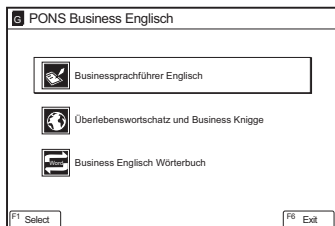


- Or press **FN** + **SELECT** to make a selection.

4.1 PONS Business Englisch

Using Businesssprachführer Englisch

 1. In Businesssprachführer Englisch, press ▲ / ▼ to select a main topic and then press **eingabe**.

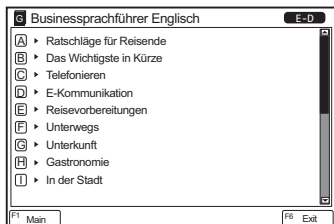

2. Press ▲ / ▼ to select a sub-topic.

- To return to the list of main topics, press **FN** + **CATEGORY**.
- Press **FN** + **PREV** or **NEXT** to view the list of sub-topics in the previous or next main topic.
- Some topics may contain additional tips or introductions. When available, press **FN** + **HINT** to read them.

 
3. Press **eingabe** to read the content of the selected topic.

- See 1.7 *Browsing in the Device*.
- Press **FN** + **SEARCH** to search for content. Press **FN** + **TOGGLE** to change the input language (English or German).
- Press **FN** + **PIC** to show picture/diagram in the content (when a picture/diagram is available, **G** appears).
- Press **FN** + **MAIN** to return to the main menu of PONS Business Englisch.

4.1 PONS Business Englisch

Using Überlebenswortschatz und Business Knigge

1. In **Überlebenswortschatz und Business Knigge**, press ▲ / ▼ to select a country and then press **eingabe**.

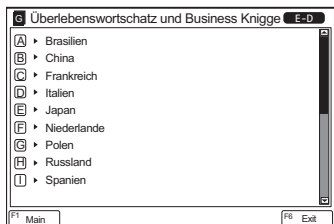

2. Press ▲ / ▼ to select a topic.

- Press **FN** + **COUNTRY** to return to the list of countries.
- Press **FN** + **PREV** or **NEXT** to view the list of topics in the previous or next country.
- Some topics may contain additional tips or introductions. When available, press **FN** + **HINT** to read them.

3. Press **eingabe** to read the content of the selected topic.

- See 1.7 *Browsing in the Device*.
- Press **FN** + **SEARCH** to search for content. Press **FN** + **TOGGLE** to change the input language (English or German).
- Press **FN** + **PIC** to show picture/diagram in the content (when a picture/diagram is available, **G** appears).
- Press **FN** + **MAIN** to return to the main menu of PONS Business Englisch.

4.1 PONS Business Englisch

Using Business Englisch Wörterbuch

 
1. In the Wörterbuch, press ▲ / ▼ to select a word.
 - Alternatively, type in the search box to look for a word.
2. Press **FN** + **DICT** to view definition of the selected word.
 - To change the language of the headwords, press **FN** + **TOGGLE**.

Playing Games in Wörterbuch

1. In Wörterbuch, press **FN** + **GAME**.
2. Press ▲ / ▼ to choose an option from the pop-up menu.
 - **D > E**: Selects German as the source language of the game.
 - **E > D**: Selects English as the source language of the game.
 - **Continue**: Continues from where you have last played.
3. Press **eingabe**.
4. In the game, press ▲ / ▼ to choose an answer from the right that matches with the word on the left.
 - Press **🔊** to hear the game word pronounced (if pronunciation is available).
5. Press **eingabe** (or **FN** + **SELECT**) to submit your choice.
 - Each game contains 20 rounds.
 - When the game is done, a summary of game results and progress is shown. You may end the game anytime by pressing **FN** + **CLOSE** (showing your current progress and result) or **FN** + **EXIT** (without saving).
6. At the end of the game, press **FN** + **NEXT** to start a new game or press **FN** + **RETRY** to play the current game again.

4.2 Phrasebook

1. In the Learn menu, press ▲ / ▼ to select **Phrasebook** and then press **eingabe**.
 - The phrases are grouped into several categories in your selected message language.
2. Press ▲ / ▼ to select a category.
 - The phrases in your selected category show on the right of the screen.
 - If you want to show the phrases in another language, press **FN** + **SOURCE** to select the language you want.
3. Press ► once and then press ▲ / ▼ to select the phrase you want to translate.
 - Press **FN** + **TARGET** to change the language for the translated phrases.
 - A preview of the translated phrase shows at lower right of the screen.

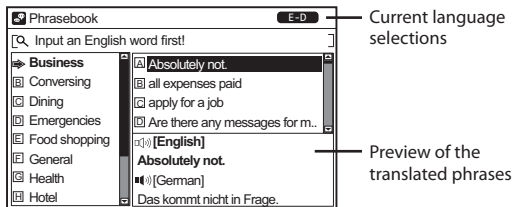

4. Press **eingabe** to view the selected phrase.
5. Press **🔊** to hear the first phrase (source language). Press **🔊** to hear the second (translated) phrase.
 - Press **FN** + ◀ / ▶ to view the previous or next phrase in the current category.
 - To save the current phrase in My Word List for further study or review, press **FN** + **LIST**. See 4.4 My Word List.
 - Press **FN** + **MAIN** to return to the main menu of the Phrasebook.

4.2 Phrasebook

Searching for a Phrase

Instead of browsing through the phrases, you can directly type a keyword to start searching and to yield phrase(s) with the keyword. If your search returns no matches, try other forms of the word, including the root word, if you have typed the inflected form. Accents must be typed to deliver matches. To view the words you have used for searching, press **FN** + **LOG**.

4.3 Grammar Guides

Your device includes essential grammar lessons with quizzes.

1. In the Learn menu, press ▲ / ▼ to select **Grammar Guide** and then press **eingabe**.
2. Press ▲ / ▼ to select a version and then press **eingabe**.
3. Press ▲ / ▼ to select the topic you want to study and then press **eingabe**.
 - Repeat this step if there are sub-topics until you read the content.
4. Press **FN** + **PREVIOUS** / **NEXT** to view the previous or next topic.
 - Press **FN** + **MAIN** to return to the main menu of the grammar guide.

Quizzes

Many sections in the grammar guide include a quiz. Press **FN** + **QUIZ** to go to the quiz. If a topic contains multiple quizzes, you will see more than one **QUIZ** soft key. After the quiz, press **FN** + **EXIT** to return to the topic you were reading.

4.4 My Word List

As you explore new words, save them in My Word List for further study or review.

Adding Words to My Word List

1. In the Learn menu, press ▲ / ▼ to select **My Word List** and then press **eingabe**.
2. Press **FN** + **ADD**.
 - You are promoted to Global Search of the device.
3. In **Global Search**, type a word to search for the word you want to add in **My Word List**.
 - See 3.1 *Using Global Search*.
4. Press **FN** + **LIST**.
5. Press ▲ / ▼ to select “Add xxx to word list?” and then press **eingabe** to add the word to **My Word List**.
 - ‘xxx’ stands for the current word.

You may also directly add a word in the dictionary or a phrase in the phrasebook to My Word List by pressing **FN** + **LIST**. See 3.10 *Adding Words to My Word List* and 4.2 *Phrasebook*.

Viewing Word Lists

1. In the Learn menu, press ▲ / ▼ to select **My Word List** and then press **eingabe**.
2. Press ▲ / ▼ to select an entry.
 - You can also type directly to look for a word or phrase.
 - To show only words or phrases in a selected language, press **FN** + **LANG**.
 - To preview the words or phrases, press **FN** + **PREVIEW**.
3. Press **eingabe** to view.

4.4 My Word List

Grouping Entries

In My Word List, you can add words to selected groups for efficient look-up or study.

1. In My Word List, press ▲ / ▼ to select an entry.
2. Press **FN** + GROUP.
3. Press ▲ / ▼ to select 'Add xxx to Group' and then press **eingabe**. 'xxx' stands for the current word.
4. A list of groups shows on the screen. Press ▲ / ▼ to select a group.
5. Press **eingabe**. The word is added to the selected group.

Viewing Entries in Groups

1. In My Word List, press **FN** + GROUP.
2. Press ▲ / ▼ to select 'Jump to Group' and then press **eingabe**.
3. Press ▲ / ▼ to select a group and then press **eingabe**.
4. Press ▲ / ▼ to select an entry in the selected group.
5. Press **eingabe** to view.

Editing Word List

To add a new group:

1. In My Word List, press **FN** + GROUP.
2. Press ▲ / ▼ to select 'Jump to Group' and then press **eingabe**.
3. Press **FN** + ADD.
4. Create a name for the new group.
 - To change the input language, press **FN** + LANG.
5. Press **eingabe** when done.
 - Maximum 10 groups are allowed.
6. You are then prompted to selected words to add into the new group. Press ▲ / ▼ to select a word and then press **FN** + PICK to select the word into the group.

4.4 My Word List

- To cancel the selection, repeat the step and press **FN** + **UNPICK**.
 - To select all words, press **FN** + **PICK ALL**. To deselect all words, press **FN** + **UNPICK ALL**.
7. Press **FN** + **CONFIRM** when done.
 - Or press **FN** + **CANCEL** to cancel adding words to the group.

To add entries in a group:

1. In My Word List, press **FN** + **GROUP**.
 2. Press **▲** / **▼** to select 'Jump to Group' and then press **eingabe**.
 3. Press **▲** / **▼** to select a group and then press **eingabe**.
 4. Press **FN** + **ADD**.
 5. Press **▲** / **▼** to select 'Add from My Word List' or 'Add from Dictionary' and then press **eingabe**.
- If 'Add from My Word List' is selected, repeat steps 6-7 in the previous section.
 - If 'Add from Dictionary' is selected, you are prompted to Global Search to look for a word to be added.

To rename a group:

1. In My Word List, press **FN** + **GROUP**.
2. Press **▲** / **▼** to select 'Jump to Group' and then press **eingabe**.
3. Press **▲** / **▼** to select a group to be renamed.
 - Default groups cannot be renamed.
4. Press **FN** + **RENAME**.
5. Create a new name for the group.
 - To change the input language, press **FN** + **LANG**.
6. Press **eingabe** when done.

To remove a group:

1. In My Word List, press **FN** + **GROUP**.
2. Press **▲** / **▼** to select 'Jump to Group' and then press **eingabe**.
3. Press **▲** / **▼** to select a group to be removed.
 - Default groups cannot be removed.

4.4 My Word List

4. Press **FN** + DELETE.

- You are asked to confirm the deletion, press ◀/▶ to select 'Yes' to do so or 'No' to cancel.

To remove all groups:

1. In My Word List, press **FN** + GROUP.

2. Press **FN** + CLEAR.

- You are asked to confirm the deletion, press ◀/▶ to select 'Yes' to do so or 'No' to cancel.

To remove entries in a group:

1. In My Word List, press **FN** + GROUP.

2. Press ▲ / ▼ to select 'Jump to Group' and then press **eingabe**.

3. Press ▲ / ▼ to select a group and then press **eingabe**.

4. In the selected group, press ▲ / ▼ to select an entry and then press **FN** + REMOVE.

- To move all entries in a group, press **FN** + CLEAR.
- You are asked to confirm the deletion, press ◀/▶ to select 'Yes' to do so or 'No' to cancel.

To remove entries in My Word List:

1. In My Word List, press ▲ / ▼ to select an entry and then press **FN** + DELETE.

- To remove all entries, press **FN** + CLEAR.
- 2. You are asked to confirm the deletion, press ◀/▶ to select 'Yes' to do so or 'No' to cancel.

4.5 Personal Dictionary

Use the Personal Dictionary to create your own dictionaries on the device. You can copy them to your PC for further editing.

Creating Dictionaries on the Device

1. In the Learn menu, press ▲ / ▼ to select Personal Dictionary and then press **eingabe**.
2. Press **FN** + **NEW** to create a new personal dictionary.
3. Create a name for the dictionary and then press **eingabe**.
4. Press ▲ / ▼ to select the dictionary you have just created and then press **eingabe**.
5. Press **FN** + **ADD**.
6. Input a word and its definition in the appropriate field and then press **FN** + **SAVE**.
 - Press ▲ / ▼ to shift between fields.
 - Press **FN** + **LANG** to change the input language.
 - To quit without saving, press **esc**.
7. Press **FN** + **ADD** to add more words to the dictionary.

Editing Personal Dictionaries on PC

1. **Connect the device to your PC.**
 - See 9.1 *Connecting to a PC*.
2. **Double-click "PersonalDict" to open that folder.**
3. **In the folder, double-click to open a personal dictionary file (.txt) with a text editor.**
4. **Edit or add new words.**
 - Each new word must start on a new line. Separate the headword and its definition with a tab. Press "Enter" after entering the definition, including the last line.
5. **Save the file and disconnect the device from your PC.**

4.5 Personal Dictionary

Viewing Personal Dictionaries

1. In the Learn menu, press ▲ / ▼ to select Personal Dictionary and then press **eingabe**.
 2. Press ▲ / ▼ in the dictionary selection screen to select the one you want and then press **eingabe**.
 3. Press ▲ / ▼ to select the entry you want to view and press **eingabe**.
- You can also type to look for a word.

Editing Personal Dictionaries

Use the following soft keys. To execute the soft keys, hold **FN** and press the corresponding **F1** to **F6** keys on the top row of the keyboard.

- **DELETE**: Deletes the currently selected dictionary or word entry.
- **DEL ALL**: Erases all personal dictionaries.
In either case, you are asked to confirm your selection, press ◀ / ▶ to select 'Yes' to do so or 'No' to cancel.
- **EDIT**: Edits the current entry. Make necessary changes and then press **FN** + **SAVE**. To quit without saving, press **esc**.
- **RENAME**: Renames a dictionary.

4.6 Search History

The device stores the most recently browsed entries in the dictionaries.

Viewing History

1. In the Learn menu, press ▲ / ▼ to select **History** and then press **eingabe**.
 - Or, press **FN** + **[]** for direct access.
2. Press ▲ / ▼ to select an entry and then press **eingabe**.

Editing History

Use the following soft keys. To execute the soft keys, hold **FN** and press the corresponding **F1** to **F6** keys on the top row of the keyboard.

- **DELETE**: Deletes the selected entry.
- **CLEAR**: Clears the entire history.

In either case, you are asked to confirm your selection, press ◀ / ▶ to select 'Yes' to do so or 'No' to cancel.

5. EXERCISES Menu

5.1 Creating User Names

A user name must be created before starting the exercises. Maximum 10 user names can be created. The user names are common for use in all exercises.

1. In the Exercises menu, press ▲ / ▼ to select an exercise (e.g. Audio Dictation) and then press **eingabe**.

ABC Audio Dictation/Exercise		
User Name	Score	Skills
A	08	Beginner
B	12	Beginner

 
F1 Add F2 Delete F3 Rename F5 Test F6 Setting

- If there are existing users, their current scores and skill levels are shown. There are two sets of score and skill level (test and exercise), press **FN** + **TEST** or **EXERCISE** to show them.
2. Press **FN** + **ADD**.
 3. Create a user name and then press **eingabe**.
 - Press **FN** + **LANG** to change the input language.
 - To delete a user name, press ▲ / ▼ to select the user name and then press **FN** + **DELETE**.
 - To rename a user name, press ▲ / ▼ to select the user name and then press **FN** + **RENAME**.

5.2 Audio Dictation

In Audio Dictation, a word is read out in the language you have selected. You have to spell the word.

- In Audio Dictation, press ▲ / ▼ to select a user name and then press **eingabe**.**
 - See 5.1 *Creating User Names*.
 - For a new user to the exercise, see *Changing the Settings* at the end of this section.
- A word is read out. Type the word in the space provided.**

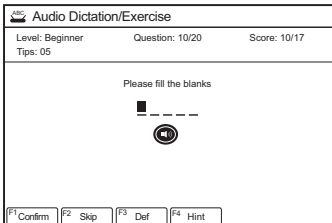

- Press **🔊** to hear the word again.
 - To skip the current question, press **FN** + **SKIP**.
 - To show a letter as hint, press **FN** + **HINT**. In test mode, showing hints will affect the score.
 - To show the definition of the word, press **FN** + **DEF**. Press **esc** to return to the exercise.
- Press **FN** + **CONFIRM** to submit the answer.**
 - In test mode, answer must be submitted within the time limit.
 - When all the questions in an exercise are done, the score sheet will show. Select one of the following options:**
 - Press **FN** + **CONT** to start a new exercise.
 - Press **FN** + **RETRY** to try again the questions with wrong answers.
 - Press **FN** + **REVIEW** to show all words in the exercise. In the review, press **FN** + **DEF** to show the definition of the word. Press **FN** + **SCORE** to return to the score sheet.
 - Press **FN** + **EXIT** to quit the exercise.

5.2 Audio Dictation

Changing the Settings

To change the settings of the exercise, press **FN** + **SETTING**. For a new user to the exercise, the settings menu will show automatically before the exercise starts.

- 1. In the setting menu, press ▲ / ▼ to select an option and then press ►. Press ▲ / ▼ to change the settings in the pop-up menu and then press *eingabe* to confirm.**
 - **Mode:** Selects exercise or test mode. In test mode, there is a time limit for each question. Scores are recorded for level advancement and progress check.
 - **Language:** Selects a language as the exercise language.
 - **Skills:** Selects a skill level.
 - **Content:** Selects a dictionary as the source of words.
- 2. Press **FN** + **CONFIRM**.**

5.3 Phrase Builder

In Phrase Builder, you have to arrange the words of a sentence in the correct order.

1. In Phrase Builder, press ▲ / ▼ to select a user name and then press **eingabe**.
 - See 5.1 *Creating User Names*.
 - For a new user to the exercise, see *Changing the Settings* at the end of this section.
2. Press ◀ / ▶ to select a word in the word field and then press **eingabe** to build a sentence in the phrase field.

Phrase Builder/Exercise

Level: Beginner Question: 10/20 Score: 10/17

Tips: 05

sind **Belgien** aus

Wir

F1 Confirm F2 Skip F3 Clear F4 Phrase F5 Trans F6 Hint

- To correct a mistake, press **FN** + **PHRASE** to shift the highlight to the phrase field. Press ◀ / ▶ to select a word and then press **eingabe** to erase the mistake. Press **FN** + **WORD** to shift the highlight back to the word field.
 - To clear all the submitted words in the phrase field, press **FN** + **CLEAR**.
 - To skip the current question, press **FN** + **SKIP**.
 - To translate the sentence into the target language (see *Changing the Settings*), press **FN** + **TRANS**.
 - To show a hint, press **FN** + **HINT**. In test mode, showing hints will affect the score.
3. Press **FN** + **CONFIRM** to submit the answer.
 - In test mode, answer must be submitted within the time limit.
 4. When all the questions in an exercise are done, the score sheet will show. Select one of the following options:
 - Press **FN** + **CONT** to start a new exercise.
 - Press **FN** + **RETRY** to try again the questions with wrong answers.

5.3 Phrase Builder

- Press **FN** + **REVIEW** to show all words in the exercise. In the review, press **FN** + **DETAILS** to show the sentences. Press **FN** + **SCORE** to return to the score sheet.
- Press **FN** + **EXIT** to quit the exercise.

Changing the Settings

 
To change the setting of the exercise, press **FN** + **SETTING**. For a new user to the exercise, the settings menu will show automatically before the exercise starts.

- 1. In the setting menu, press ▲ / ▼ to select an option and then press ►. Press ▲ / ▼ to change the settings in the pop-up menu and then press *eingabe* to confirm.**
 - **Mode:** Selects exercise or test mode. In test mode, there is a time limit for each question. Scores are recorded for level advancement and progress check.
 - **Source:** Selects a language as the exercise language.
 - **Target:** Selects a language as the hint/translation language.
 - **Skills:** Selects a skill level.
- 2. Press **FN** + **CONFIRM**.**

5.4 Picture Card Game

In Picture Card Game, you match words with pictures.

- In Picture Card Game, press ▲ / ▼ to select a user name and then press `eingabe`.**
 - See 5.1 *Creating User Names*.
 - For a new user to the exercise, see *Changing the Settings* at the end of this section.
- Press ◀ / ▶ or ▲ / ▼ (when applicable) to select a word or a picture that matches with the question.**

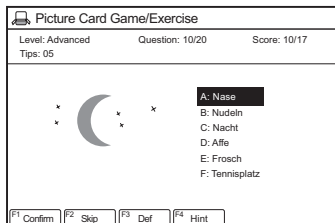

- To show the definition of the question or a highlighted word, press `FN` + `DEF`. Press `esc` to return to the exercise.
 - To show hint (by eliminating a selection), press `FN` + `HINT`.
 - To skip the current question, press `FN` + `SKIP`.
- Press `eingabe` or `FN` + `CONFIRM` to submit the answer.**
 - In test mode, answer must be submitted within the time limit.
 - When all the questions in an exercise are done, the score sheet will show. Select one of the following options:**
 - Press `FN` + `CONT` to start a new exercise.
 - Press `FN` + `RETRY` to play again the questions with wrong answers.
 - Press `FN` + `REVIEW` to show all words in the exercise. In the review, press ▲ / ▼ to select a question. Press `FN` + `DEF` to show the definition of the word. Press `FN` + `SCORE` to return to the score sheet.
 - Press `FN` + `EXIT` to quit the exercise.

5.4 Picture Card Game

Changing the Settings

To change the setting of the exercise, press **FN** + **SETTING**. For a new user to the exercise, the settings menu will show automatically before the exercise starts.


- 1. In the setting menu, press ▲ / ▼ to select an option and then press ►. Press ▲ / ▼ to change the settings in the pop-up menu and then press *eingabe* to confirm.**
 - **Mode:** Selects exercise or test mode. In test mode, there is time a limit for each question. Scores are recorded for level advancement and progress check.
 - **Source:** Selects a language as the exercise language.
 - **Target:** Selects a language as the hint/translation language.
 - **Skills:** Selects a skill level.
 - **Content:** Selects using words or pictures for answering the questions.
- 2. Press **FN** + **CONFIRM**.**

5.5 Pronunciation Trainer

In Pronunciation Trainer, you learn rules in English pronunciations and practise your own skills by comparing with native voices. There are five modules:

- **Sounds of English:** Learn basic pronunciation rules.
- **Stress and Rhythm:** Learn rules in stress and rhythm.
- **Mischief Makers:** Learn more hints and exceptions in pronunciations.
- **Let's Talk!:** Speak words and compare with native voices.
- **Pronunciation Practice:** Select a word for pronunciation practice.

Using Sounds of English, Stress and Rhythm and Mischief Makers

1. In Pronunciation Trainer, press ▲ / ▼ to select **Sounds of English, Stress and Rhythm or Mischief Makers** and then press **eingabe**.
2. In the selected module, press ▲ / ▼ to select a topic and then press **eingabe**.
 - Repeat this step if there are sub-topics until you read the content.
3. Press ▲ / ▼ or ⬆ / ⬇ to read the content.
 - If a word or phrase is highlighted, it means pronunciation is available, press **FN** + **LISTEN** or  to listen. To stop listening, press **FN** + **STOP**.
 - Press **FN** + **PREV / NEXT** to skip to the previous or next word or phrase with pronunciation in the current screen.
 - You can record your own pronunciations to compare with the native voices. Press **FN** + **REC ON** to record your own pronunciations. Press **FN** + **REC OFF** to finish recording. The recording plays back repeatedly until you press **FN** + **STOP**.
 - In Odd One Out under Mischief Makers, press **FN** + **START** to start the exercise. Use the direction keys to select the answers and then press **eingabe** or **FN** + **CONFIRM** to submit the answers. To quit the exercise, press **FN** + **CLOSE**.

5.5 Pronunciation Trainer

Using Let's Talk!


1. In Pronunciation Trainer, press ▲ / ▼ to select Let's Talk! and then press **eingabe**.
2. In Let's Talk!, press ▲ / ▼ to select a user name and then press **eingabe**.
 - See 5.1 Creating User Names.
 - For a new user to the exercise, see *Changing the Settings* at the end of this section.
3. A word is shown and pronounced. You have to repeat the word and record your own pronunciation.

ABC Pronunciation Trainer/Exercise		
Level: Beginner	Question: 5/10	Score: 10/17
pure		

- In exercise mode, you can press **FN** + **REPLAY** to listen the word again and then press **FN** + **RECORD** to start recording. You start to speak after you hear a beep sound.
 - In test mode, you must say the word immediately after hearing the pronunciation. You start to speak after you hear a beep sound.
4. A score chart of the current round shows. Press **FN** + **NEXT** to continue to the next round.
 - Press **FN** + **COMPARE** to hear the recordings again.
 5. When all the questions in an exercise are done, press **FN** + **SCORE** to show the score sheet and then select one of the following options:
 - Press **FN** + **CONT** to start a new exercise.
 - Press **FN** + **RETRY** to play again.
 - Press **FN** + **EXIT** to quit the exercise.

5.5 Pronunciation Trainer

Using Pronunciation Practice

1. In Pronunciation Trainer, press ▲ / ▼ to select Pronunciation Practice and then press **eingabe**.
2. Press ▲ / ▼ to select a word for practice.
 - Alternatively, type to look for a word in the word list.
3. Press **FN** + LISTEN or  to hear the word pronounced.
4. You can record your own pronunciation to compare with the native voice. Press **FN** + REC ON to record your own pronunciation.
5. Press **FN** + REC OFF to finish recording.
6. The recording plays back repeatedly. Press **FN** + STOP to stop the playback.
7. Press **esc** to quit the exercise.

Changing the Settings

 
To change the settings in Let's Talk!, press **FN** + **SETTING**. For a new user to the exercise, the settings menu will show automatically before the exercise starts.

1. In the setting menu, press ▲ / ▼ to select an option and then press ►. Press ▲ / ▼ to change the settings in the pop-up menu and then press **eingabe** to confirm.
 - **Mode**: Selects exercise or test mode. In test mode, you must say the word immediately after hearing the pronunciation.
 - **Skills**: Selects a skill level.
2. Press **FN** + **CONFIRM**.

5.6 Reading Comprehension

In Reading Comprehension, you fill in the missing words while reading an English passage.

- In Reading Comprehension, press ▲ / ▼ to select a user name and then press **eingabe**.**
 - See 5.1 *Creating User Names*.
 - For a new user to the exercise, see *Changing the Settings* at the end of this section.
- Press ▲ / ▼ to scroll while reading the passage. The missing words are replaced with numbers corresponding to the questions (word choices) in the lower pane of the screen.**

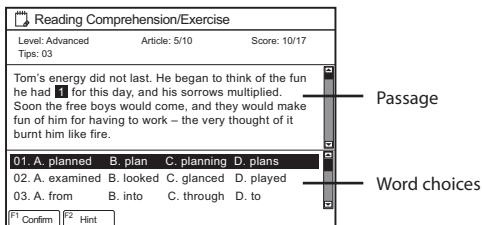

- Press ◀ / ▶ to select the questions directly.
- Press the letter keys (A, B, C or D) to select the best answers for the missing words.**
 - The selected answers are in italic typeface.
 - To show hints (by eliminating a selection), press **FN** + **HINT**.
 - In test mode, answers must be submitted within the time limit.
 - Press **FN** + CONFIRM when all questions are done.**
 - Press ▲ / ▼ to review the answers. A check mark indicates a correct answer while a cross mark for a wrong one.
 - Press **FN** + **RETRY** to try again the exercise.
 - Press **FN** + **NEXT** to start a new exercise.
 - Press **FN** + SCORE to show the score sheet.**
 - Press **FN** + **NEXT** to start a new exercise.
 - Press **FN** + **RETRY** to try again the same exercise.
 - Press **FN** + **EXIT** to quit the exercise.

5.6 Reading Comprehension

Changing the Settings

To change the setting of the exercise, press **FN** + **SETTING**. For a new user to the exercise, the settings menu will show automatically before the exercise starts.

- 1. In the setting menu, press ▲ / ▼ to select an option and then press ►. Press ▲ / ▼ to change the settings in the pop-up menu and then press *eingabe* to confirm.**
 - **Mode:** Selects exercise or test mode. In test mode, there is time limit for each question. Scores are recorded for level advancement and progress check.
 - **Skills:** Selects a skill level.
 - **Content:** Selects a dictionary as the source of words.
- 2. Press **FN** + **CONFIRM**.**

5.7 Exercise Review

 
In Exercise Review, you can check the latest scores and current skill levels in all exercises.

1. In the Exercises menu, press ▲ / ▼ to select Exercise Review and then press **eingabe**.
2. Press **FN** + **USER** to select a user and review his/her scores and skill levels.
 - Press ▲ / ▼ and then **eingabe** to select a user.
3. Press **FN** + **EXERCISE** or **TEST** to review scores and skill levels in exercise or test mode.

6. ORGANIZER Menu

6.1 Music Player

This device can play mp3 files stored in the device or on a microSD card (if inserted).

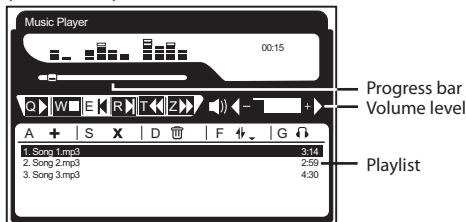

Adding Files to the Playlist

1. In the Organizer menu, press **▲ / ▼** to select Music Player and then press **eingabe**.
2. Press **A (+)**.
3. From the playlist screen, press **D (Search)** to perform a search of all mp3 files stored in the device or on a microSD card (if inserted).
4. To add a file to the playlist, press **S (Single)** when the file is highlighted. A check mark can be seen against the file name. Press **S** again for de-selection.
 - To add all files to the playlist, press **A (Select)**.
5. Press **eingabe** when done.

Playing Music

1. In the Organizer menu, press **▲ / ▼** to select Music Player and then press **eingabe**.
2. With mp3 files in the playlist (lower pane of the screen), press **Q (▶)** to start playback.
 - Press **Q (▶)** to pause the playback and press again to resume.
 - Press **◀ (-) / (+) ▶** to adjust the volume.

6.1 Music Player

- Press **E** (◀) / **R** (▶) to skip to the previous or next file.
 - Press **T** (◀◀) / **Z** (▶▶) to scan backward or forward within a file. Press **Q** (▶) to resume normal playback.
3. Press **W** (■) to stop the playback.

Editing Playlist

- Press **A** (+) to add new files to the playlist. See *Adding Files to the Playlist*.
- Press **S** (X) to remove the highlighted file from the playlist.
- Press **D** (■) to remove all files from the playlist.

Playback mode

1. In the Music Player, press **F** (⬆) to show a pop-up menu.
2. Press ▲ / ▼ to select one of the playback modes.
 - **Single Play**: Plays the current file once.
 - **Single loop**: Plays the current file repeatedly.
 - **Play in Order**: Plays all files once.
 - **Loop Play**: Plays all files repeatedly.
 - **Shuffle**: Plays in random order.
3. Press **eingabe**.

Listening mode

This mode lets you listen to music with the screen turned off to save battery power.

1. In the Music Player, press **G** (🎧) to show a pop-up menu.
2. In the pop-up message, press ◀ / ▶ to select 'OK' and then press **eingabe** to go to listening mode.
 - In the listening mode, press any key to turn on the screen.

6.2 Using the Calendar

The Calendar lets you check months and days and use as a scheduler.

Viewing the Calendar

1. In the Organizer menu, press ▲ / ▼ to select Calendar and then press **eingabe**.
2. To change day within a month, use the direction keys.
 - To change month, press **D** (SHIFT) until the current month is highlighted. Press ▲ / ▼ to select a month.
 - To change year, press **D** (SHIFT) until the current year is highlighted. Press ▲ / ▼ to select a year.

Adding Schedules from the Calendar

1. In the Calendar, select a day and then press **eingabe**.
 - See *Viewing the Calendar*.
2. If there are no schedules assigned to the selected day, you are asked if you want to add a new schedule. Press ◀ / ▶ to select 'Yes' to do so.
3. Press **A** (NEW) in the schedule list.
4. Input appropriate information in the available fields.
 - Press ▲ / ▼ to shift between fields.
 - Press ▶ when required to open a pop-up menu. This includes selecting the type of event and the time of the event. Use the direction keys to set the time or select your settings and then press **eingabe**.
 - To change the input language, press **FN** + LANG.
 - See 3.12 *Hints on Inputting Words*.
5. When done, press **FN** + SAVE.
 - To quit without saving, press **esc**.
6. The new schedule is saved in the schedule list. Press **esc** to return to the calendar.
 - Days with schedules assigned are boxed on the calendar.

6.2 Using the Calendar

Adding Schedules from the Schedule List

1. In the Calendar, press **S** (LIST).
2. Press **A** (NEW) in the schedule list.
3. Input appropriate information in the available fields.
 - Press **▲** / **▼** to shift between fields.
 - Press **▶** when required to open a pop-up menu. This includes selecting the type of event and the time of the event. Use the direction keys to set the time or select your settings and then press **eingabe**.
 - To change the input language, press **FN** + **LANG**.
 - See 3.12 Hints on Inputting Words.
4. When done, press **FN** + **SAVE**.
 - To quit without saving, press **esc**.
 - The new schedule is saved in the schedule list. Press **esc** to return to the calendar. Days with schedules assigned are boxed on the calendar.

Viewing Schedules

1. In the Calendar, use the direction keys to select a boxed day and then press **eingabe**.
2. Press **▲** / **▼** to select a schedule (if more than one) from the Schedule List and then press **eingabe**.
 - Alternatively, press **S** (LIST) in the Calendar to view a full list of schedules. Repeat step 2 above for viewing.

Editing Schedules

Use the following soft keys. To execute the soft keys, hold **FN** and press the corresponding **F1** to **F6** keys on the top row of the keyboard.

- **DELETE**: Deletes the selected schedule.
- **DEL ALL**: Erases all schedules.

In either case, you are asked to confirm your selection, press **◀** / **▶** to select 'Yes' to do so.

6.2 Using the Calendar

- **EDIT:** Edits the current schedule. Make necessary changes and then press **FN** + **SAVE**.

Using a Password

You can use a password to prevent unauthorized access. See 6.11 *Organizer Password* for details.

Time Setting

In the Calendar, press **A** (**SET TIME**).

Note: By time setting in the calendar, you are actually setting the Clock in the Organizer. See 6.4 *Using the Clock*. Not all settings (e.g. World City) will show in the Calendar.

6.3 Using the Calculator

1. In the Organizer menu, press **▲** / **▼** to select Calculator and then press **eingabe**.
2. Type a number.
 - You can type up to 14 digits. To type a decimal, press **G** (.). To change the sign of a number, press **Y** (+/-).
3. Press a math function key.
4. Type another number.
5. Press **eingabe** for the result.
6. Press **N** (AC) to start over again at 0.

Using the Calculator Memory

To demonstrate the calculator memory, try the following equation: $(32 \times 12) - (8 \times 8) = 320$.

1. Type 32, press **K** (x), type 12, and then press **eingabe**.
2. If necessary, press **B** (MC) to clear the calculator memory.
3. Press **X** (M+) to add the result to the memory.
 - M indicates a number is stored in memory.
4. Type 8, press **K** (x), type 8, and then press **eingabe**.
5. Press **C** (M-) to subtract the result from the number stored in the memory.
6. Press **V** (MR) to retrieve the new number from memory: 320.

6.4 Using the Clock

1. In the Organizer menu, press ▲ / ▼ to select **Clock** and then press **eingabe**.
 - The clock shows the times and dates of both local and world cities.

Setting the Clock

1. In the Clock, press **A** (SET TIME).
2. Press ▲ / ▼ to move between fields.
 - **Date / Time:** Press ► once and then press ▲ / ▼ to change values. Press ◀ / ▶ to move between fields.
 - **Home City / World City:** Press ► once. Press ▲ / ▼ to select a city and then press **eingabe**. You can also type a letter to jump to that part of the list.
 - **Home City DST / World City DST:** Press ► repeatedly to set daylight saving time on or off.
 - **Time Format:** Press ► repeatedly to set 12HR or 24HR clock display.
 - **Date Format:** Press ► once and then press ▲ / ▼ to select a time format. Press **eingabe** when done.
3. Press **A** (CONFIRM) when done.
 - To quit without saving, press **S** (CANCEL).

6.5 Using the Alarm

You can have five alarm settings.

Setting the alarm

- 1. In the Organizer menu, press ▲ / ▼ to select Alarm and then press **eingabe**.**
 - The current alarm settings (Alarm 1-5) show on the screen.
- 2. Press ▲ / ▼ to select one of the settings and then press **eingabe** (or press **A** (SET)).**
- 3. Press ▲ / ▼ to move between fields in order to set the alarm.**
 - **Status:** Press ► repeatedly to set alarm on or off.
 - **Time:** Press ► once and then press ▲ / ▼ to change values. Press ◀ / ► to move between fields.
 - **Snooze:** Press ► once and then press ▲ / ▼ to select a snooze option. Press **eingabe** when done.
 - **Tone:** Press ► once and then press ▲ / ▼ to select a tone option. Press **eingabe** when done. In each option, you will be prompted to select a sound file as the alarm tone. Use the direction and **eingabe** keys for selection.
 - **Day:** Press ◀ / ► to select the days that the alarm will activate. Press **eingabe** once to activate the day (with a check mark), press again to deactivate (without the check mark).
- 4. Press **A** (SAVE) when done.**

Deactivating the alarm

Press any key to deactivate the alarm when it sounds.

6.6 Using Memo

Adding Entries

1. In the Organizer menu, press ▲ / ▼ to select Memo and then press **eingabe**.
2. Press ▲ / ▼ to select a category and then press **eingabe**.
 - The memos are grouped under categories. Four default categories are available.
 - To add a new category, press **FN** + **ADD**. Create a name for the new category and then press **eingabe**.
3. In the selected category, press **FN** + **ADD**.
4. Input appropriate information in the available fields.
 - Press ▲ / ▼ to shift between fields.
 - To change the input language, press **FN** + **LANG**.
 - When Date is selected, press **eingabe** and then use the direction keys to change values and then press **eingabe**.
5. When done, press **FN** + **SAVE**.

Viewing Entries

1. In Memo, press ▲ / ▼ to select a category and then press **eingabe**.
2. Press ▲ / ▼ to select an entry and then press **eingabe** to view.
 - You can also press **FN** + **SEARCH** to look for entries with your search word.

Editing Entries

Use the following soft keys. To execute the soft keys, hold **FN** and press the corresponding **F1** to **F6** keys on the top row of the keyboard.

- **DELETE**: Deletes the selected entry.
- **DEL ALL**: Erases all entries.

In either case, you are asked to confirm your selection, press ◀ / ▶ to select 'Yes' to do so or 'No' to cancel.
- **EDIT**: Edits the current entry. Make necessary changes and then press **FN** + **SAVE**. To quit without saving, press **esc**.

6.7 Using Voice Memo

Making Recordings

1. In the Organizer menu, press ▲ / ▼ to select Voice Memo and then press **eingabe**.
2. Press **A** (RECORD) to start recording.
 - To pause recording, press **A** (PAUSE). Press **A** (GO ON) to resume.
3. Press **S** (STOP) when done.

Listening to Recordings

1. In Voice Memo, press ▲ / ▼ to select a recording and then press **eingabe**.
2. Press **D** (PLAY) to start the playback.
 - To pause playback, press **D** (PAUSE). Press **D** (GO ON) to resume.
 - To adjust the volume, press ◀ (-) / (+) ▶.
3. Press **S** (STOP) to stop the playback.

Editing Recordings

1. In Voice Memo, press ▲ / ▼ to select a recording to be edited.
 - To change the file name of the selected file, press **F** (EDIT). Create a new file name in the pop-up window and then press **FN** + **CONFIRM**. To quit without saving, press **FN** + **CANCEL**.
 - To delete the selected file, press **G** (DELETE). Press ◀ / ▶ to select 'Yes' to do so.

Using a Password

You can use a password to prevent unauthorized access. See 6.11 *Organizer Password* for details.

6.8 Metric Converter

1. In the Organizer menu, press ▲ / ▼ to select Conversions and then press **eingabe**.
2. Press ▲ / ▼ to select Metric Converter and then press **eingabe**.
3. Press ▲ / ▼ to select a conversion category and then press **eingabe**.
4. In the selected category, press ▲ / ▼ to select a measurement unit.
5. **Input numbers for conversion.**
 - Press **G** (.) for a decimal. As you type the numbers, the equivalent value in other units shows automatically.
6. Press **clear** to start a new conversion.

6.9 Currency Converter

1. In the Organizer menu, press ▲ / ▼ to select Conversions and then press **eingabe**.
2. Press ▲ / ▼ to select Currency Converter and then press **eingabe**.
3. Press ▲ / ▼ to select a currency.
4. Input numbers for conversion.
 - Press **G** (.) for a decimal. As you type the numbers, the equivalent value in other currencies shows automatically.
5. Press **clear** to start a new conversion.

Adjusting Exchange Rates

1. In the currency converter, press **A** (SETUP).
2. Press ▲ / ▼ to select an exchange rate you want to change.
3. Press **clear** to clear the selected rate.
4. Enter a new exchange rate.
 - Each exchange rate is base upon the equivalent to 1 Euro.
5. Press **A** (SAVE) when done.
 - Press **S** (DEFAULT) to reset all rates to default values.

6.10 Using Countdown Timer

1. In the Organizer menu, press ▲ / ▼ to select Countdown Timer and then press **eingabe**.
2. Input values with the number keys.
 - Press ◀ / ▶ to shift between fields.
3. Press **D** (MUSIC).
 - You are prompted to select a sound file as the alarm tone. Use the direction and **A** (SAVE) keys for selection.
4. Press **A** (START).
 - To pause the timer, press **S** (PAUSE). Press **S** (CONT) to resume.
 - To stop the timer, press **A** (STOP).
 - To reset the timer, press **S** (RESET).

6.11 Organizer Password

The password is applicable to Calendar and Voice Memo to prevent unauthorized access.

Creating a password

1. In the Organizer menu, press ▲ / ▼ to select Organizer Password and then press **eingabe**.
 - You are asked to proceed to password setting. Press ◀ / ▶ to select 'Yes' and then press **eingabe**.
2. Create a password of up to eight characters and then press **eingabe**.
3. Re-enter the same password and press **eingabe** or **FN** + **CONFIRM**.
 - The password you set will be requested whenever the protected features are selected.

Changing the password

1. In the Organizer menu, press ▲ / ▼ to select Organizer Password and then press **eingabe**.
2. Press ▲ / ▼ to select Modify Password and press **eingabe**.
3. Enter your existing password and press **eingabe**.
4. Repeat the steps in Creating a password to create your new password.

Deleting the password

1. In the Organizer menu, press ▲ / ▼ to select Organizer Password and then press **eingabe**.
2. Press ▲ / ▼ to select Delete Password and then press **eingabe**.
3. Enter your existing password and then press **eingabe**. Your password is deleted.

7. SETTINGS Menu

7.1 Display Settings

1. In the Settings menu, press ▲ / ▼ to select Display Settings and then press **eingabe**.
2. Press ▲ / ▼ to shift between settings.
 - **Font size:** Determines the size of screen type.
 - **Dotted line:** Determines if dotted lines show on the screen.
3. Press ▲ / ▼ to select the option you want and then press **eingabe**.
 - Or press **FN** + **OK** when done. To exit without saving, press **FN** + **CANCEL**.

7.2 Volume Control

1. In the Settings menu, press ▲ / ▼ to select Volume Control and then press **eingabe**.
2. Press ◀ / ▶ to adjust the volume level.
3. Press **eingabe** when done.
 - Or press **FN** + **OK** when done. To exit without saving, press **FN** + **CANCEL**.

7.3 Language Settings

This setting determines the language for prompts, help, and messages.

1. In the Settings menu, press ▲ / ▼ to select Language Settings and then press **eingabe**.
2. Press ▲ / ▼ to select a language.
3. Press **eingabe** when done.
 - Or press **FN** + **OK** when done. To exit without saving, press **FN** + **CANCEL**.

7.4 Power Management

1. In the Settings menu, press ▲ / ▼ to select **Power Management** and then press **eingabe**.
2. Press ▲ / ▼ to shift between settings.
 - **Unit shutoff:** Determines how long your device stays on if no key is pressed.
 - **Backlight shutoff:** Determines how long the backlight stays on once activated.
3. Press ◀ / ▶ to adjust the time and then press **eingabe** when done.
 - Or press **FN** + **OK** when done. To exit without saving, press **FN** + **CANCEL**.

7.5 Disk Management

This menu lets you manage files stored in this device or on an inserted micro SD card.

1. In the Settings menu, press ▲ / ▼ to select **Disk Management** and then press **eingabe**.
2. Press ▲ / ▼ to select the **internal disk of this device or the microSD card (if inserted)** and then press **eingabe**.
 - The total and available disk sizes show on the screen.
3. Use the following soft keys to manage files:
 - To create a new folder at the current location, press **FN** + **NEW**.
 - To rename the selected folder or file, press **FN** + **RENAME**.
 - To copy the selected file, press **FN** + **COPY**.
 - To paste the copied file at the current location, press **FN** + **PASTE**.
 - To cut the selected file, press **FN** + **CUT**.
 - To delete the selected folder or file, press **FN** + **DELETE**.
4. Press **esc** to go back to a higher level in the file directory.

7.6 Host Information

This menu shows the host ID, program version and data version.

1. In the **Settings** menu, press **▲ / ▼** to select **Host Information** and then press **eingabe**.
2. Press **esc** to exit.

7.7 Default Settings

This menu lets you perform soft or hard reset of the device.

1. In the **Settings** menu, press **▲ / ▼** to select **Default Settings** and then press **eingabe**.
2. Press **▲ / ▼** to select between soft and hard resets.
3. Press **FN** + **OK** to perform the reset.
 - Press **FN** + **CANCEL** to exit without reset.
 - Soft reset is often useful in solving minor problems or erratical performance, much like rebooting a PC.
 - Hard reset will reset everything to “factory defaults”. All user’s data will be erased. Please backup your data before doing so.

8. General Controls

8.1 Headphone Jack

 
The headphone jack is located on the left of the device for 3.5 mm, 35 ohm impedance stereo headphones. **Caution:** Monophonic headphones will not work with this unit.

8.2 USB Port

The USB port is located on the right of the device for a mini-USB 2.0 compatible connection. See *9.1 Connecting to a PC*.

8.3 Inserting microSD Card

Insert a microSD card to expand the unit's memory space. To insert card, open the card slot cover and then push the card in until a click is heard.

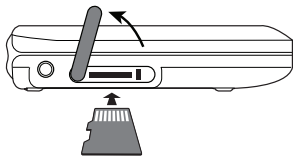


To remove card, push the card in until a click is heard, then slowly release the card. As the memory card is small in size, it is recommended to use a small coin to help insert or remove it.

Note: The device supports microSD cards up to 32 GB.

8.4 Adjusting Sound Volume

 Press **FN** + **▲** / **▼** to show the volume control menu. Press **▲** / **▼** to adjust the volume. When done, press **◀** / **▶** to select 'OK' and then press **eingabe**.



8.5 Changing Size of Screen Type

 
Press **AAA** repeatedly to change the size of the screen type.

8.6 Help is Always at Hand

You can view a help message at any screen by pressing **hilfe**. To exit help, press **esc**.

8.7 Resetting Your Device

If the keyboard fails to respond, or if the screen performs erratically, use a paper clip to gently press the reset button located on your unit to reset your device.

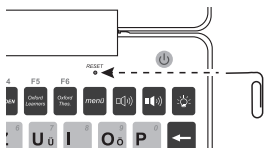


Warning! Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting the unit erases settings and information you may have entered.

9. PC Connections

9.1 Connecting to a PC

Your device has a built-in USB port and can be connected to your desktop or laptop PC with a USB cable.

 1. Turn on your device.
2. Connect the wide end of a USB cable to a USB port on your PC and the smaller end to the USB port on your device.

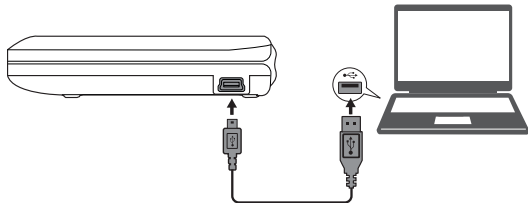

3. You are asked if you want to connect the device to your PC. Press **◀/▶** to select "Yes" and then press **eingabe**.
- You see a new "Removable Disk" available for selection on the screen of your PC when the device is properly connected to your PC.
 - Select "No" to only charge the battery of the device while connecting to your PC.

9.2 Using WordBytes 2.0

The WordBytes 2.0 software (provided) lets you use certain features of this device on your PC. With the software installed and the device connected, your PC can be used for:

- looking up definitions and translations with the dictionaries in the device;
- editing My Word List and search history of the device;
- adding downloaded dictionaries to the device;
- removing downloaded dictionaries from the device;

The software, when using alone without connecting to the device, can be used to find translations in English, French, German, Italian and Spanish.

For installation and operation details of WordBytes 2.0, refer to the installation disc and the help section of the software.

To connect this device to your PC, see *9.1 Connecting to a PC*.

For download of the latest WordBytes software, please visit:

www.franklin.com/wordbytes_bds6100/

9.3 Copying Files to Your Device

You can transfer data to the device from your PC or save copies of your data to another location on your PC to backup important information.

1. Make sure your device is connected to your PC.

- See 9.1 *Connecting to a PC* for more information.

2. On your PC, use Windows Explorer to find the drive labeled 'Removable Disk' or 'Franklin' and double-click it to open it.

3. Right-click the file you want to copy from your PC to your device and then click 'Copy' from the pop-up menu.

4. Right-click in the window of the Removable Disk and then click "Paste" from the pop-up menu.

- If your file is .txt formatted personal dictionary, paste the file in the "PersonalDict" folder of the Removable Disk.
- If your file is a music file, it is recommended to paste the file in the "Media" or "Music" folder of the Removable Disk.

5. Repeat steps 3-4 to copy additional files to your device.

6. Close the open folders.

7. Unplug the USB cable from your PC and the device.

9.4 About Your Device Folders

When you connect your device to your PC, you can see an assortment of folders for storing various types of data. Remember, 'PersonalDict' is always the location to save any .txt formatted personal dictionaries so they appear on your device. 'Record' is always the location to save voice memos. 'Media' and 'Music' are recommended for storing your music files. Any other available folders will contain the saved materials from other features.

9.5 Backing Up Your Data

Because you have access to the folders in which any information you enter is saved, you can backup this important information on your PC. While your device is connected to your PC, right-click any or all of those folders and then click 'Copy'. Find a location on your PC where you want to save this information, right-click in that window and then click 'Paste' to save the information.

9.6 Restoring Your Data

If you accidentally erase or lose information, you can restore any important information you have previously saved to your PC. Connect your device to your PC. Next, find the location on your PC where you saved a backup copy of your information. Right-click on those files or folders and click 'Copy'. Click the window containing your device's folders, right-click and then click 'Paste' from the pop-up menu. You can then re-access your previously saved information.

10. Additional Information

10.1 Specifications

Model: BDS-6100 *Language Learning Library*

Battery: Built-in rechargeable lithium polymer

- Voltage: 3.7V
- Capacity: 700mAh
- Type: Li-Polymer
- Model no.: PL-304360

Size: 140 x 83 x 18 mm

Weight: 202 g

ISBN: 978-1-59074-645-5

©2002-2011 Franklin Electronic Publishers, Inc.

Burlington, N.J. 08016-4907 U.S.A. All rights reserved.

© PONS GmbH, Stuttgart, 2010; © Oxford Advanced Learner's Dictionary

© Oxford University Press 2010. Oxford Learner's Thesaurus © Oxford

University Press 2008; DUDEN – Die deutsche Rechtschreibung, ©
Bibliographisches Institut GmbH, Mannheim 2006 All rights reserved.

Imported to the European Community by:

Franklin Electronic Publishers GmbH

Kapellenstr. 13, 85622 Feldkirchen, Germany



10.2 Product Care

Your device is designed to be light, compact, and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.

In order to avoid damage to your device, please:

- Keep the lid closed when you are not using it. This will protect the screen from being broken, scratched or marred in any way.
- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid, or wet places. The device is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wiping its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, and then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

10.3 Recycling and Disposal

Device Disposal



This device should be disposed through your local electronic product recycling system - do not throw in the trash bin.


Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

Battery Disposal



Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries. Please visit www.franklin.com/eu to contact Franklin or its distributors to get info for battery disposal and/or replacement. However, shipping and handling expenses might apply.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing , or by removing and replacing the battery.

10.4 FCC Notice (U.S. only)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Note: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

10.5 License Agreement (U.S.)

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this PRODUCT. You may not make any copies of the PRODUCT or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

11. Warranty Information

11.1 Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

11.2 Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.

Attn: Service Department

One Franklin Plaza

Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

11.3 Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

11.4 Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

