



TurboDry™ DG00301 Shoe & Boot Dryer and Warmer



INSTRUCTION MANUAL

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON PLEASE CALL
1-888-330-9452**

**IF YOU SHOULD HAVE A QUESTION OR EXPERIENCE
A PROBLEM WITH YOUR DryGuy™ PRODUCT
CALL 1-888-330-9452**

Before you call, please have the following information available: Product MODEL number which is located below the UPC code on the outside of the product box and the store receipt with purchase date. In most cases, a DryGuy™ representative can resolve the problem over the phone or via email and if not, can direct you to an authorized service center. If you have suggestions or comments, please send them via email to: info@dryguy.net. Your feedback is vital to DryGuy™.

SAVE THIS MANUAL FOR FUTURE REFERENCE

GENERAL SAFETY RULES

WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

AREA OF USE:

- Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

ELECTRICAL SAFETY:

- Do not operate in standing water.
- Do not cut-off or restrict air circulation.
- Do not expose TurboDry™ to rain or snow.
- Use of attachments not recommended or sold by DryGuy™ may result in a risk of fire, electric shock, or injury to persons.
- To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting unit.
- Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire, electric shock or electrocution.
- Two-wire cords can be used with 2-wire or 3-wire extension cords. Only round jacketed extension cords should be used and we recommend that they be listed by Underwriters Laboratories (U.L.). If the extension is to be used outside, the cord must be suitable for outdoor use. Any cord marked for outdoor use can also be used for indoor use. The letters “W” or “WA” on the cord jacket indicate that the cord is suitable for outdoor use.
- An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety, and to prevent loss of power and overheating. The smaller the gauge numbers of the wire, the greater the capacity of the cable; that is, 16 gauge has more capacity than 18 gauge. When using more than one extension to make up the total length, be sure each extension contains at least the minimum wire size.

WHAT IS HDT?

DryGuy™ TurboDry™ has an unique whisper quiet drying technology called HDT; Hybrid Drying Technology, a patented Ram-Air ventilation system. HDT was developed utilizing Wind Science principles to blend Ram-Air Induction with the thermal convection philosophy. Fresh air enters the Rear Air Intake, is forced over the thermal heating elements with a powerful fan and vents warm air all throughout the toe box removing wetness or warming chilly shoes or boots in a fraction of the time.

OPERATING INSTRUCTIONS:

1. Plug the TurboDry™ into any standard 120 Volt 60 Hz electrical household outlets OR any standard 12-Volt automotive receptacle using the proper power cord included.
2. With care slide into footwear being attentive not to restrict or block air flow into fan or restrict or block circulation.
3. Do not trap, smother, pinch, or suffocate the air circulation into or out of footwear with clothing or any other substance. This may cause overheating.
4. Do not force the TurboDry™ into smaller footwear.
5. Leave as much opening at entrance to footwear as attainable being careful not to restrict or block air flow by any means.
6. NOT FOR USE IN GLOVES, SOCKS, OR GARMENTS OTHER THAN SHOES AND BOOTS.



HELPFUL TIPS:

1. Make sure not to pinch or otherwise suffocate air circulation when placing unit into footwear. Loosen laces and pull footwear tongue outward to help open breathing space whenever possible.
2. Footwear should be dried after every use to help prevent bacteria and fungus growth the primary cause of footwear odor.
3. Smaller footwear and garments will dry quicker than larger items.
4. Your energy efficient TurboDry™ heats to a gentle temperature and using “Forced Air” technology quietly and quickly dries wet garments, but it does not generate a forceful air stream that might possibly damage. At first you may suspect the unit is not operating properly. We recommend you place the back of your hand near the drying holes so you are able to better feel the gently warmed air stream. Heat will only be felt when unit is placed in footwear and in service.

OPERATION TIME:

- Drying time varies depending upon extent of moisture as well as temperature and humidity.
- We recommend a minimum of one hour every time your boots are used.

MAINTENANCE:

Use only mild soap and a damp cloth to clean the TurboDry™. Never let any liquid get inside the unit; never immerse any part into liquid.

IMPORTANT:

To assure product SAFETY and RELIABILITY, repairs and maintenance (other than those listed in this manual) should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.

LUBRICATION:

DryGuy™ products are properly lubricated at the factory and are ready for use.

ACCESSORIES:

No recommended accessories for use with your DryGuy™ TurboDry™ are available at this time.

 **CAUTION: The use of any accessory or attachment not recommended may be hazardous and may void warranty.**

SERVICE INFORMATION:

DryGuy™ Service Center is staffed with trained personnel to provide customers with efficient and reliable product service. Whether you need technical advice, repair, or genuine factory replacement parts, contact DryGuy™ Service Center at: info@dryguy.net

FULL ONE (1) YEAR USE WARRANTY:

DryGuy™ (U.S.) warrants this product for One (1) Year against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns.

The second option is to take or send the product (prepaid) to a DryGuy™ authorized service center for repair or replacement at our discretion. Proof of purchase, store name and date of purchase may be required.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state. Should you have any questions, contact the service center. This product is not intended for commercial use.

THE FOLLOWING WILL NOT BE COVERED UNDER WARRANTY:

- Any modification to TurboDry™
- Product has been misused or improperly cared for
- Products over One (1) year from date of original purchase
- Warranty request without original receipt
- Repairs done by anyone other than DryGuy™ or DryGuy™ authorized repair facility

In consideration of the above promises by DryGuy™, the buyer agrees to and accepts the following conditions:

1. That this warranty is in lieu of all other warranties, expressed or implied.
2. That all warranties OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXCLUDED OR WAIVED.
3. That the buyer's sole remedy shall be to obtain replacement of the product free of charge from DryGuy™ provided any and all warranty defects falls within the warranty period and meets all warranty provisions.
4. That this remedy is in lieu of all other remedies or claims for damages, consequential or otherwise, which the buyer may have against DryGuy™.