

Duo HD Player



Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

☎ 1-800-SAMSUNG (7267864)/www.samsung.com/us

Samsung Electronics America, Inc.
105 Challenger Road
Ridgefield Park, NJ 07660-0511
1-800-SAMSUNG (7267864)
www.samsung.com/us



User's Manual
BD-UP5000

AK68-01477A

SAMSUNG



key features of your new Duo HD player

Player Features

Supports a Variety of Video Disc Types

Supports BD, HD DVD, DVD Video, DVD-RW/-R (V mode and finalized only).

HDMI (High Definition Multimedia Interface)

HDMI reduces picture noise by allowing a pure digital video/audio signal path from the player to your TV.

Simply HD

Simply HD guarantees that this player has been tested according to specifications aimed at maximizing the delivery of HD content.



Blu-ray Disc Features

Blu-ray Discs can store 25 GB (single layer) or 50 GB (dual layer) on a single sided disc - about 5 to 10 times the capacity of a DVD. Blu-ray Discs also support the highest quality HD video available in the industry - Large capacity means no compromise on video quality. Furthermore, a Blu-ray Disc has the same familiar size and look as DVD.

HD DVD Features

HD DVD is the newest, high definition entry to the popular DVD format.

A HD DVD (dual-layer) disc can store up to 30 GB of data, and a single layer HD DVD can store up to 15 GB. On one side of a single layer HD DVD, up to 8 hours of high resolution video source with 1125 scanning lines, and up to 48 hours of standard resolution with 525 scanning lines can be stored.

* The following BD/HD DVD Disc features are disc dependant and will vary.
Appearance and navigation of features will also vary from disc to disc.
Not all discs will have the features described below.

Video highlights

The BD-ROM/ HD DVD-ROM format for movie distribution supports three highly advanced video codecs, including AVC, VC-1, and MPEG-2.

HD video resolutions are also available:

- 1920 x 1080 HD
- 1280 x 720 HD

For High-Definition Playback

To view high-definition contents on a BD/HD DVD Disc, an HDTV (High Definition Television) is required. Some BD/HD DVD discs may require using the player's HDMI OUT to view high-definition content. The ability to view high-definition content on BD/HD DVD discs may be limited depending on the resolution of your TV.

Graphic planes

Two individual, full HD resolution (1920x1080) video layers are available, on top of the HD video layer. One layer is assigned to video-related graphics (like subtitles), and the other layer is assigned to interactive elements, such as buttons or menus. Various wipes, fades and scroll effects may be available on both layers.



Menu graphics

Support full color resolution graphics and animation, thereby greatly surpassing the capabilities of DVD-Video. Unlike DVD, Menus can be accessed during video playback.


Menu sounds

When you highlight or select a menu option on a disc, sounds can be heard such as button clicks or a voice-over explaining the highlighted menu choice.

Multi-page/PopUp Menus

With DVD-Video, playback is interrupted each time a new menu screen is accessed. Due to BD/HD DVD Disc's ability to preload data from the disc without interrupting playback, a menu may consist of several pages.

You can browse through the menu pages or select different menu paths, while the audio and video remain playing in the background.

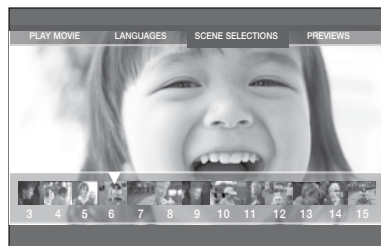

Interactivity

With HD DVD, you can enjoy additional content such as animation on menu options and the movie, simultaneous playback of main and secondary movies using PIP (Picture-in-Picture), and the ability to download content via the Internet.

User Browsable Slideshows

With BD/HD DVD Discs, you can browse through various still pictures while the audio remains playing.

Subtitles

Depending on what is contained on the BD/HD DVD Disc, you may be able to select different font styles, sizes and colors for the subtitles. Subtitles may also be animated, scrolled or faded in and out.

Multi-format System






The HD DVD twin-format disc consists of the HD DVD and DVD layers on a single side. The HD DVD combi disc consists of the HD DVD and DVD layers on each side.

Internet Connection (LAN Port)

Some HD DVD discs are designed to access a web site, allowing you to view additional content on your player.

WHAT'S INCLUDED

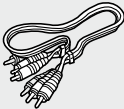
Check for the supplied accessories below.

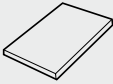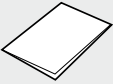		
Composite (Video), Audio L/R Cable (MF39-00274A)	Batteries for Remote Control (AAA Size) (4301-001035)	
		
User Manual (AK68-01477A)	Quick Guide (AK68-01480A)	
		Remote Control (AK59-00075A)

safety information

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash and Arrowhead within Triangle is a warning sign alerting you of dangerous voltage Inside the product	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The explanation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Note to CATV system installer

This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference - Causing Equipment Regulations.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LÁSER CLASE 1

CLASS 1 LASER PRODUCT

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

Note:

- This unit can be used only where the power supply is AC 120V, 60Hz. It cannot be used elsewhere.
- This Duo HD player is designed and manufactured to respond to the Region Management Information. If the Region number of a BD/DVD disc does not correspond to the Region number of this Duo HD player, the Duo HD player cannot play the disc.
- The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This product is covered by one or more of the following U.S. patents:
5,060,220 5,457,669 5,561,649 5,705,762 5,987,417 6,043,912 6,222,983 6,272,096 6,377,524 6,377,531
6,385,587 6,389,570 6,408,408 6,466,532 6,473,736 6,477,501 6,480,829 6,556,520 6,556,521 6,556,522
6,578,163 6,594,208 6,631,110 6,658,588 6,674,697 6,674,957 6,687,455 6,697,307 6,707,985 6,721,243
6,721,493 6,728,474 6,741,535 6,744,713 6,744,972 6,765,853 6,765,853 6,771,890 6,771,891 6,775,465
6,778,755 6,788,629 6,788,630 6,795,637 6,810,201 6,862,256 6,868,054 6,894,963 6,937,552
This product is covered by the following U.S. patents:
US4,930,158 US4,930,160

This license is limited to private non-commercial use by end-user consumers for licensed contents.

No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/IEC 11172-3 or ISO/IEC 13818-3 used or sold in combination with this product unit.

The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/IEC 11172-3 or ISO/IEC 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/IEC 11172-3 or ISO/IEC 13818-3.

PRECAUTIONS

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



safety information

Handling Cautions

- Before connecting other components to this Duo HD player, be sure to turn them all off.
- Do not move the Duo HD player while a disc is being played as the disc may be scratched or broken, or the Duo HD player internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the Duo HD player.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this Duo HD player. If this occurs, turn the Duo HD player off and on again with the **POWER** button, or disconnect and then reconnect the AC power cord to the AC power outlet. The Duo HD player will operate normally.
- Be sure to remove the disc and turn off the Duo HD player after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the Duo HD player for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.
- Do not expose the player to liquid.
- When the AC plug is connected to a wall outlet, the player will still draw power (standby mode) when it is turned off.

Maintenance of Cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Restrictions on Playback

- This player may not respond to all operating commands because some Blu-ray, HD DVD, DVD, CD discs allow specific or limited operation and features during playback. Please note that this is not a defect in the player.
- Samsung cannot assure that this player will play every disc bearing the Blu-ray, HD DVD, DVD or CD logo because disc formats evolve, and problems and errors may occur during the creation of BD, HD DVD, DVD, CD software and/or the manufacture of discs. This player also operates differently than a standard DVD player or other AV equipment. Please contact the SAMSUNG customer care center if you have questions or encounter difficulty in playing Blu-ray, HD DVD, DVD, CD discs in this player. Also, refer to the rest of this Manual for additional information on playback restrictions.

contents

KEY FEATURES OF YOUR NEW DUO HD PLAYER

2

SAFETY INFORMATION

4

GETTING STARTED

9

DESCRIPTION

14

REMOTE CONTROL

16

CONNECTIONS

20

BASIC FUNCTIONS OF YOUR DUO HD PLAYER

31

SYSTEM SETUP

35

LANGUAGE SETUP

36

- 3 What's included
- 4 Warning
- 5 Precautions
- 9 Before Reading the User's Manual
- 10 Disc Type and Characteristics
- 13 Disc Storage & Management
- 14 Front Panel
- 14 Front Panel Display
- 15 Rear Panel
- 16 Tour of the Remote Control
- 18 Setting the Remote Control
- 18 Regarding the Battery
- 19 Controllable TV Codes
- 20 Connecting to a TV with an HDMI Cable
- 21 HDMI Auto Detection Function
- 22 Connecting to a TV with DVI Cable
- 23 Connecting to a TV (Component)
- 24 Connecting to a TV (S-Video)
- 25 Connecting to a TV(Video)
- 26 Connecting to an Audio System (2 Channel Amplifier)
- 27 Connecting to an Audio System (7.1 Channel Amplifier)
- 28 Connecting to an Audio System (Dolby Digital, DTS Amplifier)
- 29 Connecting to an Audio System (HDMI supported Amplifier)
- 30 Connecting to the Internet
- 31 Before Playing
- 32 On-Screen Menu Navigation
- 32 Playing a Disc
- 33 To play a twin-format HD DVD disc
- 33 Using the Search and Skip Functions
- 34 Slow Motion Play/Step Motion Play
- 35 Setting the Clock
- 36 Setting up the Language Options

contents








AUDIO SETUP	37	Setting up the Audio Options
37	39	Setting up the Speaker Options
DISPLAY SETUP	40	Setting up the Video display/output Options
40		
HDMI SETUP	43	Setting up the HDMI setup options
43		
PARENTAL SETUP	45	Setting up the Parental Lock
45		
NETWORK SETUP	47	TCP/IP Setting
47	48	Proxy Setting
	48	Cookie Setting
	49	Network Throughput
	49	NTP Server Setting
	49	Mac Address
PERSISTENT STORAGE MANAGEMENT	50	System Device Management
50		
SYSTEM UPGRADE	51	Firmware Upgrade
51	53	System Information
WATCHING A MOVIE	54	Using the Display Function
54	55	Using the Disc Menu & Popup/Title Menu
	56	Repeat Play
	57	Selecting the Audio Language
	58	Selecting the Subtitle Language
	59	Changing the Camera Angle
	59	Using the Cursor Function
LISTENING TO MUSIC	60	Playing an Audio CD(CD-DA)
60	60	Audio CD(CD-DA) Screen Elements
	61	Buttons on the Remote Control used for Audio CD (CD-DA) disc playback
	61	Repeat Audio CD(CD-DA)
TROUBLESHOOTING	63	Troubleshooting
63		
APPENDIX	65	Specifications
65		

getting started

BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

Icons that will be used in manual

Icon	Term	Definition
	BD-ROM	This involves a function available on a BD-ROM.
	HD DVD-ROM	This involves a function available on a HD DVD-ROM.
	DVD-VIDEO	This involves a function available on DVD-Video or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode.
	DVD-RW	This involves a function available on DVD-RW. (V mode and finalized only)
	DVD-R	This involves a function available on DVD-R. (V mode and finalized only)
	Audio CD	This involves a function available on a data CD-R (CD-DA format).
	Note	This involves tips or instructions on the page that help each function operate.

About the use of this user's manual

- 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 4~6)
- 2) If a problem occurs, check the Troubleshooting. (See pages 63~64)

Copyright







©2007 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

getting started










DISC TYPE AND CHARACTERISTICS

Disc types that can be played

Disc Types	Disc Logo	Recorded content	Disc Shape	Max. Playing minute
BD-ROM		AUDIO + VIDEO	Single sided(25GB, 5 inches)	Playing time depends on the Title
			Double sided(50GB, 5 inches)	
HD DVD-ROM		AUDIO + VIDEO	Single sided(15GB, 5 inches)	-
			Double sided(30GB, 5 inches)	
DVD-VIDEO		AUDIO + VIDEO	Single sided(5 inches)	240
			Double sided(5 inches)	480
			Single sided(3 1/2 inches)	80
			Double sided(3 1/2 inches)	160
AUDIO-CD		AUDIO	Single sided(5 inches)	74
			Single sided (3 1/2 inches)	20
DVD-RW (V mode and finalized only)		AUDIO + VIDEO	5 inches (4.7GB)	480 (EX : Extended Play)
DVD-R (V mode and finalized only)		AUDIO + VIDEO	5 inches (4.7GB)	480 (EX : Extended Play)

- This player is compatible with the NTSC color system only.
- PAL discs will not play.

Logos of Discs that can be played

		
Blu-ray Disc	HD DVD	Dolby Digital Plus
		
DTS Digital Surround	Digital Audio	Dolby TrueHD
		
NTSC broadcast system in U.S.A, Canada, Korea, Japan	Stereo	Java



- When playing a Dolby TrueHD disc, audio will only be heard over the front left and right speakers.

Discs that cannot be played

- Blu-ray Discs with a region code other than "Region A".
- BD-R, BD-RE
- DVD-Video with a region number other than "1" or "ALL"
- HD DVD-R
- DVD-RAM
- 3.9 GB DVD-R Disc for Authoring.
- DVD-RW(VR mode)
- DVD-ROM/PD/MV-Disc, etc
- CVD/CD-ROM/CD-RW/CDV/CD-G/CD-I/LD



[Note]

- Some commercial discs and HD DVD/ DVD discs purchased outside your region may not be playable with this product. When these discs are played, either "No disc." or "Please check the regional code of the disc." will be displayed.
- If a DVD-R/-RW disc has not been recorded properly in DVD video format, it will not be playable.
- The unit cannot play CD-R and DVD-RW/-R recorded content such as divx, avi, mpg, mov, wma, mp3,digital photo view(JPEG) file.

Region code

Both the Duo HD player and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play.

The Region Number for this Duo HD player is described on the rear panel of the Duo HD player.

Disc Type	Blu-ray	DVD-VIDEO
Region code		

BD Region Code	Area
A	North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia.
B	Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.
C	India, China, Russia, Central and South Asia.

DVD Region Code	Area
1	The U.S., U.S. territories and Canada
2	Europe, Japan, the Middle East, Egypt, South Africa, Greenland
3	Taiwan, Korea, the Philippines, Indonesia, Hong Kong
4	Mexico, South America, Central America, Australia, New Zealand, Pacific Islands, Caribbean
5	Russia, Eastern Europe, India, most of Africa, North Korea, Mongolia
6	China

- HD DVDs do not currently have Region codes. They however, may be assigned in the future.

Blu-ray Disc Compatibility

Blu-ray Disc is a new and evolving format. Accordingly, disc compatibility issues are possible. Not all discs are compatible and not every disc will play back. For additional information, refer to the Compliance and Compatibility Notice section of this Manual. If you encounter compatibility problems, please contact the SAMSUNG customer care center. This Samsung Duo HD player (BD-UP5000) supports only the BD-ROM Profile 1 version 1.0 specification. If you want to play later version discs, you may need to update player's firmware. Please refer to <http://www.samsung.com/us> or contact SAMSUNG customer care center at 1-800 SAMSUNG.

getting started

HD DVD Disc Compatibility

HD DVD is a new format, disc compatibility issues with new and existing format discs are possible. Not all discs are compatible. If you experience compatibility problems, please contact SAMSUNG Customer Service.



- Playback may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched. Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for playback.
- Discs with PAL programs recorded on them cannot be played using this product.
- When a BD-Java title is played, loading may take longer than a normal title, or some functions may perform slowly.
- Discs that are embedded with the networking features can display a download loading message in addition to the disk loading message at the start.

Disc Types

❖ BD-ROM

Blu-ray Disc Read Only Memory. A BD-ROM disc contains pre-recorded data. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format, for playback on Duo HD player's. This unit can play back pre-recorded commercial BD-ROM discs.

❖ HD DVD

- HD DVD or High-Definition DVD is a high-density optical disc format designed for the storage of data and high-definition video.
- HD DVD has a single-layer capacity of 15GB and a dual-layer capacity of 30GB.

❖ DVD-Video

- A digital versatile disc (DVD) can contain up to 135-minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby Digital surround, allowing you to enjoy vivid and clear theatre quality images.
- When switching from the first layer to the second layer of a dual-layered DVD Video disc, there may be momentary distortion in the image and sound. This is not a malfunction of the unit.
- Once a DVD-RW/-R recorded in Video Mode is finalized, it becomes DVD-Video. Pre-recorded (pre-stamped) commercial DVDs with movies are also referred to as DVD-Videos. This unit can play back pre-recorded commercial DVD discs (DVD-Video discs) with movies.

❖ Audio CD

- An audio disc on which 44.1kHz PCM Audio is recorded.
- This unit can play back CD-DA format audio CD-R discs.
- The unit may not be able to play some CD-R discs due to the condition of the recording.

❖ CD-R

- Use a 700MB(80 minutes) CD-R disc. If possible, do not use a 800MB(90 minutes) or above disc, as the disc may not play back.
- If the CD-R disc was not recorded as a closed session, you may experience delays when playing back the beginning of the disc or all recorded files may not play.
- Some CD-R discs may not be playable with this unit, depending on the device which was used to burn them. For contents recorded on CD-R media from CDs for your personal use, playability may vary depending on contents and discs.

❖ DVD-R Disc Playback

- Once a DVD-R recorded in Video Mode is finalized, it becomes DVD-Video.
- This unit can play back DVD-R discs recorded and finalized with a Samsung DVD video recorder. It may not be able to play some DVD-R discs depending on the disc and the condition of the recording.

❖ DVD-RW Disc Playback

- Playback can be performed with DVD-RW discs in the Video Mode and finalized only.
- Once a DVD-RW recorded in Video Mode is finalized, it becomes DVD-Video. Ability to play back may depend on recording conditions.

Disc Format

 
❖ DVD-RW/-R (V)

- This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by this Duo HD player once it has been finalized.
- If a disc that has been recorded in Video Mode by a different maker's recorder but has not been finalized, it cannot be played by this Duo HD player.

DISC STORAGE & MANAGEMENT

Disc Handling

- Use discs with regular shapes. If an irregular disc (a disc with a special shape) is used, this Duo HD player may be damaged.



❖ Holding discs

- Avoid touching the surface of a disc where recording is performed.



❖ Blu-ray/HD DVD Discs

- If the player is not used for a long period of time, remove the Blu-ray/HD DVD Disc from the player and store it in its case.
- Be careful not to leave fingerprints or scratches on the surface of the Blu-ray/HD DVD Disc.

❖ DVD-RW and DVD-R

- Clean with an optional PD disc cleaner (LF-K200DCA1 where available). Do not use cleaners or cloths for CDs to clean DVD-RW/-R discs.

❖ DVD-Video, Audio-CD

- Wipe off dirt or contamination on the disc with a soft cloth.

❖ Cautions on handling discs

- Do not write on the printed side with a ball-point pen or pencil.
- Do not use record cleaning sprays or antistatic. Also, do not use volatile chemicals, such as benzene or thinner.
- Do not apply labels or stickers to discs. (Do not use discs fixed with exposed tape adhesive or leftover peeled-off stickers.)
- Do not use scratch-proof protectors or covers.
- Do not use discs printed with label printers available on the market.
- Do not load warped or cracked discs.




Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.
- If you move your Duo HD player suddenly from a cold place to a warm place, condensation may generate on the operating parts and lens and cause abnormal disc playback. If this occurs, wait for two hours before connecting the plug to the power outlet. Then insert the disc and try to play back again.


description

FRONT PANEL

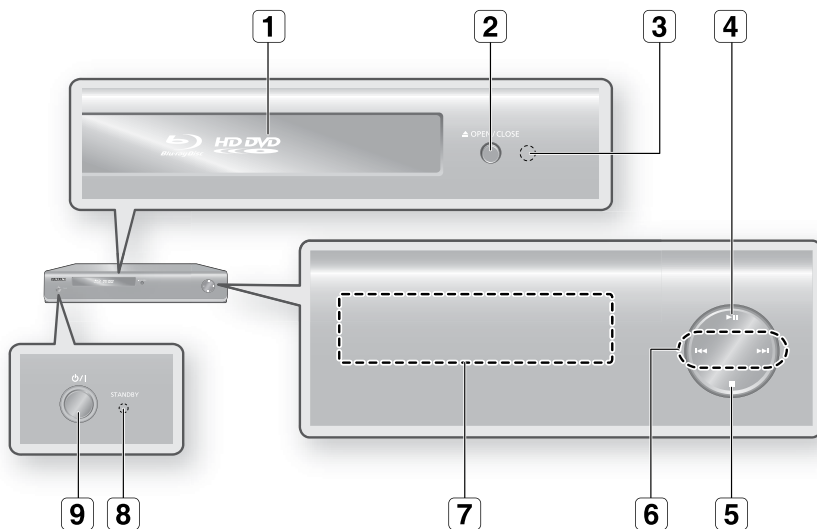



1	DISC TRAY	Opens to accept a disc.
2	OPEN/CLOSE BUTTON	Opens and closes the disc tray.
3	REMOTE CONTROL SENSOR	Detects any signal from the remote control.
4	PLAY/PAUSE BUTTON	Plays a disc or pauses playback.
5	STOP BUTTON	Stops disc playback.
6	SEARCH/SKIP BUTTONS	Goes to the next title/chapter/track or goes back to the previous title/chapter/track.
7	DISPLAY	Displays the playing status, time, etc.
8	STANDBY INDICATOR	When the unit is first plugged in, this indicator lights.
9	POWER BUTTON	Turns the Duo HD player on and off.

FRONT PANEL DISPLAY

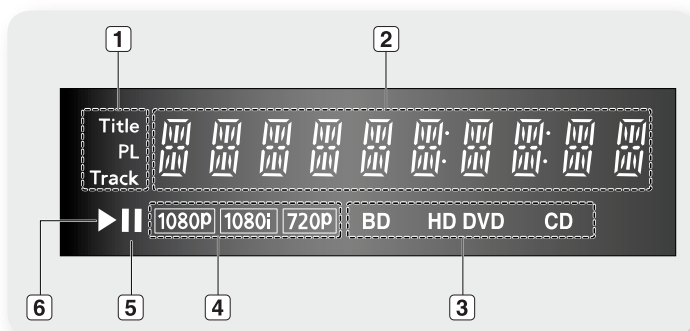

1	Title/PlayList/Track indicator.
2	Playing time/clock/current status indicator.
3	Disc type indicators.
4	Video output resolution indicator.
5	Pause indicator.
6	Playback indicator.

REAR PANEL

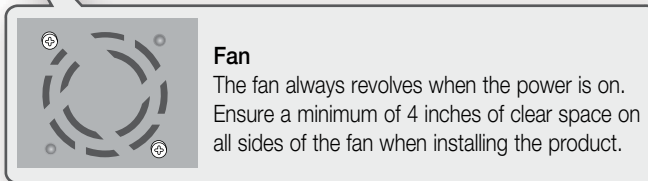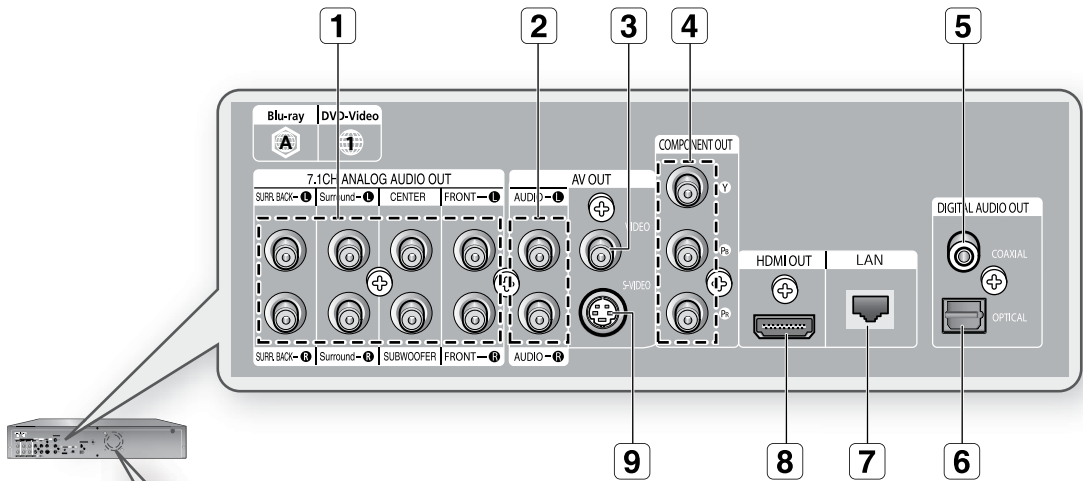


1	7.1CH ANALOG AUDIO OUT	Connect to a 7.1CH analog input on an AV amplifier (When connecting to a 5.1 channel home theater or receiver, connect all the Analog Audio output jacks from the player except for the Surround Back Left/Surround Back Right outputs)
2	AUDIO OUT	Connects to the audio input of external equipment using audio cables.
3	VIDEO OUT	Connects the input of external equipment using a video cable.
4	COMPONENT VIDEO OUT	Connects to equipment having Component video input.
5	DIGITAL AUDIO OUT (COAXIAL)	Connects to an amplifier having a digital coaxial audio input jack.
6	DIGITAL AUDIO OUT (OPTICAL)	Connects to an amplifier having a digital optical audio input jack.
7	LAN	Use a network that is connected to the Internet.
8	HDMI OUT	Use the HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.
9	S-VIDEO OUT	Connects the input of external equipment using an S-Video cable.


remote control

TOUR OF THE REMOTE CONTROL

Installing batteries in the Remote Control

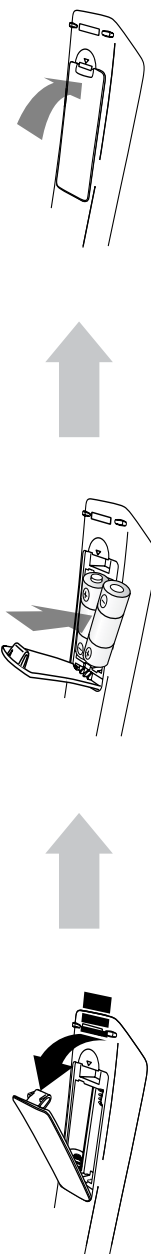

- 1. Lift the cover at the back of the remote control upward as shown.**
To open and close the disc tray.
- 2. Install two AAA size batteries.**
Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
- 3. Replace the cover.**
Assuming typical TV usage, the batteries last for about one year.

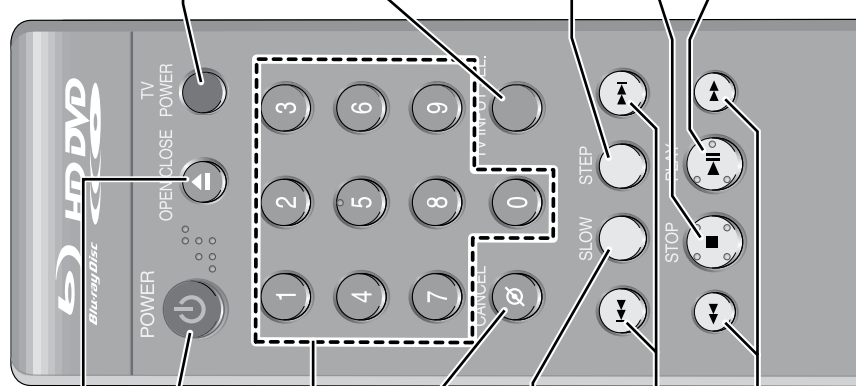

OPEN/CLOSE Buttons
To open and close the disc tray.

POWER Button

NUMBER Buttons

CANCEL Button

SLOW Button
Each time this button is pressed, the disc will play slowly.

REVERSE/FORWARD SKIP Buttons
Press to skip backwards or forwards.

REVERSE/FORWARD SEARCH Buttons
Press to search a disc backwards or forwards.


TV POWER Button

TV INPUT SEL. Button
After setup, allows you to set the input source on your TV. When the TV INPUT SEL. button is selected on the remote control, the DIRECTION (up/down/left/right) and ENTER buttons operate your TV's menu screen, but not the player. To enable the remote to control the Duo HD Player again, press the RETURN button.

STEP Button
Each time this button is pressed, a new frame will appear.

STOP Button
Press to stop a disc.

PLAY/PAUSE Button
Press to play/pause a disc.

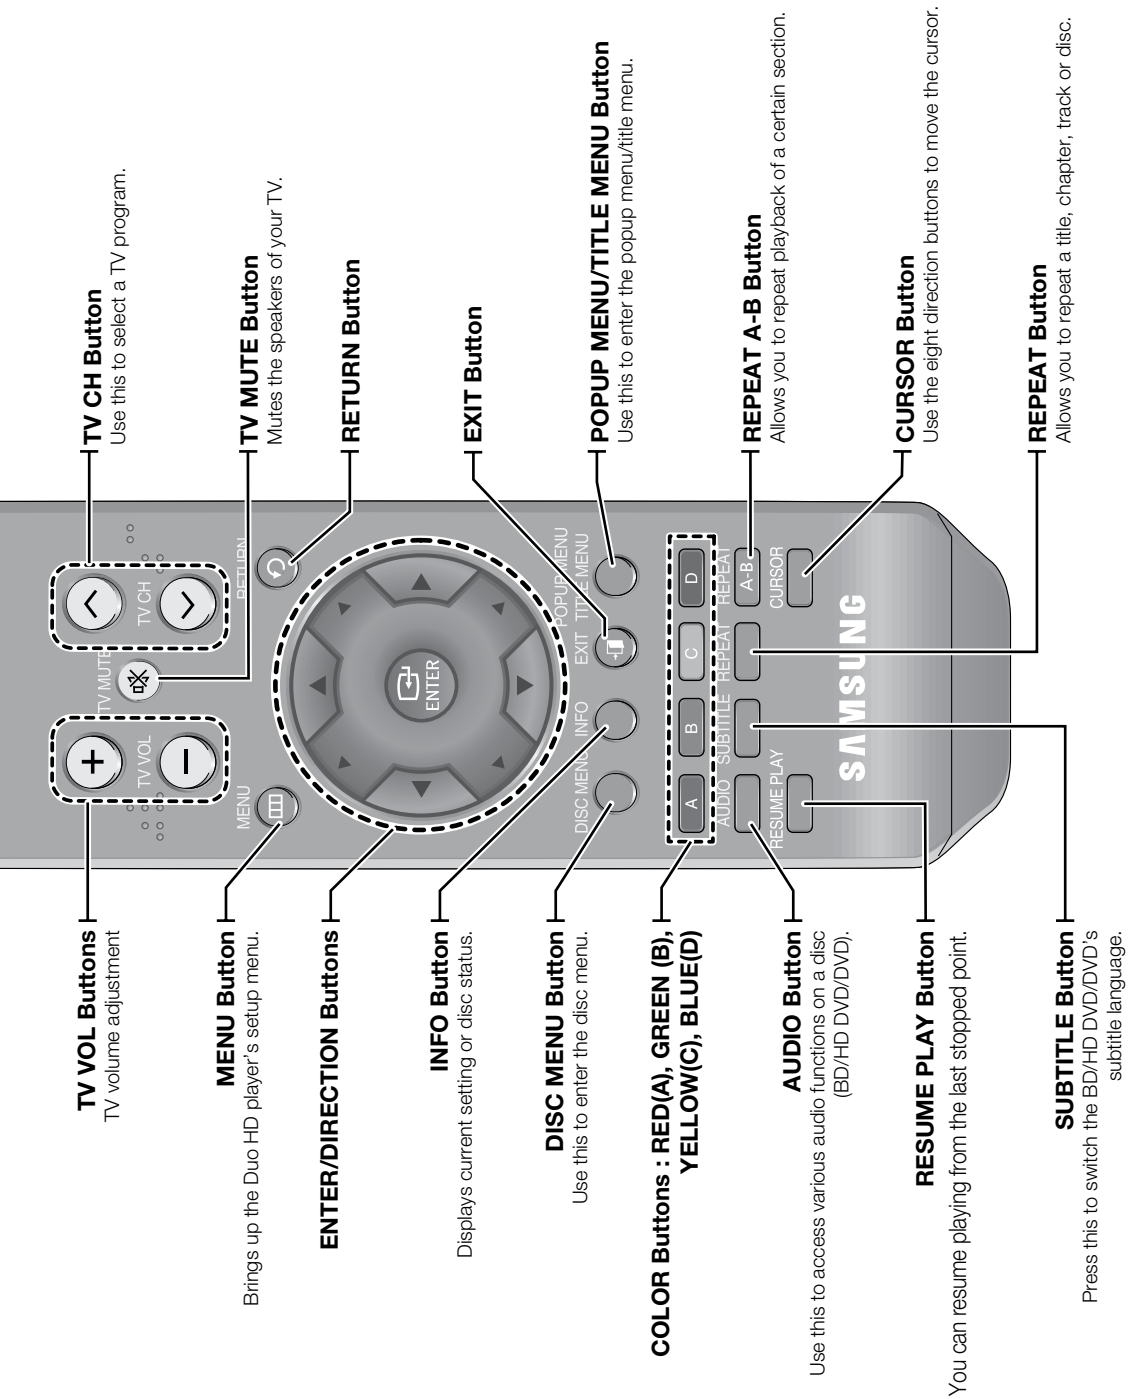

TV VOL Buttons
TV volume adjustment

TV CH Button
Use this to select a TV program.

MENU Button
Brings up the Duo HD player's setup menu.

TV MUTE Button
Mutes the speakers of your TV.

ENTER/DIRECTION Buttons

RETURN Button

INFO Button
Displays current setting or disc status.

EXIT Button

DISC MENU Button
Use this to enter the disc menu.

POPUP MENU/TITLE MENU Button
Use this to enter the popup menu/title menu.

COLOR Buttons : RED(A), GREEN (B), YELLOW(C), BLUE(D)

REPEAT A-B Button
Allows you to repeat playback of a certain section.

AUDIO Button
Use this to access various audio functions on a disc (BD/HD DVD/DVD).

CURSOR Button
Use the eight direction buttons to move the cursor.

RESUME PLAY Button
You can resume playing from the last stopped point.

REPEAT Button
Allows you to repeat a title, chapter, track or disc.

SUBTITLE Button
Press this to switch the BD/HD DVD/DVD's subtitle language.

remote control

SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

Control function buttons include : **TV POWER**, **CH \wedge \vee** , **VOL + -**, **TV MUTE**, **TV INPUT SEL.**, **DIRECTION/ENTER** button. However, the **DIRECTION/ENTER** button can only operate when the **TV INPUT SEL.** button has been selected.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television, by pressing the appropriate number buttons. (see the next page for the code list).

If your television is compatible with the remote control, it will switch off.

It is now programmed to operate with the remote control.

- ✎ If several codes are indicated for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

You can then control the television using the following buttons after pressing the TV button.

Button	Function
TV POWER	Used to switch the television on and off.
TV INPUT SEL.	Used to select an external source.
TV VOL (+ -)	Used to adjust the volume of the television.
TV CH (\wedge \vee)	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.
DIRECTION/ENTER	Used to move up/down/left/right (\blacktriangle , \blacktriangledown , \blacktriangleleft , \blacktriangleright) and to select a desired item. *(only works under the TV INPUT SEL. button selected)


- ✎ The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

REGARDING THE BATTERY

If the remote does not operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

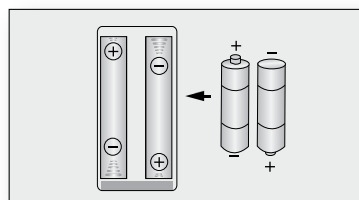

CONTROLLABLE TV CODES


Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63


connections

This section involves various methods of connecting the Duo HD player to other external components such as a TV.

CONNECTING TO A TV WITH AN HDMI CABLE

1. Using an HDMI-HDMI cable (not included) connect the **HDMI OUT** terminal on the rear of the Duo HD player to the **HDMI IN** terminal of your TV.
2. Press the input selector on your TV remote control until the HDMI signal from the Duo HD player appears on your TV screen.
 - If you have set the remote control to properly operate with your TV (see pages 18~19), press the **TV INPUT SEL.** button on the remote control and select HDMI as the external source of the TV.

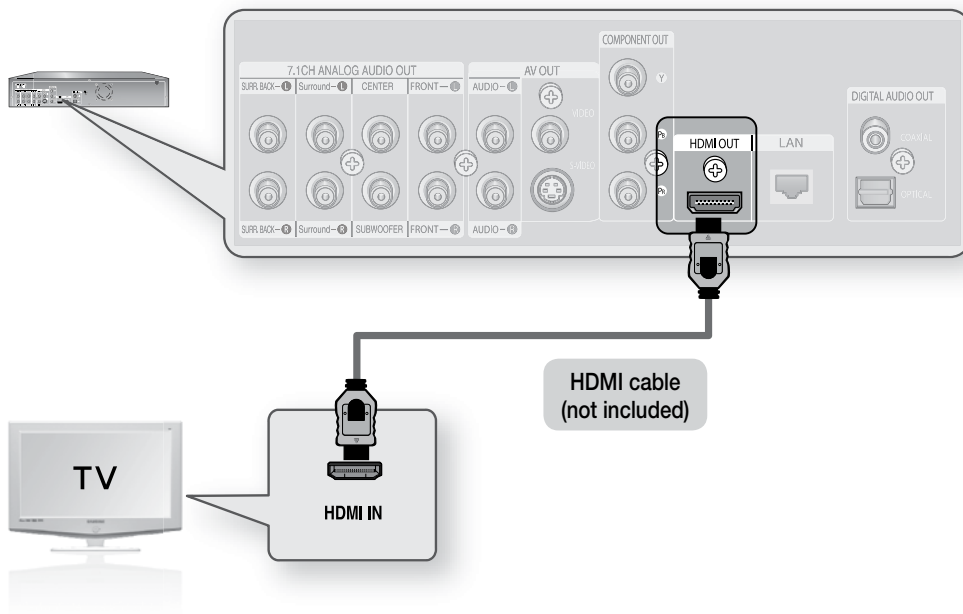

-  ■ If the HDMI cable is connected or removed during playback of a CDDA, the player will stop playing.

HDMI AUTO DETECTION FUNCTION

The player's video output will automatically change to HDMI output resolution when connecting an HDMI cable while power is on (see page 42).



- Depending on your TV, certain HDMI output resolutions may not work.
- Please refer to the user's manual of your TV.
- If an HDMI or HDMI-DVI cable is connected from the player to a TV, the Duo HD player's output is set to HDMI/DVI output resolution automatically within 10 seconds.
- If Component and HDMI are both connected, HDMI mode is automatically selected. (See page 42)
- When you connect the player to the TV using the HDMI cable for the first time or to a new TV, the HDMI output resolution will be automatically set to the highest provided by the TV.
- If you connect a Samsung TV to the Duo HD player using an HDMI cable, the player can be easily operated using the TV remote control. (This is only available with Samsung TVs that support the Anynet+ feature.) (See pages 43~44)

• HDMI (High Definition Multimedia Interface)

HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.

Using HDMI, the Duo HD player transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.

• HDMI connection description

HDMI connector - Supports video and digital audio data (LPCM or Bitstream).

- HDMI outputs only a pure digital signal to the TV.
- If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.

• Why does Samsung use HDMI?

Analog TVs require an analog video/audio signal. However, when playing a BD/HD DVD/DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter (in the Duo HD player) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.

• What is the HDCP?

HDCP (High-band width Digital Content Protection) is a system for protecting BD/HD DVD/DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD, etc) and a display device (TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

• What is Anynet+?

Anynet+ is a convenient function that offers linked operation of this unit through Samsung TVs with the Anynet+ feature.

- If your Samsung TV has an **Anynet+** logo, then it supports the Anynet+ function.
- If you turn on the player and insert a disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.
- If you turn on the player and press the Play button with a disc already inserted, the TV will immediately turn on and switch to HDMI mode.

connections


CONNECTING TO A TV WITH DVI CABLE

1. Using the HDMI-DVI cable (not included), connect the **HDMI OUT** terminal on the rear of the Duo HD player to the **DVI IN** terminal of your TV.
2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the Duo HD player to the **AUDIO (red and white) IN** terminals of your TV.
Turn on the Duo HD player and TV.
3. Press the input selector on your TV remote control until the DVI signal from the Duo HD player appears on your TV screen.
 - If you have set the remote control to properly operate with your TV (see pages 18–19), press the **TV INPUT SEL.** button on the remote control and select HDMI as the external source of the TV.

Connecting the HDMI cable while the Duo HD player's power is on, the player's video output will automatically change to HDMI mode (see page 42).




- Depending on your TV, certain HDMI output resolutions may not work.
- Please refer to the user's manual of your TV.
- If an HDMI or HDMI-DVI cable is plugged into TV, the Duo HD player's output resolution is set to HDMI/DVI automatically within 10 seconds.
- If Component and HDMI are both connected, HDMI mode is automatically selected. (See page 42)
- When you connect the player to the TV using the HDMI cable for the first time or to a new TV, the HDMI output resolution will be automatically set to the highest provided by the TV
- If the HDMI cable is connected or removed during playback of a CDDA, the player will stop playing.

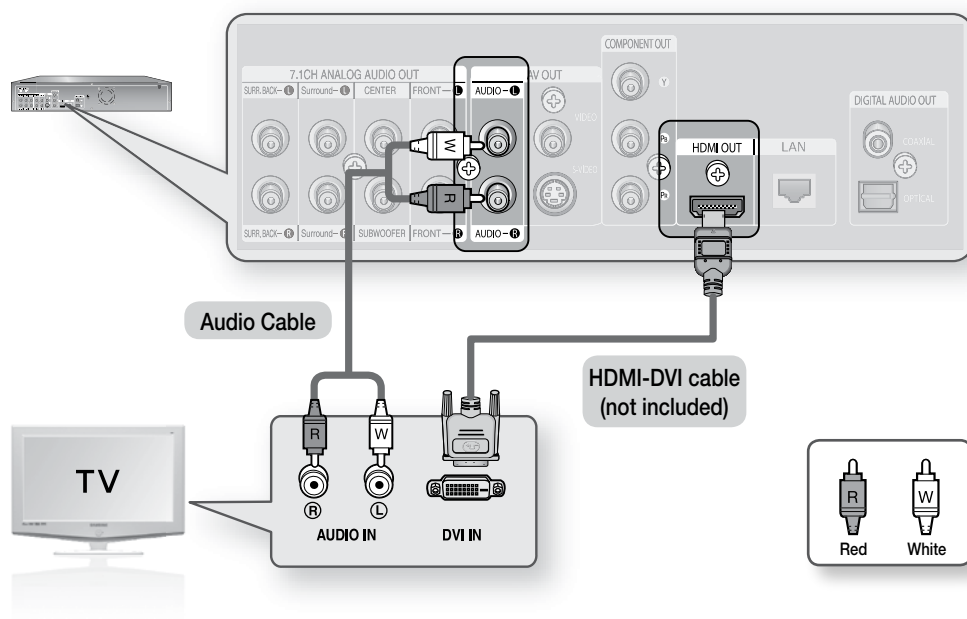

CONNECTING TO A TV (COMPONENT)

- Connecting to your TV using Component video cables.
 - You will enjoy high quality and accurate color reproduction images. Component video separates the picture element into black and white(Y), blue(Pb), red(Pr) signals to present clear and clean images. (Audio signals are delivered through the audio output.)
1. Using Component video cables (not included) , connect the **COMPONENT VIDEO OUT** terminals on the rear of the Duo HD player to the **COMPONENT IN** terminals of your TV.
 2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the Duo HD player to the **AUDIO (red and white) IN** terminals of your TV. Turn on the Duo HD player and TV.
 3. Press the input selector on your TV remote control until the Component signal from the Duo HD player appears on the TV screen.
 - If you have set the remote control to properly operate with your TV (see pages 18~19), press the **TV INPUT SEL.** button on the remote control and select COMPONENT as the external source of the TV.

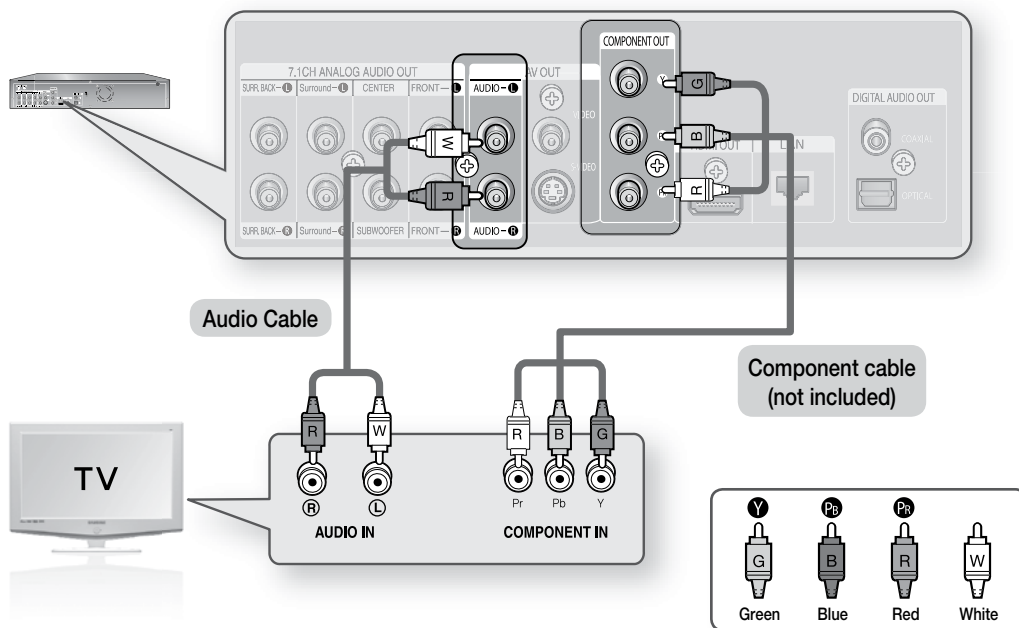

- Depending on the manufacturer, the component terminals on your TV may be marked “R-Y, B-Y, Y” or “Cr, Cb, Y” instead of “Pr, Pb, Y”. The number and position of terminals may vary depending on the TV set. Please refer to the user’s manual of your TV.
- You can select from a variety of resolution settings such as 1080i, 720p, 480p and 480i, depending on the disc type. (See page 42)
- The actual resolution may differ from the setting in the SETUP menu if both Component and HDMI cables are connected. The resolution may also be different depending on the disc. (See page 42)
- In DVD playback, if both HDMI and Component jacks are connected and you select the Component mode, the Display Setup menu will show the output resolution as 1080p. The resolution is actually 480i.


connections

CONNECTING TO A TV (S-VIDEO)

- Connecting to your TV using an S-Video cable.

- You will enjoy high quality images. S-Video separates the picture element into black and white(Y) and color(C) signals to present clearer images than regular video input mode.
(Audio signals are delivered through the audio output.)


1. Using an S-Video cable (not included), connect the **S-VIDEO OUT** terminal on the rear of the Duo HD player to the **S-VIDEO IN** terminal of your TV.
2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the Duo HD player to the **AUDIO (red and white) IN** terminals of your TV. Turn on the Duo HD player and TV.
3. Press the input selector on your TV remote control until the S-Video signal from the Duo HD player appears on your TV screen.
 - If you have set the remote control to properly operate with your TV (see pages 18–19), press the **TV INPUT SEL.** button on the remote control and select S-VIDEO as the external source of the TV.

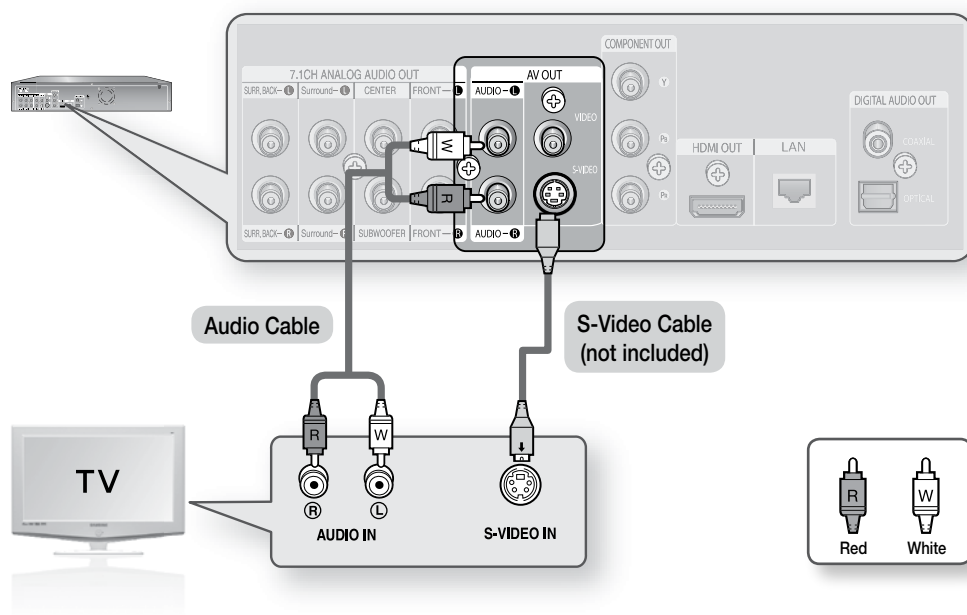

- The S-VIDEO source is always output in 480i resolution regardless of the resolution set in the SETUP menu. (See page 42)

CONNECTING TO A TV(VIDEO)

1. Using video/audio cables, connect the **VIDEO (yellow) / AUDIO (red and white) OUT** terminals on the rear of the Duo HD player to the **VIDEO (yellow) / AUDIO (red and white) IN** terminals of your TV.
2. Turn on the Duo HD player and TV.
3. Press the input selector on your TV remote control until the Video signal from the Duo HD player appears on the TV screen.
 - If you have set the remote control to properly operate with your TV (see pages 18~19), press the **TV INPUT SEL.** button on the remote control and select VIDEO as the external source of the TV.

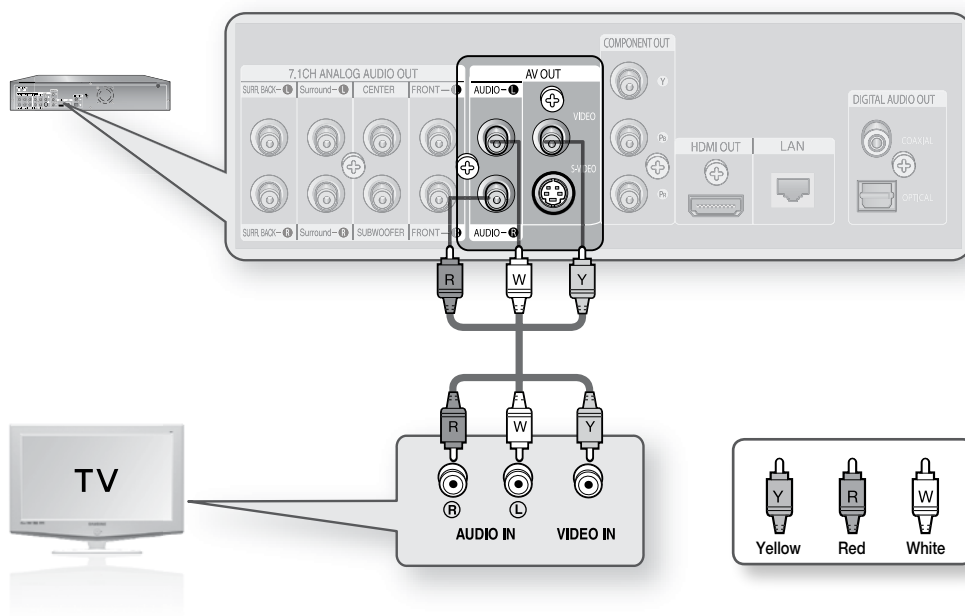


- Noise may be generated if the audio cable is placed too close to the power cable.
- If you want to connect to an Amplifier, please refer to the Amplifier connection pages. (See pages 26~29)
- The number and position of terminals may vary depending on your TV set. Please refer to the user's manual of your TV.
- If there is one audio input terminal on the TV, connect it to the [AUDIO OUT][left] (white) terminal of the Duo HD player.
- The VIDEO source is always output in 480i resolution regardless of the resolution set in the SETUP menu. (See page 42)

connections

CONNECTING TO AN AUDIO SYSTEM (2 CHANNEL AMPLIFIER)


1. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the Duo HD player to the **AUDIO (red and white) IN** terminals of your Amplifier.
2. Using the video signal cable(s), connect the **HDMI, COMPONENT, S-VIDEO, or VIDEO OUT** terminals on the rear of the Duo HD player to the **HDMI, COMPONENT, S-VIDEO, or VIDEO IN** terminal of your TV as described on pages 20 to 25.
3. Turn on the Duo HD player, TV and Amplifier.
4. Press the input select button of the Amplifier to select the **external input** in order to hear sound from the Duo HD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

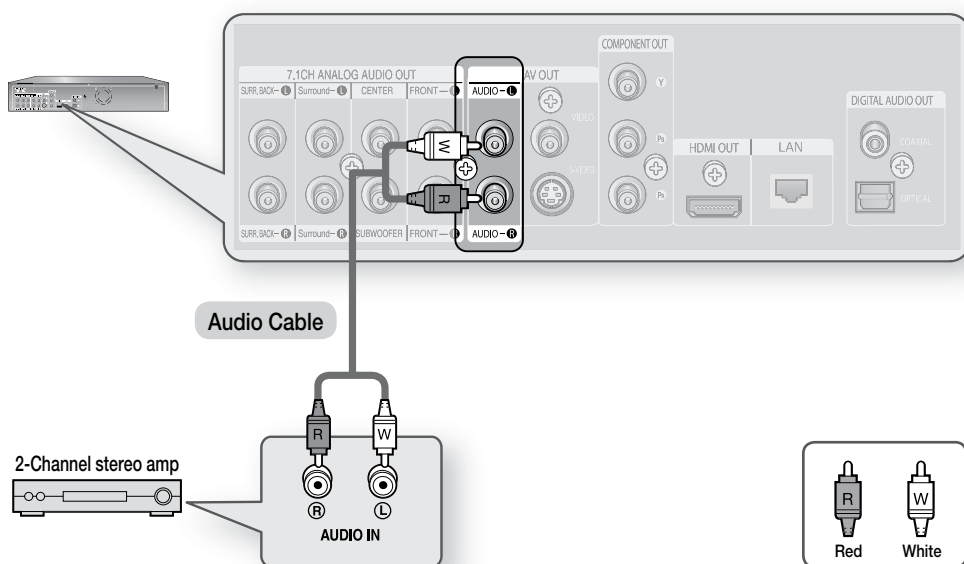

- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

CONNECTING TO AN AUDIO SYSTEM (7.1 CHANNEL AMPLIFIER)

1. Using the audio cables, connect the **7.1 ANALOG AUDIO OUT (Front R, Front L, CENTER, SUBWOOFER, Surround L, Surround R, SURR.BACK L, SURR.BACK R)** terminals on the rear of the Duo HD player to the **7.1 Channel ANALOG AUDIO IN (Front R, Front L, CENTER, SUBWOOFER, Surround L, Surround R, SURR.BACK L, SURR.BACK R)** terminals of your Amplifier.
2. Using the video signal cable(s), connect the **HDMI, COMPONENT, S-VIDEO, or VIDEO OUT** terminals on the rear of the Duo HD player to the **HDMI, COMPONENT, S-VIDEO, or VIDEO IN** terminal of your TV as described on pages 20 to 25.
3. Turn on the Duo HD player, TV and Amplifier.
4. Press the input select button of the Amplifier to select **external input** in order to hear sound from the Duo HD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

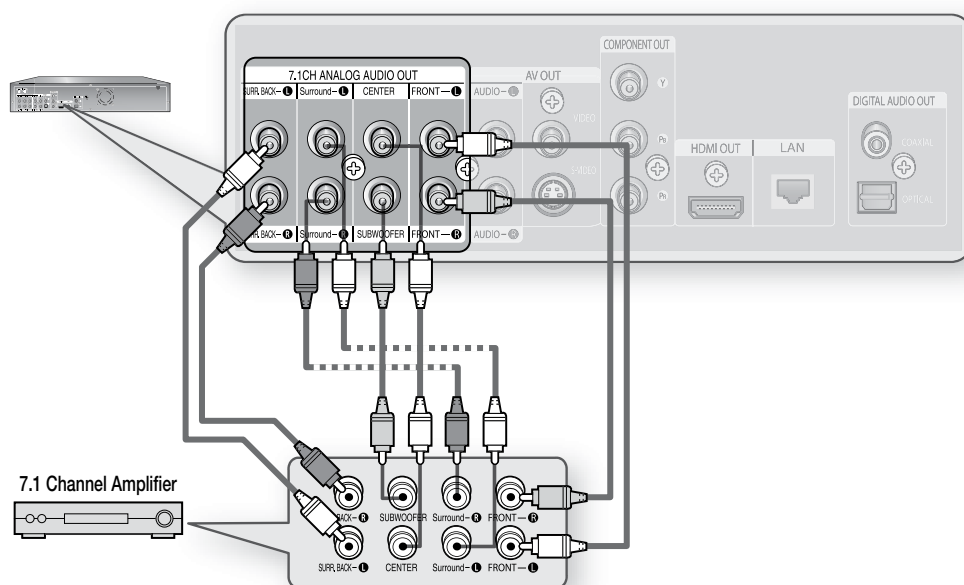


- Please turn the volume down when you turn on the Amplifier. Sudden loud sound may cause damage to the speakers and your ears.
- Please set the audio in the menu screen according to the Amplifier. (See pages 37~38)
- The position of terminals may vary depending on the Amplifier. Please refer to the user's manual of your Amplifier.
- The front left and right outputs on your player and 7.1 channel amplifier must be connected to hear disc menu audio from certain Blu-Ray/HD DVD discs.
- When connecting to a 5.1 channel home theater or receiver, connect all the Analog Audio output jacks from the player except for the Surround Back Left/Surround Back Right outputs.

connections

CONNECTING TO AN AUDIO SYSTEM (DOLBY DIGITAL, DTS AMPLIFIER)


1. If using an optical cable (not included), connect the **DIGITAL AUDIO OUT (OPTICAL)** terminal on the rear of the Duo HD player to the **DIGITAL AUDIO IN (OPTICAL)** terminal of your Amplifier.
If using a coaxial cable (not included), connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the Duo HD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.
2. Using the video signal cable(s), connect the **HDMI**, **COMPONENT**, **S-VIDEO**, or **VIDEO OUT** terminals on the rear of the Duo HD player to the **HDMI**, **COMPONENT**, **S-VIDEO**, or **VIDEO IN** terminals of your TV as described on pages 20 to 25.
3. Turn on the Duo HD player, TV, and Amplifier.
4. Press the input select button of the Amplifier to select the **external input** in order to hear sound from the Duo HD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

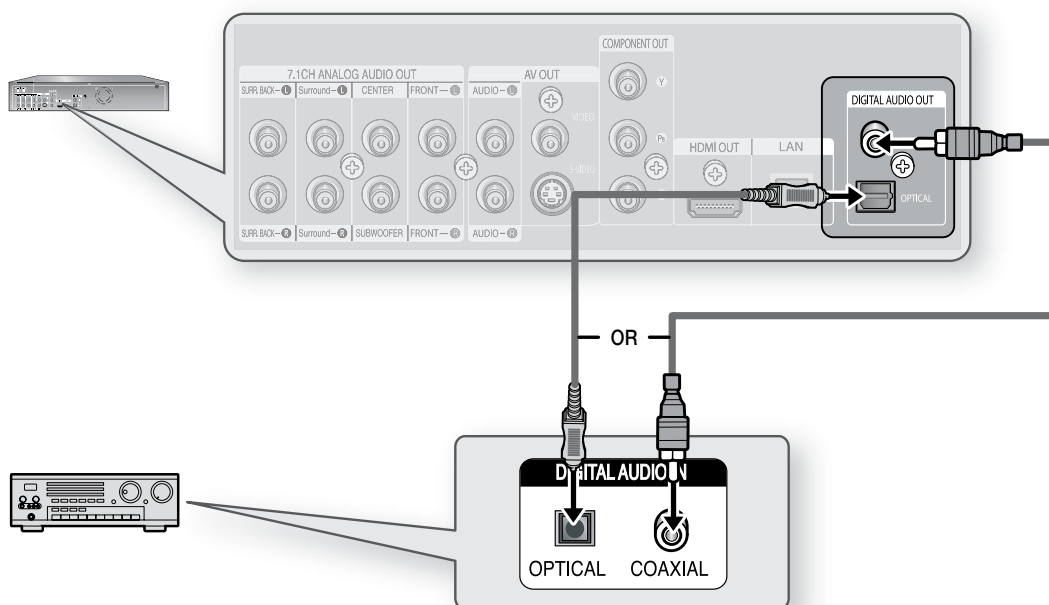

- Please turn the volume down when you turn on the Amplifier. Sudden loud sound may cause damage to the speakers and your ears.
- Please set the audio in the menu screen according to the Amplifier. (See pages 37~38)
- The position of terminals may vary depending on the Amplifier. Please refer to the user's manual of your Amplifier.
- When using this connection, discs with LPCM audio soundtracks will only be heard over the front two channels.

CONNECTING TO AN AUDIO SYSTEM (HDMI SUPPORTED AMPLIFIER)

1. Using the HDMI-HDMI cable (not included), connect the **HDMI OUT** terminal on the rear of the Duo HD player to the **HDMI IN** terminal of your Amplifier.
2. Using the HDMI-HDMI cable, connect the **HDMI OUT** terminal of the Amplifier to the **HDMI IN** terminal of your TV.
3. Turn on the Duo HD player, TV, and Amplifier.
4. Press the input select button of the Amplifier to select **external input** in order to hear sound from the Duo HD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

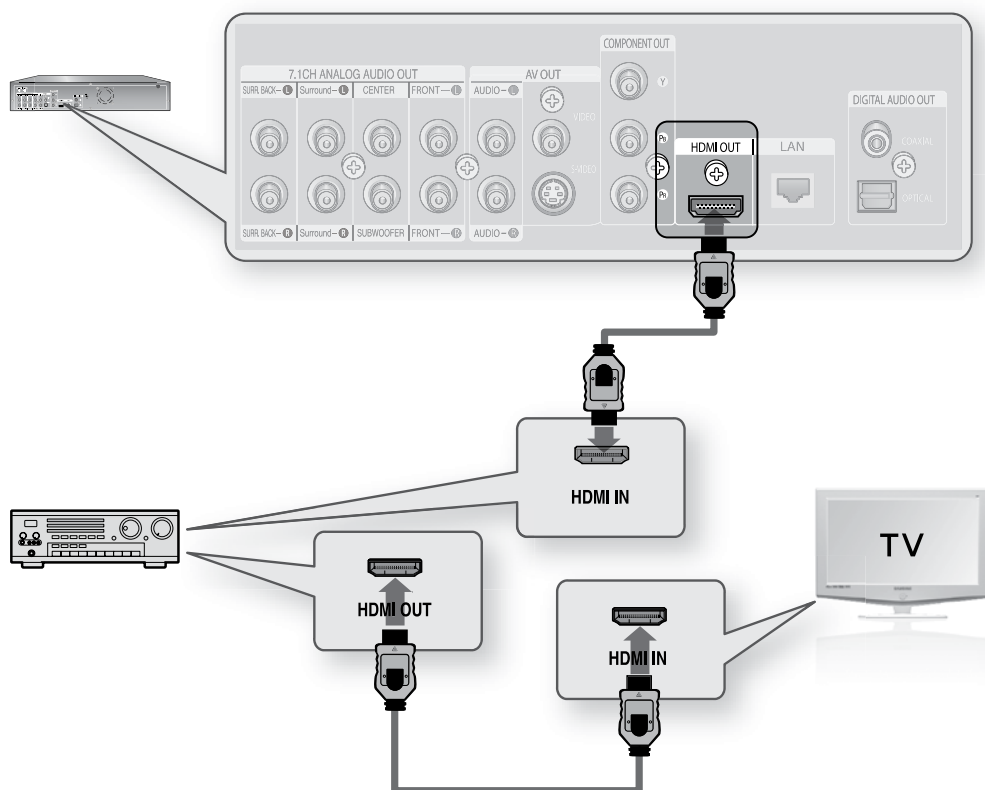

- Please turn the volume down when you turn on the Amplifier. Sudden loud sound may cause damage to the speakers and your ears.
- Please set the audio in the menu screen according to the Amplifier. (See pages 37~38)
- The position of terminals may vary depending on the Amplifier. Please refer to the user's manual of your Amplifier.


connections

CONNECTING TO THE INTERNET

By connecting your Duo HD Player to the Internet, you may be able to access and enjoy additional content with your HD DVD disc.

Some HD DVD Sites provide downloadable control programs for improved interactivity. You can also update the player's firmware via the Internet when available.

1. Using the Direct LAN Cable (UTP cable), connect the LAN terminal on the rear of the Duo HD player to the LAN terminal of your modem.

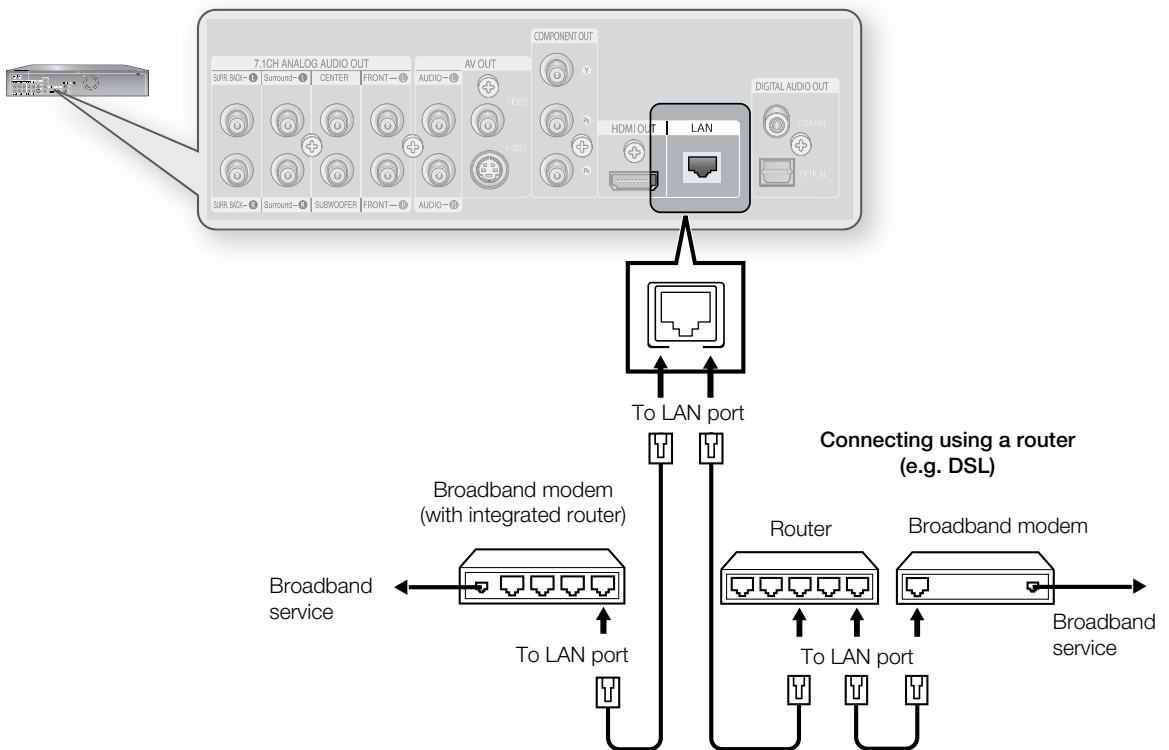

- Internet access may not be allowed, depending on the router you use or the ISP's policy. For more information, contact your ISP (Internet Service Provider).
- For DSL users, please use the router to make network connection.
- Internet connectivity with HD DVD depends on the disc's content.

basic functions of your Duo HD player


This section introduces basic playback functions and playback by disc type.

BEFORE PLAYING

- Turn on your TV and set it to the correct Video Input (the input the Duo HD player is connected to).
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the **POWER** button, this screen comes up:


If you want to select a language, press a **NUMBER** button. (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **▶▶** button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the MENU LANGUAGE SELECTION window appears again where you can reset your preferred language.

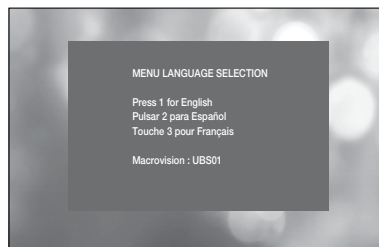

- Discs which cannot be played on this player.
 - BD-R
 - BD-RE
 - HD DVD-R
 - DVD+RW
 - DVD+R
 - DVD-ROM
 - DVD-RAM
 - CDV
 - CD-ROM
 - CVD
 - CD-I
 - CD-RW
 - Super Audio CD(except CD layer)
 - CDGs play audio only, not graphics.
- Ability to play back may depend on recording conditions.
 - DVD-R
 - DVD-RW (V mode)
 - CD-R
 - The unit may not play certain CD-R and DVD-R due to the disc type or recording conditions.
- Blu-ray/HD DVD is a new and evolving format. Accordingly, disc compatibility issues with new and existing format discs are possible. Not all discs are compatible and not every disc will playback. For additional information, refer to the Disc Type and Characteristics and Compliance and Compatibility Notice sections of this Manual. If you encounter compatibility problems, please contact SAMSUNG customer care center.
- The unit cannot play CD-R and DVD-RW/-R recorded content such as divx, avi, mpg, mov, wma, mp3, digital photo view(JPEG) file.

basic functions of your Duo HD player

ON-SCREEN MENU NAVIGATION

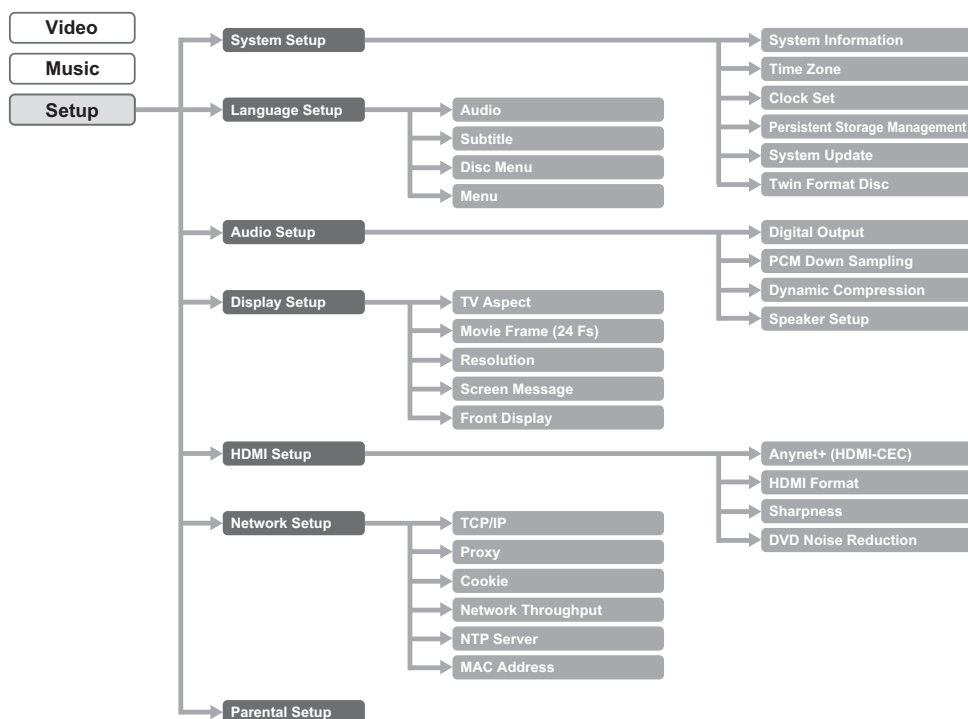

PLAYING A DISC

1. Press the **OPEN/CLOSE** (⏏) button.
The **STANDBY** indicator light goes out and the tray opens.
2. Place a disc gently into the tray with the disc's label facing up.
3. Press the **PLAY/PAUSE** (⏮) button or **OPEN/CLOSE** (⏏) button to close the disc tray.

- ✍ When you stop disc play, the player remembers where you stopped, so when you press **PLAY/PAUSE** (⏮) button again, it will pick up where you left off.
- Press the **STOP** (⏏) button twice during playback to disable the Resume function.
- To pause the playback, press the **PLAY/PAUSE** (⏮) button during playback.
To resume, press the **PLAY/PAUSE** (⏮) button once again.
- If the player is left in the stop mode more than 10 minutes without any user interface, a screen saver will appear on your TV. If the player is left in the screen saver mode for more than 30 minutes, the power will automatically turn off except during playback of an CDDA (Automatic Power-Off Function).

TO PLAY A TWIN-FORMAT HD DVD DISC



To play a twin-format HD DVD disc, you should select HD DVD or DVD before inserting the disc. This can be enabled only for a twin-format HD DVD disc.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Twin Format Disc**, then press the **ENTER** or **▶** button.
5. Select HD DVD or DVD on the menu then press **ENTER**.



- You cannot change the format during playback.

USING THE SEARCH AND SKIP FUNCTIONS

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track



During playback, press the **SEARCH** (**⏪** **⏩**) button.

- If you want to search at a faster speed on the BD/HD DVD/DVD, press this button.
- If you press the **SEARCH** (**⏩**) button,
▶▶ X2 ▶▶ X4 ▶▶ X8 ▶▶ X16 ▶▶ X32 ▶▶ X128
- If you press the **SEARCH** (**⏪**) button,
◀◀ X2 ◀◀ X4 ◀◀ X8 ◀◀ X16 ◀◀ X32 ◀◀ X128



- No sound is heard during search mode.

Skipping Tracks



During playback, press the **SKIP** (**⏮** **⏭**) button.

When playing a BD/HD DVD/DVD, if you press the **SKIP** (**⏭**) button, it moves to the next chapter. If you press the **SKIP** (**⏮**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.

basic functions of your Duo HD player

SLOW MOTION PLAY/STEP MOTION PLAY

Slow Motion Play



In pause or step mode, press the **SLOW** button on the remote control for Slow Motion play.

- If you press the **SLOW** button, **▶▶ 1/8 ▶▶ 1/4 ▶▶ 1/2**
- To return to normal speed playback, press the **PLAY/PAUSE** (⏮) button.



- This (⊘) icon indicates an invalid button press.
- No sound is heard during slow mode.
- Slow motion operates only in the forward direction.

Step Motion Play



Press the **STEP** button on the remote control during play for Step Motion play.

- Each time the button is pressed a new frame will appear.
- When the **STEP** button is pressed, the next frame will be activated.
- Press the **PLAY/PAUSE** (⏮) button to resume normal play.



- No sound is heard during step mode.
- Step motion operates only in the forward direction.



system setup

For your convenience, you can set this player's features for the best use in your home environment.

SETTING THE CLOCK

Choose your time zone

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Time Zone**, then press the **ENTER** or **▶** button.
5. Use the **▲▼** button to place the cursor to the appropriate time zone for your area and press the **ENTER** button.

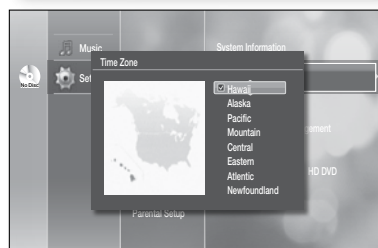
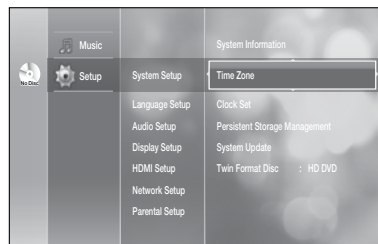


- You should set NTP Server to On before you can configure the correct time setting for your area. (see page 49)

Set the clock

To setup, follow steps 1 and 3 above.

4. Press the **▲▼** buttons to select **Clock Set**, then press the **ENTER** or **▶** button.
5. Press the **◀▶** buttons to move to "**da.**"(date), "**hr**" (hour), "**min**" (minute), and "**am/pm**" Set the date and time by pressing the **▲▼** buttons, then press the **ENTER** button.

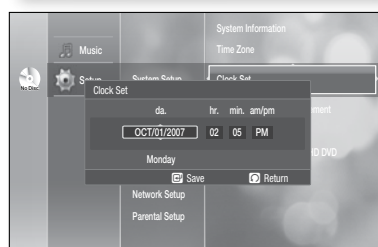
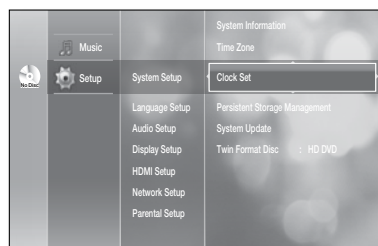


language setup

SETTING UP THE LANGUAGE OPTIONS

If you set the audio, subtitle, disc menu and player menu, in advance, they will come up automatically every time you watch a movie.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Language Setup**, then press the **ENTER** or **▶** button. Language setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired language option, press the **ENTER** or **▶** button.
 - **Audio** : For the disc audio language.
 - **Subtitle** : For the disc subtitles.
 - **Disc Menu**: For the disc menu contained on the disc
 - **Menu**: For the on-screen menu of your Duo HD player.
5. Press the **▲▼** buttons to select the desired language, then press the **ENTER** button.

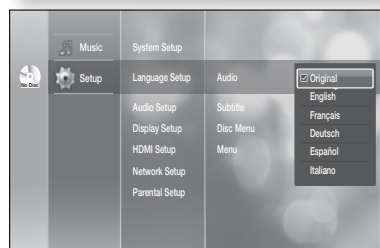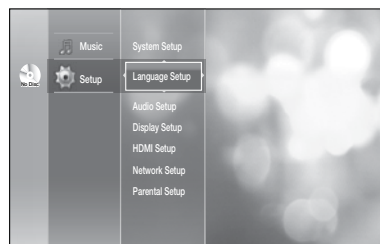



- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.
- The selected language will only appear if it is supported on the disc.

audio setup

SETTING UP THE AUDIO OPTIONS

Allows you to set up the Audio device and sound status depending on the audio system being used with the player.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the desired audio option from the options described below, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select the desired item, then press the **ENTER** button.

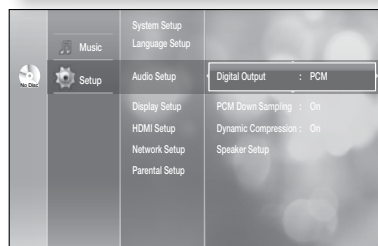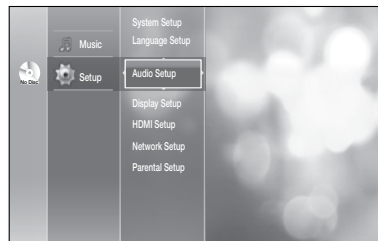


- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

Digital Output

BD and HD DVD discs may include three audio streams.

- Primary Audio : Main audio sound track of the disc
- Secondary Audio : Provides audio for the PIP window of an HD DVD
- Effect Audio : You will hear a sound every time an item is selected in a BD/HD DVD menu.

- **PCM** : Select this when your equipment (Home theater or Receiver) does not decode Dolby Digital. Primary, Secondary and Effect audio is possible.
- **Bitstream(Re-encode)** : Re-encodes the Primary, Secondary and Effect audio streams for DTS.
- **Bitstream(Audiophile)** : Provides a higher level of audio quality when watching a disc. Only Primary audio (main movie soundtrack) will be heard.

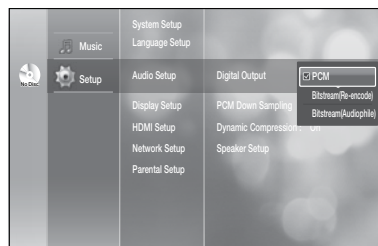



- If you have selected a LPCM sound track on a disc, the output will automatically be set to PCM.
- Be sure to select the correct Digital Output or you will hear no sound or a loud noise.
- When playing a Dolby Digital movie make sure the Digital Output is set to Bitstream.
- If the HDMI device (Receiver, TV) is not compatible with compressed formats (Dolby digital, DTS), the audio signal outputs as PCM.
- Secondary and Effect audio will not be heard with regular DVDs.
- Some BD and HD DVD discs do not have Secondary and Effect audio.

audio setup

PCM Down Sampling

- **On** : Select this when the Amplifier connected to the player is not 96KHz compatible. 96KHz signals will be down converted to 48KHz
- **Off** : Select this when the Amplifier connected to the player is 96KHz compatible. Signals will be output without any changes.

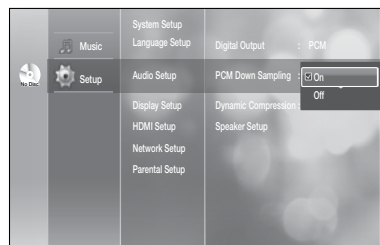

-  Even when PCM Down Sampling is set to Off, some discs will only output downsampled audio through the coaxial and optical digital outputs.


HDMI

- If your TV is not compatible with compressed multi-channel formats (Dolby Digital, DTS), you should set Digital Audio to PCM.
- If your TV is not compatible with LPCM sampling rates over 48kHz, you should set PCM Down Sampling to On.

Dynamic Compression

This is only active when a Dolby Digital signal is detected.


- **Off** : You can enjoy the movie with the standard Dynamic Range.
- **On** : When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.

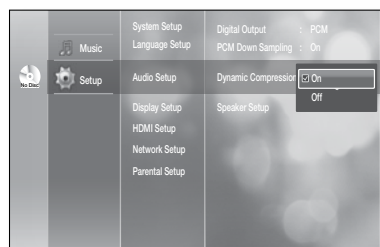


SETTING UP THE SPEAKER OPTIONS

If you have connected this player to an Amp/Receiver or Home theater via the 7.1 channel Analog outputs you need to set the Speaker Options for the best sound.


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.

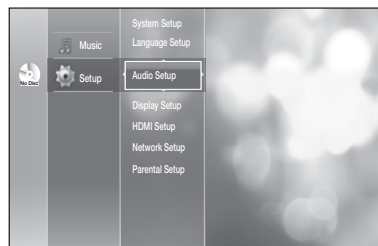

3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.

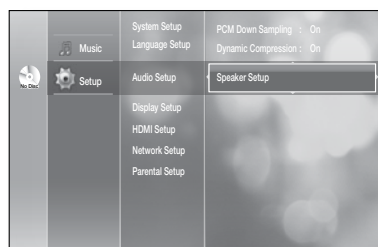

4. Press the **▲▼** buttons to select **Speaker Setup**, then press the **ENTER** or **▶** button.
5. Press the **▲▼◀▶** buttons to select the desired Speaker, then press the **ENTER** button.
6. When done, use the **▲▼◀▶** buttons to select **Save**, then press the **ENTER** button.
If you don't want to save your work, use the **▲▼◀▶** buttons to select **Cancel**, then press the **ENTER** button.

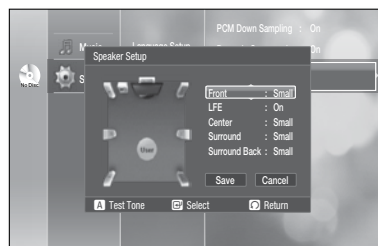

- Press the **RETURN** or **◀** button to return to the previous menu.

Speaker Setup

Front (L, R)	Large, Small
Center (C)	Large, Small, None
Surround (LS, RS)	Large, Small, None
Subwoofer (LFE)	On, Off
Surround Back (LSB, RSB)	Large, Small, None

Speaker

- **Large** : Delivers full bandwidth sound with bass below 100 Hz.
- **Small** : If LFE is on, bass below 100 Hz will be outputted through a Subwoofer instead of the speakers. If LFE is off and the Front Speaker is set to Large, sound will be outputted through the Front Speaker.
- **None** : Select to disable the speakers.

Subwoofer Speaker

- **On** : Select to use the subwoofer speaker.
- **Off** : Select to disable the subwoofer speaker.
(This option can only be selected when the Front (L+R) speakers are set to Large.)

Press the RED(A) button



- A test tone will be sent to **L → C → R → RS → RSB → LSB → LS → LFE** in order so you can make sure the speakers are set up correctly.
- To end the test tone, press the **RED (A)** button again.
- The test tone can only be activated when no discs are in the unit.
- The test tone outputs through the 7.1 channel analog outputs only.


display setup

SETTING UP THE VIDEO DISPLAY/OUTPUT OPTIONS

This function allows you to setup the TV screen settings. This function depends on the disc or TV type. It may not work with some discs or TVs.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select Setup, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Display Setup**, then press the **ENTER** or **▶** button.
Video setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option from the options on the following pages.
5. Press the **▲▼** buttons to select the desired sub-menu item from a video display option, then press the **ENTER** button.

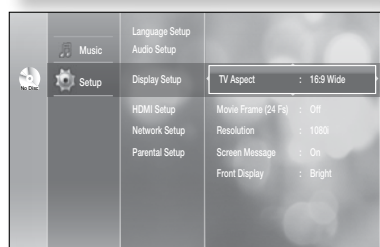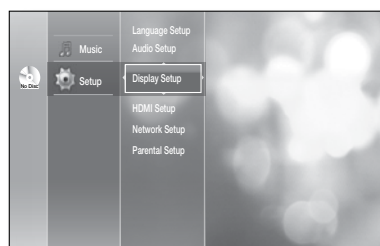

 Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting. (aspect ratio)




- **4:3 Letter Box :**
Select when you want to see the total 16:9 ratio screen BD/HD DVD/DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.




- **4:3 Pan-Scan :**
Select this for conventional size TV when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)



- **16:9 Wide :**
You can view the full 16:9 picture on your widescreen TV.

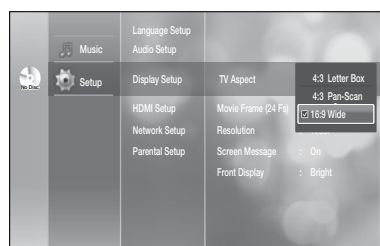

 Depending on the disc type, some aspect ratios may not be available.


Movie Frame (24 Fs)

Movies are usually filmed at 24 frames per second. Some Blu-ray/HD DVD discs have the capability of playing back at this frame rate. Setting the Movie Frame (24Fs) feature to ON allows you to adjust the Duo HD player's HDMI output to 24 frames per second for improved picture quality.

You can enjoy the Movie Frame (24Fs) feature solely on a TV supporting this frame rate.

This menu can only be selected in 1080i or 1080p HDMI output resolution modes.

Depending on the disc, two types of frame rates may be included: Movie material (24 frame) and Video material (30 frame). When the setting switches between Movie(24 frame) and Video (30 frame), the screen may blink for a few seconds.

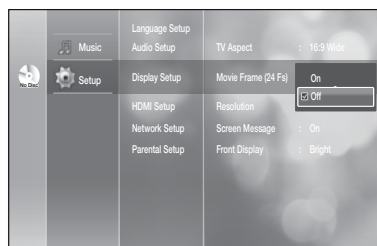

Resolution

Sets the output resolution of the Component and HDMI video signal.

- The number in 480i, 480p, 720p, 1080p and 1080i indicates the number of lines of video. The i and p indicate interlace and progressive scan, respectively.
 - 1080p : Outputs 1080 lines of progressive video.
 - 1080i : Outputs 1080 lines of interlaced video.
 - 720p : Outputs 720 lines of progressive video.
 - 480p : Outputs 480 lines progressive video.
 - 480i : Outputs 480 lines of interlaced video.



If the connected TV does not support Movie Frame or the selected resolution, you will see the following message:

If you select Yes and the resolution is not supported, the TV's screen will be blank.



- If the screen is blank, press and hold the ►► button on the front of the player for more than 5 seconds (no disc inserted). All settings are restored to the factory default. Follow the steps on the previous page to access each mode and select the Display Setup that your TV will support.
- When the factory default settings are restored, all the user data stored in the persistent storage will be deleted.
- When the HDMI video output is Movie Frame(24 fs), simultaneous out is disabled.

display setup

❖ Resolution according to the output mode (Simultaneous Output with HDMI)

- BD/HD DVD playback

Setup \ Output	HDMI	Component	VIDEO/S-Video
1080p, Movie Frame(24Fs) off	1080p@60F	1080i	480i
1080p/1080i, Movie Frame (24Fs) on	1080p@24F	-	-
1080i, Movie Frame (24Fs) off	1080i	1080i	480i
720p	720p	720p	480i
480p	480p	480p	480i
480i	480p	480i	480i

- DVD playback

Setup \ Output	HDMI	Component	VIDEO/S-Video
1080p	1080p@60F	480i	480i
1080i	1080i	480i	480i
720p	720p	480i	480i
480p	480p	480i	480i
480i	480p	480i	480i



- In DVD playback, if both HDMI and Component jacks are connected and you select the Component mode, the Display Setup menu will show the output resolution as 1080p. The resolution is actually 480i.
- This player has the HDMI Auto Detect Feature. When the player is first connected to a TV via HDMI, the player's output will be set automatically to HDMI.
- If the HDMI Auto Detection feature does not work, you can't select the 1080p resolution or Movie Frame (24Fs).
- The BD/HD DVD disc must have the 24 frame feature in order to use the Movie Frame (24Fs) mode.
- If you connect only Component cable to your TV, the Component resolution may differ from the chart above.

Screen Message

- **On** : Displays messages related to operation mode.
- **Off** : Does not display messages related to operation mode.


Front Display

- **Automatic** : Display is dark during playback and bright when the unit is in Stop mode.
- **Dim** : Select to dim the display window.
- **Bright** : Select to brighten the display window.

HDMI setup

SETTING UP THE HDMI SETUP OPTIONS


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **HDMI Setup**, then press the **ENTER** or **▶** button.
HDMI setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option (Anynet+ or Format), then press the **ENTER** or **▶** button.

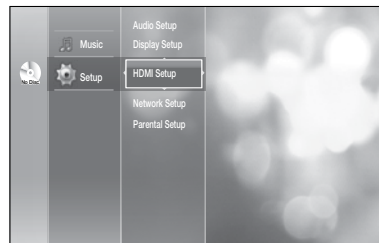

Anynet+ (HDMI-CEC)

When HDMI is set to on, you can operate the Anynet+ function.

- **On** : Anynet+ functions will work.
- **Off** : Anynet+ function will not work.

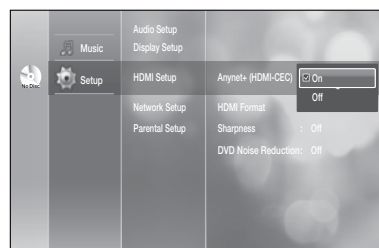

What is Anynet+?

Anynet+ is a convenient function that offers linked operations with other Samsung products with the Anynet+ feature.

You can operate this unit using a Samsung TV remote control or power on your Samsung TV and Home theater and start disc playback simply by pressing the **PLAY** button on the TV's remote.



▪ This function is not available if the HDMI cable does not support CEC.

To use Anynet+

1. Connect the **Duo HD player** to a Samsung TV with an HDMI cable. (See pages 20~21)
2. Set the Anynet+ (HDMI CEC) to "On" on your **Duo HD player**.
3. Set the Anynet+ function on your TV. (See the TV instruction manual for more information.)

Anynet+ Functions

- One touch play
You can power on your Samsung TV and Home Theater, and play the disc in this unit simply by pressing the **PLAY** button on the TV's remote.
- One touch watching
Select "Watching Duo HD player" or "Connected to Duo HD player" (depending on your TV's menu) in the Anynet+ menu on the TV. The Duo HD player will automatically turn on and the TV will be switched to HDMI mode.
- Remote control Link
You can operate this player with your Samsung TV remote control.
- Available buttons on the Samsung TV remote: These buttons work the same as this player's remote control.

HDMI setup

- Playback control buttons : ⏪ ⏩ ⏸ ⏹
- Menu operation button : ⏸ ⏹ ⏺ ⏻ ⏼
- Numeric buttons : 0 ~ 9
- Color buttons : 🔴 🔵 🔴 🔵

TV Anynet+ Menu

When pressing the Anynet+ button on your Samsung TV's remote control, the following On-Screen Display (OSD) will be shown.

- Duo HD player Menu
 - When playing a movie : brings up the disc's menu (same as **DISC MENU** button on the Duo HD player's remote control)
 - In Stop mode : brings up the SETUP menu (same as the **MENU** button on the Duo HD player's remote control.)
- Duo HD player Operation Menu
 - When playing a HD DVD, DVD VIDEO, DVD-RW/-R, BD-ROM : shows INFO OSD (same as **INFO** button on the player's remote control)




☞ These menus will vary from Samsung TV to TV.

HDMI Format

You can optimize the HDMI output for connection to a TV or Monitor.

- **TV** : Select if connected to a TV via HDMI.
- **Monitor** : Select if connected to a Monitor via HDMI.

If the player is connected to a TV, the Monitor option is unavailable.

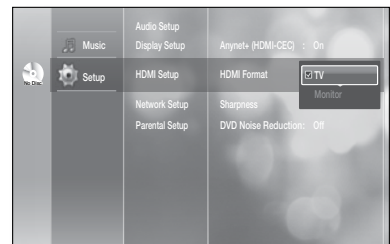

Sharpness

To adjust the picture smoothness.


(Low, Middle, High)



DVD Noise Reduction

This setting can be used to reduce image noise on DVD discs on the screen.(Low, Middle, High)

This feature does not work with BD or HD DVD discs.

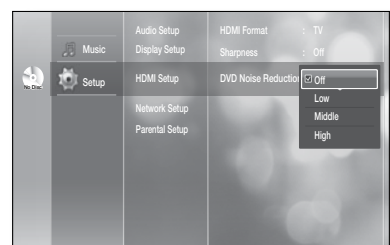





parental setup

SETTING UP THE PARENTAL LOCK

The Parental Lock function works in conjunction with BD/HD DVD/DVDs that have been assigned a rating which helps you control the types of BD/HD DVD/DVDs that your family watches. There are up to 8 rating levels on a disc.



1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Parental Setup**, then press the **ENTER** or **▶** button.
When you operate your Duo HD player for the first time, the “Enter New password” message will be displayed.
4. Enter the 4-digit password using the number buttons on the remote control.
The “Confirm the password” message will be displayed.
Enter your password again.
5. Press the **ENTER** or **▶** button to select **Parental Lock**.
6. Press the **▲▼** buttons to select **On** or **Off**, then press the **ENTER** button.

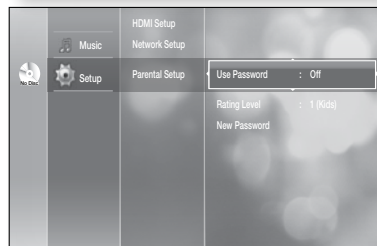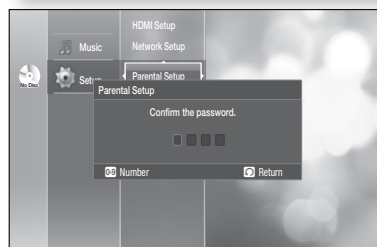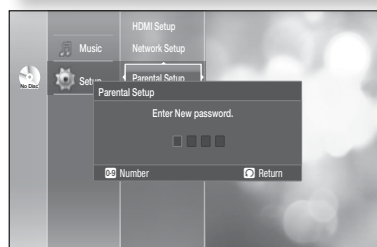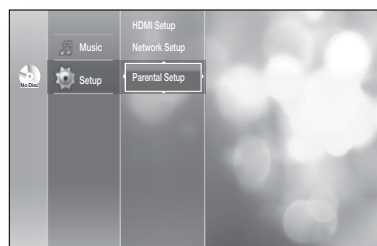

Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

If you forgot your password

1. Remove the disc.
2. Press and hold the **▶▶▶** button on the front panel for 5 seconds or more.
 - All settings will revert to the factory settings.




When the factory default settings are restored, all the user data stored in the persistent storage will be deleted.


parental setup

Setting the Rating Level

1. Press the ▲▼ buttons to select **Rating Level**, then press the **ENTER** or ► button.

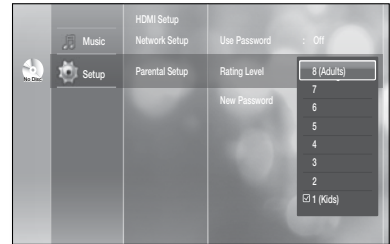


2. Press the ▲▼ buttons to select the rating level you want, then press the **ENTER** button. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play. A larger number indicates that the program is intended for adult use only. Level 1 is the most restrictive and Level 8 is the least.

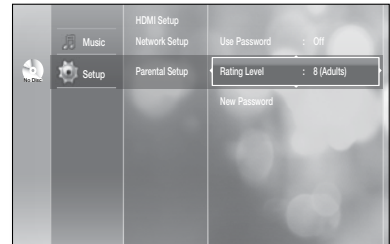


Changing the Password


1. Press the ▲▼ buttons to select **New Password**, then press the **ENTER** or ► button.

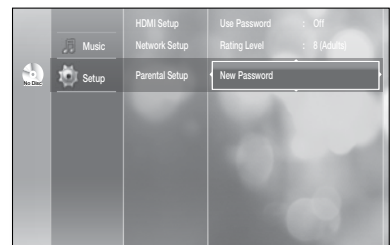

2. Enter the 4-digit password using the number buttons on the remote control. The “Enter New password.” message will be displayed.

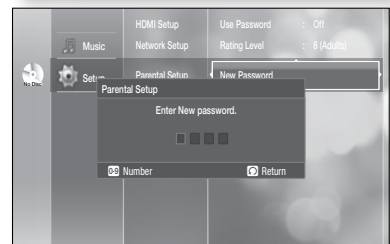

3. Enter your password again using the number buttons on the remote control.

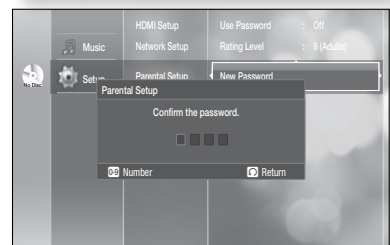

network setup



You can enjoy contents provided by the movie studio or update your player via the Internet. Follow the steps below to ensure the best connection to the Internet for your player. To obtain information on the proper settings, check the network settings on your computer or contact your Internet provider.

TCP/IP SETTING

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Network Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **TCP/IP**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select **DHCP**, then press the **ENTER** button.




- If DHCP is set to On, you can't select IP Address, Subnet Mask or Gateway.
- If DNS is set to Automatic, you can't select Primary/Secondary DNS.

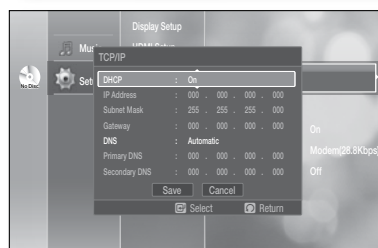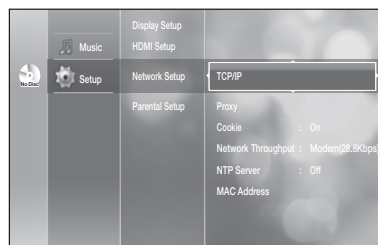


6. Press the **▲▼** buttons to select a desired item, then press the **ENTER** button.


- If DHCP is set to Off and, DNS to Manual, enter the following for the IP Address, Subnet Mask, Gateway and Primary DNS settings (Secondary DNS is optional).

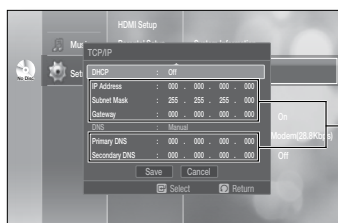

- If DHCP is set to On and, DNS to Manual, enter the following for the Primary DNS setting (Secondary DNS is optional).

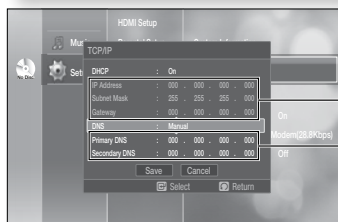

- If DHCP is set to On and, DNS to Automatic, you don't need further or additional settings.

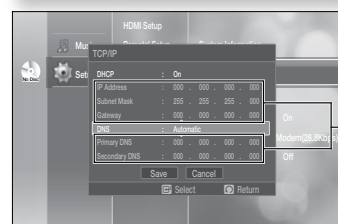

network setup

- When you select an item, use the number and ▲▼◀▶ buttons.

7. When done, use the ▲▼ buttons to select **Save**, then press the **ENTER** button.
8. If you don't want to save your work, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.


- The IP address used in this manual is for illustrative purposes only. You must refer to the your network settings for the actual IP address.
 - To obtain settings for IP address, Subnet mask, Gateway and Primary DNS, check the network settings in your computer.

PROXY SETTING

If you are required to configure the proxy setting, enter the settings specified by the ISP.

To setup, follow steps 1 to 3 in "TCP/IP Setting" on page 47.

4. Press the ▲▼ buttons to select **Proxy**, then press the **ENTER** or ▶ button.
 - **Server**
 - **Port**
 - **User**
 - **Password**

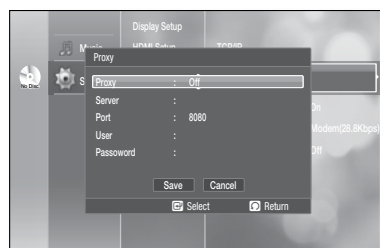

- For more information, contact your ISP (Internet Service Provider).


COOKIE SETTING

A cookie is a small text file that is stored while you are navigating through web sites.

The cookie can contain information such as user ID, user settings, etc.

To setup, follow steps 1 to 3 in "TCP/IP Setting" on page 47.

4. Press the ▲▼ buttons to select **Cookie**, then press the **ENTER** or ▶ button.
 - **On** : Cookies are used between the player and a Web page server.
 - **Off** : Cookies are not used. Convenience may be lost for some pages.

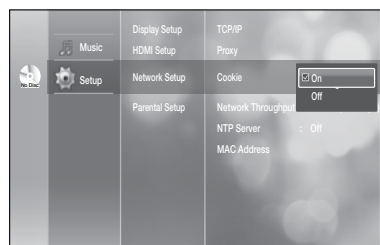

NETWORK THROUGHPUT


Select the Internet modem type that is connected to your player.

To setup, follow steps 1 to 3 in "TCP/IP Setting" on page 47.

4. Press the ▲▼ buttons to select **Network Throughput**, then press the **ENTER** or ► button.

- **Network Throughput Available**

- Modem (28.8k,33.6k,56Kbps)
- ISDN (64Kbps)
- Dual ISDN (128Kbps)
- DSL/CABLE (256kbps)
- DSL/CABLE (384kbps)
- DSL/CABLE (768kbps)
- T1 (1.5Mbps)
- LAN (10Mbps or More)

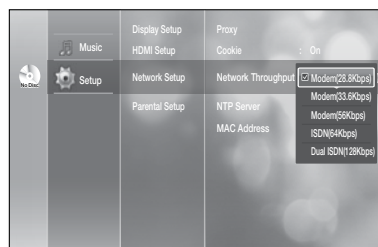


NTP SERVER SETTING

To setup, follow steps 1 to 3 in "TCP/IP Setting" on page 47.

4. Press the ▲▼ buttons to select **NTP Server**, then press the **ENTER** or ► button.

- **On** : the player automatically connects to the Internet server in order to adjust the time setting.
- **Off** : the player does not connect to the Internet server for adjusting the time setting.

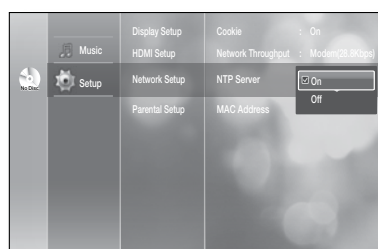


MAC ADDRESS

Displays the MAC address of the player. It cannot be changed.

To setup, follow steps 1 to 3 in "TCP/IP Setting" on page 47.

4. Press the ▲▼ buttons to select **Mac Address**, then press the **ENTER** or ► button.

The MAC address appears.

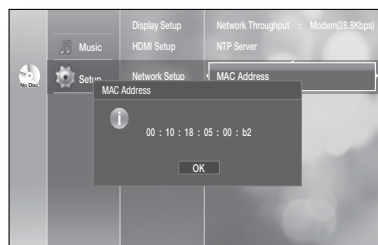

- Samsung shall not be responsible for any malfunction or failed operation due to Internet connection failure or a communication error. Neither Samsung shall be responsible for failure of the user's Internet connection.
- If you want to use wireless Internet, you need a wireless LAN adapter. In similarity, you need a wireless LAN adapter for your Duo HD player.
- HD DVD features using your network are not manufactured nor provided by Samsung. Therefore, Samsung shall not be responsible for proper operation or future update for those features. If you have problem with those matters or any other question, contact the disc manufacturer.
- For some discs, a faster internet connection may be required.
Even if you have successfully installed the player, the internet connection may not work properly according to the network speed or service provided.
- The Internet features of Duo HD player is compatible with IEEE (Institute of Electrical and Electronic Engineers) 802.3.
- You may not access some Internet service depending on the limitations of your Internet service provider.
- Any fee caused by your Internet connection is solely your responsibility.
- For proper use of Duo HD player's internet features, you need a 10 base-T or 100 base-Tx LAN port. You may not use the player's internet features on some Internet service that your ISP does not support or provide.
- A DSL modem is needed to use DSL service. You may have agreed with your ISP (Internet Service Provider) on the number of concurrent internet connection devices. Under the agreement, your PC and Duo HD player may not use the network simultaneously.
- You may not be allowed to use a router under your ISP's policy.
- When using DSL connection systems, the network service provided by the DuoHD Player may not be available. (ex. PPPoE)



persistent storage management

SYSTEM DEVICE MANAGEMENT

You can manage such information as stored provider and content directory.

To setup, follow steps 1 to 2 in "TCP/IP Setting" on page 47.

3. Press the ▲▼ buttons to select **System Setup**, then press the **ENTER** or ► button.
4. Press the ▲▼ buttons to select **Persistent Storage Management**, then press the **ENTER** or ► button.
5. Press the ▲▼ buttons to move sub-directory, then press the **ENTER** or ► button.

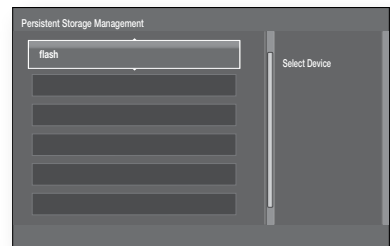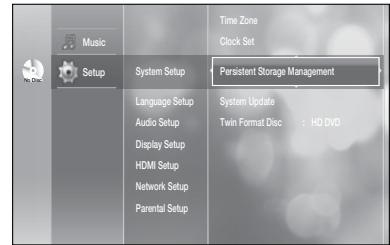


- To delete a directory -

Use the ▲▼ button to select a file to delete and press the **BLUE(D)** button. (You cannot delete devices.)

Description of Device Information

- Category : Indicates if this device is a built-in or a hot-plug device.
 - Required : Built-in device
- Slot Status : Indicates the current slot type of the device.
 - Non Slot : Device that does not support hot-plug.
- Device Name : Name of the device
- Total Size : Total size of the device
- Available Size : Available size of the device
- Average Read Rate : Data read rate from the device (based on the device spec)

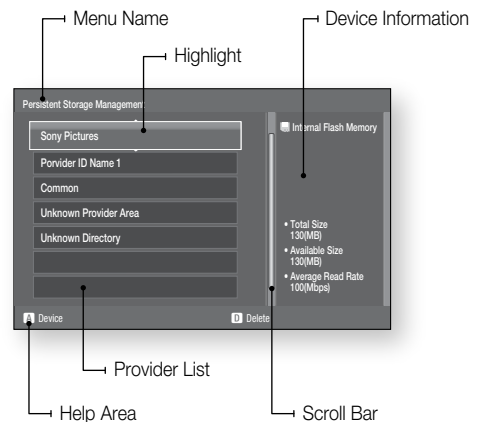

- In most cases, the Provider directory contains related files to each movie maker and the Contents directory stores related files to each title. (These directories contain bookmark information files created in playback of a movie or downloaded files through the network)
- All of the files in the directories are not visible to users.
- If you delete the directory, all the files in that directory will be deleted accordingly.
- Press the **RED (A)** button in the Provider directory to move up to the parent directory, 'Device'.
- Press the **GREEN (B)** button in the Contents directory to move up to the parent directory, 'Provider'.
- To the right of the directory/content list, normally there appears information on the current device (name, space used, data transfer rate).
- The movie maker can display an image instead of the directory name intentionally or for its own reason.

system upgrade

Samsung may offer upgrades to your Duo HD player's firmware in the future. To upgrade this firmware you must :






1. Go to samsung.com and refer to 'SUPPORT' page to download the firmware and burn an update CD.
or
2. Connect this player's LAN terminal to the LAN terminal on your modem (see page 30) and follow the steps below.

FIRMWARE UPGRADE

1. With the unit in No Disc mode(no disc in the unit), press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Update**, then press the **ENTER** or **▶** button.
5. You will see a window that allows you to check the cable or network connection status.


- If the upgrade is possible : You will see information on the current and new versions of firmware in a message box.

- If the upgrade is not possible : You will see the following description in the message box.
 - If the cable is not connected :
"Ethernet cable is not connected. Please, check the Ethernet cable."
 - If the network connection has failed :
" This system can not connected to internet for update. Please, check the network setup"
 - If no later version is released (the latest version has been already installed) :
"The latest version of the firmware is already installed. There is no need to update."
 - If there is a disc in the player :
"Please maintain "No Disc" state for network update."
This indicates that you must remove all discs from the unit to perform the update.

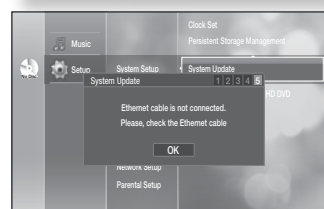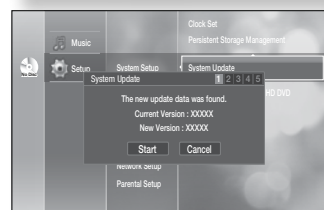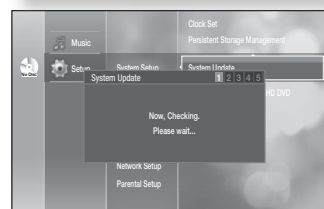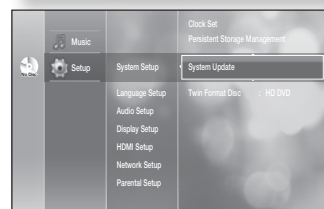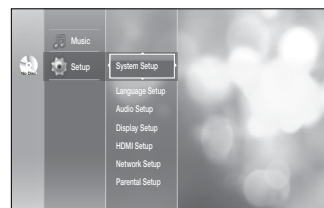


system upgrade


6. To perform the system upgrade, press the ◀▶ buttons to select **Start** and then press the **ENTER** button.

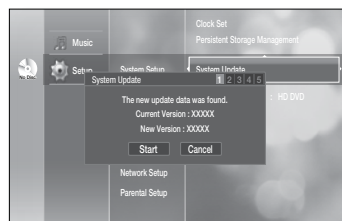



7. The system update gets started.

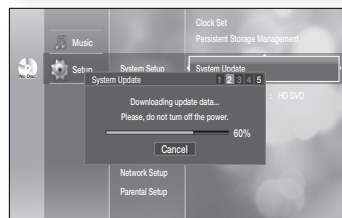


8. If you select Cancel during the download process, you are prompted to confirm your selection in a message box. If you want to cancel the download, select **Yes** and press the **ENTER** button.

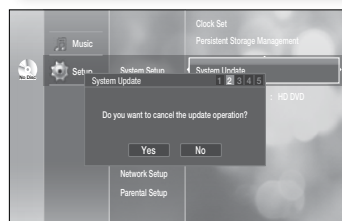

9. Verification will proceed. When done, the firmware update process will begin automatically.

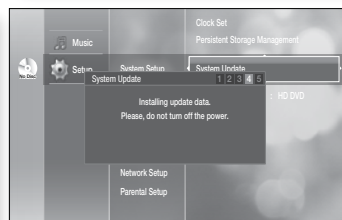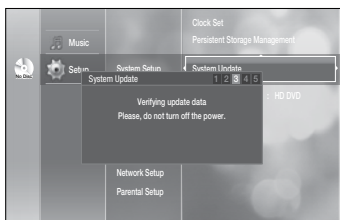

10. When the installation is done, you will see an **"Update Completed"** message. The player will automatically turn off in 3 seconds. All settings will revert to the factory settings. the next time you start the system, you will see the menu language selection window.



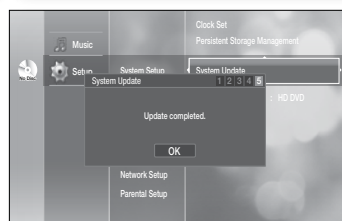


- ✎
- If you want to cancel the upgrade in the process of downloading the upgrade data, press the **ENTER** button. You will see a confirmation message. Selecting **Yes** will end the upgrade process, and selecting **No** will proceed with the verification step.
 - When the system upgrade is done, check the firmware details in the System Upgrade menu.
 - Do not turn off the player during the System Upgrade. Otherwise, the player may not work properly.

SYSTEM INFORMATION

When the firmware upgrade is done, check the firmware details by following the steps below.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Information**, then press the **ENTER** or **▶** button.
You can see detailed information about the current firmware.
5. Press the **ENTER** button to select **OK**.
System Setup menu will be displayed.

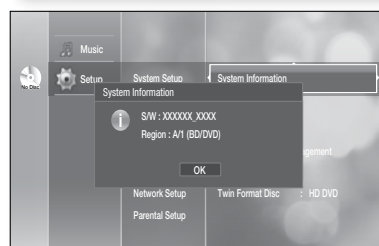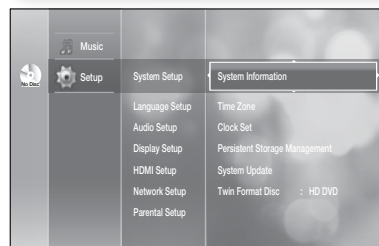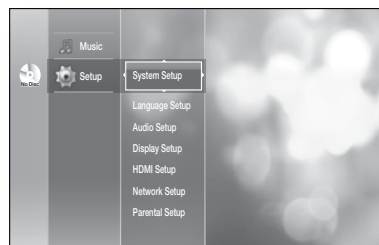

watching a movie

USING THE DISPLAY FUNCTION



1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select the desired item.
3. Press the **◀▶** buttons to make the desired setup and then press the **ENTER** button.
 - You may use the number buttons of the remote control to directly access a title, chapter or to start the playback from a desired time.
4. To make the screen disappear, press the **INFO** button again.




- If you are playing contents from the Info menu, in some cases, playback may malfunction depending on the title.
 - Title : To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a BD/HD DVD/DVD, each movie will be identified as a Title.
 - Chapter: Most BD/HD DVD/DVD discs are recorded in chapters so that you can quickly find a specific passage.
 - Audio : Refers to the film's soundtrack language. A BD disc can contain up to 32 audio languages and a HD DVD/DVD up to 8.
 - Playing Time : Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some discs.
 - Subtitle : Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A BD disc can contain up to 255 subtitle languages, and a HD DVD/DVD up to 32.
 - Angle : When a BD/HD DVD/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the Color Key(A, B, C, D) Button



Use these buttons on the screen while the HD DVD disc is being played. The operation of each button can differ, depending on the disc content.

Use these buttons if you want to use functions supported by the disc content.

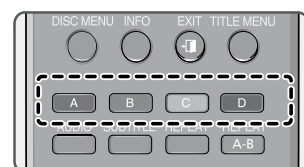

USING THE DISC MENU & POPUP/TITLE MENU



Using the Disc Menu

1. During playback, press the **DISC MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired setup, then press the **▶** or **ENTER** button.
 - The Disc menu setup items may vary from disc to disc.



- Depending on the disc, the Disc Menu may not be available.
- You can use various menu options provided by your BD/HD DVD in different ways, according to the disc type. (ex: direction key)

Using the Title Menu



1. During playback, press the **TITLE MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired setup, then press the **ENTER** button.
 - The Title menu setup options may vary from disc to disc.




- Depending on the disc, the Title Menu may not be available.
- Title Menu will only be displayed if there are at least two titles in the disc.

Using the Popup Menu



1. During playback, press the **POPUP MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons or **ENTER** button to select the desired menu.
 - The Popup menu setup options may vary from disc to disc.

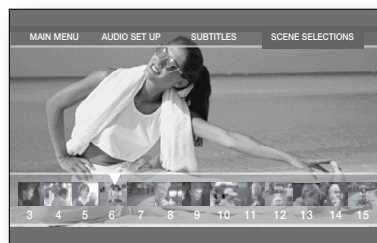

- Depending on the disc, the Popup Menu may not be available.

watching a movie


REPEAT PLAY

Repeat the current chapter or title.

Repeat playback



1. During playback, press the **REPEAT** button on the remote control. Repeat screen appears.

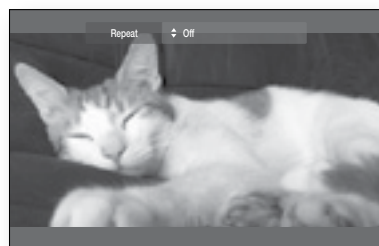

2. Press the **▲▼** buttons to select **Chapter** or **Title**.
 - BD/HD DVD/DVD repeats play by chapter or title.
3. To return to normal play, press the **REPEAT** button again, then press the **▲▼** buttons to select **Off**.



- Depending on the disc, the Repeat function may not be available.
- The Repeat function may not operate properly on some HD DVDs, depending on the disc type.

Using the A-B Repeat function



1. Press the **REPEAT A-B** button on the remote control.
2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
3. Press the **REPEAT A-B** button at the point where you want repeat play to stop (B).
4. To return to normal play, press the **CANCEL** button.



- Point B cannot be set until 5 seconds of playback has elapsed from point A.

RESUME PLAY



You can use this function to resume playing the disc from the last stopped point.

If you press the Stop button during playback and press the **RESUME PLAY** button, the player will resume playing from the last stopped point.

If you press the Stop button during playback and press it again, the Resume Play function will be cancelled.



- You can change the settings in the Setup menu while the player is storing the location information on the memory. However, your change will not be applied until the Resume Play function is cancelled.
- This function may not be enabled, depending on the disc content or the scene.


SELECTING THE AUDIO LANGUAGE



You can select a desired audio language quickly and easily with the **AUDIO** button.

Using the AUDIO button

1. Press the **AUDIO** button during playback. The Audio changes when the button is pressed repeatedly.
 - The audio languages are represented by abbreviations.

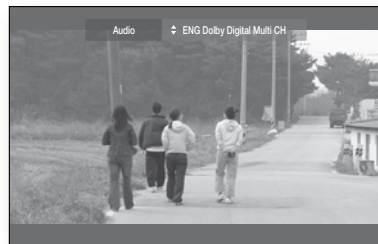

2. To remove the **AUDIO** icon, press the **CANCEL** or **RETURN** button.

Using the INFO button

1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select Audio language.
3. Press the **◀▶** buttons on the remote control to select the desired audio.



- This function depends on what audio languages are encoded on the disc and may not be available.
- A BD disc can contain up to 32 audio languages and a HD DVD/DVD up to 8.
- Depending on the disc type, you can use the Audio button to change the audio sound track as well as the audio language.
Some Blu-ray/HD DVD discs may allow you to select either the multi-channel LPCM or Dolby digital audio sound track in English.

watching a movie


SELECTING THE SUBTITLE LANGUAGE

You can select a desired subtitle quickly and easily with the **SUBTITLE** button.

Using the **SUBTITLE** button



1. Press the **SUBTITLE** button. The subtitle changes when the button is pressed repeatedly. The subtitle languages are represented by abbreviations.

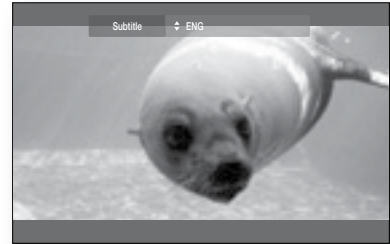

2. To remove the **SUBTITLE** icon, press the **CANCEL** or **RETURN** button.

Using the **INFO** button

1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select **Subtitle**.
3. Press the **◀▶** buttons on the remote control to select the desired subtitle language.



- Depending on BD/HD DVD/DVDs, you may have to change the desired subtitle in the Disc Menu. Press the **DISC MENU** button.
- This function depends on what subtitles are encoded on the disc and may not be available on all BD/HD DVD/DVDs.
- A BD disc can contain up to 255 subtitle languages and a HD DVD/DVD up to 32.

CHANGING THE CAMERA ANGLE

When a BD/HD DVD/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the ANGLE function



1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select **Angle**.



3. Press the **◀▶** buttons or you can use the number buttons on the remote control to select the desired angle.



- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- Depending on the disc, these functions may not work.

USING THE CURSOR FUNCTION



Certain HD DVD discs support a cursor function that allows you to move the cursor in 8 different directions.

1. Press the Cursor button if you are playing a disc that supports the cursor function.
2. Move the cursor using the 8 direction buttons.
3. The operation of the cursor key can be taken advantage of for various functions, depending on the disc.



For more information on the cursor function, refer to the disc's user manual.

listening to music


PLAYING AN AUDIO CD(CD-DA)



1. Insert an Audio CD(CD-DA) into the disc tray.
For an audio CD, the first track will be played automatically.
2. To move to the Music List, press the **STOP** or **RETURN** button.
The Music List screen is displayed
3. Press the **▲▼** buttons to select the track you want to play, and then press the **ENTER** button.

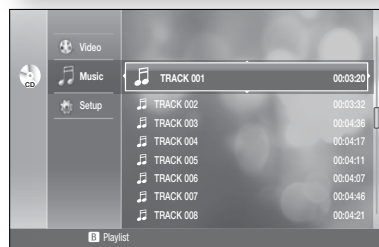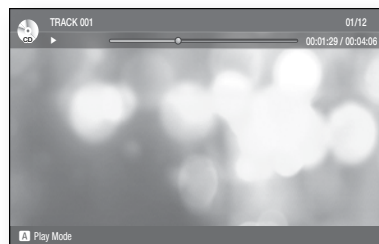


AUDIO CD(CD-DA) SCREEN ELEMENTS

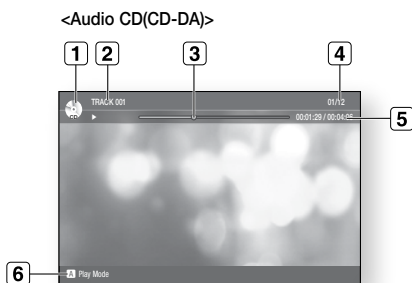

- | | |
|---|--|
| 1 | Displays the media type. |
| 2 | Current track (song)
Audio CD(CD-DA) : Displays the number of the track currently being played. |
| 3 | Play Status Bar. |
| 4 | Displays the current play index, total track number. |
| 5 | Current /Total Play Time. |
| 6 | Displays available COLOR buttons.
(see next page for Color button usage). |

BUTTONS ON THE REMOTE CONTROL USED FOR AUDIO CD (CD-DA) DISC PLAYBACK

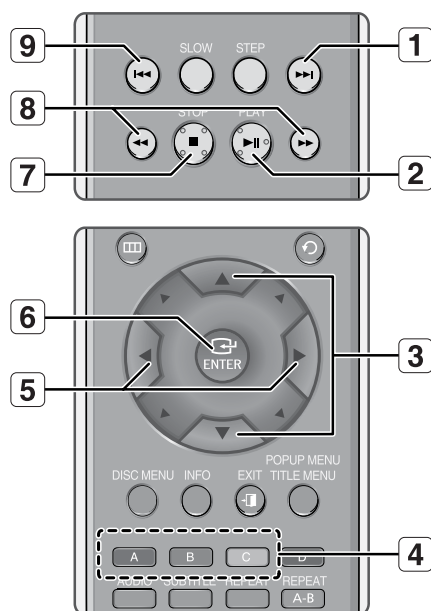

1. **SKIP** (⏭) button: During playback, plays the next track. Moves to the next page in the Music List or the Playlist.
2. **PLAY/PAUSE** (⏮) button: Plays the currently selected track. If pressed during playback, the current track is paused.
3. **▲▼** buttons : Selects a track(song) in the Music List or Playlist.
4. **COLOR** buttons: RED(A), GREEN(B), YELLOW(C)
 - RED(A) button : Selects the Play Mode(Repeat) during playback.
 - GREEN(B) button : Go to Playlist from Music List/Go to Music list from Playlist.
 - YELLOW(C) button : Playlist play.
5. **▶◀** buttons
 - ▶ : Plays the applicable track, according to the current position.
 - ◀ : Moves to the menu.
6. **ENTER** button : Plays the selected track (song).
7. **STOP** (⏹) button: Stops a track(song).
8. Press the **SEARCH** (🔍) buttons : Fast Play (only Audio CD(CD-DA)).
9. **SKIP** (⏮) button: Returns to the beginning of the current track when pressed during playback. If pressed again, your Duo HD player moves to and plays the previous track. If you press this button within three seconds after playback starts, the previous track will be played. If you press this button after three seconds, the current track will be replayed from the beginning. Moves by the page in the Music List or the Playlist.

REPEAT AUDIO CD(CD-DA)

During playback, press the **REPEAT** or **RED(A)** button repeatedly to select the repeat mode you want.
 Normal → → → →

- **Normal** : Tracks on a disc are played in the order in which they were recorded on the disc.
- **Repeat Track**
- **Random**
 The random option plays a disc's track in random order.
- **Repeat All** : All tracks are repeated.

- **To return to normal playback -**

Press the **REPEAT** or **RED(A)** button repeatedly to return to normal playback.






listening to music

Playlist

You can create a playlist with up to 99 tracks.


To setup, follow steps 1 to 2 in page 60.

1. Press the **GREEN(B)** button.
2. Press the **▲▼** buttons to select a track, then press the **ENTER** button to add it to the Playlist. Repeat this procedure to add additional tracks.
 - The selected track will be deleted.
3. If there is an undesired track in the playlist, press the **▶▲▼** button to select that track, and then press the **ENTER** button.
 - The selected track will be deleted.
4. Press the **YELLOW(C)** button to play the selected tracks.
When the track is finished, the next track will automatically play.
5. To edit the Playlist, press the **STOP** or **RETURN** button.
6. To go to the Music List, press the **Green(B)** or **RETURN** button.

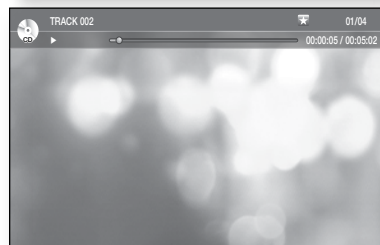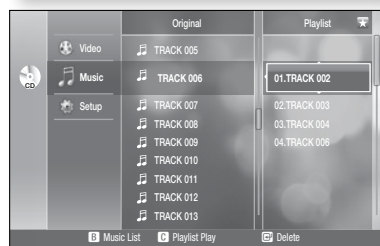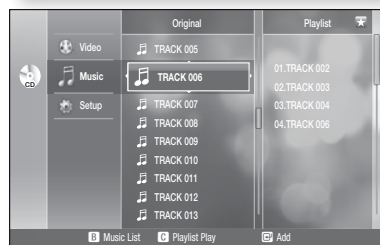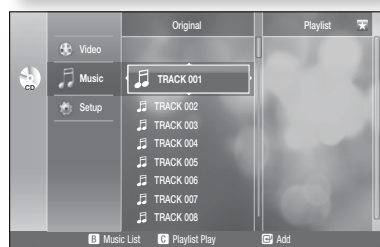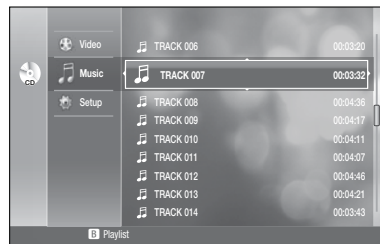

troubleshooting

Before requesting service, please check the following.

PROBLEM	SOLUTION
No operations can be performed with the remote control.	<ul style="list-style-type: none"> • Check the batteries in the remote control. They may need replacing. • Operate the remote control at a distance of no more than 20 feet. • Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall batteries and try to operate the remote control again.
Disc does not play.	<ul style="list-style-type: none"> • Ensure that the disc is installed with the label side facing up. • Check the region number of the BD/HD DVD/ DVD.
7.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> • 7.1 channel sound is reproduced only when the following conditions are met. : <ol style="list-style-type: none"> 1. The Duo HD player is connected with the proper Amplifier 2. The disc is recorded with 7.1 channel sound. • Check whether the disc being played has the “7.1 ch” mark on the outside. • Check if your audio system is connected and working properly. • In a SETUP Menu, is the Audio Output set to Bitstream?
Disc Menu doesn't appear.	<ul style="list-style-type: none"> • Check if the disc has a Menu.
The  icon appears on screen.	<ul style="list-style-type: none"> • The features or action cannot be completed at this time because: <ol style="list-style-type: none"> 1. The BD/HD DVD/ DVD's software restricts it. 2. The BD/HD DVD/ DVD's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number or search time that is out of range.
Play mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> • Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.
The screen ratio cannot be changed.	<ul style="list-style-type: none"> • The Screen Ratio is fixed on your BD/HD DVD/ DVD's.
No audio.	<ul style="list-style-type: none"> • Make sure you have selected the correct Digital Output in the Audio Options Menu.
The screen is blocked	<ul style="list-style-type: none"> • Press the ▶▶ button (in front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.

troubleshooting

PROBLEM	SOLUTION
If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.	<ul style="list-style-type: none">• Press the ►► button (in front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.
Forgot password	<ul style="list-style-type: none">• Press the ►► button (in front panel) for more than 5 seconds with no disc inside. All settings including the password will revert to the factory settings. Don't use this unless absolutely necessary.
If you experience other problems.	<ul style="list-style-type: none">• Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again.• If the problem still cannot be solved, please contact your nearest Samsung authorized service center.
The picture is noisy or distorted	<ul style="list-style-type: none">• Make sure that the disc is not dirty or scratched.• Clean the disc.
No HDMI output.	<ul style="list-style-type: none">• Check the connection between the TV and the HDMI jack of the Duo HD player.• Check if your TV supports 480p/720p/1080i/1080p HDMI input resolution.
Abnormal HDMI output screen.	<ul style="list-style-type: none">• If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).



■ When the factory default settings are restored, all the user data stored in the persistent storage will be deleted.

appendix

SPECIFICATIONS

General	Power Requirements	AC 120V, 60Hz
	Power Consumption	42 W
	Weight	9.3 lbs
	Dimensions	16.9 (W) x 12.8 (D) x 3.1 (H) inches
	Operating Temperature Range	+41°F to +95°F
	Operating Humidity Range	10 % to 75 %
Disc	BD (Blu-ray Disc)	Reading Speed : 4.917m/sec
	HD DVD	Reading Speed : 6.61m/sec
	DVD (Digital Versatile Disc)	Reading Speed : 3.49 ~ 4.06 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 5 inches (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min.
	CD : 3 1/2 inches (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 20 min.
	Video Output	Composite Video
Component Video		Y : 1.0 Vp-p (75 Ω load)
		Pr : 0.70 Vp-p (75 Ω load)
		Pb : 0.70 Vp-p (75 Ω load)
S-Video		HD DVD/Blu-ray Disc : 1080i, 720p, 480p, 480i DVD : 480p, 480i
		Luminance Signal : 1.0 Vp-p (75 Ω load)
	Chrominance Signal : 0.3 Vp-p (75 Ω load)	
Video/Audio	HDMI	1080p, 1080i, 720p, 480p PCM multichannel audio, Bitstream audio, PCM audio
		Audio Output
7.1 Channel	F/L, F/R, R/L, R/R, C/T, S/W, SBR, SBL	
Digital Audio Output	Optical/Coaxial	
*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz	
	96 kHz Sampling : 4 Hz to 44 kHz	
*S/N Ratio	110 dB	
*Dynamic Range	100 dB	
*Total Harmonic Distortion	0.003%	

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

COPY PROTECTION

- Because AACS (Advanced Access Content System) is approved as content protection system for BD and HD DVD format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. Furthermore, BD-ROM Mark and BD+ are additionally used as content protection system for BD format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BD-ROM Mark, BD+, or this product, please contact SAMSUNG customer care center.
- Many BD/HD DVD/DVD discs are encoded with copy protection. Because of this, you should only connect your Duo HD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected BD/HD DVD/DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BDs, HD DVD's, DVDs, and other materials may subject you to civil and/or criminal liability.
- **For Duo HD Players progressive scan output :** CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

Compliance and Compatibility Notice

NOT ALL discs are compatible

- Subject to the restrictions described below and those noted throughout this Manual, including the Disc Type and Characteristics section of this Manual, disc types that can be played are: pre-recorded commercial BD-ROM, HD DVD, DVD-Video, and Audio CD discs; DVD-RW / DVD-R discs; and CD-R discs.
- Discs other than the above cannot and/or is not intended to be played by this player. And some of the above discs may not play due to one or more reasons provided below.
- Samsung cannot assure that this player will play every disc bearing the BD, HD DVD, DVD-Video, DVD-RW / DVD-R and CD-R logos, and this player may not respond to all operating commands or operate all features of every disc. These and other disc compatibility and player operation issues with new and existing format discs are possible because:
 - BD/ HD DVD are new and evolving formats and this player may not operate all features of BD/ HD DVD discs because some features may be optional, additional features may have been added to the BD/ HD DVD format after the production of this player, and certain available features may be subject to delayed availability;
 - not all new and existing disc format versions are supported by this player;
 - new and existing disc formats may be revised, changed, updated, improved and/or supplemented;
 - some discs are produced in a manner that allows specific or limited operation and feature during playback;
 - some features may be optional, additional features may have been added after the production of this player or certain available features may be subject to delayed availability;
 - some discs bearing the BD-ROM, HD DVD, DVD-Video, DVD-RW/ DVD-R and CD-R logos may still be non-standardized discs;
 - some discs may not be played depending on their physical state or recording conditions;
 - problems and error can occur during the creation of BD, HD DVD, DVD software and/or the manufacture of discs;
 - this player operates differently than a standard DVD player or other AV equipment; and/or
 - for reasons noted throughout this Manual and for other reason(s) discovered and posted by SAMSUNG customer care center.
- If you encounter disc compatibility or player operation problems, please contact SAMSUNG customer care center. You may also contact SAMSUNG customer care center for possible updates on this player.
- For additional information on playback restrictions and disc compatibility, refer to the Precautions, Before Reading the User's Manual, Disc Types and Characteristics, and Before Playing sections of this Manual.

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for the following limited warranty period:

One (1) Year Parts / Ninety Days (90) Labor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States, and does not include transportation, installation, removal or reinstallation. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge with new or reconditioned parts, if found to be defective during the limited warranty period specified above. The product must be returned during the warranty period with transportation charges prepaid to SAMSUNG's designated service center. Prior to returning any product for warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environmental instructions that are covered and prescribed in the instruction book; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems; failures or problems due to incompatibility with other equipment.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligations of SAMSUNG arising under the warranty or under any statute, or law of the United States or of any state thereof, is hereby limited to ninety (90) days from the date you discovered or should have discovered the defect. This limitation does not apply to implied warranties arising under state law, if any.

SAMSUNG does not warrant (i) disc compatibility with new and existing format discs or (ii) error free playback in full compliance with specifications of the compatible disc formats, and SAMSUNG shall not be liable for any data loss recorded in your discs. SAMSUNG's responsibility shall be limited to appropriate warranty services during the warranty period through SAMSUNG customer care center. If you encounter compatibility or data loss problems, please contact SAMSUNG customer care center.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG customer care center.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Country	Customer Care Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421 , 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
COLOMBIA	01-8000112112	www.samsung.com.co	
Europe	BELGIUM	0032 (0)2 201 24 18	www.samsung.com/be
	CZECH REPUBLIC	844 000 844 Distributor pro Českou republiku : Samsung Zrt., česká organizační složka Vyskočilova 4, 14000 Praha 4	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	3260 SAMSUNG(726-7864) or 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com/fr
	GERMANY	01805 - 121213 (€ 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEMBURG	0035 (0)2 261 03 710	www.samsung.com/be
	NETHERLANDS	0900 20 200 88 (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 801 881 , 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80 8 200 128	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com/es
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0870-SAMSUNG(726-7864)	www.samsung.com/uk
	Republic of Ireland	0818 717 100	www.samsung.com/ie
	AUSTRIA	0800-SAMSUNG(726-7864)	www.samsung.com/at
	Switzerland	0800-SAMSUNG(726-7864)	www.samsung.com/ch
CIS	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAHSTAN	8-10-800-500-55-500	www.samsung.kz
	UZBEKISTAN	8-800-120-0-400	www.samsung.uz
	KYRGYZSTAN	00-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	800-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.ee
	AUSTRALIA	1300 362 603	www.samsung.com/au
Asia Pacific	New zealand	0800SAMSUNG(726-7864)	www.samsung.com/nz
	CHINA	800-810-5858 , 010-6475 1880	www.samsung.com.cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282 , 1800 110011	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG(726-7864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232 , 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com/vn	
Middle East & Africa	Turkey	444 77 11	www.samsung.com.tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/mea