




# C208B

# Digital Clock Radio with AM/FM Radio

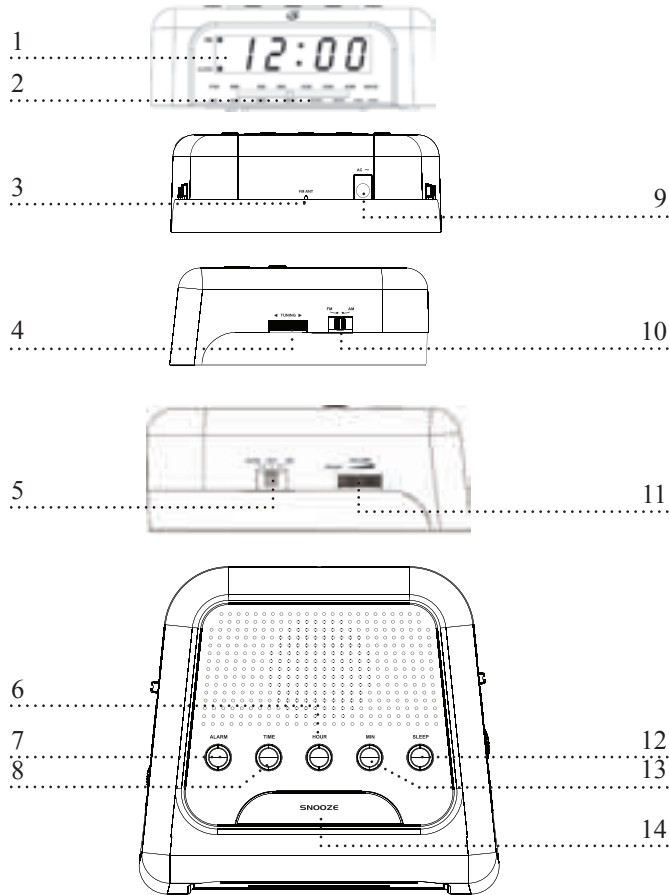

- 1 LED Display**  
The LED Display displays the time, an AM indicator, and an Alarm indicator.
- 2 Radio Frequency Indicator**  
Use the Radio Frequency Indicator to view the current AM or FM radio station.
- 3 FM Antenna**  
A wire FM Antenna is attached to the unit. Adjust the wire to improve the FM radio reception.  
  
The AM Antenna is built into the unit. To improve AM reception, adjust the position of the unit.
- 4 Tuning Dial**  
Turn the Tuning Dial to adjust the AM or FM radio station.
- 5 Auto/Off/On Switch**  
Adjust the Auto/Off/On Switch to On to power on the unit's FM or AM radio.  
  
Adjust the Auto/Off/On Switch to Off to power off the unit's FM or AM radio.  
  
Adjust the Auto/Off/On Switch to Auto turn the alarm on.
- 6 Hour Button**  
Press the Hour Button to adjust the hour when setting the time.
- 7 Alarm Button**  
Press the Alarm Button to view the Alarm Time.  
  
Press and hold the Alarm Button to allow the Alarm Time to be edited.
- 8 Time Button**  
Press and hold the Time Button to allow the time to be edited.
- 9 AC Power Input**  
Use the AC Power Input to connect an AC adapter to the unit. Plug the other end of the AC adapter into a standard AC outlet (120V ~60Hz).
- 10 FM/AM Switch**  
Adjust the FM/AM Switch to select AM or FM radio.
- 11 Volume/Buzzer Dial**  
Turn the Volume/Buzzer Dial to adjust the unit's volume.  
  
Turn the Volume/Buzzer Dial towards "Buzzer" until the dial won't turn anymore to set the alarm to wake to the buzzer.
- 12 Sleep Button**  
Press the Sleep Button to reset the sleep timer to its default time of 59 minutes.  
  
Press and hold the Sleep Button to allow the sleep time to be edited.
- 13 Minute Button**  
Press the Minute Button to adjust the minute when setting the time.
- 14 Snooze Button**  
Press the Snooze Button to delay the alarm for an additional 9 minutes after it has sounded.



Manufacturer warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of 90 days from date of original purchase.

Manufacturer agrees, at its option during the warranty period, to repair any defect in material or workmanship or to furnish an equal product in exchange without charge. Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by a copy of an original dated sales receipt.

To obtain service, return the unit insured and freight PREPAID to:

**CONSUMER SERVICES**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Pack the unit in a well-padded, sturdy carton.
- Enclose a copy of your sales receipt to verify the date of purchase.
- Include your name, address and phone number.

Manufacturer will elect to repair or replace properly warranted product free of charge (including free return transportation).

**NOTE:** This warranty does not cover any product which has been subject to damage due to an act of God, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to external media such as DVD, CD, LP, tape and/or memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall Manufacturer be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

iPods are not covered under this warranty.

This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than Manufacturer.

This warranty does not cover re-manufactured units, product sold AS IS or closeout product.

This warranty is valid only in the United States and grants specific legal rights. You may also have other rights which vary from state to state.

**NOTE:** For products that contain internal memory for storage of music, data, etc., the amount of memory your operating system reports may vary from the stated memory of this device.

**IMPORTANT NOTICE: DO NOT RETURN THIS UNIT TO THE RETAIL STORE FOR SERVICE. INSTEAD, FOLLOW THE ABOVE WARRANTY SERVICE INSTRUCTIONS.**

2116 CARR STREET • ST. LOUIS, MO 63106 • TEL: 314-621-2881 • FAX: 314-588-1805



El fabricante garantiza este producto al comprador inicial contra todo defecto de material y de fabricación, bajo condiciones normales, por un periodo de 90 días a partir de la fecha de compra inicial.

El fabricante acepta, a su discreción durante el periodo de vigencia de esta garantía, reparar todo defecto de material o de fabricación o reemplazar el producto defectuoso por el mismo producto sin costo adicional. Esta reparación o reemplazo está sujeta a la verificación del defecto o del mal funcionamiento del aparato y prueba de compra en la forma de una copia del original del recibo de venta fechado.

Para obtener este servicio, envíe su unidad asegurada y con el transporte PAGADO POR ADELANTADO a:

**CONSUMER SERVICES**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Embale la unidad en una caja de cartón resistente, con relleno protector.
- Adjunte una copia de su recibo de venta, para verificar la fecha de compra del producto.
- Incluya su nombre, dirección y número de teléfono.

Fabricante se reserva el derecho de o de reemplazar el producto garantizado sin costo adicional (y de proporcionar el transporte de regreso gratuito del producto).

**NOTA:** Esta garantía no cubre ningún producto dañado por causas de fuerza mayor, mala utilización, negligencia, accidente, abuso, uso comercial o modificación de o a cualquier parte del producto, incluyendo la antena. Esta garantía no cubre tampoco los daños causados a medios externos como DVD, discos compactos, discos de larga duración, cintas y/o aparatos de memoria ni tampoco el costo de envío del producto para su reparación. Fabricante no es responsable, bajo ninguna circunstancia, de pérdidas (directas, indirectas, secundarias, previas, imprevistas, especiales) o de daños que resulten de o por el uso de este producto.

iPods no son cubiertos por esta garantía.

Esta garantía no cubre los daños que resulten de la utilización o del mantenimiento incorrecto, de la conexión a una fuente de voltaje inapropiada o de un intento de reparación realizado por personal no autorizado por el fabricante.

Esta garantía no cubre las unidades fabricadas nuevamente, los productos vendidos TAL CUAL o productos de liquidación.

Esta garantía es válida únicamente en Estados Unidos y confiere derechos legales específicos. Usted puede tener otros derechos que varían de Estado a Estado.

**NOTA:** Para los productos que contienen memoria interna para almacenar música, información, etc., la cantidad de memoria que su sistema operativo reporta puede variar según la memoria que este aparato indica.

**IMPORTANT: NO ENVÍE ESTE PRODUCTO AL NEGOCIO EN QUE LO COMPRÓ PARA REPARACIÓN. CONSULTE ESTA GARANTÍA PARA OBTENER INFORMACIONES AL RESPECTO.**



Le constructeur garantit ce produit à l'acheteur initial contre tout défaut de matériel et de fabrication, en conditions normales, pour une période de 90 jours à compter de la date d'achat initial du produit.

Le constructeur accepte à son choix, pendant la durée de cette garantie, de réparer tout défaut de matériel et de fabrication ou de remplacer le produit défectueux par le même produit sans frais. Cette réparation ou le remplacement sera effectué moyennant la vérification du défaut ou du mauvais fonctionnement de l'appareil et la présentation d'une preuve d'achat dans la forme d'une copie d'un reçu de vente original daté.

Pour obtenir ce service, envoyez le produit assuré, avec le PAYE D'AVANCE à:

**CONSUMER SERVICES**  
2116 CARR STREET, ST. LOUIS, MO 63106

- Emballez votre produit dans une boîte de carton rembourrée.
- Joignez une copie de votre reçu de ventes pour vérification de la date d'achat du produit.
- Indiquez votre nom, adresse et numéro de téléphone.

Le constructeur choisira de réparer ou de remplacer tout produit garanti, sans frais (y compris le transport de retour gratuit du produit).

**REMARQUE:** Cette garantie ne couvre pas les produits endommagés par cause de force majeure, mauvaise utilisation, négligence, accident, mauvaise utilisation, utilisation commerciale ou modification de ou à quelque part que ce soit de ces produits, y compris l'antenne. Cette garantie ne couvre pas non plus les dommages causés aux médias externes tels que des DVD, disques compactes, albums, cassettes et/ou appareils de mémoire ni le coût d'envoi du produit pour sa réparation. En aucun cas, le constructeur ne sera pas tenu responsable des pertes (directes, indirectes, secondaires, prévues, imprévues, spéciales) ou des dommages qui découlent de ou en raison de l'utilisation de ce produit.

iPods ne sont pas couverts par cette garantie.

Sont exclus de cette garantie les défauts pouvant survenir par la suite de l'utilisation et de l'entretien anormal, du raccordement à une source de tension inadéquate ou des réparations effectuées par du personnel non autorisé par le constructeur.

Cette garantie ne couvre pas les produits fabriqués à nouveau ou les produits vendus TEL QUELS ou produits liquidés.

Cette garantie n'est valable qu'aux États-Unis et vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits en vertu des lois étatiques.

**REMARQUE:** Pour les produits qui contiennent mémoire interne pour stocker de la musique, information, etc., la quantité de mémoire que votre système d'exploitation rapporte peut varier selon la mémoire que cet appareil indique.

**IMPORTANT: N'ENVOYEZ PAS CE PRODUIT AU DÉTAILLANT POUR RÉPARATION. LISEZ CETTE GARANTIE POUR OBTENIR DES INFORMATIONS SUR LES SERVICES FOURNIS.**

2116 CARR STREET • ST. LOUIS, MO 63106 • TEL: 314-621-2881 • FAX: 314-588-1805

## Parts Information

**Address:** 2116 Carr Street, St. Louis MO, 63106

**Phone:** 1-314-621-2881

**Fax:** 1-314-588-1805

**Email:** partsinfo@dpi-global.com

## Service Information

**Address:** 2116 Carr Street, St. Louis MO, 63106

**Phone:** 1-314-621-2881

**Fax:** 1-314-588-1805

**Email:** prodinfo@gpx.com

**Website:** www.gpx.com

**Version:** v. 061108

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.gpx.com](http://www.gpx.com).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.gpx.com](http://www.gpx.com).

© 2008 Digital Products International (DPI, Inc.)

All other trademarks appearing herein are the property of their respective owners.



C208B

Digital Clock Radio with AM/FM Radio

## Powering the Unit

- Use the AC Power Input to connect an AC adapter to the unit. Plug the other end of the AC adapter into a standard AC outlet (120V ~60Hz).



## Setting the Time

<b>Step 1:</b>	Press and hold the <b>Time Button</b> .
<b>Step 2:</b>	Press the <b>Hour Button</b> to adjust the hour.
<b>Step 3:</b>	Press the <b>Minute Button</b> to adjust the minute.
<b>Step 4:</b>	Release the <b>Time Button</b> to set the adjusted time.

## Setting the Alarm

<b>Step 1:</b>	Press and hold the <b>Alarm Button</b> .
<b>Step 2:</b>	Press the <b>Hour Button</b> to adjust the hour.
<b>Step 3:</b>	Press the <b>Minute Button</b> to adjust the minute.
<b>Step 4:</b>	Release the <b>Alarm Button</b> to set the adjusted alarm time.
<b>Step 5:</b>	Adjust the <b>Auto/Off/On Switch</b> to the “Auto” position.
<b>Step 6:</b>	Turn the <b>Volume/Buzzer Dial</b> towards “Buzzer” until the dial won’t turn anymore to set the alarm to wake to the buzzer.
<b>Step 7:</b>	Turn the <b>Volume/Buzzer Dial</b> to the desired volume level to wake to the radio. <ul style="list-style-type: none"><li><i>When waking to the radio, the unit will play whichever radio station the unit was last set to.</i></li></ul>
<b>Step 8:</b>	After the alarm sounds, press the <b>Snooze Button</b> to delay the alarm for an additional 9 minutes.

## Setting the Sleep Timer

<b>Step 1:</b>	Tune the radio to the desired station.
<b>Step 2:</b>	Press and hold the <b>Sleep Button</b> .
<b>Step 3:</b>	Press the <b>Hour Button</b> to adjust the hour.
<b>Step 4:</b>	Press the <b>Minute Button</b> to adjust the minute.
<b>Step 5:</b>	Release the <b>Sleep Button</b> to set the adjusted sleep time. <ul style="list-style-type: none"><li><i>If the Sleep Button is pressed after the sleep time has been set, the adjusted sleep time will be reset to the default of 59 minutes.</i></li></ul>

## Tuning the Radio

<b>Step 1:</b>	Adjust the <b>Auto/Off/On Switch</b> to the “On” position.
<b>Step 2:</b>	Adjust the <b>FM/AM Switch</b> to the desired option.
<b>Step 3:</b>	Turn the <b>Tuning Dial</b> to adjust the current radio station. <ul style="list-style-type: none"><li><i>The Radio Frequency Indicator, located on the front of the unit, will display the current radio station.</i></li></ul>
<b>Step 4:</b>	Turn the <b>Volume/Buzzer Dial</b> to adjust the volume of the unit.

# Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# IMPORTANT SAFETY INSTRUCTIONS

- Read Instructions** - All the safety and operating instruction should be read before the product is operated.
- Retain Instructions** - The safety and operating instruction should be retained for future reference.
- Heed Warnings** - All warning on the product and in the operating instructions should be adhered to.
- Follow instructions** - All operating and use instructions should be followed.
- Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer’s instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.


See figure:



- Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instruction have been adhered to.
- Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.

**Alternate Warnings** - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

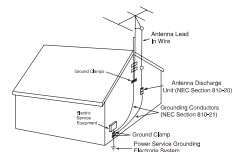

- Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power-supply cord or plug is damaged,
  - If liquid has been spilled, or objects have fallen into the product,
  - If the product has been exposed to rain or water,
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - If the product has been dropped or damaged in any way, and
  - When the product exhibits a distinct change in performance - this indicates a need for service.
- Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Excessive sound pressure from earphones and headphones can cause hearing loss.