

www.fisher-price.com



H4828



H3370




Twin Time Dollhouse™

Parts





3 Windows

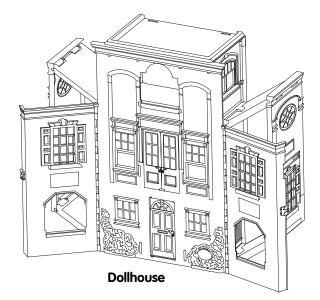



Valance



2 Awnings



Door Frame

PARTS NOT SHOWN: Kitchen Island 2 Cradles

2 Baby Blankets Sofa Easy Chair Chair


> Cat Bed Snack Tray

Train Toy


Rocking Horse 2 Flower Boxes with Flowers

5 Figures

Assembly

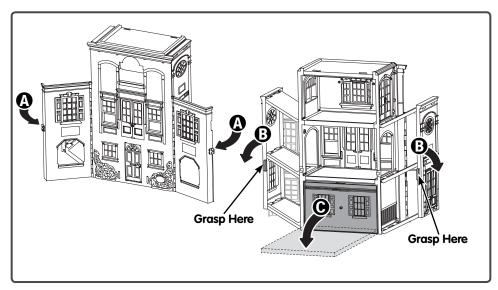


- Grasp the latches and open the back of dollhouse **4**.
- Lower the sides 3.
- Lower the "patio" **©**.

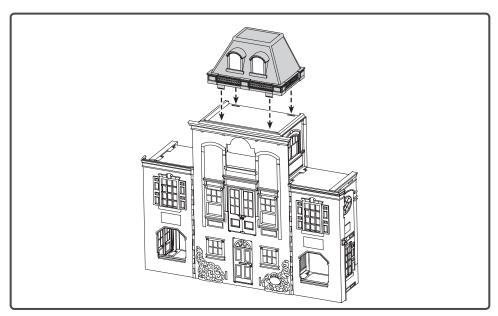


• "Snap" the roof to the top of the dollhouse.

Assembly

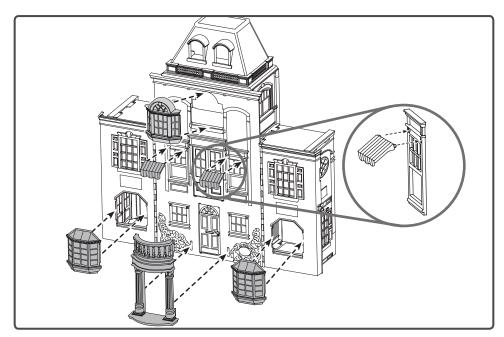

- "Snap" the door frame and three windows to the front of the dollhouse.
- "Snap" the awnings onto the front of the dollhouse at an angle, as shown.

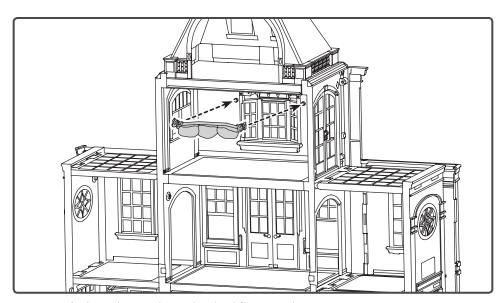

• Press to fit the valance above the third floor window.

Fold Up Storage



Consumer Information

Please keep this instruction sheet for future reference, as it contains important information. Adult assembly is required.

No tools needed for assembly.

Wipe this toy with a clean cloth dampened with a mild soap and water solution.



Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.