


## **B&W Video Doorphone - Easy Setup Guide**





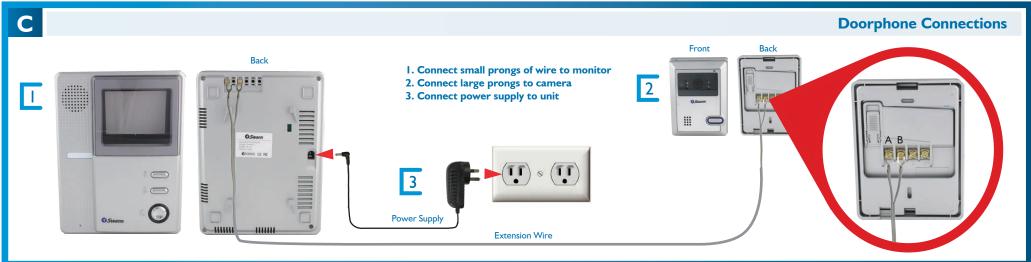

SR244-BVD-10005 EN10122008



## **B&W Video Doorphone - Easy Setup Guide**

D

## **Answering the Doorbell and Viewing the Camera**



Push the **CALL** button to ring bell



When tone sounds the screen will light up and you will see the camera image. Quickly press the **TALK/VIDEO** button to speak. Push **TALK/VIDEO** button again to turn off video

**NOTE**: If **TALK/VIDEO** button is held or not pushed quickly enough video will turn off



Press the **TALK/VIDEO** button to see camera in silent mode

E

## **Troubleshooting Guide**

Problem: I see no image when I press the TALK/VIDEO button when someone is at the door.

Answer: Quickly push the TALK/VIDEO button and release. If you hold the TALK/VIDEO button down too long or do not release the button quickly enough the monitor will not show an image and remain off.

Problem: When the image comes on the screen is bright white or too dark to see who's there.

Answer: The image is over or underexposed. Adjust the Brightness dial on the on the left side of the Doorbell.

Problem: The unlock button for my Door Strike works occasionally or not at all.

Answer: Check the Extension Cable for damage. Ensure you are using the original cable or replacement cable of similar quality and length. If the cable length is joined or spliced to another cable the loss of current will prevent the Door Strike from operating correctly.

Tip 1: Mount the camera in an obvious location where visitors can access the doorbell.

Tip 2: Test the unit is working correctly before permanently installing