



Replacement Instructions

Grow to Pro[®] Basketball

Model Number: 72408


WARNING

Entanglement Hazard

- Your child could strangle in large openings in the net.
- Do not allow children to play with set until you have replaced the net.

Replacement Kit Parts

Tool Required for Replacement: Phillips Screwdriver (not included).

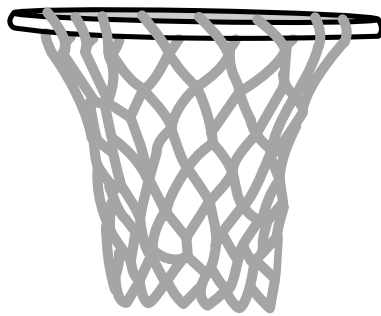


Net - Ring



4 Screws

Size: #6 x 5/8"


SHOWN ACTUAL SIZE

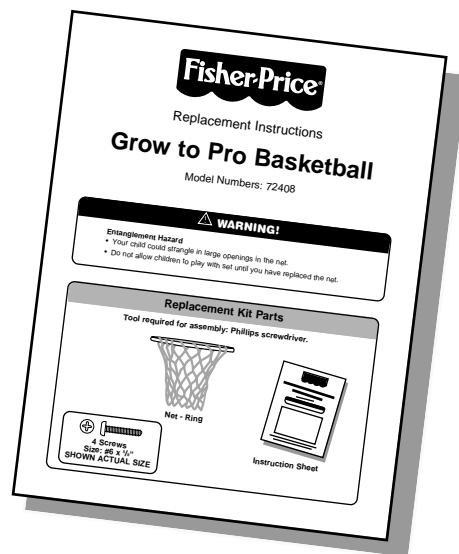

Instruction Sheet


Replacement Instructions

IMPORTANT! Carefully follow these instructions to replace the net-ring assembly.

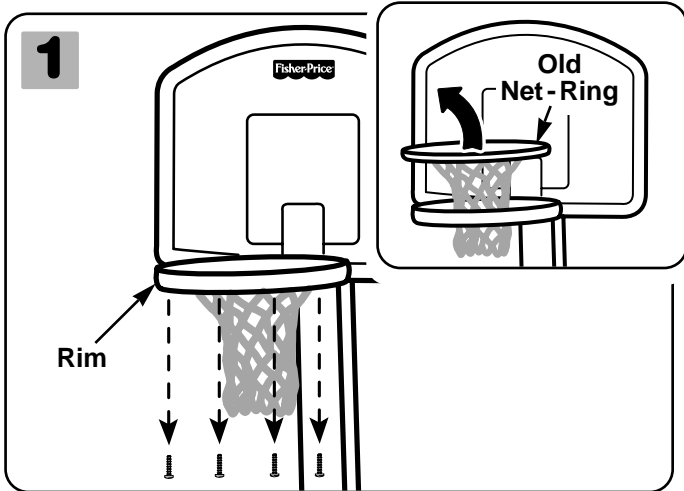


Remove Old Net - Ring

- Find the four screws in the underside of the rim. Using a Phillips screwdriver, remove the four screws in the rim. Throw away these screws.
- Remove the old net-ring from the topside of the rim. Throw away the old net-ring.

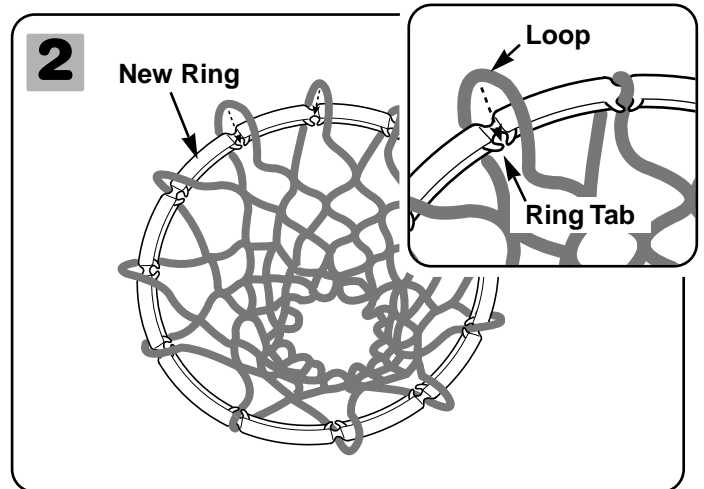


Assemble New Net - Ring

- Pull each net loop through a ring tab, as shown.
- Grasp the bottom of the net and pull down to be sure **all** of the loops are inserted into **all** of the ring tabs.

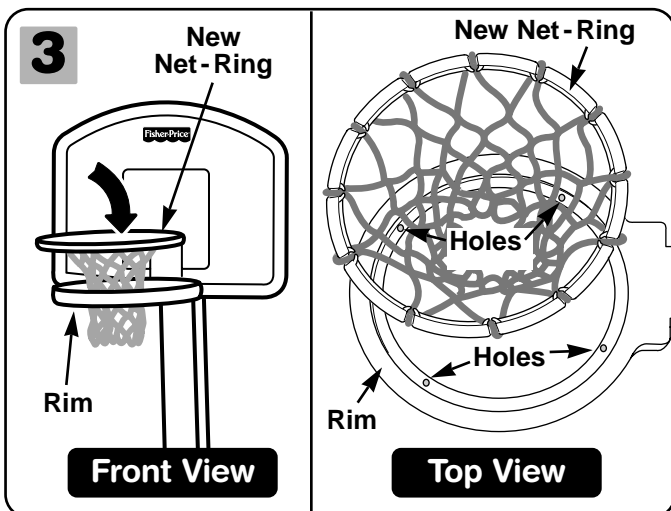

- Align the four holes in the ring with the four holes in the rim.
- Fit the new net-ring assembly into the topside of the rim.

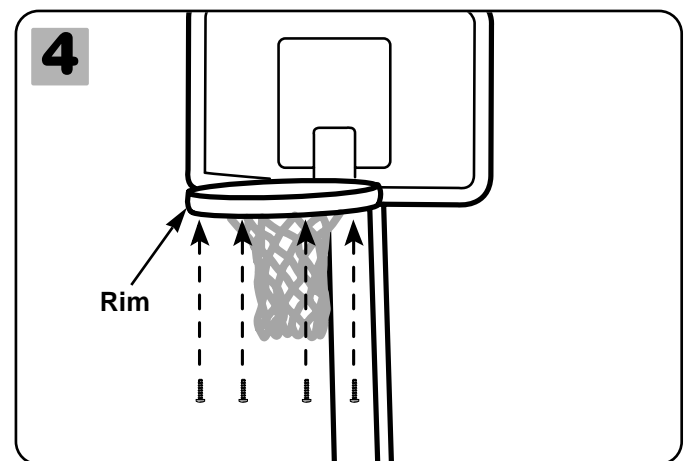

- Insert four, new screws through the underside of the rim and into the ring.
- Tighten the screws with a Phillips screwdriver. Do not over-tighten.

Replacement is now complete.

If you have further questions regarding the installation of the net-ring, please call Fisher-Price® Consumer Relations, toll-free at **1-800-366-1455**, 8 AM-6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.