


GOLD'S GYM®

◆ PLATINUM ◆

Model No. GGBE1658.0

Serial No. _____

Write the serial number in the space above for future reference.

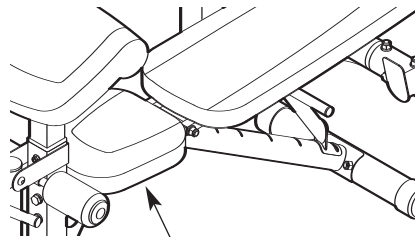

Serial Number Decal

USER'S MANUAL

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if a part is damaged or missing, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT DIRECTLY.

CALL TOLL-FREE:


1-877-776-4777

Mon.–Fri., 6 a.m.–6 p.m. MST

Sat. 8 a.m.–4 p.m. MST

ON THE WEB:

www.goldsgympowerflex.com

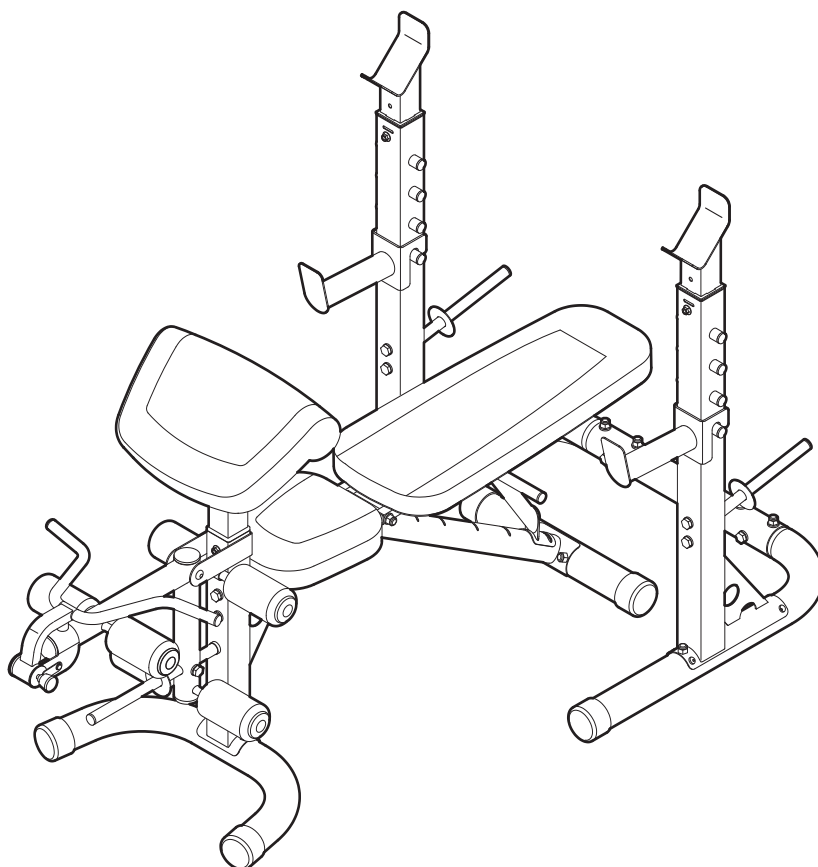

▲ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

TABLE OF CONTENTS

WARNING DECAL PLACEMENT2

IMPORTANT PRECAUTIONS3

BEFORE YOU BEGIN4

PART IDENTIFICATION CHART5

ASSEMBLY6

ADJUSTMENT11

EXERCISE GUIDELINES13

PART LIST17

EXPLODED DRAWING18

ORDERING REPLACEMENT PARTSBack Cover


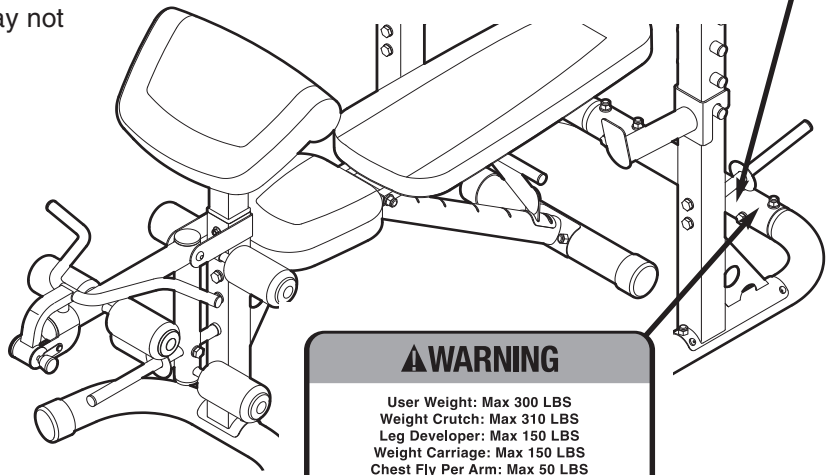
LIMITED WARRANTYBack Cover

WARNING DECAL PLACEMENT

The decals shown here have been applied in the locations shown. **If a decal is missing or illegible, call the telephone number on the front cover of this manual and order a free replacement decal. Apply the decal in the location shown.** Note: The decals may not be shown at actual size.

⚠ WARNING

- Misuse of this machine may result in serious injury.
- Read user's manual prior to use and follow all warnings and instructions.
- Do not allow children on or around machine.
- Keep body, clothing, and hair free and clear of all moving parts.
- Replace label if damaged, illegible, or removed.

⚠ WARNING

User Weight: Max 300 LBS
 Weight Crutch: Max 310 LBS
 Leg Developer: Max 150 LBS
 Weight Carriage: Max 150 LBS
 Chest Fly Per Arm: Max 50 LBS

Product may not offer all listed exercises.

GOLD'S GYM is a registered trademark of Gold's Gym International, Inc. This product is manufactured and distributed under license from Gold's Gym International, Inc.

IMPORTANT PRECAUTIONS

⚠️ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on the weight bench before using the weight bench. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of the weight bench.

1. Before beginning any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.
2. Use the weight bench only as described in this manual.
3. It is the responsibility of the owner to ensure that all users of the weight bench are adequately informed of all precautions.
4. The weight bench is intended for home use only. Do not use the weight bench in a commercial, rental, or institutional setting.
5. Keep the weight bench indoors, away from moisture and dust. Place the weight bench on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is enough clearance around the weight bench to mount, dismount, and use it.
6. Keep children under age 12 and pets away from the weight bench at all times.
7. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
8. Make sure that the backrest post is fully engaged in a slot in the frame before using the backrest.
9. Wear appropriate clothes while exercising. Always wear athletic shoes for foot protection while exercising.
10. The weight bench is designed to support a maximum user weight of 300 lbs. (136 kg) and a maximum total weight of 610 lbs (277 kg). Do not place more than 310 lbs (141 kg), including a barbell, on the weight rests. Do not place more than 150 lbs (68 kg) on the leg lever. Note: The weight bench does not include a barbell or weights.
11. If you feel pain or dizziness while exercising, stop immediately and cool down.

BEFORE YOU BEGIN


Thank you for selecting the versatile GOLD'S GYM® PLATINUM weight bench. The weight bench offers a selection of exercise stations designed to develop the major muscle groups of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the weight bench will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the weight bench. If you have questions after reading this manual, please see the front cover of this

manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.


To avoid a registration fee for any service needed under warranty, you must register the weight bench at www.iconservice.com/registration.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

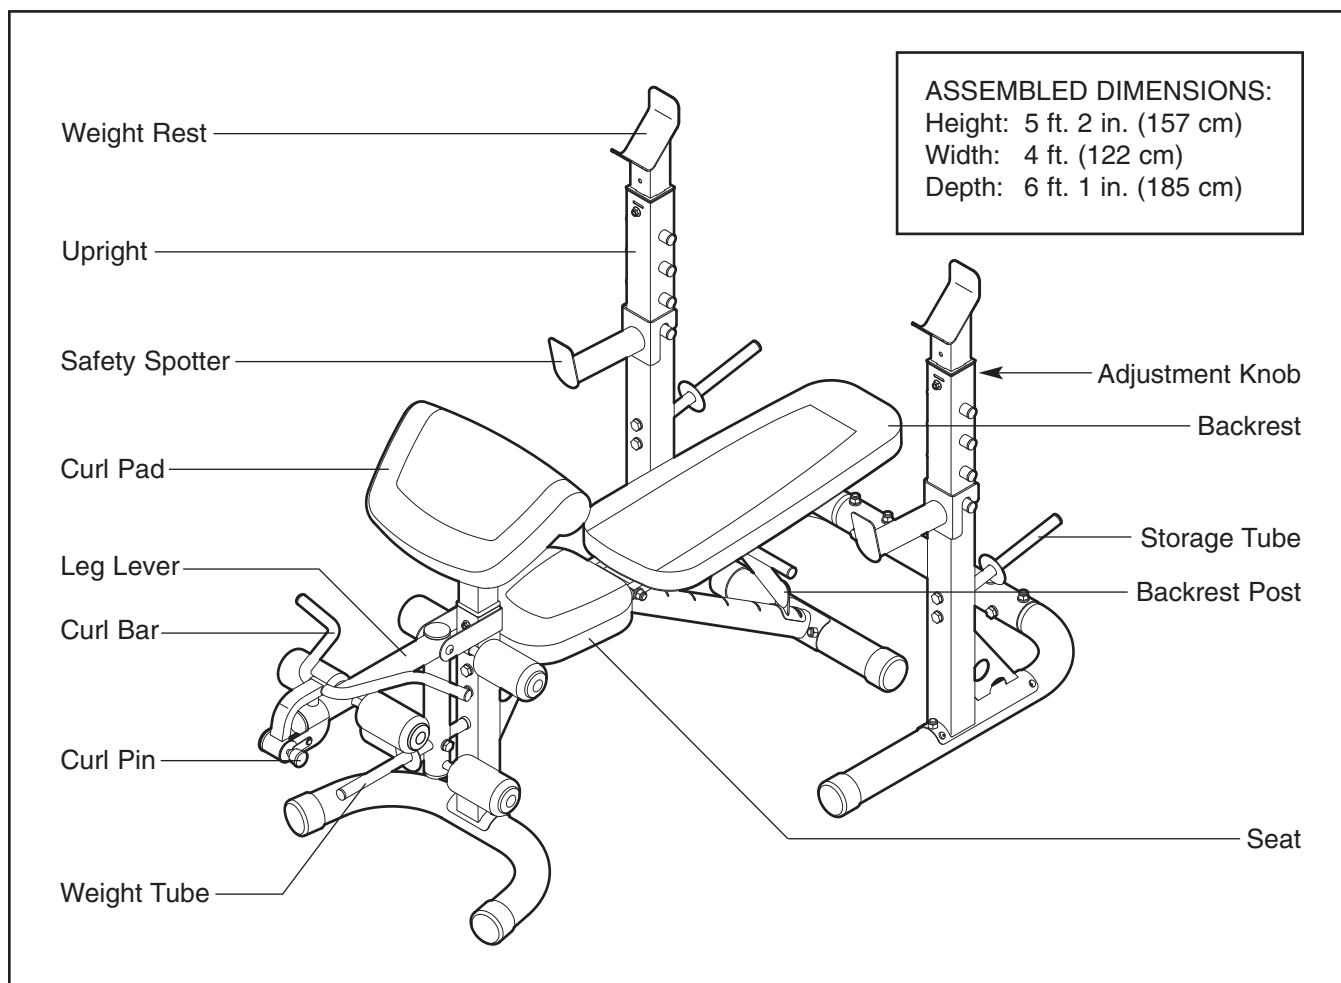


PART IDENTIFICATION CHART


See the drawings below to identify small parts used in assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST near the end of this manual. **Note: Some small parts may have been preattached. If a part is not in the hardware kit, check to see if it has been preattached.**

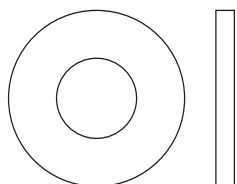

M10 Washer (52)

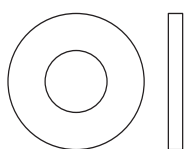

M8 Washer (54)

 


M6 Washer (53)




M10 Nylon Locknut (57)



 
M8 Nylon Locknut (58)




M4 x 19mm Screw (51)

 


M5 x 19mm Screw (50)

 


M6 x 20mm Screw (47)

 


M6 x 40mm Screw (48)

 


M8 x 70mm Bolt (44)

 


M6 x 80mm Screw (46)

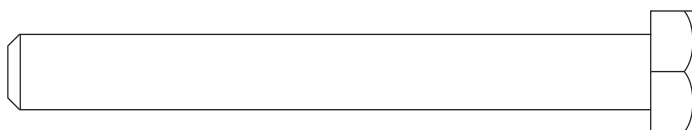


M10 x 85mm Bolt (43)

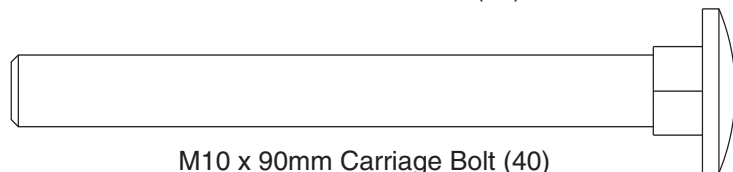


M10 x 90mm Carriage Bolt (40)

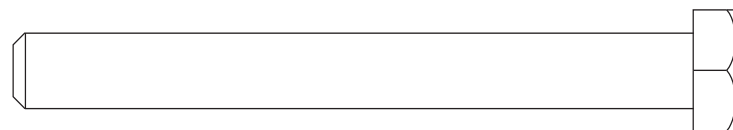

M10 x 90mm Bolt (42)

 

M10 x 77mm Bolt Set (45)

 

M10 x 165mm Bolt (49)


ASSEMBLY




 
Make Assembly Easier

Everything in this manual is designed to ensure that the weight bench can be assembled successfully by almost anyone. By setting aside plenty of time, assembly will go smoothly.

Before beginning assembly, carefully read the following information and instructions:

- To hire an authorized service technician to assemble the weight bench, call 1-800-445-2480.
- Assembly requires two persons.
- Because of its size, the weight bench should be assembled in the location where it will be used. Make sure that there is enough clearance to walk around the weight bench as you assemble it.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.


- Tighten all parts as you assemble them, unless instructed to do otherwise.
- As you assemble the weight bench, make sure all parts are oriented as shown in the drawings.
- For help identifying small parts, use the PART IDENTIFICATION CHART on page 5.
- Assembly requires the included hex key(s)  and the following tools (not included):

- two adjustable wrenches 
- one rubber mallet 
- one standard screwdriver 
- one Phillips screwdriver 


Assembly may be more convenient if you have a socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.

1. **Before beginning assembly, make sure that you have read and understand the information in the box above. See the PART IDENTIFICATION CHART on page 5 for help identifying small parts.**


Orient the Front Stabilizer (2) with the square holes toward the floor. Attach the Front Stabilizer to the Front Leg (4) with two M10 x 90mm Carriage Bolts (40) and two M10 Nylon Locknuts (57). **Do not tighten the Nylon Locknuts yet.**

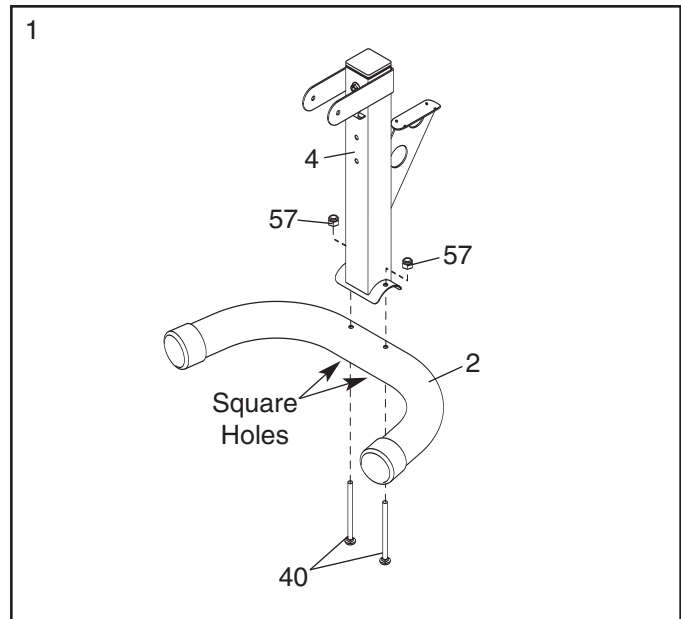

2. Attach the Rear Stabilizer (3) to the Frame (1) with two M10 x 90mm Carriage Bolts (40) and two M10 Nylon Locknuts (57). **Do not tighten the Nylon Locknuts yet.**

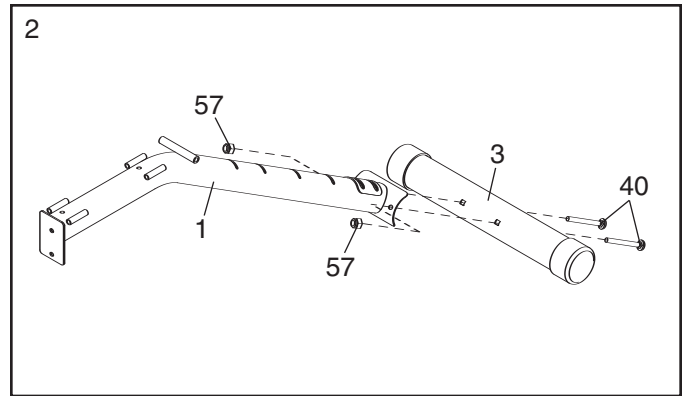


3. Attach the Seat (18) and the Seat Bracket (8) to the Frame (1) with two M6 x 80mm Screws (46) and two M6 Washers (53).

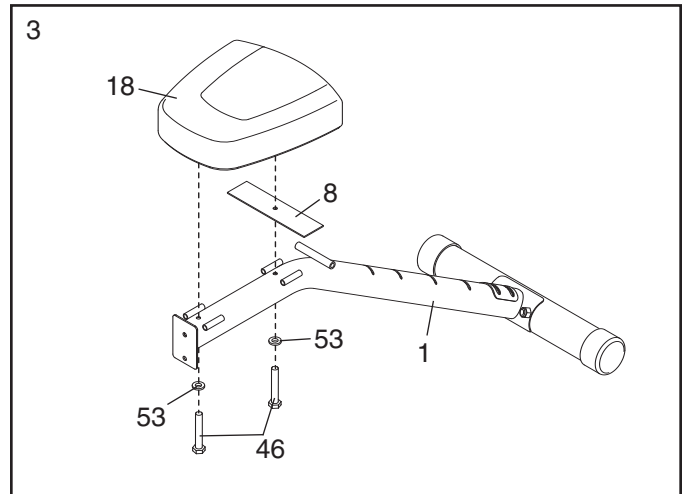

4. Attach the Frame (1) to the Front Leg (4) with two M10 x 85mm Bolts (43), two M10 Washers (52), and an M10 Nylon Locknut (57). **Do not tighten the Nylon Locknut yet.**


Finish attaching the Front Leg (4) to the Frame (1) with four M4 x 19mm Screws (51).

See steps 1, 2, and 4. Tighten the M10 Nylon Locknuts (57).

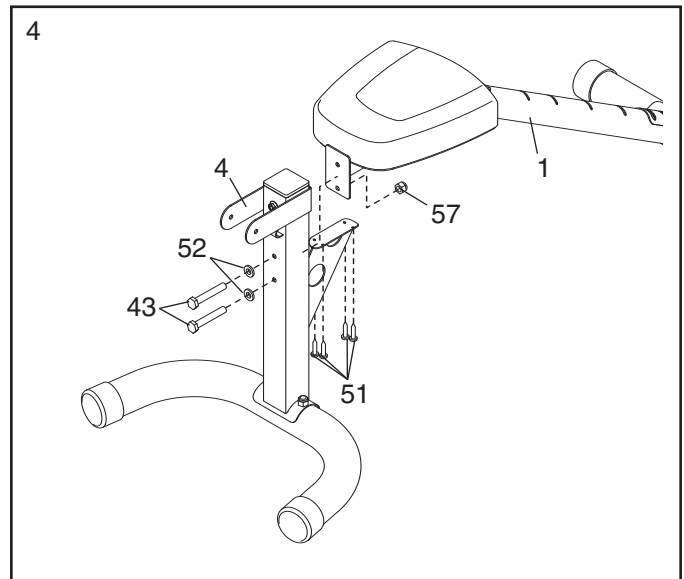


- Apply a portion of the included grease to an M10 x 165mm Bolt (49). Attach the Backrest Post (15) to the Backrest Frames (16) with the Bolt, two M10 Washers (52), and an M10 Nylon Locknut (57). **Do not tighten the Nylon Locknut yet.**

Attach the Backrest (19) to the Backrest Frames (16) with four M6 x 40mm Screws (48) and four M6 Washers (53). **Do not tighten the Screws yet.**

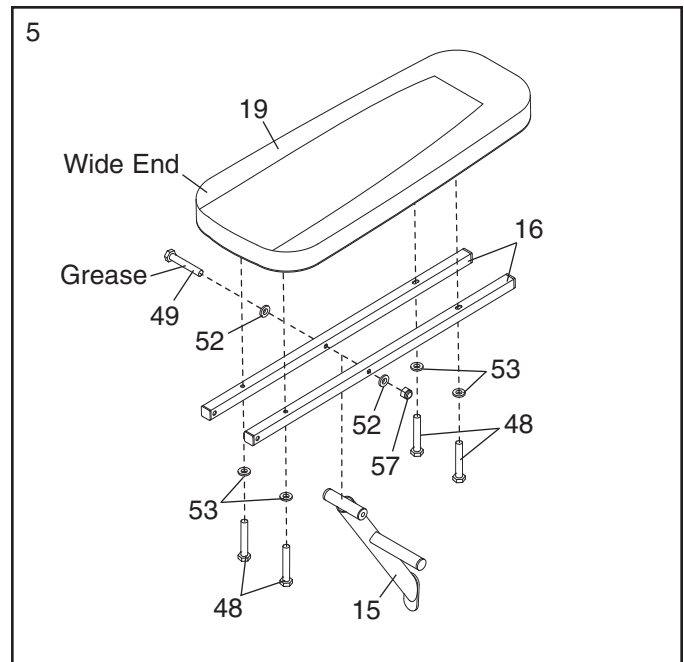


- Grease an M10 x 165mm Bolt (49). Attach the Backrest Frames (16) to the Frame (1) with the Bolt, two M10 Washers (52), and an M10 Nylon Locknut (57). Set the end of the Backrest Post (15) in one of the slots in the Frame. **Do not overtighten the Nylon Locknut; the Backrest Frames must pivot easily.**

See step 5. Tighten the M10 Nylon Locknut (57) and the four M6 x 40mm Screws (48). **Do not overtighten the Nylon Locknut; the Backrest Post (15) must pivot easily.**

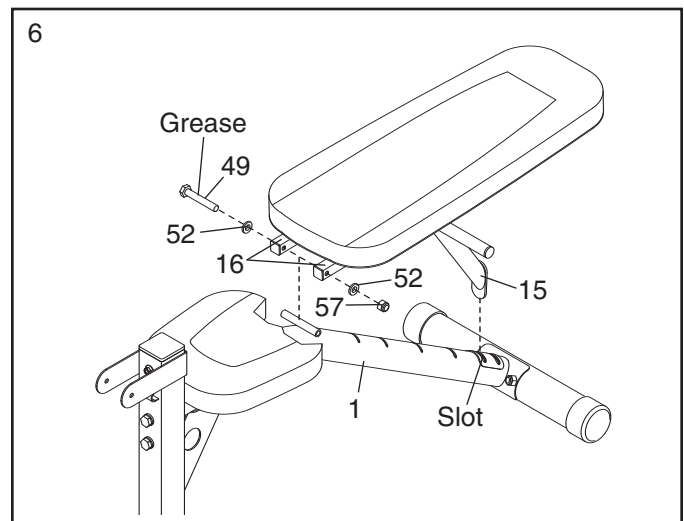


- Attach the Weight Tube (24) to the Leg Lever (5) with an M8 x 70mm Bolt (44), a 13mm x 16mm Spacer (55), two M8 Washers (54), and an M8 Nylon Locknut (58). Next, press a 25mm Outer Cap (56) onto the end of the Weight Tube.

Apply grease to the barrel of an M10 x 77mm Bolt Set (45). Attach the Leg Lever (5) to the Front Leg (4) with the Bolt Set. **Make sure that the barrel of the Bolt Set is inserted through both sides of the bracket on the Front Leg.**

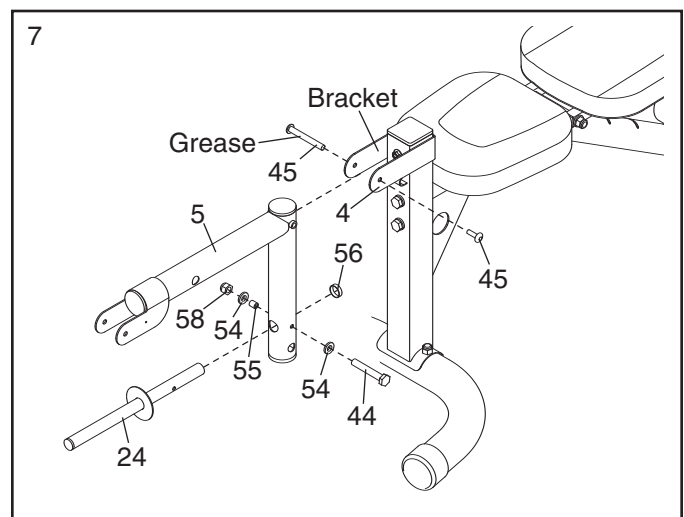


8. Insert the Long Pad Tube (36) into the bracket on the Front Leg (4). Slide two Foam Pads (22) onto the Long Pad Tube, and press a Pad Cap (23) into each Foam Pad.

Repeat this step with the two Short Pad Tubes (21).

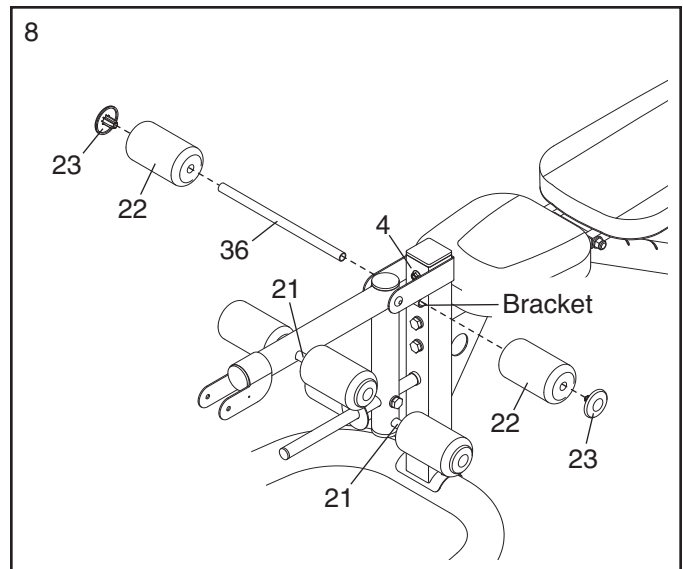


9. Attach the Bumper (30) to the Curl Bar (17) with an M4 x 19mm Screw (51).

Attach the Curl Bar (17) to the Leg Lever (5) with the Curl Bar Pin (33). Then, attach the Tether (34) on the Curl Bar Pin to the Leg Lever with an M4 x 19mm Screw (51).

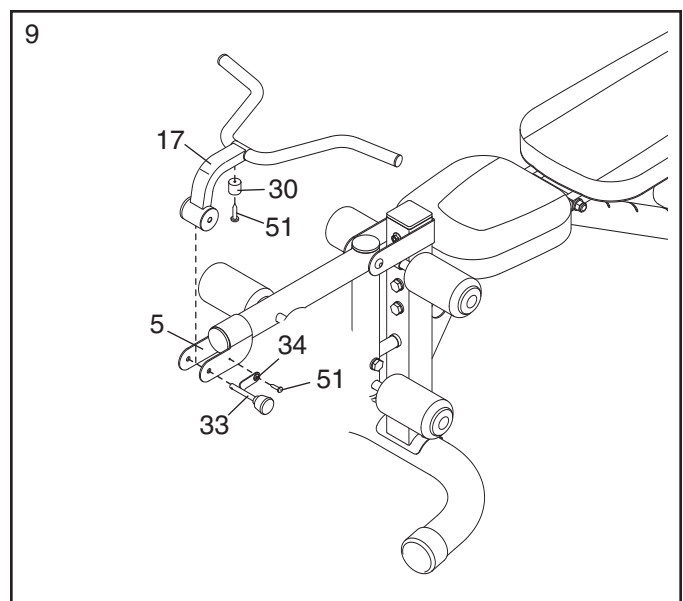


10. Attach the Curl Pad (20) to the Curl Post (6) with two M6 x 20mm Screws (47).

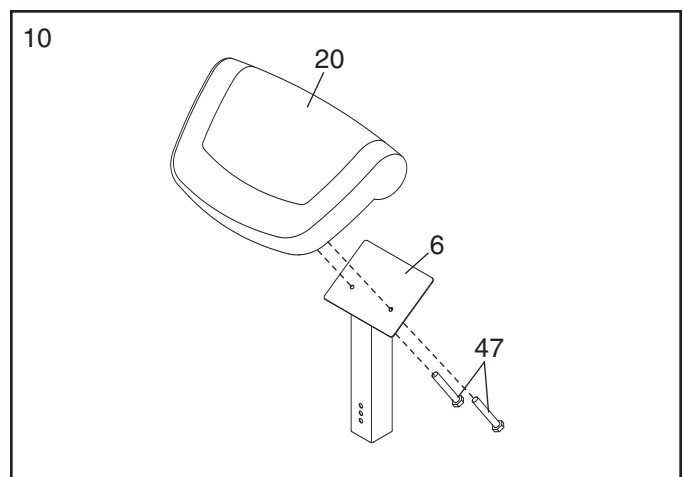

11. Identify the Left Upright Base (39), which is marked with an L sticker. Attach a Foot (39) to the Left Upright Base with an M5 x 19mm Screw (50). Insert an M10 x 90mm Carriage Bolt (40) up into the Left Upright Base. **Note: It may be helpful to place a piece of tape over the bolt head to hold it in place.**

Attach the Left Upright Base (9) to the Base (7) with two M10 x 90mm Carriage Bolts (40), an M10 x 90mm Bolt (42), four M10 Washers (52), and three M10 Nylon Locknuts (57). **Do not tighten the Nylon Locknuts yet.**

Repeat this step for the Right Upright Base (10).

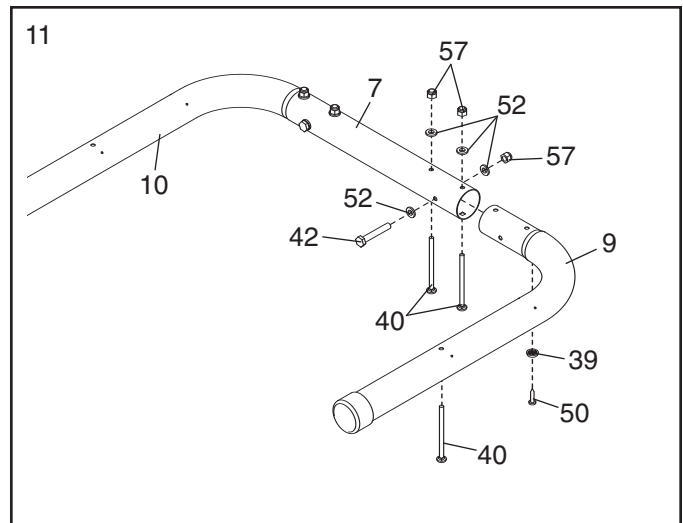


12. Attach a Storage Tube (14) to an Upright (11) with two M10 x 90mm Bolts (42), two M10 Washers (52), and two M10 Nylon Locknuts (57).

Attach the Upright (11) to the Left Upright Base (9) with the M10 x 90mm Carriage Bolt (40), four M5 x 19mm Screws (50), and an M10 Nylon Locknut (57).

Repeat this step for the other Upright (11) and the Right Upright Base (10).


See step 11. Tighten all of the M10 Nylon Locknuts (57).

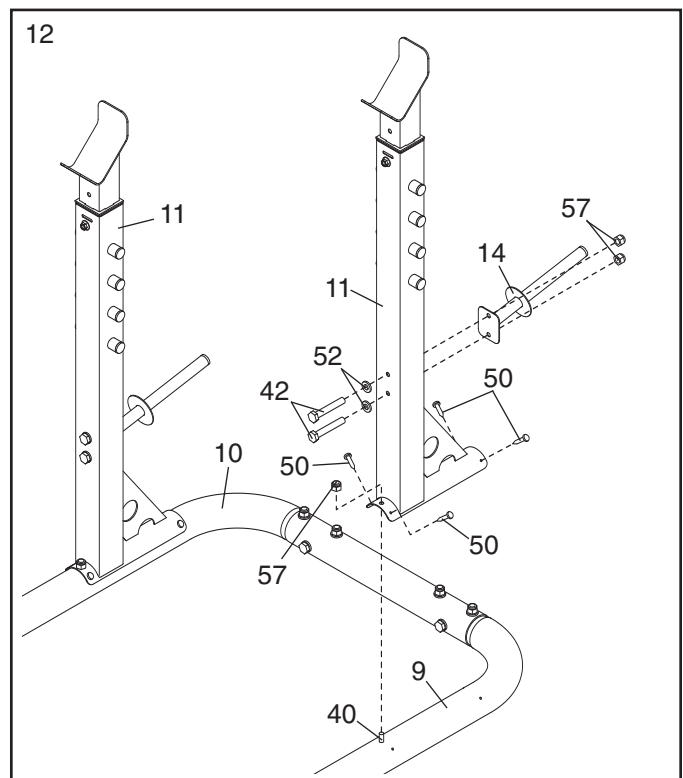

13. Set a Safety Spotter (13) on a set of pegs on the left Upright (11).

Set the other Safety Spotter (13) on a set of pegs on the right Upright (11). **Make sure that both Safety Spotters are at the same height.**

14. **Make sure that all parts are properly tightened before you use the weight bench. The use of all remaining parts will be explained in ADJUSTMENT on pages 11 and 12.**

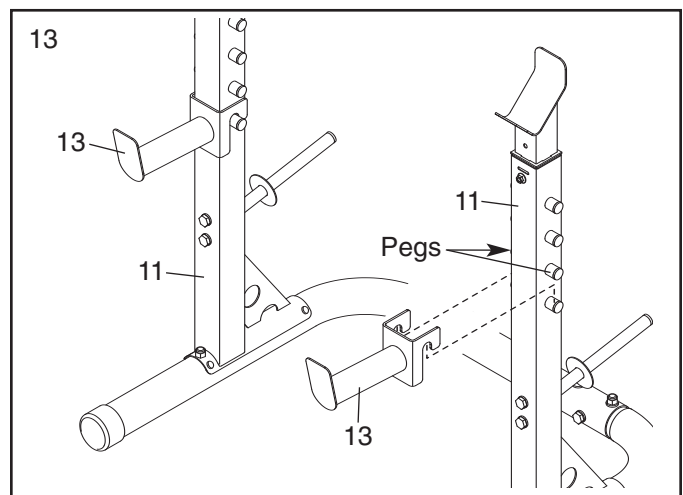

ADJUSTMENT


This section explains how to adjust the weight bench. See the EXERCISE GUIDELINES on page 13 for important information about how to get the most benefit from your exercise program. Also, refer to the accompanying exercise guide to see the correct form for several exercises.

Make sure all parts are properly tightened each time you use the weight bench. Replace any worn parts immediately. The weight bench can be cleaned with a damp cloth and a mild, non-abrasive detergent; **do not use solvents.**

USING THE CURL PAD


To use the Curl Pad (20), remove the indicated 70mm Square Inner Cap (26) and insert the Curl Post (6) into the Front Leg (4). Tighten an Adjustment Knob (35) into the Front Leg. **Make sure that the Adjustment Knob passes through a hole in the Curl Post.**

When performing exercises that do not require the Curl Pad (20), remove the Curl Pad and reinsert the 70mm Square Inner Cap (26) into the Front Leg (4).

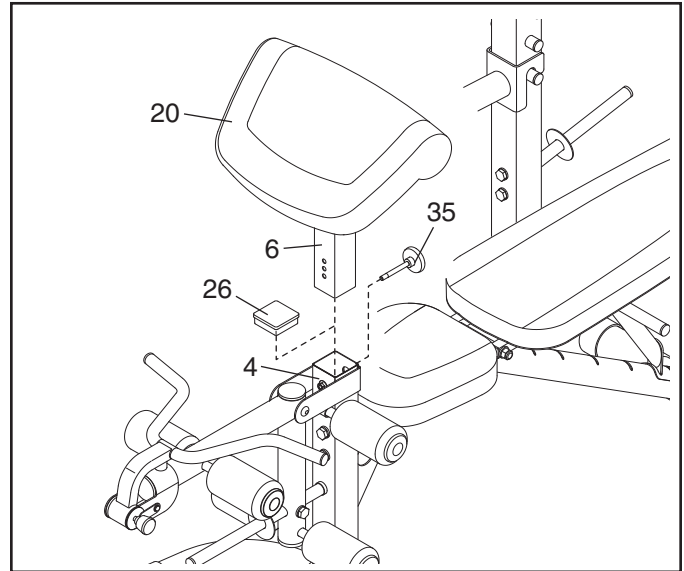


ADJUSTING THE BACKREST

To adjust the position of the Backrest (19), lift the indicated handle on the Backrest Post (15). Raise or lower the Backrest, and set the Backrest Post in one of the slots in the Frame (1). **Make sure that the Backrest Post is fully inserted into one of the slots.**

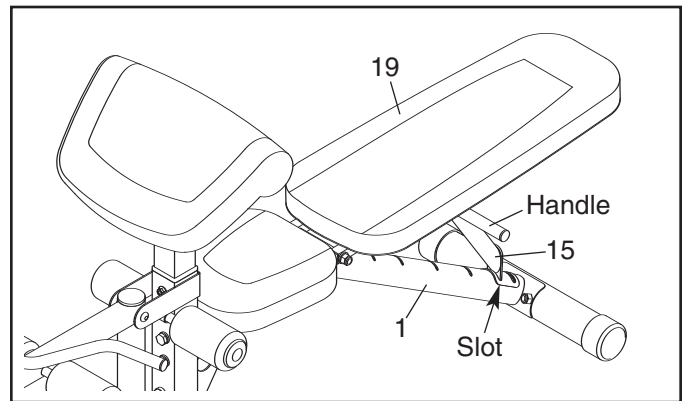

USING THE LEG LEVER


The Leg Lever (5) can be used with standard weights or Olympic weights. To use the Leg Lever, slide a weight plate (not shown) onto the Weight Tube (24) and secure it with a 1" Weight Clip (41). **Note: When using the Leg Lever, remove the Curl Bar (17) (see REMOVING THE CURL BAR on page 12).**

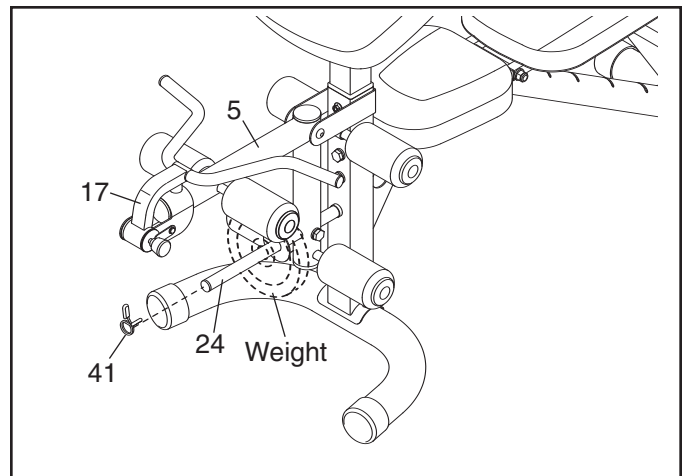

REMOVING THE CURL BAR

When performing exercises that do not require the Curl Bar (17), pull the Curl Bar Pin (33) out of the Leg Lever (5) and remove the Curl Bar.


When attaching the Curl Bar (17), insert the Curl Bar Pin (33) completely through the Leg Lever (5).

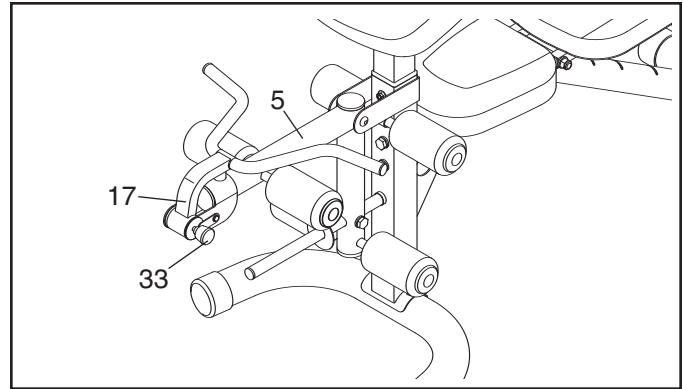

ADJUSTING THE WEIGHT RESTS AND THE SAFETY SPOTTERS

To adjust the height of the Weight Rests (12), raise the Weight Rests to the desired height and tighten an Adjustment Knob (35) into each Upright (11). **Make sure that the Weight Rests are at the same height and that the Adjustment Knobs are fully tightened into the Uprights.**

To adjust the position of the Safety Spotters (13), move the Safety Spotters to a different set of pegs on the Uprights (11). **Make sure that the Safety Spotters are at the same height.**

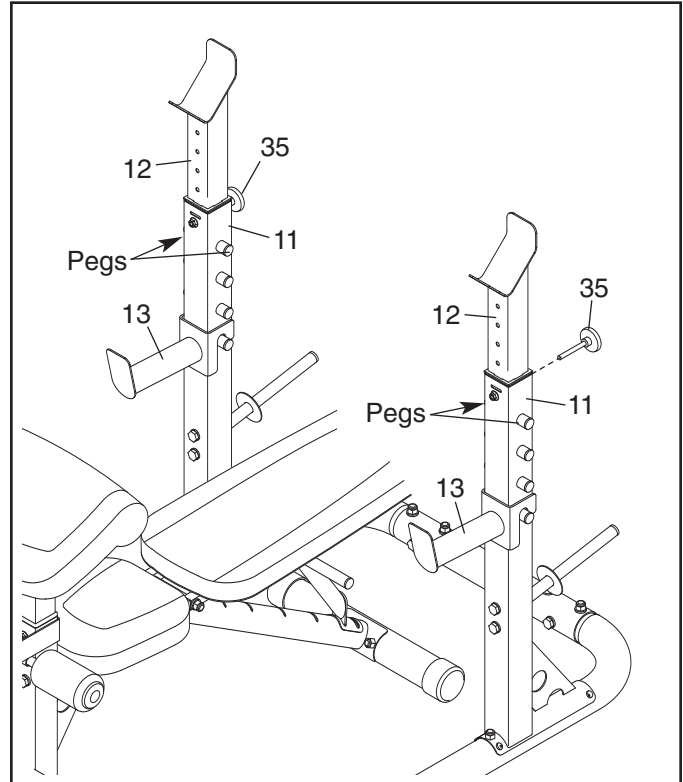

EXERCISE GUIDELINES

THE FOUR BASIC TYPES OF WORKOUTS

Muscle Building

To increase the size and strength of your muscles, push them close to their maximum capacity. Your muscles will continually adapt and grow as you progressively increase the intensity of your exercise. You can adjust the intensity level of an individual exercise in two ways:

- by changing the amount of resistance used
- by changing the number of repetitions or sets performed. (A “repetition” is one complete cycle of an exercise, such as one sit-up. A “set” is a series of repetitions.)

The proper amount of resistance for each exercise depends upon the individual user. You must gauge your limits and select the amount of resistance that is right for you. Begin with 3 sets of 8 repetitions for each exercise you perform. Rest for 3 minutes after each set. When you can complete 3 sets of 12 repetitions without difficulty, increase the amount of resistance.

Toning

You can tone your muscles by pushing them to a moderate percentage of their capacity. Select a moderate amount of resistance and increase the number of repetitions in each set. Complete as many sets of 15 to 20 repetitions as possible without discomfort. Rest for 1 minute after each set. Work your muscles by completing more sets rather than by using high amounts of resistance.

Weight Loss

To lose weight, use a low amount of resistance and increase the number of repetitions in each set. Exercise for 20 to 30 minutes, resting for a maximum of 30 seconds between sets.

Cross Training

Cross training is an efficient way to get a complete and well-balanced fitness program. An example of a balanced program follows:

- Plan strength training workouts on Monday, Wednesday, and Friday.
- Plan 20 to 30 minutes of aerobic exercise, such as running on a treadmill or riding on an elliptical exerciser or exercise cycle, on Tuesday and Thursday.
- Rest from both strength training and aerobic exercise for at least one full day each week to give your body time to regenerate.

The combination of strength training and aerobic exercise will reshape and strengthen your body, plus develop your heart and lungs.

PERSONALIZING YOUR EXERCISE PROGRAM

Determining the exact length of time for each workout, as well as the number of repetitions or sets completed, is an individual matter. It is important to avoid overdoing it during the first few months of your exercise program. You should progress at your own pace and be sensitive to your body’s signals. If you experience pain or dizziness at any time while exercising, stop immediately and begin cooling down. Find out what is wrong before continuing. Remember that adequate rest and a proper diet are important factors in any exercise program.

WARMING UP

Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up. Warming up prepares your body for more strenuous exercise by increasing circulation, raising your body temperature and delivering more oxygen to your muscles.

WORKING OUT

Each workout should include 6 to 10 different exercises. Select exercises for every major muscle group, emphasizing areas that you want to develop most. To give balance and variety to your workouts, vary the exercises from session to session.

Schedule your workouts for the time of day when your energy level is the highest. Each workout should be followed by at least one day of rest. Once you find the schedule that is right for you, stick with it.

EXERCISE FORM

Maintaining proper form is an essential part of an effective exercise program. This requires moving through the full range of motion for each exercise, and moving only the appropriate parts of the body. Exercising in an uncontrolled manner will leave you feeling exhausted. On the exercise guide accompanying this manual you will find photographs showing the correct form for several exercises, and a list of the muscles affected. Refer to the muscle chart on the next page to find the names of the muscles.

The repetitions in each set should be performed smoothly and without pausing. The exertion stage of each repetition should last about half as long as the return stage. Proper breathing is important. Exhale during the exertion stage of each repetition and inhale during the return stroke. Never hold your breath.

Rest for a short period of time after each set. The ideal resting periods follow:

- Rest for three minutes after each set for a muscle building workout.
- Rest for one minute after each set for a toning workout.
- Rest for 30 seconds after each set for a weight loss workout.

Plan to spend the first couple of weeks familiarizing yourself with the equipment and learning the proper form for each exercise.


COOLING DOWN

End each workout with 5 to 10 minutes of stretching. Include stretches for both your arms and legs. Move

slowly as you stretch and do not bounce. Ease into each stretch gradually and go only as far as you can without strain. Stretching at the end of each workout is an effective way to increase flexibility.

STAYING MOTIVATED

For motivation, keep a record of each workout. List the date, the exercises performed, the resistance used, and the numbers of sets and repetitions completed. Record your weight and key body measurements at the end of every month. Remember, the key to achieving the greatest results is to make exercise a regular and enjoyable part of your everyday life.

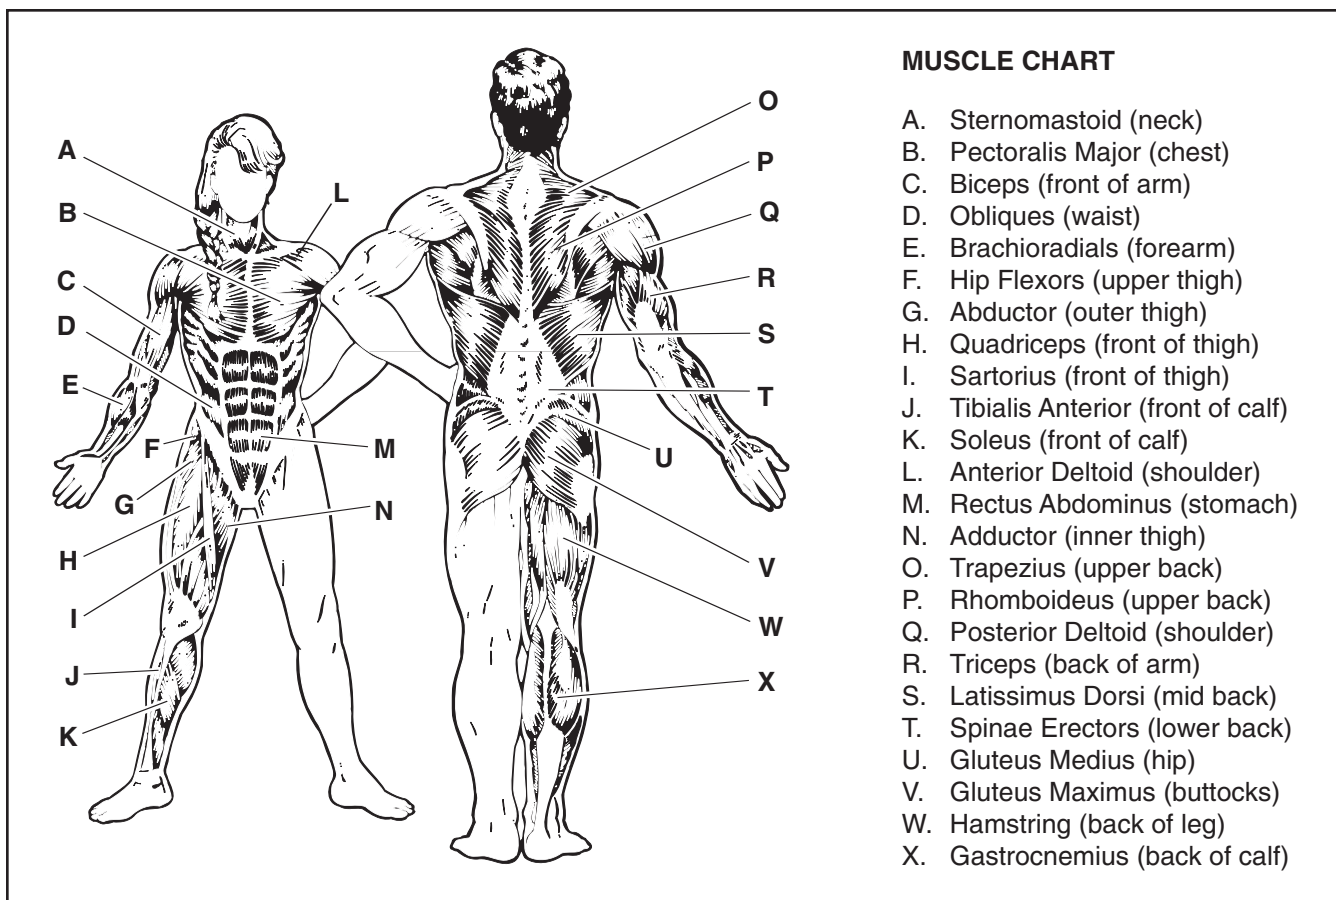

EXERCISE LOG

Make copies of this page, and use the copies to schedule and record your strength and aerobic workouts. Scheduling and recording your workouts will help you to make exercise a regular and enjoyable part of your life.

Strength

Date:

____ / ____ / ____

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

____ / ____ / ____

Exercise	Min.	Dist.	Speed

Strength

Date:

____ / ____ / ____

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

____ / ____ / ____

Exercise	Min.	Dist.	Speed

Strength

Date:

____ / ____ / ____

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

____ / ____ / ____

Exercise	Min.	Dist.	Speed

EXERCISE LOG

Make copies of this page, and use the copies to schedule and record your strength and aerobic workouts. Scheduling and recording your workouts will help you to make exercise a regular and enjoyable part of your life.

Strength

Date:

___ / ___ / ___

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

___ / ___ / ___

Exercise	Min.	Dist.	Speed

Strength

Date:

___ / ___ / ___

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

___ / ___ / ___

Exercise	Min.	Dist.	Speed

Strength

Date:

___ / ___ / ___

Exercise	Lbs.	Sets	Reps	Exercise	Lbs.	Sets	Reps
1.				6.			
2.				7.			
3.				8.			
4.				9.			
5.				10.			

Aerobic

Date:

___ / ___ / ___

Exercise	Min.	Dist.	Speed

PART LIST—Model No. GGBE1658.0


R0508A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	32	2	Backrest Bushing
2	1	Front Stabilizer	33	1	Curl Bar Pin
3	1	Rear Stabilizer	34	1	Tether
4	1	Front Leg	35	3	Adjustment Knob
5	1	Leg Lever	36	1	Long Pad Tube
6	1	Curl Post	37	2	Upright Bushing
7	1	Base	38	2	Upright Spacer
8	1	Seat Bracket	39	2	Foot
9	1	Left Upright Base	40	10	M10 x 90mm Carriage Bolt
10	1	Right Upright Base	41	1	1" Weight Clip
11	2	Upright	42	6	M10 x 90mm Bolt
12	2	Weight Rest	43	2	M10 x 85mm Bolt
13	2	Safety Spotter	44	1	M8 x 70mm Bolt
14	2	Storage Tube	45	1	M10 x 77mm Bolt Set
15	1	Backrest Post	46	2	M6 x 80mm Screw
16	2	Backrest Frame	47	2	M6 x 20mm Screw
17	1	Curl Bar	48	4	M6 x 40mm Screw
18	1	Seat	49	2	M10 x 165mm Bolt
19	1	Backrest	50	10	M5 x 19mm Screw
20	1	Curl Pad	51	10	M4 x 19mm Screw
21	2	Short Pad Tube	52	18	M10 Washer
22	6	Foam Pad	53	6	M6 Washer
23	6	Pad Cap	54	2	M8 Washer
24	1	Weight Tube	55	1	13mm x 16mm Spacer
25	6	76mm Round Outer Cap	56	1	25mm Outer Cap
26	1	70mm Square Inner Cap	57	19	M10 Nylon Locknut
27	3	57mm Round Inner Cap	58	1	M8 Nylon Locknut
28	22	25mm Round Inner Cap	*	—	User's Manual
29	4	25mm Square Inner Cap	*	—	Exercise Guide
30	1	Bumper	*	—	Grease Packet
31	2	Curl Bar Bushing	*	—	Hex Key

Note: Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts. *These parts are not illustrated.

EXPLODED DRAWING B—Model No. GGBE1658.0

R0508A

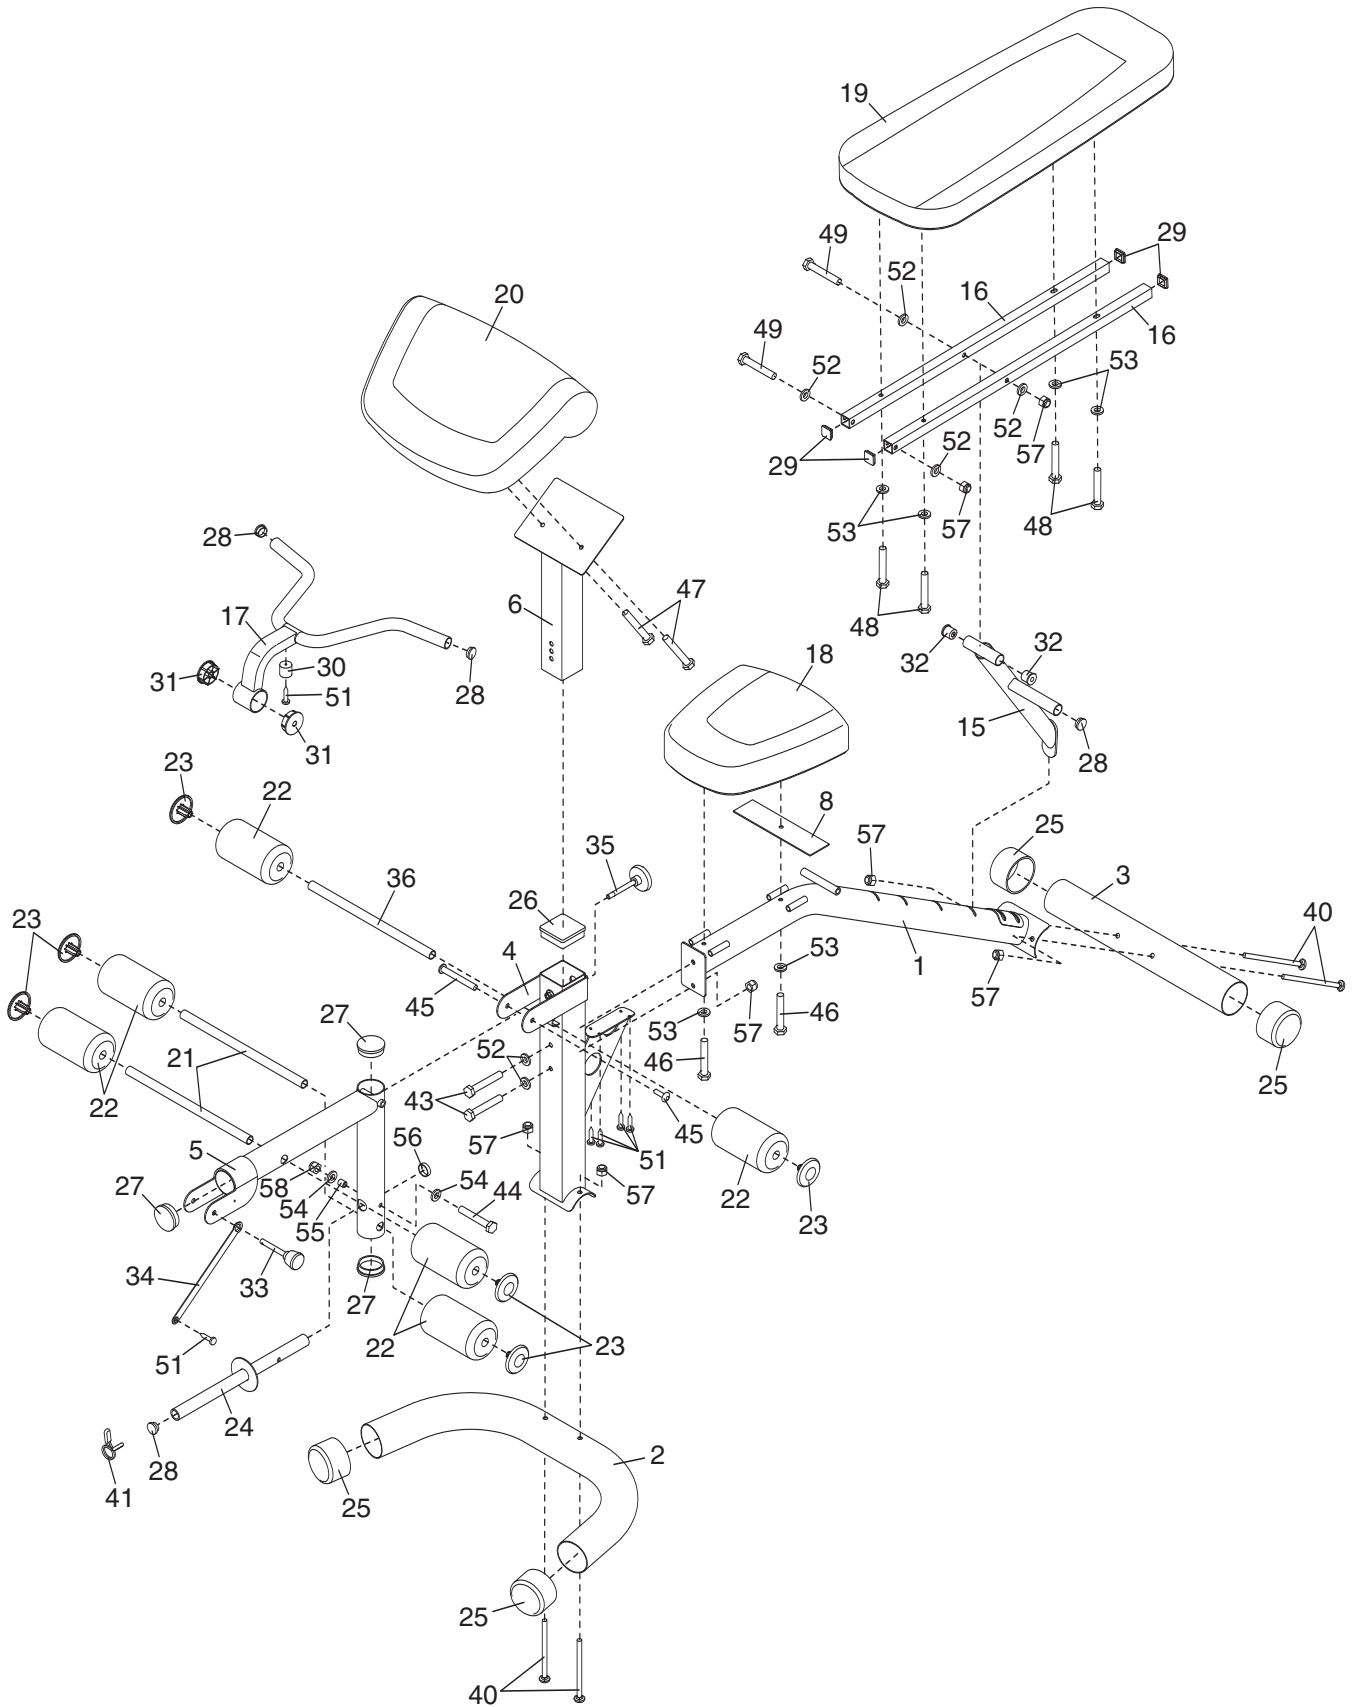

ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of the manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be preauthorized by ICON. If the product is shipped to a service center, freight charges to and from the service center will be the customer's responsibility. For in-home service, the customer will be responsible for a minimal trip charge. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center; products used for commercial or rental purposes; or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813