





AM/FM CLOCK RADIO

Model: VX517

OPERATION INSTRUCTION


 <p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
--	--	---

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

1. Time Set Button
2. On/Off/Auto
3. Alarm Set/Off Button
4. Tuning Control
5. Sleep Button
6. Snooze Button
7. Hour Button
8. Volume Control/Buzzer
9. Band Switch
10. Minute Button

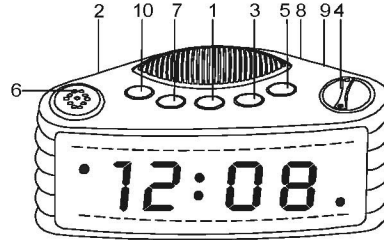

BOTTOM OF SET: Battery compartment for 9 volt (006P) battery (not included) for temporary time storage.

ELECTRONIC CLOCK OPERATION

1. Plug the AC line cord into 120V AC home outlet.
2. The set is now working as an electronic clock and it will flash the clock figures to show you it is not set correctly.
3. To set the correct time, depress the Time Set Button (1) and Hour Button (7) simultaneously, release the buttons approximately before the correct time is reached. Now depress the Minute Button (10) and the Time Set Button (1) simultaneously, to set the readout to the correct time precisely.

RADIO OPERATION

1. Slide the ON/OFF/AUTO Switch (2) to 'ON' position.
2. Slide Band Switch (9) to AM or FM position.
3. Turn the Volume Control (8) to desired volume.
4. Turn the Tuning Control (4) to select your favorite station.
5. Antenna
For AM reception, this radio incorporates a highly sensitive ferrite core bar antenna.
For FM reception, this set is specially equipped with an FM antenna built right into the power line cord.
Be sure to untwist it to its fullest length for peak performance.

WAKE TO RADIO

Having selected your station and set the volume at the desired level, proceed as follows:

1. Slide the ON/OFF/AUTO Switch (2) to 'AUTO' position.
2. Press the Alarm Set Button (3) and whilst this button is depressed, press the Hour Button (7) and then the Minute Button (10) until the time is reached at which you wish to wake. The wake up time is now entered into the timer memory. To check the wake up time, simply press the Alarm Set Button (3) and the clock will show the preset time. The preset wake up time will continue to be registered in the timer memory and the radio will switch on by itself at the same time the next day. To switch the radio off, simply press the Alarm Off Button (3).

WAKE TO BUZZER

Set the controls as for 'Wake to Radio' but Volume Control (8) to BUZZER position. The buzzer can then be switched off by pressing the Alarm Off Button (3) or it can be converted to the radio by selecting switch (2) to 'ON' position.

SLEEP TO MUSIC

The radio can be set to play and to switch off automatically for a length of time from 1 minute to 1 hour 59 minutes by following this procedure – With all the controls preset in the 'Wake to Radio' positions, depress the Sleep Button (5) and press the Minute Button (10) to count down to the desired sleep time. To switch off the radio before the end of the registered sleep time period, simply press the Snooze Button (6).

SNOOZE CONTROL

The Snooze Button (6) allows the user an extra sleep time of about 9 minutes after the radio alarm is switched on at the preset wake up time.

BATTERY BACK-UP

(For Temporary Time Storage Only)

Connect a 9 volt (006P) battery (not included) to the terminals inside the battery compartment. It is recommended that the set is disconnected from the mains supply while the battery is fitted. Your set will not work normally from the mains supply but there is now the advantage that if there is a mains current failure your clock will continue to work. The clock display will not light up, as the clock time will be held in the clock memory by the battery back-up system. This enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used from short temporary power failures. For longer durations the battery may become exhausted or there may be some deviation in accuracy. When the battery is exhausted, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery. However, if disconnected from the mains, the clock figures will flash when the mains are re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

GENERAL CARE

The cabinet can be cleaned with a slightly damp cloth (make sure mains lead is disconnected from mains supply).
Avoid leaving the clock radio in direct sunlight or in hot, humid, dusty places.
Keep the set away from heating appliances and appliances that generate noise, such as fluorescent lamps, or motors.

SPECIFICATIONS

Power Source : 120V 60Hz
 DC Back Up : 9V (1x9V 6F22 NOT INCLUDED)
 Speaker : 8 ohm
 Output : 5W
 Radio Frequency : AM 530-1700 KHz
 : FM 88-108 MHz

FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993