

ONE
FOR ALL®

4

URC-7542
702075

ONE FOR ALL 4

UK Universal remote

D

F

E

P

I

NL



PICTURE OF ONE FOR ALL 4 REMOTE	3
INSTALLING THE BATTERIES	4
THE KEYPAD	4
INSTALLATION	
Setting up your devices	6
The Search Method	7
USING THE AUX KEY	8
CHANGING A DEVICE KEY	8
QUICK CODE REFERENCE	8
ADVANCED FEATURES	
Colour and Brightness	9
Volume Punch-Through	9
Auto Scan	9
Device Sleptimer	10
The ONE FOR ALL Sleptimer	10
TROUBLE-SHOOTING	
Helpful Hints	11
Customer Service	12
SET-UP CODES	
Televisions	73
Video Recorders	79
Satellite Receivers	81
Cable Converters	84

About Your ONE FOR ALL 4

 
Your ONE FOR ALL 4 Package contains:

- Your ONE FOR ALL 4 Remote
- Your ONE FOR ALL 4 Manual

Your manual is divided into two parts: set-up instructions and device codes. **You may need this guide again in the future, so please be sure to keep it.**

Your ONE FOR ALL 4 needs 2 new "AA/LR6" alkaline batteries.

Your ONE FOR ALL 4 can operate four devices: a Television, a Video Recorder, a Satellite Receiver and a second Television, Video or Satellite Receiver. Your ONE FOR ALL 4 can also operate Cable Converters.

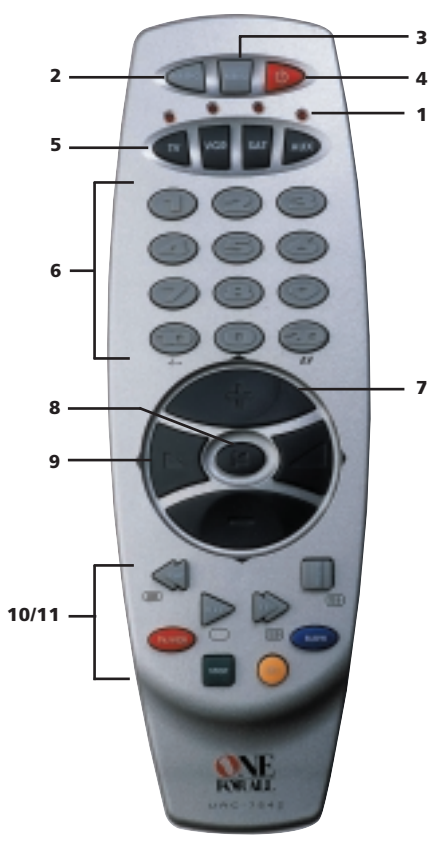

Installing the Batteries

Your ONE FOR ALL 4 needs 2 new "AA/LR6" alkaline batteries.

- 1** Remove the battery cover from the back of your ONE FOR ALL 4 by pressing down on the tab.
- 2** Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3** Press the battery cover back into place.

Important notes:

- In order to avoid having to reprogram your ONE FOR ALL 4 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is best that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up codes after your ONE FOR ALL 4 is set up for your device. Please write down your codes for easy, future reference.

The Keypad

See picture of ONE FOR ALL 4 remote on page 3

1 LEDs

The LEDs (Light Emitting Diode) flashes red to show the remote is working. Over each device key (TV, VCR, SAT, AUX) there is a LED. During operation of the ONE FOR ALL these LEDs will indicate the mode you are using.

2 MAGIC Key

The MAGIC key is used to set up your ONE FOR ALL 4 and to access special functions.

3 MENU Key

The MENU key controls the same function as it did on your original remote.

4 POWER Key

The Power key controls the same function as it did on your original remote.

5 Device Keys

The TV, VCR, SAT and AUX keys select the home entertainment device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing VCR you can operate your Video Cassette Recorder and the SAT key operates your Satellite Receiver or Cable Converter. The AUX key operates a second Television, Video Recorder, Satellite or Cable Converter.

6 Number Keys

The Number keys (0-9, 10, 20) provide functions just like your original remote, such as direct access to programme selection. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key, which is the same as the 10 key.

7 Programme (Channel) +/- Keys

These keys operate in the same way as the keys on your original remote. If available on your original remote, these keys will allow you to navigate through the menu.

8 MUTE Key

The Mute key operates the same function it did on your original remote control. It is also used to activate the Scan feature (see page 9). Also, if your original remote control required that you press an "OK" or "ENTER" key during Menu operation, the Mute key can be used for this function.

9 Volume +/- Keys

These keys operate in the same way as the keys on your original remote. If available on your original remote, these keys will allow you to navigate through the menu.

10 Video Recorder Keys

After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed twice to start recording.

11 Teletext and Fastext Keys

After pressing the TV key, the top row of the VCR keys is used to operate the main Teletext functions. The symbols below the keys are for Teletext. The text keys are used to access the Teletext functions of your television. Of course, your television must have Teletext capability.



TEXT ON: Puts the television in the Teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT ON key several times.



EXPAND: Shows the top half of the Teletext page in larger letters. By pressing again, you can see the bottom half of the Teletext page enlarged. To return to regular Teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.



HOLD/STOP: Stops changing pages.

After pressing the TV key and accessing the text mode, the bottom row of the Video Recorder keys marked **red, green, yellow** and **blue**, allow you to access the Fastext functions of your television. **If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fastext keys may operate in the same way.**




 

Important note: For a more detailed explanation of Teletext and Fastext, please refer to the manual of your television. Remember, different televisions control Teletext and Fastext features in different ways. Not all of the Teletext functions may be available for your particular model.

Installation

Before you start, please read these instructions carefully

Setting Up Your Devices

 
Example: To set up the ONE FOR ALL 4 for your television:

-  Find the code for your device in the Code list. Codes are listed by device type and brand name. The most popular code is listed first. **Make sure your device is switched on (not on standby).**
-  **Press the TV key** on the ONE FOR ALL 4 for the device you wish to Set up.
-  **Press and hold down MAGIC** until the red light blinks twice. (The red light will blink once and then twice.)
-  Enter your **four-digit device code** using the number keys. The red light will blink twice.
-  Now, aim the ONE FOR ALL 4 at your device and **press POWER**. If your device switches off, the ONE FOR ALL 4 is ready to operate your device.
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- If your device does not respond, follow steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed at all, try the search method described on page 7.**
- Write your code in the four boxes provided in the battery compartment and on page 8 for easy future reference.**

Important notes:

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If your VCR's original remote control does not have a POWER key, press PLAY instead of POWER during step 5.
- Remember to press the correct device key before operating your device. Only one device can be assigned to a device key. If your original remote operates more than one device, you need to set up each device separately.

Devices can be found under the following keys:

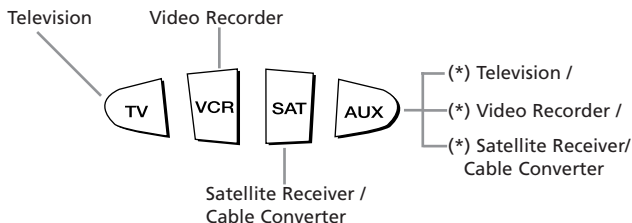






To set up a second TV, VCR or SAT (see page 8).

(*) To use the AUX key (see page 8).

The Search Method

If your device does not respond to the ONE FOR ALL 4 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL 4. The Search Method may also work if your brand is not listed at all.

Example: To search for your TV code:

- 1 Switch your television on (not on standby) and aim your ONE FOR ALL at your TV.
- 2  Press the **TV key** on your ONE FOR ALL 4.
- 3  **Press and hold down MAGIC** until the ONE FOR ALL 4's red light blinks twice (The red light will blink once and then twice).
- 4  Press **9 9 1**. The red light will blink twice.
- 5  Now slowly, alternate between **TV** and **POWER**, over and over, until your television turns off. **You may have to press these keys many times (up to 200!), so please be patient.** Remember to keep pointing the ONE FOR ALL 4 at your television when you press these keys.
- 6  As soon as your television turns off, press **MAGIC** to store the code.








The ONE FOR ALL remote should now be ready to operate your device. Turn your device back on and try all the remote's functions to ensure they are working properly. If some of the ONE FOR ALL's commands are not operating correctly, try the search method again. You may be using the wrong code.

Important notes:

- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during steps 2 and 5.
- If the original remote control of your VCR does not have a POWER key, press PLAY instead of POWER during step 5.

Once you have Set-Up your ONE FOR ALL 4, you can blink back your SET-UP CODE for future reference.

Example: To blink out your Television code:

- 1  Press **TV once**.
- 2  **Press and hold MAGIC** until the ONE FOR ALL 4's TV key blinks twice (The red light will blink once and then twice).
- 3  Press **9 9 0**. The red light will blink twice.
- 4  For the first digit of your **four-digit code**, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the second digit, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the third digit, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 7  For the fourth digit, press **4** and count all the red blinks. If there are no blinks, the digit is "0". Now you have your four-digit code.

Make sure you write your Television code in the boxes provided in the battery compartment and on page 8 for easy future reference.

Important note: To blink back the code for your other devices press the appropriate device key during step 1.

Using the AUX key

Example:

To program a **second television** on the AUX key, you need to change the AUX key into a TV key, so press:

- 1  (*) →  →  →  (**)
The AUX key has now become a second TV key.

- 2 Now enter the SET-UP code for your **second TV** by pressing:

 →  (*) → (4-digit TV SET-UP code) (**)

(*) Hold down the MAGIC key until the red light blinks twice (the red light will blink once then twice).

(**) The red light blinks twice.

Changing a Device Key



It is possible to change any device key.

Example :

To program a **second Video Recorder** on the SAT key (for example), you need to change the SAT key into a VCR key, so press:

- 1  (*) →  →  →  (**)
The TV key has now become a second VCR key.

- 2 Now enter the SET-UP code for your **second VCR** by pressing:

 →  (*) → (4-digit VCR SET-UP code) (**)

(*) Hold down the MAGIC key until the red light blinks twice (the red light will blink once then twice).

(**) The red light blinks twice.

Resetting a Device Key

Example: To reset the SAT key press:

 (*) →  →  →  (**)

(*) Hold down the MAGIC key until the red light blinks twice (the red light will blink once then twice).

(**) The red light blinks twice.

Quick Code Reference

Write down the codes for your devices in the boxes below and in the battery compartment for quick and easy reference.

Device Type

Code

1. _____

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

2. _____

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

3. _____

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

4. _____

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

Advanced Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL may operate the colour and brightness settings of your television.

Colour (+) = Press and release MAGIC then hold Volume (+)

Colour (-) = Press and release MAGIC then hold Volume (-)

Brightness (+) = Press and release MAGIC then hold Channel (+)

Brightness (-) = Press and release MAGIC then hold Channel (-)

Note: You have 5 seconds to press the Volume or Channel keys for colour or brightness adjustment after pressing MAGIC.

Volume Punch-Through

You may be able to use some features of your Television, Video Recorder, Satellite Receiver or Cable Converters at the same time. If you're watching a programme on your Video, you can adjust the volume (a TV function) without first pressing the TV key. The chart below lists some of the possibilities:

Last Key Pressed:	You Can Control:
VCR	TV volume up and down, mute
SAT	TV volume up and down, mute

To punch through to TV Volume while in VCR or SAT mode press **MAGIC* 9 9 3 TV key**.

To cancel the "Volume Punch Through"

Press **MAGIC* 9 9 3 Volume(+)** (the red light will blink four times).

* Here you must hold down MAGIC until the red light key blinks twice.

Auto Scan

Your ONE FOR ALL 4 comes with a special Auto Scan function which lets you "scan" through every programme available on your device.

For example, to scan the programmes on your TV:

- 1 Aim the ONE FOR ALL 4 at your TV. Press the **TV** key. Press and release **MAGIC** then press the **MUTE** key.

The ONE FOR ALL 4 will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the ONE FOR ALL at your device the entire time you are using Auto scan.

- 2 When you find a programme you would like to watch, simply press **any key** on the ONE FOR ALL key pad to stop the Auto Scan feature.

Important note: Auto Scan may not work with devices that did not have programme +/- keys on the original remote control.

Device Sleptimer

If your TV or Satellite has a "Sleptimer" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1 Make sure your TV (or Satellite) is switched on.
- 2 Press the device key (**TV** or **SAT**).
- 3 Point the ONE FOR ALL at your TV (or Satellite) and press and release **MAGIC** then press **POWER**. You should see the Sleptimer activate on your TV screen.

To increase the timer, simply press **MAGIC** then **POWER** again until the timer gets to the desired time.

To deactivate the Sleptimer, repeat steps 1-3 above. During step 3, continue pressing **MAGIC** then **POWER** until the timer indicates zero minutes.

Important note: Depending on how you used sleptimer on the original remote, you might need to access sleptimer in a different way (through menu for example).

The ONE FOR ALL Sleptimer

If your device does **not** have a sleptimer function built in, you can install the ONE FOR ALL sleptimer function. To do so:

- 1 Press the device key (**TV** or **SAT**).
- 2 Then, **press and hold MAGIC** until the red light blinks twice.
- 3 Press **9 7 0**. The red light will blink twice again. It is only necessary to perform steps 1, 2 and 3 once. Now to set the timer, continue with the steps below.

Setting the ONE FOR ALL Sleptimer:

It is possible to set the timer for 15, 30, 45 or 60 minutes. To do this, first make sure your TV (or Satellite) is switched on.

Press the device key (TV or SAT).



(:15)

Now, press and release **MAGIC**, then press **POWER**.



(:30)

The red light will blink once which indicates the timer is set for 15 minutes. To increase the timer, simply press **POWER**



(:45)

again (this must be done within 5 seconds). The red light will blink twice indicating the timer is set for 30 minutes (2x



(:60)

15). You can press **POWER** to a maximum of four times which will set the timer to 60 minutes.

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL will send the command for **POWER**, hence turning off your device.

Important notes:

- The red light on the ONE FOR ALL will blink every 15 seconds indicating that the remote is in Sleptimer mode.
- To deactivate the Sleptimer, simply press any key on the ONE FOR ALL remote.
- Also, it is only necessary to follow steps 1,2 and 3 above once. For subsequent use of the Sleptimer, simply begin with "Setting the ONE FOR ALL Sleptimer".
- To switch the ONE FOR ALL back to Device Sleptimer, repeat steps 1,2 and 3 above. The red light will blink 4 times.
- Remember, when using the ONE FOR ALL Sleptimer, you must set the remote so it is pointing to your device.
- The ONE FOR ALL Sleptimer can be set up for only one device at a time.

Trouble-Shooting

Helpful Hints

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the one for all at your device.
The red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA" alkaline batteries.

Customer Service

If you still have questions about the operation of your ONE FOR ALL 4 universal remote and could not find the answer(s) in the trouble shooting section, you may want to contact the customer service department for assistance.

You may care to visit our Internet-site:
www.oneforall.com

Our internet-site has many advantages:

- 24 hours access
- no waiting time
- page for Frequently Asked Questions
- info about the ONE FOR ALL product range

Before contacting us, by Fax, E-mail or Phone, make sure you have the required information available by filling in the table below.

What do we need to know before you contact us:

- 1 That you have the **URC-7542** One for All remote
- 2 The date of purchase (...../...../.....).
- 3 A list of your equipment/models/helpcodes(*): (see example below)

Helpcode(*)	Device	Brand	Device model nr.	Remote model nr.	SET-UP code
3410805	TV	Sony	KVX-2950B	RMT-V131B	0505 (example)

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

4. Then Fax, E-mail or Dial us:

In the UK

e-mail: ofahelp@uebv.com
fax: +31 53 432 9816
tel.: 0808-1000306(*)

In Australia

e-mail: ofahelp@uebv.com
fax: 03 9672 2479
tel.: 1 300 888 298

In New Zealand

e-mail: ofahelp@uebv.com
fax: (06) 878 2760
tel.: 0508 ONE 4 ALL (663 4 255)

In Ireland

e-mail: ofahelp@uebv.com
fax: +31 53 432 9816
tel.: 1-800 553199 (*)

In South Africa

e-mail: support@oneforall.co.za
fax: 011 298 2302
tel.: 0860 100551
tel.: 011 298 2300

(*) When you call us you will be asked to enter your helpcode(s). You only have to enter the helpcode(s) of those devices you have a problem with. The helpcode is a 7-digit code, which defines the ONE FOR ALL-model you have, the device type and the brand of your device. This helpcode can be found in the first column of the setup code list.

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

3410991	A.R. Systems	0037	0352
3411271	Abex	0032	
3411306	Accent	0037	
3412089	Acec	0012	
3410010	Admiral	0087 0093	0363 0418
		0305 0213	0264
3410012	Adyson	0217	0216
3411080	Agashi	0216	0264
3410015	AGB	0516	
3410997	Agef	0087	
3410017	Aiko	0216 0009	0037 0371
		0035 0072	0361 0191
		0264	0217
3410018	Aim	0037	0274
3410020	Akai	0361 0208	0371 0037
		0191 0035	0009 0072
		0218 0163	0546 0516
		0556 0548	0581 0480
		0217 0631	0216 0264
		0448 0377	0606
3410021	Akiba	0218 0282	0455 0037
3410022	Akito	0272	0037
3410023	Akura	0218 0359	0282 0276
		0009 0412	0264 0037
		0493	
3411267	Alaron	0179	0216
3410024	Alba	0218 0235	0009 0418
		0370 0355	0371 0037
		0216 0247	0431 0163
		0581 0487	0036 0579
3410026	Alcyon	0076	
3410029	Allorgan	0206	0294 0217
3410032	Allstar	0037	
3410041	Amplivision	0217	0400 0320 0370
3410042	Amstrad	0177 0009	0516 0264
		0354 0218	0371 0362
		0412 0037	
3411094	Anam	0037	0009 0068
3411268	Anam		
	National	0037	
3410044	Anglo	0009	0264
3410045	Anitech	0009 0068	0076 0264
		0037	
3410047	Ansonic	0370 0292	0102 0009
		0037 0374	0163 0323
		0411 0259	0247 0012
		0428	
3410050	Apollo	0473	
3410053	Arc en Ciel	0399 0501	0109 0196
		0568 0333	0198
3410054	Arcam	0216	0399 0217
3411307	Ardem	0486	
3410057	Aristona	0037	0556 0012
3410059	Arthur Martin	0163	0400
3410060	ASA	0105 0346	0070 0104
		0087	
3410062	Asberg	0037	0076
3411095	Asora	0009	
3410070	Asuka	0218 0264	0216 0282
		0217	
3410072	Atlantic	0037 0216	0206 0259
		0320	
3410074	Atori	0009	
3410075	Auchan	0163	0400

3410080	Audiosonic	0037 0109	0217 0370
		0337 0264	0218 0486
		0428	
3410081	Audioton	0217	0486 0370 0264
3410084	Ausind	0076	
3410085	Autovox	0087 0206	0237 0076
		0349 0217	0247 0336
3411156	AWA	0011 0036	0009 0157
		0374 0412	0037 0216
		0606	
3411081	Ayomi	0238	
3411098	AYR	0535	
3410091	Baird	0109 0193	0343 0190
		0192 0072	0073 0217
		0208	
3410093	Bang & Olufsen*	0565 0087	0620
3410094	Barco	0380	0163
3410097	Basic Line	0218 0009	0374 0037
		0163 0282	
3410098	Bastide	0217	
3410099	Baur	0146 0303	0535 0195
		0512 0037	0554 0191
		0361 0349	0505 0010
3411082	Bazin	0217	
3410103	Beko	0370 0486	0037 0606
3410105	Beon	0037	0418 0032
3410106	Best	0337	0370 0421
3410107	Bestar	0037	0370 0374
3410108	Binatone	0217	
3410110	Black Star	0247	
3410111	Blacktron	0282	
3410112	Blackway	0282	
3410113	Blaupunkt	0554 0191	0535 0195
		0200 0213	0327 0328
		0318 0448	
3410114	Blue Sky	0218 0282	0455 0037
		0487	
3410115	Blue Star	0282	
3410118	Bondstec	0247	
3410119	Boots	0272	0217
3410121	BPL	0282 0373	0037
3410123	Brandt	0501 0109	0399 0237
		0333 0196	0198 0287
		0335 0568	0625
3410124	Braun	0366	
3410126	Brinkmann	0418 0037	0519
3411030	Brionvega	0037 0087	0362
3410128	Britannia	0216	0217
3411444	Brother	0264	
3410133	Bruns	0087	
3410134	BSR	0163	0294
3410138	BTC	0218	
3410139	Bush	0218 0235	0163 0349
		0009 0036	0282 0037
		0272 0355	0371 0363
		0374 0519	0264 0361
		0487 0208	0581 0294
		0217	
3410149	Capsonic	0264	
3411455	Carad	0610	0037
3410150	Carena	0455	0037
3410151	Carrefour	0036	0070
3410153	Carver	0170	
3410998	Cascade	0009	0037
3410154	Casio	0037	
3410155	Cathay	0037	
3411231	CCE	0037	0217
3410160	Centurion	0037	
3410161	Century	0087 0213	0247 0238
3410162	CGE	0074 0084	0306 0076
		0247 0252	0163 0276
		0418 0370	
3410167	Cimline	0009	0235 0218
3410168	Citizen	0535	
3410169	City	0009	
3411073	Clarivox	0418	0070
3410172	Clatronic	0218 0264	0370 0371
		0217 0076	0247 0037
		0009 0102	0320 0579
3410173	Clayton	0385	
3411308	CMS hightec	0217	

3410186	Concorde	0009			
3410187	Condor	0216	0247	0282	0320
		0037	0370	0009	0102
		0411	0418		
3410188	Conic	0032			
3410191	Contec	0216	0009	0157	0011
		0036			
3410192	Continental				
	Edison	0501	0109	0237	0196
		0198	0399	0333	0287
		0487	0568		
3410194	Cosmel	0009	0337		
3410195	Crezar	0213			
3410196	Crosley	0087	0247	0074	0084
		0252	0076	0163	0213
3410197	Crown	0373	0009	0370	0486
		0076	0421	0037	0359
		0579	0039	0418	0208
		0487	0053		
3410199	Crystal	0431			
3410200	CS Electronics	0247	0216	0218	
3410201	CTC	0247			
3410202	Curtis Mathes	0093	0145	0166	
3410203	Cybertron	0218			
3411254	Daenyk	0179			
3410205	Daewoo	0009	0037	0216	0374
		0218	0039	0217	
3410206	Dainichi	0218	0216		
3410207	Dansai	0037	0264	0032	0035
		0216	0009		
3411160	Dansette	0412			
3411083	Dantax	0370	0486		
3411102	Datsura	0373	0208		
3410209	Dawa	0037			
3410210	Daytron	0009	0374	0037	
3410216	de Graaf	0208	0044	0227	0163
		0548			
3410214	Decca	0072	0516	0037	0244
		0249	0272	0217	
3411459	Deitron	0037			
3410999	Denko	0264			
3410217	Denon	0145			
3411103	DER	0193	0190		
3410219	Derwent	0201			
3410220	Desmet	0320	0037		
3411000	Diamant	0037			
3411310	Digiline	0037			
3410232	Dixi	0009	0037	0247	0217
3410235	Domland	0394			
3410237	Doric	0201			
3411255	Drean	0037			
3410239	DTS	0009			
3410240	Dual	0349	0217	0343	0259
		0336	0519	0037	0352
		0394	0399	0303	0163
3410243	Dumont	0087	0104	0102	0213
		0217	0070	0072	
3411162	Dux	0037	0012		
3410247	Dynatron	0037			
3410252	Elbe	0435	0238	0259	0362
		0292	0370	0163	0037
		0218	0191	0411	0610
3410254	Elicit	0087	0247	0516	0102
		0163			
3410255	Elekta	0264	0282		
3412093	ELG	0037			
3410259	Elin	0216	0037	0105	0104
		0548	0361	0448	0305
		0349	0163	0009	
3410260	Elite	0218	0037		
3410261	Elman	0102			
3410263	Elta	0009	0068	0264	0216
3410265	Emerson	0177	0213	0087	0247
		0037	0179	0371	0070
		0282	0320	0039	
3410267	Emperor	0282			
3410271	Erres	0037	0012		
3410272	ESC	0037			
3410273	Etron	0037	0009	0163	
3411632	Eurofeel	0264			
3410278	Euroman	0216	0264	0037	0217
		0421	0370		

3410279	Europa	0037			
3410280	Europhon	0037	0516	0102	0213
		0217	0247	0163	0431
3410291	Expert	0206	0400	0259	0163
		0305			
3411001	Exquisit	0037	0247		
3411639	Family Life	0037			
3410294	Fenner	0374	0009		
3410296	Ferguson	0073	0287	0192	0190
		0335	0238	0193	0109
		0625			
3410299	Fidelity	0193	0216	0371	0363
		0163	0264	0037	
3411164	Filsai	0217			
3410301	Finlandia	0208	0346	0359	0548
		0361			
3410302	Finlux	0105	0104	0037	0346
		0217	0072	0163	0076
		0516	0070	0087	0179
		0102	0411	0631	0492
		0480			
3410304	Firstline	0294	0321	0216	0037
		0374	0385	0247	0009
		0163	0102	0217	0411
		0349	0238	0072	0235
		0208			
3410305	Fisher	0104	0217	0036	0208
		0370	0555	0087	0157
		0361	0163	0303	0349
		0072			
3410307	Flint	0037	0455	0072	0218
3411002	FNR	0102			
3410308	Forgestone	0193			
3410309	Formenti	0087	0213	0216	0320
		0163	0076		
3410310	Fortress	0093	0087		
3410313	Fraba	0370	0037		
3411106	Friac	0009	0037	0102	0421
3410319	Frontech	0247	0264	0349	0363
		0431	0448	0217	0009
3410322	Fujitsu	0179	0206	0072	0102
		0217	0163	0009	0352
3411457	Fujitsu General	0009	0217		
3410323	Funai	0264	0179	0294	
3410326	Galaxi	0102	0037		
3410327	Galaxis	0370	0418	0037	0102
3410331	GBC	0213	0163	0009	0374
		0218			
3410333	GE	0109	0282	0287	0335
		0343			
3411003	Geant Casino	0163	0400		
3410335	GEC	0043	0072	0163	0361
		0516	0037	0217	0349
3410336	Geloso	0213	0247	0009	0363
		0163	0374		
3410337	General	0109	0287	0471	
3410338	General				
	Technic	0009			
3410339	Genexxa	0218	0037	0412	0493
3410341	Germanvox	0213			
3410345	Goldhand	0216			
3410346	Goldline	0337			
3410347	GoldStar	0037	0370	0032	0290
		0009	0377	0217	0247
		0216	0431	0163	0361
		0044			
3410349	Goodmans	0036	0072	0037	0009
		0264	0516	0290	0179
		0374	0487	0371	0556
		0343	0235	0035	0480
		0032	0217	0335	
3410350	Gorenje	0370	0421		
3410351	GPM	0218			
3411248	Gradiente	0037	0053	0170	
3410352	Graetz	0037	0361	0371	
3410353	Granada	0037	0400	0226	0356
		0359	0012	0072	0146
		0108	0208	0217	0076
		0036	0339	0516	0201
		0473	0335		

3410354	Grandin	0282 0218 0400 0037 0009 0320 0163 0455 0579 0610		3410410	Irradio	0009 0037 0218 0247 0290 0076
3411107	Gronic	0102 0217		3410412	Isukai	0218 0037 0282
3410355	Grundig	0535 0195 0191 0554 0487 0070 0076 0237 0037 0556		3410413	ITC	0217
3410359	Halifax	0264 0216 0217		3410414	ITS	0037 0371 0218 0282 0264 0216
3410360	Hampton	0216 0217		3410415	ITT	0163 0480 0349 0546 0361 0473 0548 0193 0346 0339 0208 0179
3411108	Hanimex	0294		3410416	ITT Nokia	0361 0548 0163 0546 0473 0480 0349 0346 0208 0179 0339 0606 0610 0631
3410362	Hanseatic	0037 0292 0282 0349 0163 0361 0394 0213 0320 0428 0370 0009 0294 0217 0373 0431 0519 0276 0087		3410417	ITV	0264 0037 0247
3410363	Hantarex	0009 0213 0037 0296 0102		3411314	Jean	0036
3410364	Hantor	0037		3410420	JEC	0035
3411280	Harley Davidson	0179		3410425	JVC	0653 0053 0094 0190 0036 0192 0193 0371 0218 0606
3411281	Harvard	0068		3410427	Kaisui	0218 0282 0037 0216 0455 0217 0009
3411084	Harwood	0009 0412 0032 0037		3410428	Kamp	0216
3411678	Hauppauge	0037		3410429	Kapsch	0206 0163 0361 0259 0104
3410370	HCM	0264 0009 0282 0412 0217 0218 0418 0037 0217 0009		3410430	Karcher	0037 0421 0370 0282 0102 0610 0264
3410372	Hema	0217 0009		3411283	Kawasho	0216
3410373	Hemmermann	0349		3411177	KB Aristocrat	0163
3410374	Hifivox	0501 0109 0196 0399 0568		3410432	Kendo	0362 0363 0235 0247 0102 0037 0428 0370 0411 0610 0377 0519
3411682	Highline	0264 0037		3410433	Kennedy	0206 0213 0163 0435
3411110	Hikona	0218		3410437	Kingsley	0216
3410377	Hinari	0208 0179 0036 0037 0218 0009 0163 0039 0355 0443 0487 0235 0294		3410438	Kneissel	0435 0259 0292 0370 0238 0037 0411 0610
3410380	Hisawa	0282 0218 0400 0455		3410441	Kolster	0037 0102 0349
3411004	Hit	0087		3410442	Konka	0218 0371 0037
3410381	Hitachi	0225 0036 0349 0356 0044 0043 0473 0163 0343 0578 0196 0198 0217 0306 0227 0032 0194 0276 0516 0072 0037 0563 0145 0105 0556 0150 0548		3411315	Kontakt	0487
3411684	Hitachi Fujian	0108		3410443	Korpel	0037
3411170	Hitsu	0009 0455 0218		3410444	Korting	0087 0421 0370 0320 0037
3411085	Hornophone	0037 0012		3410445	Kosmos	0412 0264
3410384	Hoshai	0218 0455		3411181	Kotron	0412 0264
3411086	Huanyu	0374 0216		3411350	Kraking	0238
3410388	Hygashi	0217 0216		3411287	KTV	0039 0217
3410389	Hyper	0009 0216 0217 0247		3411116	Kuro	0373
3410390	Hypersonic	0361		3411117	Kyoshu	0264 0412 0032 0418
3410391	Hypson	0037 0264 0217 0282 0455 0400 0238		3410451	Kyoto	0385 0032 0163
3411005	Iberia	0037		3411451	Lemair	0411
3410393	ICE	0264 0217 0037 0371 0218 0216 0009		3410454	Lenco	0009 0374 0104 0163 0037
3411006	Ices	0218 0216		3410456	Lenoir	0009
3410395	Imperial	0037 0247 0370 0418 0163 0074 0084 0252 0076 0349 0196		3410458	Lesa	0247
3410396	Indesit	0237 0213		3410461	Leyco	0264 0072 0037 0294 0579
3410397	Indiana	0037		3411072	LG	0037 0370 0290 0032 0009 0377 0217 0247 0216 0431 0163 0361
3411343	Ingelen	0487 0610		3411008	Liesenkotter	0037 0327 0328 0012
3410398	Ingersoll	0009		3410463	Lifetec	0009 0264 0519 0037 0374 0218 0512
3410401	Inno Hit	0009 0072 0037 0218 0290 0217 0076 0516 0247		3411240	Lloyd's	0009
3411311	Innovation	0519		3410471	Lloytron	0032
3411312	Interactive	0411		3410472	Loewe	0512 0037 0087 0292 0370
3410404	Interbuy	0009 0264 0247 0068		3410474	Logik	0011 0193 0371
3410405	Interfunk	0037 0012 0087 0512 0275 0327 0163 0546 0361 0370 0501 0109 0568		3410478	Luma	0363 0206 0305 0037 0362 0163 0259 0411 0374 0009
3411113	Internal	0037		3411009	Lumatron	0363 0206 0305 0037 0362 0163 0259 0361 0217 0264 0073
3410408	Intervision	0282 0217 0455 0037 0068 0371 0377 0519 0448 0486 0370 0394 0487 0218 0102 0431 0163 0264 0247		3410481	Lux May	0037 0009
				3410485	Luxor	0194 0237 0290 0357 0363 0480 0492 0349 0361 0208 0356 0548 0163 0346 0473 0179
				3411316	Madison	0037
				3410490	Magnadyne	0087 0247 0516 0102 0163
				3410491	Magnafon	0516 0213 0076 0102 0216
				3410492	Magnavox	0036 0179 0037

3410495	Mandor	0264			
3410496	Manesth	0037 0235 0217 0264			
		0320 0276 0035 0294			
3410497	Manhattan	0037			
3410500	Marantz	0037			
3410503	Marelli	0087			
3410504	Mark	0037 0217 0216 0374			
		0009			
3411342	Masuda	0218 0009 0371			
3410508	Matsui	0235 0177 0009 0355			
		0011 0072 0036 0037			
		0556 0487 0217 0354			
		0294 0371 0443 0363			
		0579 0455 0272 0349			
		0516 0035 0431 0163			
		0208 0195 0191 0335			
3410513	McMichael	0043			
3410517	Mediator	0037 0556 0012			
3410518	Medion	0037 0519			
3411121	Megas	0610			
3411291	Megatron	0145			
3410487	Melectronic	0346 0037 0512 0109			
		0343 0247 0105 0104			
		0374 0009 0217 0068			
		0480 0492 0216 0411			
		0349			
3411010	Melvox	0400			
3410520	Memorex	0009 0150 0250			
3410521	Memphis	0337 0072 0009 0385			
3410522	Mercury	0037 0009			
3410525	Metz	0087 0195 0535 0447			
		0239 0213 0554 0191			
		0275 0367 0388			
3410526	MGA	0150			
3411317	Micromaxx	0037			
3411295	Midland	0032 0039			
3410531	Minerva	0487 0535 0195 0070			
		0076 0191 0554 0237			
3410532	Minoka	0412 0037 0359			
3410535	Mitsubishi	0108 0150 0512 0037			
		0093 0354 0087 0036			
		0201 0237 0193			
3410538	Mivar	0292 0290 0291 0370			
		0076 0216 0609			
3411186	Monaco	0009			
3410540	Morgan's	0037			
3410541	Motion	0076			
3411297	Motorola	0093			
3410543	MTC	0370 0349 0512 0216			
3411786	MTEC	0272 0032			
3411187	Multi- broadcast	0193			
3410545	Multistandard	0102			
3411452	Multitec	0037			
3410547	Multitech	0217 0349 0009 0216			
		0247 0102 0363 0486			
		0370 0037			
3410551	Murphy	0104 0216 0039 0072			
		0163			
3411791	Musikland	0218			
3410553	NAD	0361 0166			
3411124	Naiko	0037			
3411125	Nakimura	0374 0037			
3410559	Naonis	0363			
3412099	NAT	0214 0226 0340			
3410562	National	0237 0214 0240 0226			
		0340			
3410564	NEC	0170 0036 0320 0455			
		0009 0374 0217 0037			
		0011			
3410565	Neckermann	0037 0191 0370 0505			
		0010 0200 0554 0556			
		0163 0327 0418 0349			
		0087 0213 0247 0217			
		0411			
3410566	NEI	0037 0337 0431 0371			
3410567	Nesco	0247 0179			
3411292	Netsat	0037			
3410568	Network	0032 0337			
3411012	Neufunk	0037 0009 0556 0610			
3410572	New Tech	0037 0009 0556 0343			
		0217 0448			

3410571	New World	0218			
3410574	Nicamagic	0216			
3410576	Nikkai	0072 0218 0037 0217			
		0264 0032 0035 0337			
		0216 0009 0036			
3411249	Noblex	0037 0264			
3410578	Nobliko	0102 0076 0070 0216			
3410579	Nogamatic	0399 0501 0109 0196			
		0568			
3410580	Nokia	0361 0163 0480 0349			
		0548 0492 0359 0473			
		0546 0339 0208 0374			
		0631 0606 0346			
3410582	Nordmende	0109 0501 0287 0399			
		0196 0343 0198 0213			
		0568 0195 0037 0335			
3411013	Novatronic	0037 0105 0374			
3410588	Oceanic	0163 0400 0361 0294			
		0208 0563			
3412100	Odeon	0264			
3410590	Okano	0370 0037 0264 0072			
3411014	Omega	0264			
3410595	Onwa	0371 0218 0581			
3410596	Opera	0037			
3410598	Optimus	0250 0166			
3411299	Optonica	0093			
3410599	Orbit	0037			
3410602	Orion	0179 0235 0294 0177			
		0320 0355 0011 0037			
		0009 0321 0296 0102			
		0477 0443 0556 0264			
		0412			
3411015	Orline	0037 0218			
3411192	Ormond	0385			
3410605	Osaki	0072 0218 0032 0217			
		0264 0493 0276 0037			
		0412 0272 0374			
3411193	Osio	0037			
3410607	Oso	0218			
3410608	Osume	0157 0072 0036 0032			
		0218			
3410610	Otto Versand	0010 0505 0036 0093			
		0512 0037 0556 0535			
		0195 0349 0554 0191			
		0361 0235 0109 0213			
		0294 0226 0247 0303			
		0320 0217			
3410614	Pael	0216			
3410616	Palladium	0370 0037 0191 0505			
		0010 0200 0418 0554			
		0556 0247 0327 0349			
		0087 0163 0213 0217			
		0411 0519			
3411129	Palsonic	0264 0412 0037 0217			
		0377			
3410619	Panama	0009 0217 0264 0216			
		0037 0247			
3410620	Panasonic	0226 0650 0250 0126			
		0240 0274 0214 0213			
		0361 0237 0367 0340			
		0516 0037 0163 0548			
3410622	Panavision	0037 0411			
3410628	Pathe Cinema	0163 0238 0216 0400			
		0320 0292 0349			
3410629	Pathe Marconi	0213 0501 0109 0196			
		0198 0333 0399 0237			
		0568			
3410631	Pausa	0009			
3410632	Perdio	0072 0320 0163 0037			
3410633	Perfekt	0037			
3411460	Pershin	0400			
3411131	Phase	0032			
3410634	Philco	0087 0084 0074 0418			
		0076 0213 0247 0252			
		0163 0370 0037 0145			
3410635	Philharmonic	0217			
3410636	Philips	0037 0556 0012 0323			
		0554 0191 0043 0087			
		0193 0343 0374			

3410639	Phoenix	0037 0087 0320 0486 0370 0385 0216 0163 0072	3410720	Saisho	0235 0516 0177 0009 0011 0217 0431 0163 0264 0354
3410640	Phonola	0037 0556 0012 0087 0193 0216	3410722	Salora	0290 0194 0546 0349 0163 0356 0359 0361 0516 0363 0373 0548 0339
3411336	Pilot	0037 0556 0039	3410723	Sambers	0213 0516 0076 0102
3410642	Pioneer	0166 0037 0428 0370 0343 0361 0109	3411340	Sampo	0032 0039
3411132	Pionier	0370 0486	3410724	Samsung	0037 0556 0009 0217 0448 0370 0264 0090 0216 0290 0032 0072 0208
3410644	Plantron	0037 0264 0009	3410726	Sandra	0216 0217
3411066	Playsonic	0217	3411139	Sanela	0238
3410645	Policom	0568	3410727	Sansui	0037 0371
3410647	Poppy	0009	3412102	Santon	0009
3410648	Portland	0374 0039	3410729	Sanyo	0208 0157 0292 0036 0011 0370 0339 0072 0216 0217 0104 0213 0146 0009 0163 0373 0037 0555
3411846	Powerpoint	0487	3411318	Save	0037
3410650	Prandoni-Prince	0247 0516 0361 0213 0363 0076	3410743	SBR	0037 0556 0012
3410651	Precision	0217	3410745	Schaub Lorenz	0349 0548 0606
3410655	Prima	0032 0009 0264	3410746	Schneider	0037 0556 0012 0303 0349 0519 0394 0352 0336 0259 0323 0343 0217 0247 0371 0218 0361 0163
3410656	Prinz	0072 0349 0194	3410750	Scott	0179
3410658	Profex	0009 0163 0431	3411324	Sears	0179
3410660	Profitronic	0037 0102	3410753	SEG	0217 0264 0009 0247 0036 0102 0362 0163 0037 0216 0487
3410662	Proline	0321 0072 0037 0012 0625	3410754	SEI	0087 0102 0010 0163 0516 0349 0213 0294 0296 0206 0037
3410664	Prosonic	0037 0214 0216 0370 0374 0579 0371	3410756	Seleco	0305 0206 0363 0259 0362 0163 0411
3410665	Protech	0037 0217 0009 0247 0349 0102 0264 0431 0418 0337	3410757	Sencora	0009
3410669	Provision	0037	3410759	Sentra	0276 0035 0218 0009
3410672	Pye	0037 0374 0556 0012 0087	3411019	Serino	0455 0610
3410673	Pymi	0009	3410762	Sharp	0093 0157 0036 0039 0294 0653 0053 0094 0193
3411067	Quadra Vision	0400	3410769	Shorai	0294 0179
3410677	Quasar	0247 0250	3411263	Siam	0037
3410678	Quelle	0037 0010 0011 0501 0109 0512 0535 0349 0554 0191 0361 0032 0036 0217 0247 0074 0084 0327 0306 0070 0104 0105 0157 0195 0200 0213 0252 0264 0290	3410772	Siarem	0163 0087 0102 0213 0191 0535 0554 0200 0195 0213 0327 0328 0157 0032 0146 0037
3410679	Questa	0036 0032	3410773	Siemens	0037 0556 0012
3410680	R-Line	0037	3411916	Siera	0370
3410682	Radialva	0109 0218 0431 0163 0037	3410776	Siesta	0216 0037
3410684	Radiola	0037 0556 0012 0323	3410780	Silva	0036 0037 0361 0179
3410685	Radiomarelli	0087 0201 0516 0247 0037	3410781	Silver	0087 0102 0247 0400 0435 0009 0037
3411088	RadioShack	0037 0032 0039	3410782	Singer	0177 0087 0235 0102 0213 0294 0296 0163 0361 0516 0349 0010 0206 0037
3410686	Radiotone	0009 0037 0428 0370 0579 0418 0264 0412	3410784	Skantic	0357 0356
3410690	Rank	0070	3411298	Sky	0037
3410691	RCA	0625 0335 0093	3410795	Sogera	0320
3410693	Realistic	0032 0039	3410797	Solavox	0032 0361 0072 0163 0548
3411016	Recor	0037	3411927	Sonawa	0218
3412101	Rectiligne	0037	3410801	Sonitron	0208 0370 0339 0217
3410695	Rediffusion	0201 0361 0548 0036	3411035	Sonneclair	0037
3411017	Redstar	0037	3410802	Sonoko	0037 0009 0264 0282 0217
3411018	Reflex	0037	3410803	Sonorol	0208 0163 0400 0505 0010 0548 0361
3410698	Revox	0037 0370	3410804	Sontec	0037 0370 0294
3410699	Rex	0305 0206 0363 0411 0247 0163 0259	3410805	Sony	0505 0010 0011 0036 0102 0074
3410700	RFT	0087 0292 0370 0428 0072 0264	3410806	Sound & Vision	0102 0218 0374
3411338	Rhapsody	0216	3410807	Soundesign	0179
3410701	Roadstar	0009 0264 0218 0418 0037	3410809	Soundwave	0037 0320 0418 0032
3410703	Robotron	0087			
3411885	Rodex	0037			
3411197	Roxy	0448			
3410711	Royal Lux	0421 0370 0412			
3410715	Saba	0287 0213 0087 0399 0163 0109 0501 0516 0343 0361 0498 0196 0198 0335 0568 0625 0548			
3410718	Sagem	0455 0610 0282			

3411933	Spectra	0009			
3411143	Ssangyong	0032	0009		
3410812	Stag	0032			
3410813	Standard	0218	0009	0217	0320
		0037	0374		
3410817	Starlite	0009	0163	0037	0264
3410822	Stenway	0282	0218		
3410823	Stern	0305	0206	0259	0163
		0363			
3411020	Strato	0037	0264	0009	
3410828	Sunkai	0294	0355	0321	0455
		0218	0235	0037	0487
3410831	Sunstar	0371	0037	0009	0579
3410833	Sunwood	0037	0009		
3410835	Superla	0516	0216		
3410838	SuperTech	0009	0037	0216	0556
		0218			
3410839	Supra	0374	0009	0039	
3410840	Susumu	0335			
3410841	Sutron	0009			
3411319	Swissline	0247			
3410842	Sydney	0216	0217		
3411021	Sytong	0216			
3411344	Tactus	0272			
3410849	Tandberg	0367	0411	0109	0337
		0196	0362	0361	
3410850	Tandy	0218	0072	0217	0247
		0276	0093		
3410852	Tashiko	0036	0043	0217	0146
		0170	0032	0216	0359
		0163			
3410853	Tatung	0072	0516	0217	0272
		0249	0037	0011	0244
3410854	Teac	0037	0512	0455	0264
		0009	0412	0349	
3410855	TEC	0217	0276	0009	0247
		0471	0335	0337	0259
3411320	Tech Line	0037			
3412107	Techica	0218			
3410856	Technema	0320			
3410857	Technics	0250			
3411453	Tedelex	0217			
3411978	Teiron	0009			
3411328	Teknika	0179	0039		
3410866	Teleavia	0109	0501	0287	0196
		0399	0333	0240	0490
		0568			
3410870	Telecor	0037	0163	0218	0217
		0259	0394		
3410872	Telefunken	0109	0501	0498	0471
		0399	0287	0074	0084
		0101	0335	0252	0262
		0306	0073	0343	0196
		0037	0477	0486	0566
		0568	0625		
3411213	Telefusion	0037			
3410874	Telegazi	0037	0163	0259	0218
		0264			
3410878	Telemeister	0320	0037		
3410882	Telesonic	0037			
3410883	Telestar	0037			
3410884	Teletech	0009	0247	0337	0037
3410885	Teleton	0217	0275	0206	0163
		0349	0259	0036	
3410887	Televideon	0320	0163	0216	
3411022	Televiso	0400			
3410889	Temco	0294			
3411334	Tempest	0009	0037		
3410891	Tensai	0104	0218	0037	0217
		0294	0320	0009	0105
		0374	0371	0377	0247
3411023	Tenson	0320	0009		
3411461	Tevion	0519	0037		
3410892	Textet	0217	0374	0009	
3410895	Thomson	0287	0399	0109	0501
		0333	0471	0335	0196
		0198	0237	0343	0037
		0490	0568	0625	
3410897	Thorn	0193	0073	0190	0238
		0192	0074	0084	0037
		0104	0335	0512	0359
		0272	0374	0035	0553

3410900	Tokai	0072	0037	0448	0337
		0163	0217	0374	0009
3410901	Tokyo	0216	0035	0448	
3410902	Tomashi	0282	0218		
3410905	Toshiba	0035	0553	0508	0243
		0036	0070	0102	0217
3410906	Towada	0349	0102	0217	
3412109	Toyoda	0009			
3412110	Trakton	0264			
3410908	Trans				
	Continens	0217	0037		
3412111	Transonic	0037	0455	0512	
3412008	Transtec	0216			
3410913	Trident	0516	0217		
3410915	Tristar	0218	0193		
3410916	Triumph	0177	0516	0346	0556
		0037	0243		
3410919	Uher	0076	0037	0206	0320
		0303	0374	0418	0486
		0370	0259		
3411148	Ultra	0192			
3410920	Ultravox	0087	0102	0374	0247
		0216	0163	0213	0037
3411024	Unic Line	0037	0473		
3411215	United	0037			
3410929	Universum	0346	0105	0535	0195
		0473	0361	0247	0492
		0480	0370	0200	0418
		0011	0146	0512	0294
		0036	0157	0032	0070
		0163	0264	0104	0037
		0421	0411	0290	0252
		0074	0306	0213	0327
		0328	0010	0505	0076
		0349	0217	0501	0109
		0362	0337	0177	0631
3410930	Univox	0337	0087	0037	0163
		0238			
3410937	Vestel	0037	0163	0217	
3410938	Vexa	0009	0037		
3410939	Victor	0053			
3410942	Videologique	0216	0218	0217	
3410943	VideoSystem	0037			
3410944	Videotechnic	0216	0320	0217	0374
3411025	Videoton	0356	0163	0431	
3411322	Vidikron	0102			
3411330	Vidtech	0036			
3410947	Viper	0337			
3410949	Visiola	0216			
3410950	Vision	0037	0320		
3410954	Vistar	0276	0206	0361	
3410956	Vortec	0037			
3410957	Voxson	0087	0076	0037	0363
		0418			
3410958	Waltham	0217	0276	0356	0418
		0287	0385	0037	
3410959	Watson	0037	0320	0163	0218
		0305	0213	0579	0519
		0394	0009		
3410960	Watt Radio	0213	0102	0349	0163
		0216			
3410961	Wega	0213	0036	0087	0037
3411026	Wegavox	0009			
3410963	Weltblick	0037	0320		
3411245	Wharfedale	0037	0519		
3410967	White Westing-				
	house	0320	0216	0037	0337
3411264	Winco	0412			
3411027	Windstar	0282			
3410976	Xrypton	0037			
3410979	Yamishi	0282	0455	0218	0037
		0217			
3410980	Yokan	0037			
3410981	Yoko	0217	0037	0218	0264
		0009	0431	0421	0370
		0305	0339	0216	0247
3410983	Yorx	0218			
3410984	Zanussi	0206	0305	0363	0217
3411219	Zenor	0339			

Video Recorders

Videorecorder

Magnétoscopes

Vídeos

Vídeo Gravadores

Videoregistratori

Videorecorders

3421028	Adelsound	0004			
3420012	Adyson	0072			
3420019	Aiwa	0307 0000	0041	0209	
		0348 0352	0037		
3420020	Akai	0106 0315	0053	0041	
		0020 0352	0240		
3420021	Akiba	0072			
3421029	Akitan	0295			
3420023	Akura	0072	0041		
3420024	Alba	0278 0072	0333	0334	
		0209 0352	0192	0020	
		0295 0000	0315	0348	
3420029	Allorgan	0240			
3420032	Allstar	0322	0081		
3420037	Ambassador	0020			
3420042	Amstrad	0000 0325	0332	0278	
		0072			
3420045	Anitech	0072	0322		
3420047	Ansonic	0004			
3420057	Aristona	0081			
3420060	ASA	0037	0081		
3420070	Asuka	0072 0037	0081	0000	
		0038			
3420080	Audiosonic	0278			
3420081	Audioton	0020			
3421156	AWA	0075 0037	0278	0043	
3420091	Baird	0106 0278	0104	0107	
		0041	0000		
3420093	Bang & Olufsen	0499			
3420097	Basic Line	0278 0209	0020	0072	
3420107	Bestar	0278	0020		
3420109	Black Panther	0278			
3420113	Blaupunkt	0226 0081	0154	0227	
		0162 0006	0195	0403	
		0034			
3420114	Blue Sky	0037 0209	0348	0072	
		0352			
3420118	Bondstec	0020	0072		
3420120	Bosch	0154			
3420123	Brandt	0041 0187	0206	0320	
		0321	0493		
3420126	Brinkmann	0209	0348		
3421030	Briovega	0344			
3420139	Bush	0072 0278	0315	0333	
		0334 0209	0352	0293	
		0000	0348		
3420147	Canon	0167			
3420150	Carena	0209	0081		
3420151	Carrefour	0045			
3420154	Casio	0000			
3420155	Cathay	0278			
3420156	Catron	0020			
3420162	CGE	0041	0000		
3420167	Cimline	0072	0209		
3420172	Clatronic	0020	0072		
3420180	Combitech	0352			
3420187	Condor	0020	0278		
3420197	Crown	0278 0072	0020	0322	
3420205	Daewoo	0278 0020	0045	0209	
		0352			
3420207	Dansai	0072	0278		
3420210	Daytron	0278			

3420216	de Graaf	0042 0166	0081	0104	
		0048	0046		
3420214	Decca	0000 0041	0081	0008	
		0067	0348		
3421459	Deitron	0278			
3420999	Denko	0072			
3421000	Diamant	0037			
3420235	Domland	0209			
3420240	Dual	0041 0081	0278	0000	
3420243	Dumont	0000 0081	0104	0105	
3420252	Elbe	0278	0038		
3420253	Elcatech	0072			
3420259	Elin	0240			
3421031	Elsay	0072			
3420263	Elta	0072	0278		
3420265	Emerson	0072	0045		
3420272	ESC	0278	0240	0020	
3420274	Etzuko	0072			
3420280	Europhon	0020			
3420294	Fenner	0020			
3420296	Ferguson	0107 0041	0320	0321	
		0053 0493	0000	0278	
3420299	Fidelity	0000	0072	0325	0240
3420301	Finlandia	0104 0081	0042	0166	
		0000	0048		
3420302	Finlux	0000 0081	0104	0042	
		0105			
3420304	Firstline	0072 0209	0348	0043	
		0037 0045	0042	0088	
		0293	0278		
3420305	Fisher	0047 0104	0054	0046	
		0038	0020		
3420307	Flint	0209			
3420319	Frontech	0020	0322		
3420322	Fujitsu	0000			
3420323	Funai	0000			
3420326	Galaxi	0000			
3420331	GBC	0020			
3420335	GEC	0081			
3420337	General	0020			
3420338	General Technic	0348			
3420339	Genexxa	0104			
3420345	Goldhand	0072			
3420347	GoldStar	0037	0000		
3420349	Goodmans	0000 0072	0240	0278	
		0062 0037	0020	0343	
		0081 0348	0209	0403	
		0293			
3421248	Gradiente	0008			
3420352	Graetz	0041 0104	0240	0344	
3420353	Granada	0104 0046	0048	0081	
		0285 0410	0006	0240	
		0037 0226	0042	0000	
3420354	Grandin	0072 0037	0020	0000	
		0278	0209		
3420355	Grundig	0007 0195	0081	0347	
		0349 0226	0006	0403	
		0320	0348		
3421108	Hanimex	0295	0352		
3420362	Hanseatic	0037	0209	0278	0081
3420364	Hantor	0020			
3421084	Harwood	0072			
3420370	HCM	0072	0322		
3420377	Hinari	0004 0072	0293	0208	
		0209 0352	0041	0322	
		0088	0343	0278	
3420380	Hisawa	0209	0352		
3420381	Hitachi	0042 0166	0105	0041	
		0285 0410	0000	0240	
		0081 0004	0104	0403	
3421085	Hornyphone	0081			
3420391	Hypson	0072	0209	0278	0352
3420394	Impego	0020			
3420395	Imperial	0000	0240		
3420398	Ingersoll	0004	0209	0240	
3420401	Inno Hit	0020 0240	0278	0322	
		0072			
3420404	Interbuy	0037	0072		
3420405	Interfunk	0081	0104		
3421113	Internal	0278			
3421114	International	0278			

3420408 Intervision 0000 0278 0037 0209
0348

3420410 Irradio 0072 0037 0081

3420415 ITT 0106 0041 0046 0344
0384 0104 0240

3420416 ITT Nokia 0048

3420417 ITV 0278 0037 0020

3420425 JVC 0041 0067 0008 0206
0384

3420427 Kaisui 0072

3420430 Karcher 0278

3420432 Kendo 0106 0209 0315 0053
0348 0072 0037

3420434 Kenwood 0041 0038

3421032 Kimari 0047

3420438 Kneissel 0352 0209 0348 0037

3420443 Korpel 0072

3420448 Kuba 0047

3422095 Kuwa 0226

3420451 Kyoto 0072

3420461 Leyco 0072 0088

3421072 LG 0037 0000 0278

3420463 Lifetec 0209 0348

3420472 Loewe 0081 0006 0037 0105
0004 0162 0454

3420474 Logik 0004 0240 0072 0106
0209

3421009 Lumatron 0278

3420485 Luxor 0106 0046 0043 0072
0062 0104 0047 0048

3420492 Magnavox 0081 0403

3420496 Manesth 0072 0045 0081 0209

3420500 Marantz 0081 0038 0006 0062
0295 0209 0146

3420504 Mark 0278 0020

3421033 Marquant 0322

3420508 Matsui 0209 0004 0192 0295
0348 0037 0208 0088
0240 0352 0332 0000

3420517 Mediator 0081

3420518 Medion 0209 0348 0352

3420487 Melectronic 0000 0037 0038

3420520 Memorex 0104 0000 0046 0037
0048 0047

3420521 Memphis 0072

3420525 Metz 0195 0347 0081 0162
0454 0226 0227 0006

3421323 Micormay 0348

3421317 Micromaxx 0209

3420529 Migros 0000

3420531 Minerva 0195

3420535 Mitsubishi 0043 0067 0075 0081
0173

3420547 Multitech 0000 0072 0020 0104
0322

3420551 Murphy 0000

3420553 NAD 0104

3420562 National 0226 0162

3420564 NEC 0041 0038 0067 0040
0104 0037

3420565 Neckermann 0041 0208 0006 0081
0344

3420567 Nesco 0072 0000 0352

3421012 Neufunk 0209

3420576 Nikkai 0020 0072 0278

3420580 Nokia 0104 0106 0315 0041
0278 0046 0344 0240
0048 0042 0081

3420582 Nordmende 0041 0384 0320 0321
0187 0494 0528 0067
0493

3420588 Oceanic 0000 0048 0106 0081
0104 0041 0046

3420590 Okano 0315 0209 0348 0072
0322 0278

3420602 Orion 0209 0004 0088 0208
0295 0352 0343 0348
0333 0334

3420604 Orson 0000

3420605 Osaki 0000 0037 0072

3420608 Osume 0293

3420609 Otake 0333 0334

3420610 Otto Versand 0081

3420616 Palladium 0072 0315 0037 0041
0006 0209 0004 0240

3421129 Palsonic 0072 0000

3420620 Panasonic 0162 0454 0226 0227

3420628 Pathe Cinema 0004 0043

3420629 Pathe
Marconi 0041

3420632 Perdio 0000 0209

3420634 Philco 0038 0072

3420636 Philips 0081 0006 0146 0403

3420640 Phonola 0081

3420642 Pioneer 0067 0081 0042

3420648 Portland 0020 0278

3420656 Prinz 0000 0088

3420658 Profex 0322

3420660 Profitronic 0081 0240

3420662 Proline 0000 0293 0320 0321

3421194 Proscoc 0278

3420664 Prosonic 0209 0278 0000

3420665 Protech 0081

3420669 Provision 0278

3420672 Pye 0081

3420678 Quelle 0006 0208 0081 0344

3420682 Radialva 0037 0072 0081 0048

3420684 Radiola 0081

3420690 Rank 0041

3420699 Rex 0041 0384

3420700 RFT 0020 0403 0072

3420701 Roadstar 0240 0072 0037 0278

3420710 Royal 0322 0072

3420715 Saba 0041 0187 0206 0320
0321 0384 0494 0062
0278

3420720 Saisho 0004 0209 0208 0192
0088 0348

3420722 Salora 0046 0043 0106 0104

3420724 Samsung 0240 0432

3420725 Samurai 0020

3420727 Sansui 0041 0067 0106 0072
0322 0348

3420728 Sanwa 0004

3420729 Sanyo 0104 0046 0047 0048
0067

3420742 Saville 0352 0278 0240

3420743 SBR 0081

3421200 Scan Sonic 0240

3420745 Schaub
Lorenz 0041 0344 0104 0000
0106 0315

3420746 Schneider 0072 0000 0037 0081
0278 0240

3422103 Seaway 0278

3420753 SEG 0072 0240 0322 0278
0075

3420755 Sei-Sinudyne 0004 0081

3420756 Seleco 0041 0008 0384 0020
0037

3421250 Semivox 0045 0209

3420759 Sentra 0072 0020 0293

3421910 Setron 0072

3420762 Sharp 0048 0062 0037

3420766 Shintom 0072 0104

3420768 Shivaki 0037

3420769 Shorai 0088 0004

3420773 Siemens 0195 0006 0037 0104
0007 0081 0146 0054

3421916 Siera 0081

3420780 Silva 0037

3420781 Silver 0278

3420783 Sinudyne 0004 0081

3420797 Solavox 0020

3420801 Sonitron 0047

3421035 Sonneclair 0072

3420802 Sonoko 0278

3420803 Sonolor 0048

3420804 Sontec 0037

3420805 Sony 0033 0034 0032 0011
0106

3420809 Soundwave 0037 0209

3421143 Ssangyong 0072

3420813 Standard 0278

3420817	Starlite	0037	0104		
3420823	Stern	0278			
3420828	Sunkai	0209	0295	0348	0278
3420831	Sunstar	0000			
3420832	Suntronic	0000			
3420833	Sunwood	0072			
3420839	Supra	0037	0240		
3420843	Symphonic	0000	0072		
3420847	Taisho	0004	0209	0088	
3420849	Tandberg	0278			
3420852	Tashiko	0000	0048	0240	0081
		0037			
3420853	Tatung	0000	0041	0081	0053
		0048	0043	0209	0348
		0352			
3420854	Teac	0041	0000	0278	0037
		0081	0307		
3420855	TEC	0020	0278	0072	
3420859	TechniSat	0348	0209		
3420866	Teleavia	0041	0187		
3420872	Telefunken	0187	0041	0320	0321
		0384	0493	0494	0278
3420884	Teletech	0322	0072	0278	0000
3421334	Tempest	0020			
3420890	Tenosal	0072			
3420891	Tensai	0000	0322	0037	0072
		0004			
3421461	Tevion	0348	0209		
3420895	Thomson	0041	0384	0320	0206
		0321	0493	0494	0528
3420897	Thorn	0041	0104	0037	
3420900	Tokai	0072	0037	0041	0104
3422002	Tokiwa	0072			
3420904	Topline	0348			
3420905	Toshiba	0045	0041	0384	0043
		0081	0403		
3420906	Towada	0322	0072		
3422110	Trakton	0020			
3420916	Triumph	0208			
3420918	TVA	0020			
3420919	Uher	0037	0240	0344	
3420920	Ultravox	0344	0278		
3420924	Unitech	0240			
3420926	United Quick Star	0278			
3420929	Universum	0000	0325	0081	0240
		0037	0106	0348	0195
		0006	0209	0322	0403
3420939	Victor	0008	0067		
3420959	Watson	0081	0352		
3420963	Weltblick	0037			
3420967	White Westing- house	0344			
3420979	Yamishi	0072	0278		
3420980	Yokan	0072			
3420981	Yoko	0037	0072	0020	0240
3421220	ZX	0209			

Satellite Receivers

Satellitenempfänger

Récepteurs satellites

Receptores de satélite

Receptores de satélite

Ricevitori via Satellite

Satelliet-ontvangers

3430994	ABsat	0832			
3430013	Aegir	0520			
3430016	AGS	0668			
3430020	Akai	0515	0200		
3431153	Akena	0668			

3430024	Alba	0421	0515	0455	0254
		0362	0519	0613	0713
		0734			
3430027	Aldes	0288	0362	0519	0520
		0734			
3430028	Allantide	0333			
3430030	Allsat	0067	0200	0364	0183
		0734			
3430031	Allsonic	0288	0369		
3430033	Alltech	0586	0713		
3430034	Alpha	0668	0200		
3430036	Altai	0396			
3430039	Amitronica	0713			
3430040	Ampere	0368	0396	0829	
3430042	Amstrad	0345	0847	0461	0080
		0252	0243	0338	0689
		0713	0742	0396	0882
		0885	0863		
3430044	Anglo	0713			
3430046	Ankaro	0288	0217	0369	0220
		0519	0713		
3430049	Anttron	0421	0183	0613	
3430050	Apollo	0421			
3430056	Arcon	0368	0217	0373	0692
3430058	Armstrong	0243	0200		
3430060	ASA	0397			
3430061	Asat	0373	0200		
3431154	ASLF	0713			
3430064	AST	0351	0321		
3430065	Astacom	0668	0710		
3430067	Aston	0458			
3430068	Astra	0108	0373	0530	0539
		0518	0344	0513	0243
		0607	0346		
3430069	Astro	0173	0358	0520	0613
		0369	0501	0658	
3430071	Athena	0668			
3431036	Atlantide	0333			
3430081	Audioton	0364	0613		
3430082	Aura	0539			
3431155	Austar	0863	0497	0879	
3431037	Avalon	0396			
3430088	Axiel	0668			
3430089	Axis	0530	0369	0366	0834
3430095	Barcom	0217	0108		
3430103	Beko	0455			
3430106	Best	0217	0369		
3430113	Blaupunkt	0173			
3430114	Blue Sky	0713	0885		
3430117	Boca	0243	0589	0513	0683
		0794	0829		
3430122	Brain Wave	0332	0692		
3430129	Broadcast	0346			
3430130	Broco	0530	0713		
3431070	BskyB	0847			
3431531	BT	0515	0668	0710	
3431038	Bubu Sat	0713			
3430139	Bush	0254	0067	0328	0522
		0183	0362		
		0692			
3431039	BVV	0344	0515	0683	0501
3430143	Cambridge				
3430995	Canal Satellite	0853	0292		
3431159	Carat.Som	0366			
3430163	Channel Master	0362			
3431458	Chess	0605			
3430170	CityCom	0394	0818	0115	0607
3431099	Clark	0811	0613		
3430172	Clatronic	0332			
3430174	Clemens Kamphus	0502	0333	0834	
3430176	CNT	0520			
3430177	Colombia	0668			
3430179	Columbus	0297			
3430182	Commander	0220			
3430183	Commlink	0288			
3431101	Communi- cado	0366			
3430185	Comtec	0288	0366		
3430187	Condor	0369	0607		
3430189	Connexions	0458	0396	0369	

3430190	Conrad	0607 0589 0573 0115	3430354	Grandin	0417
		0369 0501	3430355	Grundig	0173 0328 0847 0571
3430191	Contec	0394 0589 0366			0750 0805 0345 0879
3430193	Cosat	0592 0364			0885
3430197	Crown	0243 0518	3430362	Hanseatic	0605
3430198	Cryptovision	0455	3430364	Hantor	0421 0332
3431092	D-box	0723 0873	3430365	Hanuri	0520
3430205	Daewoo	0373 0713 0421	3431677	Harting	
3430208	Dansat	0067 0183		und Helling	0333 0502
3431040	Daumling	0794	3431047	Hase & Igel	0692
3430213	DDC	0362	3430371	Heliocom	0368 0607
3431161	Delfa	0863	3430377	Hinari	0362 0183 0421
3430221	Dew	0366 0373	3430379	Hirschmann	0287 0333 0397 0173
3430222	Diamond	0586			0573 0495 0442 0502
3431300	Discoverer	0605			0501 0396 0710
3430227	Discovery	0668	3430380	Hisawa	0332
3431041	Diseqc	0710	3430381	Hitachi	0328 0455
3430229	Disk Express	0217	3431171	HNE	0742
3431352	Distratel	0885	3430385	Houston	0592 0220 0668 0461
3430230	Distrisat	0200 0592	3431172	Humax	0863
3430233	DNR	0692	3430387	Huth	0346 0607 0332 0364
3430234	DNT	0200 0458 0396			0366 0288 0220 0589
3431042	DST	0421			0502 0243 0794
3430240	Dual	0373	3430391	Hypson	0417
3430244	Dune	0369	3430395	Imperial	0254
3430248	Echostar	0396 0668 0713 0871	3430407	Intertronic	0243
		0853	3430408	Intervision	0592 0628 0607 0364
3430250	EIF	0674 0417	3431345	Invideo	0871
3430251	Einhell	0333 0243 0421 0288	3431302	Italtel	0871
		0252 0513 0518 0713	3430416	ITT Nokia	0108 0328 0573 0172
		0501 0794			0455 0397 0873 0723
3430255	Elekta	0520	3430423	Johansson	0332 0364
3430262	Elsat	0689	3430424	JOK	0690 0710
3430263	Elta	0364 0421 0200 0369	3430425	JVC	0515 0571
3430264	Emanon	0421	3431048	K-SAT	0713
3430266	Emme Esse	0369 0502 0328 0871	3431176	Kamm	0880 0713
3431043	Engel	0713	3430431	Kathrein	0331 0358 0173 0394
3430268	EP Sat	0455			0442 0504 0480 0200
3430275	Eurieult	0417 0885			0622 0092 0333 0658
3431044	Eurocrypt	0455 0108			0713 0613 0668 0818
3430277	Eurodec	0526	3430436	Key West	0794
3430279	Europa	0220 0589 0501 0200	3432094	Kiton	0114
		0863 0607	3430440	Kolon	0421
3431045	European	0794	3431454	Konig	0607
3430282	Eurosat	0243 0586	3431439	Koscom	0834
3430283	Eurosky	0243 0369 0607 0287	3430445	Kosmos	0331 0442 0335 0502
		0115	3430446	KR	0613 0592
3430285	Eurostar	0539 0607 0880	3430447	Kreiselmeier	0173
3430289	Exator	0421 0515 0613	3430450	Kyostar	0421 0613
3430292	Extra Sat	0519	3431304	L&S	
3431046	Fagor	0592 0364		Electronic	0369
3430294	Fenner	0668	3430453	Lasat	0513 0520 0369 0607
3430296	Ferguson	0067 0183 0455 0336			0366 0243 0683 0115
		0614 0328 0711	3431049	Lemon	0692 0120
3430299	Fidelity	0252 0461 0368 0501	3430454	Lenco	0335 0220 0373 0421
3430301	Finlandia	0455 0108			0713 0692 0530 0498
3430302	Finlux	0455 0344 0108 0414			0115 0369 0607
		0573	3430455	Lennox	0592
3431165	Flair Mate	0713	3430457	Lenson	0501
3431301	Foxtel	0879 0497	3430460	Lexus	0200
3430315	Fracarro	0421 0668 0871	3430461	Leyco	0515
3430316	France		3431072	LG	0335
	Satellite	0297	3430462	Lifesat	0605 0369
3430317	Freecom	0335 0421 0734	3430467	Lion	0333
3430320	FTE	0368 0331 0683 0589	3430472	Loewe	0243
		0369 0713 0656 0811	3430475	Lorenzen	0220 0692 0794 0607
3430321	Fuba	0297 0217 0369 0396			0742
		0421 0417 0173 0414	3430476	Lorraine	0335
		0172 0573 0394 0108	3430479	Lupus	0369
3430325	G-Sat	0183 0333	3430485	Luxor	0172 0108 0345 0573
3430326	Galaxi	0217			0873 0501
3430327	Galaxis	0366 0288 0364 0530	3430486	M&B1	0539 0605
		0592 0369 0656 0813	3430489	Macab	0586 0881
		0692 0834 0833 0863	3431050	Manata	0710 0668 0417 0713
		0853	3430497	Manhattan	0455 0592 0328 0520
3430328	Galaxisat	0321			0364 0498 0710 0668
3431449	Gardiner	0818			0834
3430344	GMI	0243	3430500	Marantz	0200
3431168	Goldbox	0292 0853	3431051	Marave	0417
3430347	GoldStar	0335	3430505	Mascom	0442 0811
3430349	Goodmans	0455			
3430353	Granada	0108			

3430506	Maspro	0092 0336 0328 0495 0750 0713 0173 0571 0692		3430636	Philips	0200 0292 0220 0183 0455 0328 0667 0750 0710 0613 0805 0589 0217 0668 0853 0571 0173 0818
3431052	Master's	0394		3430639	Phoenix	0366 0183
3430508	Matsui	0344 0571 0710 0362 0173		3430641	Phonotrend	0288 0592 0364 0502 0656 0863
3430509	Max	0607		3430642	Pioneer	0853 0292
3430511	MB	0605		3430643	PK Sat	0333
3431053	Mediabox	0292 0853		3431133	Planet	0871
3430515	Mediamarkt	0243		3430646	Polytron	0394 0396
3430516	MediaSat	0530 0501 0292 0853		3430652	Predki	0332 0421
3430518	Medion	0713 0369		3430653	Preisner	0243 0513 0589 0396 0683 0794
3431120	Medison	0713		3430654	Premier	0592 0502 0811
3430519	Mega	0200		3431056	Premiere	0292 0853 0873
3430487	Meletronic	0818		3431853	Pro Visat	0734
3430524	Metronic	0519 0421 0417 0243 0613 0288 0520 0818 0885		3430661	Profile	0668
3430525	Metz	0173		3430663	Prosat	0254 0288 0362 0628
3431123	Micro	0607 0613		3430664	Prosonic	0742
3431054	Micro electronic	0713		3430666	Protek	0586 0333
3430527	Micro Technology	0333 0539 0713 0530		3430667	Proton	0333
3431185	Microtec	0713		3430669	Provision	0520
3430531	Minerva	0571		3430672	Pye	0571
3430535	Mitsubishi	0455		3431087	Pyxis	0831 0834
3430537	Mitsumi	0513		3430676	Quadral	0362 0519 0288 0369 0589 0628 0668 0710
3430540	Morgan's	0243 0200 0513 0683 0794 0713 0364 0589 0829		3430678	Quelle	0252 0607 0742 0115
3431305	Multichoice	0879		3430684	Radiola	0200
3430546	Multistar	0331		3430687	Radix	0396 0458 0882
3430550	Muratto	0335 0321		3430689	Rainbow	0613
3430552	Mysat	0713		3430694	Red Star	0369
3430563	Navex	0332		3430696	Redpoint	0530
3430568	Network	0183		3430700	RFT	0541 0288 0220 0200
3430569	Neuhaus	0530 0501 0220 0589 0692 0592 0656 0713 0834 0607		3430701	Roadstar	0713
3430570	Neusat	0692 0713 0834		3430708	Rover	0628 0713
3430573	NextWave	0732		3430715	Saba	0254 0183 0520 0328 0336 0614 0690 0734 0710 0692 0885 0115 0607
3430577	Nikko	0243 0713 0723 0734		3430716	Sabre	0455
3430580	Nokia	0328 0108 0723 0573 0873 0172 0455 0397 0853		3430718	Sagem	0820
3430581	Nomex	0498		3430721	Sakura	0366
3431190	Norco	0498		3430722	Salora	0108 0172
3430582	Nordmende	0362 0455 0520 0421 0614 0254		3430724	Samsung	0287 0421 0853
3430584	Novis	0332		3430731	SAT	0351 0321 0461 0501 0362
3430586	NTC	0502		3430740	Sat Partner	0332 0502 0421 0335 0520 0613 0734 0811
3430588	Oceanic	0586 0333		3430732	Sat Team	0368 0713
3430589	Octagon	0373 0421 0220 0366 0613		3430734	Satcom	0346 0605 0607
3430590	Okano	0243 0502 0331		3430735	Satec	0183 0328 0713
3430597	Optex	0394 0592 0364 0417 0792 0831		3431057	Satelco	0369
3431055	Optima	0502		3430737	Satford	0346
3431447	Optus	0879		3430738	Satline	0628
3430599	Orbit	0351 0373 0333		3430739	Satmaster	0346
3430600	Orbitech	0501 0589 0541 0421 0262		3431058	Schäcke	0613
3430601	Origo	0497 0498		3430746	Schneider	0667 0805 0710
3430602	Orion	0522		3430747	Schwaiger	0394 0183 0605 0504 0589 0732 0607 0885 0692
3430606	OSAT	0345		3431442	SCS	0115
3430611	Oxford	0344 0515 0668		3430751	Sedeae Electronique	0421
3430612	Pace	0455 0328 0847 0067 0183 0336 0791 0795 0497		3430752	Seemann	0396 0243 0530 0515
3430613	Pacific	0586		3430753	SEG	0421 0369 0539 0332 0605 0518 0519 0742 0114
3431441	Packsat	0710		3430756	Seleco	0592 0364 0871
3430615	Palcom	0297 0362		3431141	Servi Sat	0417 0592
3430616	Palladium	0243 0571 0421 0518 0501		3430773	Siemens	0173 0683
3430617	Palsat	0501 0297		3430780	Silva	0335
3431130	Panasat	0879		3430785	Skantin	0713
3430620	Panasonic	0455 0328 0847		3430786	Skardin	0530
3430623	Panda	0455 0067 0108 0607 0173 0834		3431205	Skinsat	0501
3430627	Paristad	0417		3430787	SKR	0713
3430630	Patriot	0515 0668		3431298	Sky	0847
				3430789	Skymaster	0288 0519 0605 0628 0713 0880
				3430790	Skymax	0200 0333 0539
				3431206	SkySat	0605

3430792	Skytwin	0519		
3430793	Skyvision	0364		
3430794	SL	0692 0742 0243		
3430805	Sony	0847 0704 0455 0853		
3431059	SR	0513		
3430816	Starion	0539		
3431443	Starland	0713		
3430820	Starring	0332		
3430824	Strong	0421 0613 0369 0520		
		0373 0879 0872 0853		
3430826	STVI	0417		
3430827	Sumida	0243		
3430829	Sunny Sound	0369		
3430830	Sunsat	0713 0530		
3430831	Sunstar	0513 0243 0369 0794		
3430846	Tagra	0364 0297		
3430851	Tantec	0297 0328 0336 0455		
3430853	Tatung	0455		
3430858	Techniland	0346 0592 0364		
3430859	TechniSat	0262 0501 0541 0458		
		0518 0200		
3430860	Technowelt	0607		
3430862	Teco	0373 0243 0513		
3430863	Telesat	0605 0115 0607		
3430868	Teleciel	0613 0734		
3430869	Telecom	0713		
3431060	Teledirekt	0183		
3430872	Telefunken	0421 0328 0710		
3430875	Teleka	0243 0442 0613 0396		
		0750 0692 0501 0262		
		0607 0834		
3430876	Telemaster	0520		
3430880	Telesat	0605 0607		
3430883	Telesat	0501		
3430884	Teletech	0880 0114		
3430886	Televs	0455 0501 0328 0881		
3430888	Telewire	0592 0656 0364		
3430891	Tensai	0373 0332		
3430895	Thomson	0455 0614 0713 0292		
		0853 0328 0115 0607		
		0820 0668 0710		
3430896	Thorens	0586		
3430897	Thorn	0328 0455		
3430898	Tioko	0394 0243		
3430900	Tokai	0200		
3430903	Tonna	0346 0455 0592 0668		
		0364 0501 0713 0834		
3430905	Toshiba	0455		
3430992	TPS	0820		
3430910	Trendline	0513		
3432010	Trendplain	0513		
3430911	Triad	0351 0335 0321 0333		
		0372		
3430912	Triasat	0414 0501		
3431061	Triax	0414 0501 0115 0200		
		0396 0713 0853		
3430915	Tristar	0373		
3431147	Twinner	0417		
3432019	UEC	0879		
3430922	Uniden	0194 0792 0831		
3430923	Unisat	0366 0243 0200		
3430927	Unitor	0217 0332		
3430929	Universum	0173 0571 0397 0607		
		0656 0115 0461 0742		
3430932	Variosat	0173		
3430933	Vector	0333 0518		
3430936	Ventana	0200		
3430937	Vestel	0742		
3432036	Videocrypt	0711		
3430947	Viper	0366		
3430952	Visiosat	0351 0690 0713		
3430955	Viva	0220		
3430956	Vortec	0287 0421		
3430931	VTech	0351 0321 0690 0818		
3430962	Wela	0589 0713 0794		
3431091	Wetekom	0829 0605 0501		
3430966	Wewa	0333 0455		
3431217	Wibo	0243		
3430968	Winersat	0332		
3431062	Wintergarten	0288		
3430969	Wisi	0638 0173 0321 0372		
		0690 0396 0589 0455		
		0351 0501 0834 0607		

3430971	Woorisat	0520		
3430972	World	0332		
3432113	Worldsat	0668 0710		
3431151	XCOM	0832		
3430976	Xrypton	0518 0369		
3430993	XSat	0832 0668 0713		
3432070	Zaunkonig	0692		
3430986	Zehnder	0321 0331 0520 0504		
		0518 0369 0818 0742		
		0394 0114 0217 0115		
3431064	Zeta			
	Technology	0200		
3430989	Zodiac	0613		
3430990	Zwergnase	0794 0243		

Cable Converters

Kabelsignalumwandler

Décodeurs de câble

Decodificadores

Conversores de Cabo

Convertitori di reti

Kabel Decoders

3430025	Alcatel	0896 0897		
3431155	Austar	0276		
3431531	BT	0105		
3430141	Cabletime	0271 0377 0448 0665		
3431564	Comcrypt	0443		
3430198	Cryptovision	0600		
3431583	Decsat	0423		
3431641	Filmnet	0443		
3430996	France			
	Telecom	0451 0817		
3431076	General			
	Instruments	0276 0476		
3430355	Grundig	0529		
3430421	Jerrold	0003 0276 0476		
3431341	Kabelvision	0003		
3430485	Luxor	0681		
3430489	Macab	0817		
3431782	MNet	0443		
3432098	Mr Zapp	0817		
3430580	Nokia	0681		
3432072	NTL Cabletell	0276		
3431447	Optus	0276		
3430636	Philips	0619 0451 0817		
3430642	Pioneer	0144		
3431065	PVP Stereo			
	Visual	0003		
3430718	Sagem	0817		
3430722	Salora	0382 0681		
3430724	Samsung	0144		
3430748	Scientific			
	Atlanta	0008 0277 0477		
3430864	Tele+1	0443		
3432108	Teledanmark	0619		
3430879	Telepiu	0443		
3430917	Tudi	0286 0619		
3430925	United Cable	0003		
3430945	Videoway	0250		
3430951	Visiopass	0451 0817		
3432055	Westminster	0105 0716		

* Excludes a few models in the LS, LX and MX series.

* Ausschließlich einige Modelle der LX, LS und MX Serie.

* Exclut quelques modèles de la serie LX, LS et MX.

* Excluye unos pocos modelos de la serie LX, LS y MX modelos.

* Exclui alguns modelos da série LX, LS y MX.

* Sono esclusi modelli della serie LX, LS e MX.

* Exclusief een paar modellen in de LX, MX en LS serie.

Guarantee UK UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE D UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäßem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehälter, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Um unseren Garantieservice innerhalb der Garantiezeit in Anspruch nehmen zu können, wählen Sie bitte die Nummer die Sie auf der Kundendienstseite finden um weitere Instruktionen zu erhalten. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen um fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE F UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Pour pouvoir obtenir le service de garantie durant la période de garantie, veuillez nous contacter au numéro mentionné sur la page "Service Consommateurs" pour les instructions nécessaires. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Para obtener servicio de garantía dentro del periodo correspondiente a ésta, por favor, llámenos al número de teléfono que se menciona en la página de Servicio de Atención al Cliente. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.

GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um periodo de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do periodo de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo. Esta garantia não cobre embalagens de cartão, caixas, pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Para obter o serviço de garantia durante o periodo a este destinado, para mais informações contacte-nos no número mencionado na página do Serviço de Apoio ao Cliente. Por favor tome nota que se lhe é pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.

GARANZIA I La compagnia Universal Electronics inc/ ONE FOR ALL garantisce l'acquisto originale che questo prodotto sarà esente da difetti di mano d'opera dietro l'utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l'anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d'acquisto. La garanzia non copre la scatola, l'imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Per accedere al nostro servizio al cliente durante l'anno di garanzia potete chiamare al seguente numero telefonico che trovate sulla pagina "Servizio Clienti". Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garanteert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde behuizing of enig ander object, dat in verbanding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Om gebruik te maken van onze garantieservice tijdens de garantieperiode, belt u het nummer dat u vindt op de Klantenservice pagina. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands

URC-7542
702075



Printed on Recycled Paper

DD-0302