



LG CU515

push **to** talk

Instantly talk to family, friends and co-workers



at&t

Refer to the User Manual for instructions in Spanish.

PUSH TO TALK GUIDE

The Keys to Push to Talk

Push to Talk (PTT) from AT&T lets you see whether your family, friends, and co-workers are available to talk before you call. You can reach them individually or everyone at once via a group call, all in an instant. No other Push to Talk service enables you to do all this.



This handset supports centralized corporate contact management via the Push to Talk Corporate Administrator website. Contact your business sales representative, or www.wireless.att.com/ptt for more information.

PTT Pointers: Getting Started

PTT Helpful Tips





1. Make sure you're holding the PTT Key down while you talk. Release the PTT Key when you are finished talking.
2. The microphone is located to the right of the "6" key. Make sure you aren't covering it up with your grip.

PTT Key Functions

Screen	PTT Key	Result
Idle Screen	Press	PTT Contacts List
	Press & Hold	PTT History
Contacts List	Press & Hold	Initiates PTT Call
Connected	Press & Hold	To Talk






PTT Icon Descriptions

My Availability






-  Available
-  PTT Message
-  Do Not Disturb
-  Unavailable

PTT Contact Availability

Individual:

-  Available
-  Silent/Vibrate
-  Do Not Disturb
-  Unavailable
-  Invitation in Progress




Group:

 
 
-  Available
-  Silent/Vibrate
-  Do Not Disturb
-  Unavailable
-  Invitation in Progress

 
 
PUSH TO TALK GUIDE

Initializing Push to Talk Service

Your phone offers an exciting new Push to Talk (PTT) service. The first step in using the Push to Talk (PTT) service is initializing the phone.



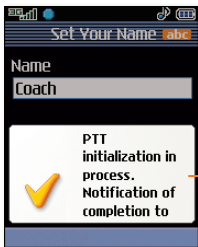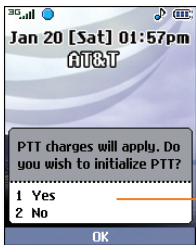

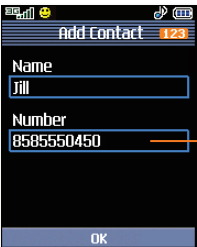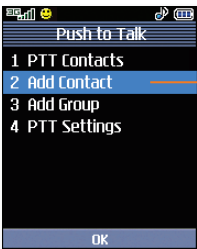1. From standby mode, press the **PTT Key** on the left side of the phone.
2. A screen will appear asking if you want to initialize PTT. Press  for **Yes**.
3. You will be asked to register a name in the PTT system. Enter a name (up to 20 characters) and press .
4. A screen will flash to inform you that the process of initialization has begun. Initialization can take several minutes. When the process is complete, a  icon will appear next to the signal indicator on your idle screen.



 
 


Adding a Push to Talk Contact

After initializing PTT, you must add individuals or groups to your PTT contact list before you can place a PTT call. Individuals and group members must subscribe to the AT&T PTT service.



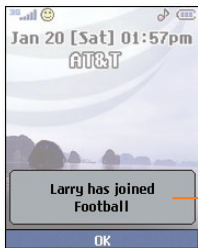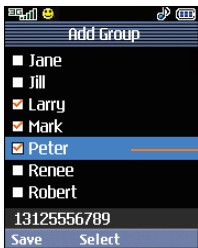


1. Select the **Push to Talk (1)** menu and press .
2. Select **Add Contact (2)** and press .
3. Enter the name and number and press .
4. The network will check to see if the contact is a valid PTT subscriber. When confirmed, an invitation is sent, which the other user must accept. You will see a  icon next to the new contact name while the invitation is in progress.

 
 
PUSH TO TALK GUIDE





Adding a Push to Talk Group

Adding a PTT group is a great way to call several people at the same time.

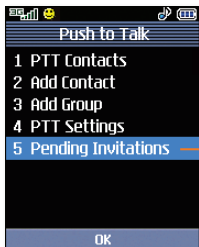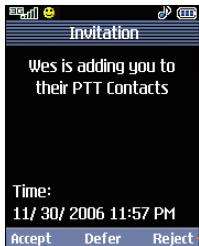1. Select the **Push to Talk (1)** menu and press .
2. Select **Add Group (3)** and press .
3. Enter the name that you would like to call the group and press the **Left Soft Key** for **Save**.
4. Choose **Select in PTT Contact (1)**, or **Add Contact (2)** to add any contacts not already in your list.
5. Highlight each contact you want in the group and press  to select. When finished, press the **Left Soft Key** for **Save**.
6. An invitation to join the group will be sent to each contact. When the first contact accepts, the group's icon will change from  (in progress) to  (group available). As each group member accepts, you will receive a confirmation message.



Accepting a PTT Contact Invitation

 
1. If you are invited to be a PTT contact, a chime will sound and the PTT icon next to the signal bars on the idle screen will change to the PTT Message  icon.
2. Press the **PTT Key** to view your invitation.
3. Press the **Left Soft Key** to **Accept**, the **Right Soft Key** to **Reject**, or  to **Defer** the decision until a later time. If you choose to defer the invitation, you can access any pending invitations later by going to the **Push to Talk (1)** menu and choosing **Pending Invitations (5)**.

PUSH TO TALK GUIDE

 
Making a Push to Talk Call

The Push to Talk feature allows you to talk to friends who have the same feature on their phones.

1. Push and quickly release the **PTT Key** to access your contact list. (Or press and **hold** the **PTT Key** from standby mode to access the PTT History.)
2. Select the contact or group you want to call. Make sure the contact or group shows Available 😊 or Silent/Vibrate 🚫. (To go directly to a contact, enter the name in the search field and the list will auto-scroll instantly as you type.)
3. Press and **hold** the **PTT Key** to activate the call. A tone will immediately indicate that you have the floor and may begin speaking.
4. Release the **PTT Key** when done speaking.
5. To end a PTT session, press 📞. (You will be automatically disconnected if there is no activity for 30 seconds.)

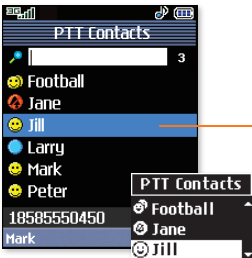

Note: You can make and receive PTT calls with the flip closed.

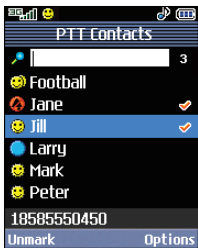



Making a “Quick Group” Call

You can set up an impromptu group call to any set of individual contacts:

1. Push the **PTT Key** to access your contact list.
2. Highlight and press the **Left Soft Key** to mark each contact you want in the group call.
3. When finished selecting, press and *hold* the **PTT Key** to initiate the call.

 
Making a Dynamic Group Call

If you want to call certain members of a group, but not all members:

1. Push the **PTT Key** to access your contact list.
2. Highlight an available group and press the **Right Soft Key** for **Options**.
3. Select **Dynamic Call (2)** and press .
4. Press  to select each of the group's contacts you want to be part of the dynamic call.
5. When finished selecting, press and *hold* the **PTT Key** to initiate the call.




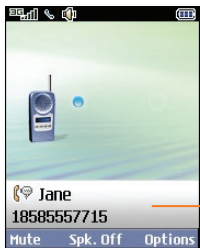 
PUSH TO TALK GUIDE

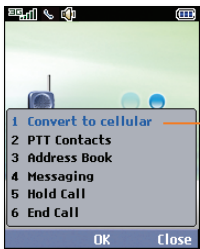

Converting a PTT Call to a Cellular Call

If you initiated a call, you can convert a PTT call to a standard cellular call.

1. While in a PTT call, press the **Right Soft Key** for **Options**.
2. Select **Convert to cellular (1)** and press . You can now speak without holding down the **PTT Key**.
3. The recipient(s) can now press their **PTT Key** and convert to the cellular call.



 
Receiving a PTT Call

1. A distinct tone will signal an incoming PTT call. The caller's information will be displayed on the screen and you will hear the caller's voice.
2. If you have set your ringer to silent or vibrate you will be presented with an accept or reject option at the bottom of the screen prior to hearing the caller's voice.





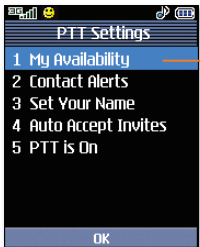

Editing an Existing Contact or Group

1. Push the **PTT Key** to access your contact list.
2. Highlight the contact/group you want to edit and press the **Right Soft Key** for **Options**.
 - For a single contact, you may rename or delete the contact.
 - For groups you set up, you may add a member, remove a member, and rename or delete the group.
 - For a group you join, you may leave or rename the group.



 
Altering Your Availability

To completely block PTT calls for those times when you cannot be disturbed:

1. Select the **Push to Talk (1)** menu and press .
2. Select **PTT Settings (4)** and press .
3. Select **My Availability (1)** and press .
4. Choose **Do Not Disturb (1)** and press .



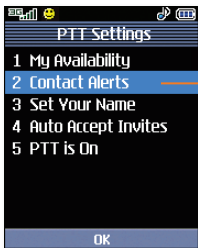

Note: If you wish to quietly pre-screen your calls, set your ringtone to silent or vibrate.

PUSH TO TALK GUIDE



Setting a Contact Alert


To receive an alert when a contact becomes available:

1. Select the **Push to Talk (1)** menu and press .
2. Select **PTT Settings (4)** and press .
3. Select **Contact Alerts (2)** and press .
4. Press  to select each contact and press the **Left Soft Key** for **Save**.



Sending a Call Me Alert


The Push to Talk service makes it possible to send an alert to someone who is not answering the phone.

1. Press the **PTT Key**, select an available contact, and press the **Right Soft Key** for **Options**.
2. Select **Call Me Alert (2)** and press .
3. The recipient's phone will display a screen notifying them of the Call Me Alert. The recipient can press and *hold* the **PTT Key** to return the call.



Sending a Voice Message





You can use Push To Talk service to instantly send voice messages to one or more people.

 
 
1. Press the **PTT Key**, select a contact, and press the **Right Soft Key** for **Options**.
2. Select **Voice Message (3)** and press .
3. Select the individual contact(s), then press and **hold** the **PTT Key** and speak. After releasing the **PTT Key**, the message will deposit.

PUSH TO TALK GUIDE

Auto Accepting Invites

You can automatically accept invitations from contacts and/or groups:

1. Select the **Push to Talk (1)** menu and press .
2. Select **PTT Settings (4)** and press .
3. Select **Auto Accept Invites (4)** and press .
4. Choose one of the top three options and press .

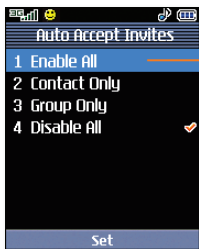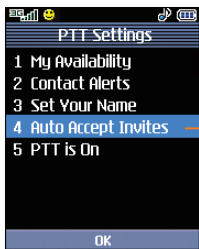



Visit www.wireless.att.com/ptt for full details.

© 2007 AT&T Knowledge Ventures. All rights reserved.
Subsidiaries and affiliates of AT&T Inc. provide
products and services under the AT&T brand.

