


# Dual alarm clock



## Illustration

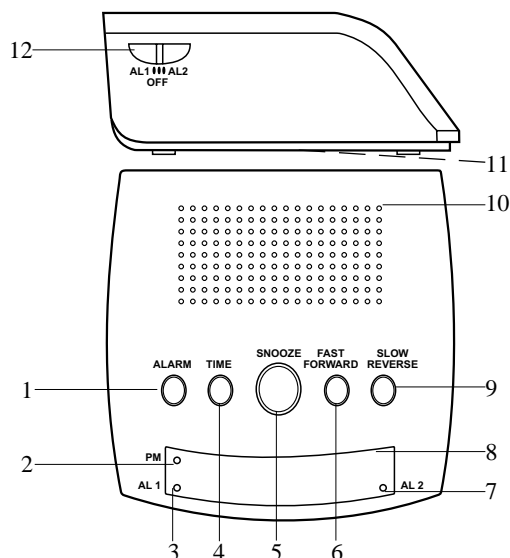

## 28024 OPERATING INSTRUCTIONS

### Electrical requirements

Check the voltage on the rating plate of your digital clock corresponds with your house electricity supply which must be A.C. (alternating current).

### For digital clocks with a fitted plug.

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH A BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO A LIVE SOCKET OUTLET.**

Should the fuse in the 13 amp plug require changing a 3 amp BS1362 fuse must be fitted.

### Location of controls

- |                       |                          |
|-----------------------|--------------------------|
| 1 Alarm button        | 7 Alarm 2 indicator      |
| 2 PM indicator        | 8 Clock display          |
| 3 Alarm 1 indicator   | 9 Slow reverse button    |
| 4 Time button         | 10 Speaker               |
| 5 Snooze button       | 11 Battery compartment   |
| 6 Fast forward button | 12 Alarm selector switch |

P.2

### Battery back-up facility (Unit will work without a battery being fitted)

Your alarm clock is equipped with a battery back-up facility.

- 1 Remove the battery compartment cover (located underneath the unit) by pushing in the clip and lifting off.
- 2 Insert a battery size 9 volts PP3/6LR61 (Ensure battery is inserted correctly)
- 3 Replace the battery compartment cover.

Should a power interruption occur the clock will continue to run, however, time keeping will not be accurate. The display will be extinguished to conserve battery life but the memory will retain details of the clock time and alarm settings.

If the optional battery is not installed in case of the AC power failure the display will blink to indicate the power was interrupted. You will need to reset the clock and alarm.

**Battery back-up is designed to operate for a short period only.**

**If the unit is not to be used for a prolonged period, remove the battery to avoid battery leakage.**

**In the interests of environmental safety : dispose of batteries safely.**

## Switching on and setting the clock time

Before any alarm functions can be used on your alarm clock you must first set the clock to the correct time.

- 1 Place the unit on a flat surface. Plug the mains plug into the wall socket and switch on the wall socket.
- 2 The clock LED display will flash.
- 3 Press and hold the TIME SET button and simultaneously hold down the FAST FORWARD button or the SLOW REVERSE button. The LED clock display will fast forward or reverse the minutes and hour segments. Release all buttons when the correct time is set.
- 4 The PM indicator will illuminate to indicate 12.00 midday has been reached.

## Setting the clock alarm time

### Set alarm 1

- 1 Slide the alarm selector switch to the **AL1** position. Alarm 1 indicator will light.
- 2 Press and hold the ALARM set/off button and simultaneously hold down the FAST FORWARD button or SLOW REVERSE button. The clock display will fast forward or reverse the minutes and hour segments. Release all buttons when the correct alarm time is reached.

P.5

## Maintenance

Do not expose your clock to extremes of temperature. The product should be kept in a warm environment free from dust and damp. For external cleaning use only a soft, clean, damp cloth. Use of detergents may damage the finish.

## Technical specification

AC Power supply	:	230v ~ 50Hz
Battery back-up	:	9V DC type 6LR61/PP3 (not included)

## Warning

**WARNING:** to reduce the risk of electric shock, do not expose this appliance to rain or moisture.

**ATTENTION:** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer any servicing to qualified personnel.

To prevent fire or shock hazard do not expose this apparatus to dripping or splashing.

P.7

## Set alarm 2

- 1 Slide the alarm selector switch to the **AL2** position. Alarm 2 indicator will light.
- 2 Press and hold the ALARM set/off button and simultaneously hold down the FAST FORWARD button or SLOW REVERSE button. The clock display will fast forward or reverse the minutes and hour segments. Release all buttons when the correct alarm time is reached.

If set to AL1 or AL2 the alarm will operate at the preset alarm times.

## Cancelling the alarm

The alarm is programmed to run for 59 minutes.

- 1 Press the SNOOZE button to stop the alarm temporarily, the alarm will repeat again in 7 minutes.
- 2 To cancel the alarm press the alarm set/off button. (The alarm will automatically activate 24 hours later).
- 3 If the alarm is no longer required slide the alarm selector switch to the OFF position. (The alarm indicator(s) will switch off).

## Snooze function

You can press the SNOOZE button after the alarm has sounded which allows 7 minutes of snooze time. After 7 minutes the alarm will sound again.

- 1 When the alarm sounds press the SNOOZE button.  
(The snooze default is set for 7 minutes and then resumes).

The snooze function will cease to operate after 59 minutes.

P.6

---

---

## Guarantee

Morphy Richards products are manufactured to internationally accepted quality standards. In addition to your statutory rights, Morphy Richards guarantee your product to be free from manufacturing and component defects for a period of TWO YEARS from date of purchase.

If your product proves to be defective within 28 days of purchase, your Morphy Richards dealer from whom the product was purchased will be pleased to replace it free of charge.

Should your product develop a defect within the guarantee period but after the replacement period, please return the product to the following address, together with the proof of purchase, brief details of the symptoms and your own name and address.

After Sales Division  
Morphy Richards Limited  
Talbot Road  
Mexborough  
South Yorkshire  
S64 8AJ

Your post office will provide a certificate of posting. The product will be repaired and returned to you promptly.

If you need any further advice, please call our Helpline  
(UK local rate) on: 08450 777700 (Mon-Fri)

**Morphy Richards Website: [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)**



446/8001/91 Rev 1

Morphy Richards Ltd, Talbot Road, Mexborough, S64 8AJ

Morphy Richards products are intended for household use only.  
Morphy Richards has a policy of continuous improvement in product quality and design.  
The company, therefore reserves the right to change the specification of its models at any time.

---

---