


LifeFitness

ARCTIC SILVER 93CW Upright Bike

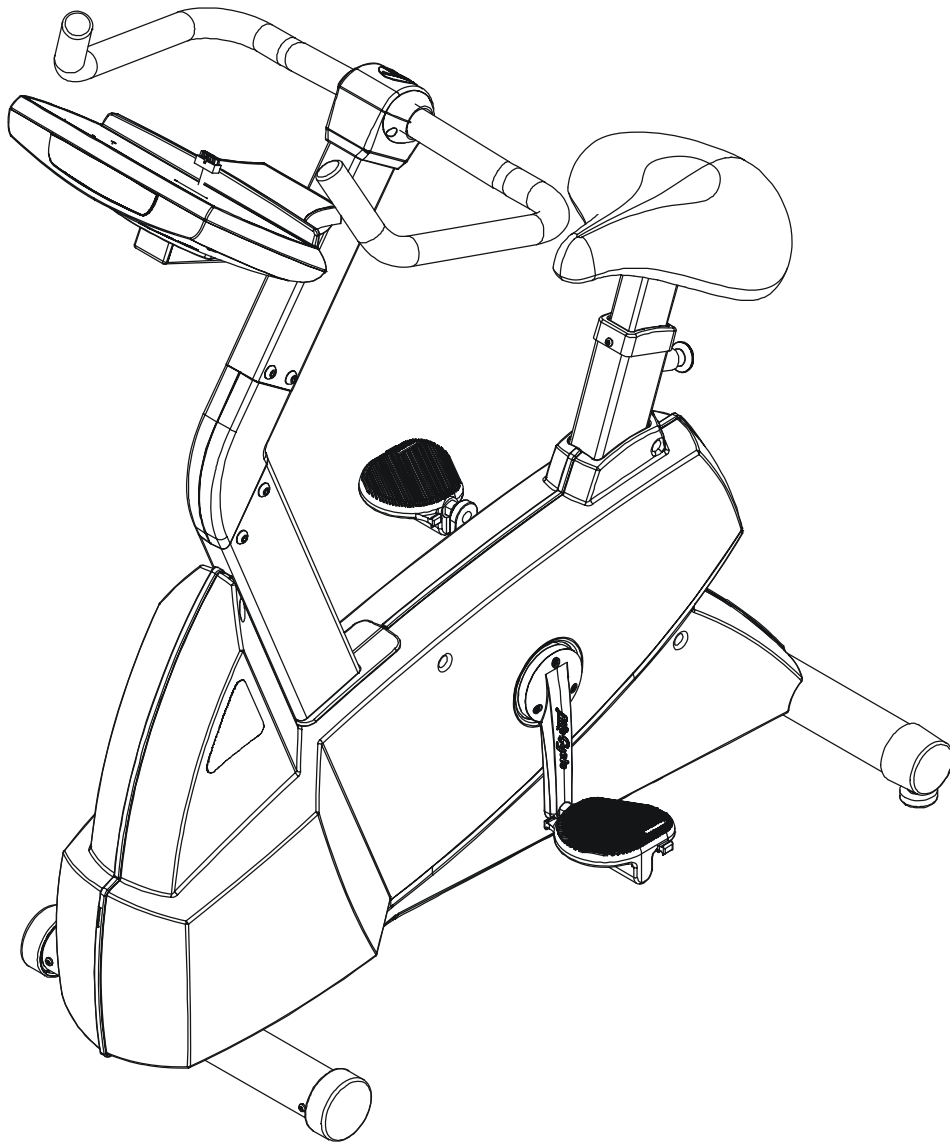

Customer Support Services
PARTS MANUAL rev 29 Apr 2008

ARCTIC SILVER 93CW
REFERENCES

93CW-0XXX-02
S/N CCM100000 and up


OPERATION MANUAL	M051-00K63-A068
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
COAX CABLE	AK32-00020-0002
ER READY BRACKET ASSEMBLY ASSEMBLY CONSISTS OF: 1) POWER CABLE 2) ER READY BRACKET 3) F TYPE CONNECTOR	AK63-00215-0000 AK32-00078-0001 0K63-0329-0000 0017-00021-2846
SERVICE MANUAL	M051-00K63-A009

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE
93CW-0XXX-02 MAKES THE UNIT A 93CER-0XXX-02.**

	Page
CONSOLE AND RELATED COMPONENTS.....	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS.....	5
ALTERNATOR W/PULLEY	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY.....	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS.....	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM.....	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY.....	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY.....	18
HANDLEBAR ASSEMBLY.....	19
BELTS.....	20
CABLES.....	21

ARCTIC SILVER 93CW
Console and Related Components


93CW-0XXX-02
S/N CCM100000 and up

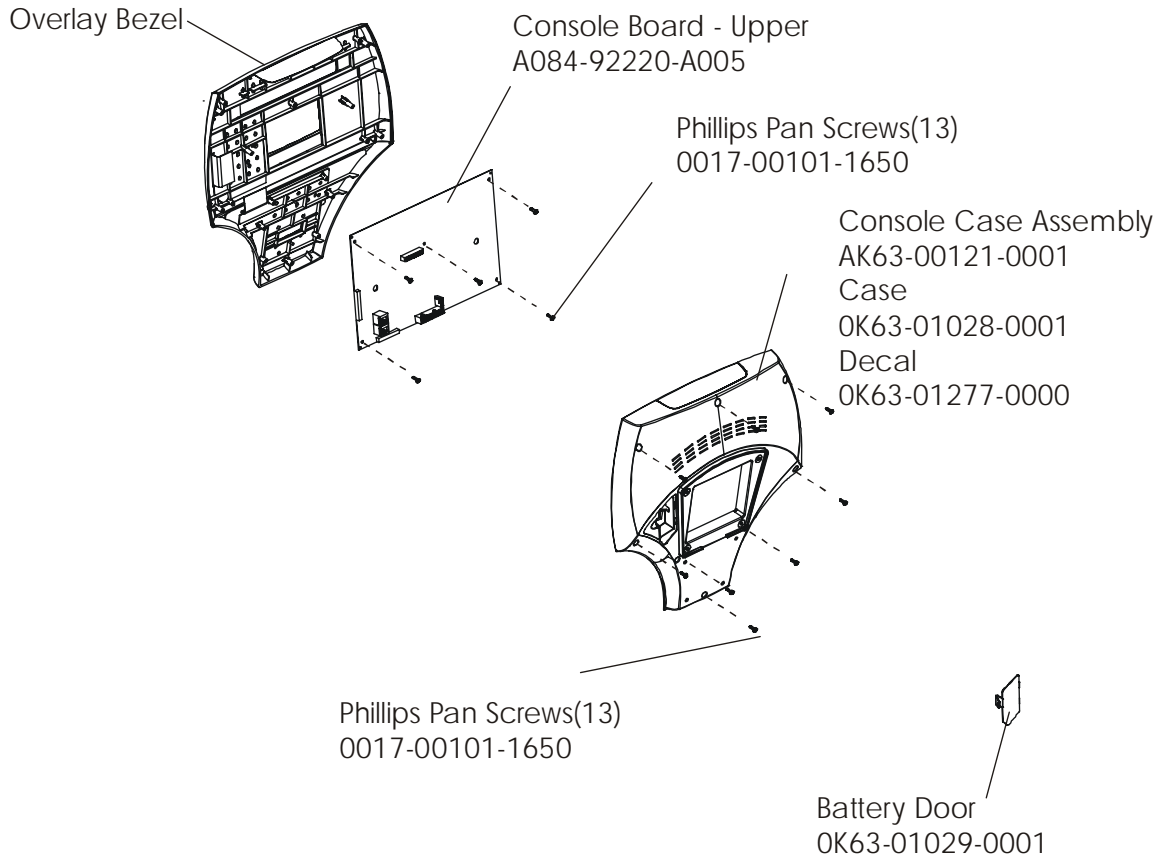

Console Assembly	Bezel W/Overlay Assy.
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met


ARCTIC SILVER 93CW
Console Mtg. Screws & Polar Covers

93CW-0XXX-02
S/N CCM100000 and up

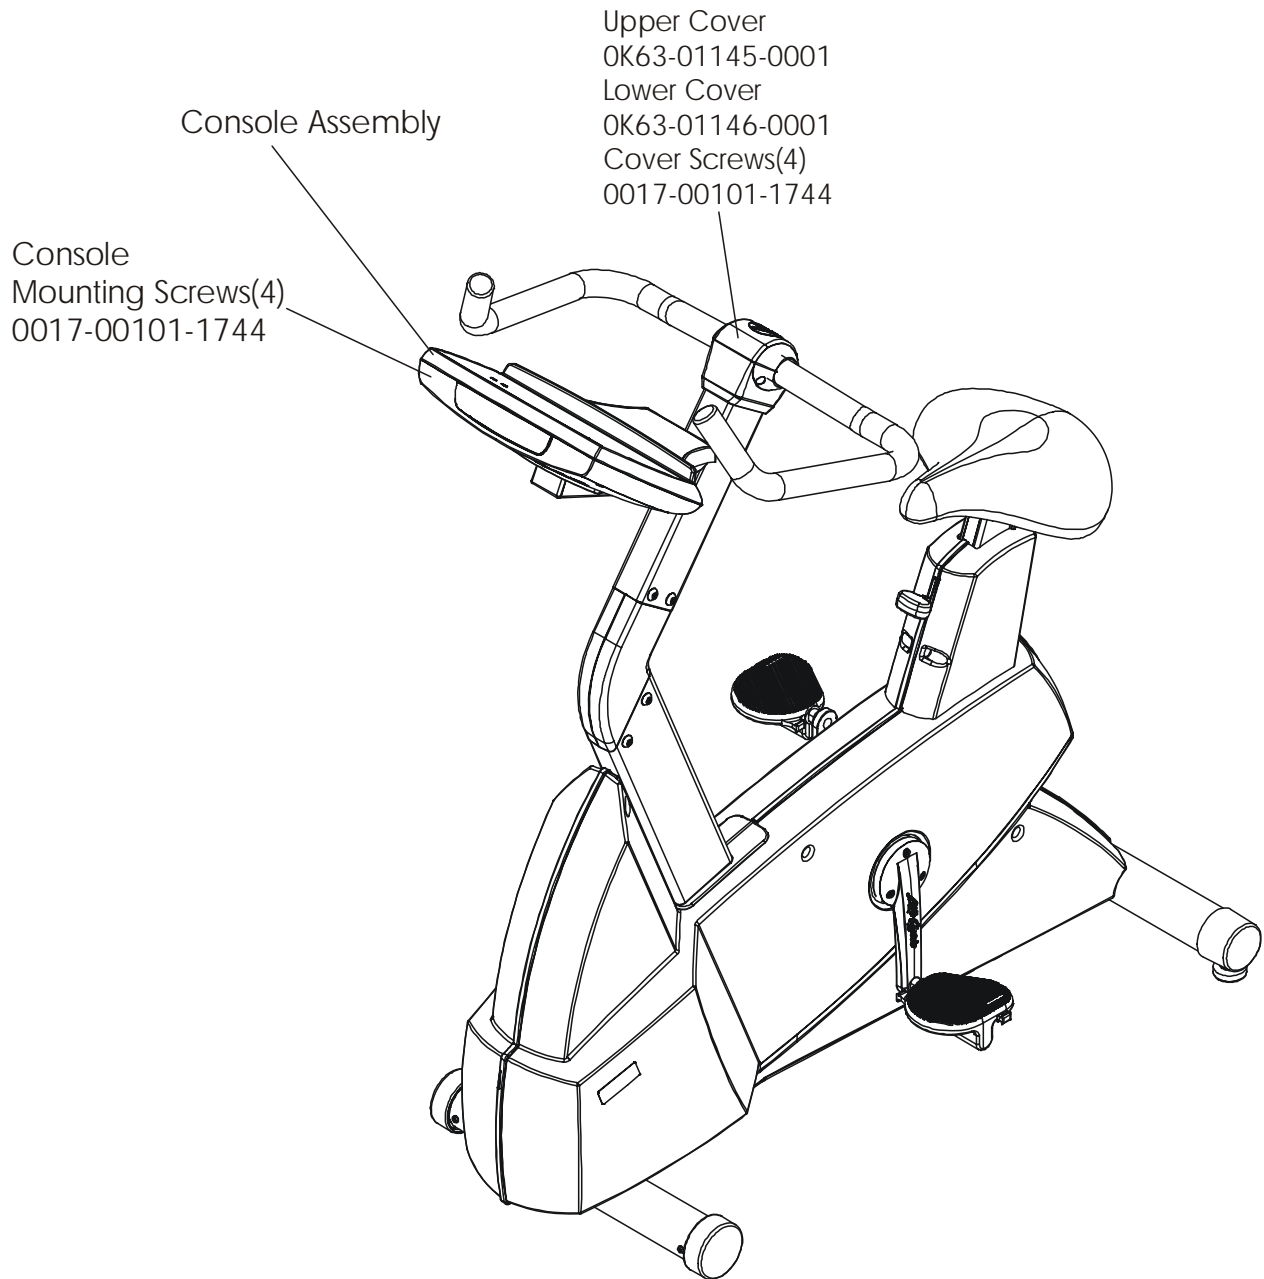


ARCTIC SILVER 93CW
Alternator w/Pulley-AK63-00093-0000

93CW-0XXX-02
S/N CCM100000 and up

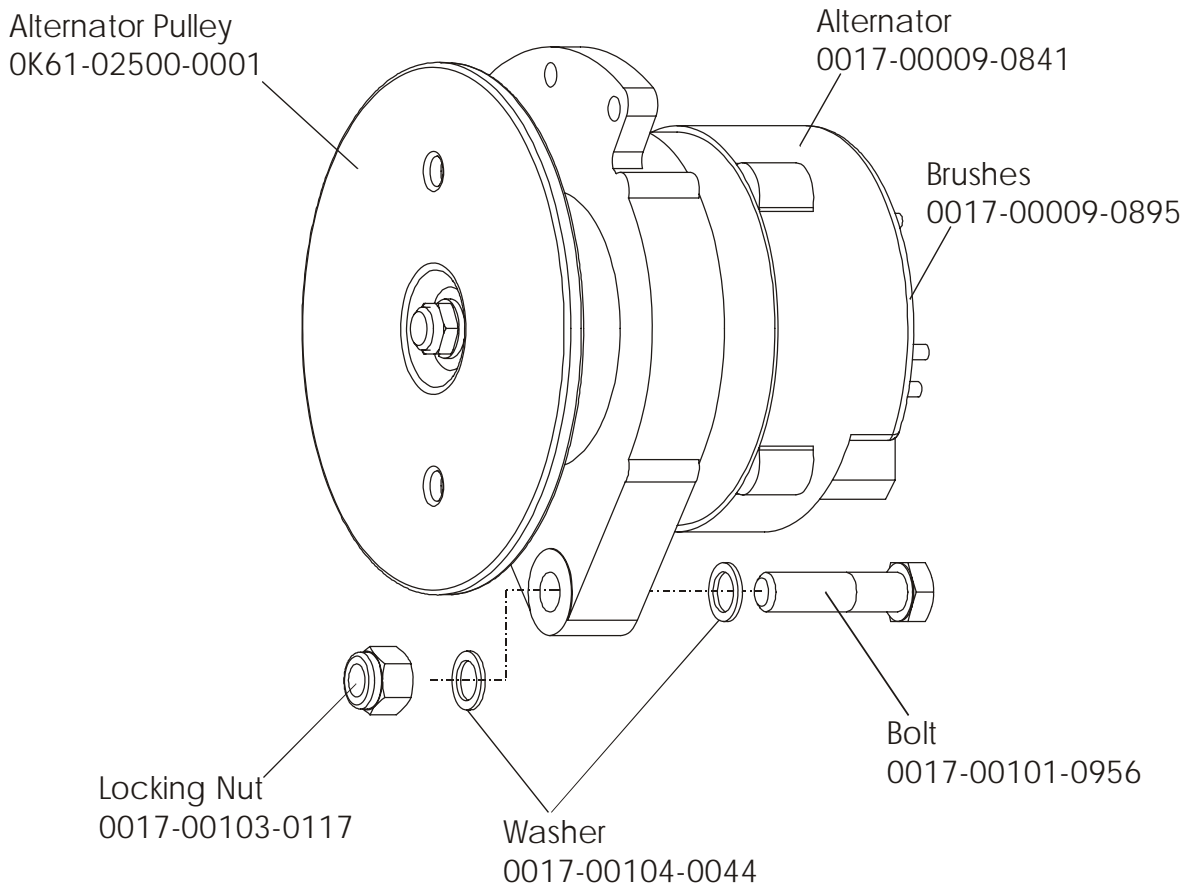

ARCTIC SILVER 93CW
Crankshaft and Bearing Assembly

93CW-0XXX-02
S/N CCM100000 and up

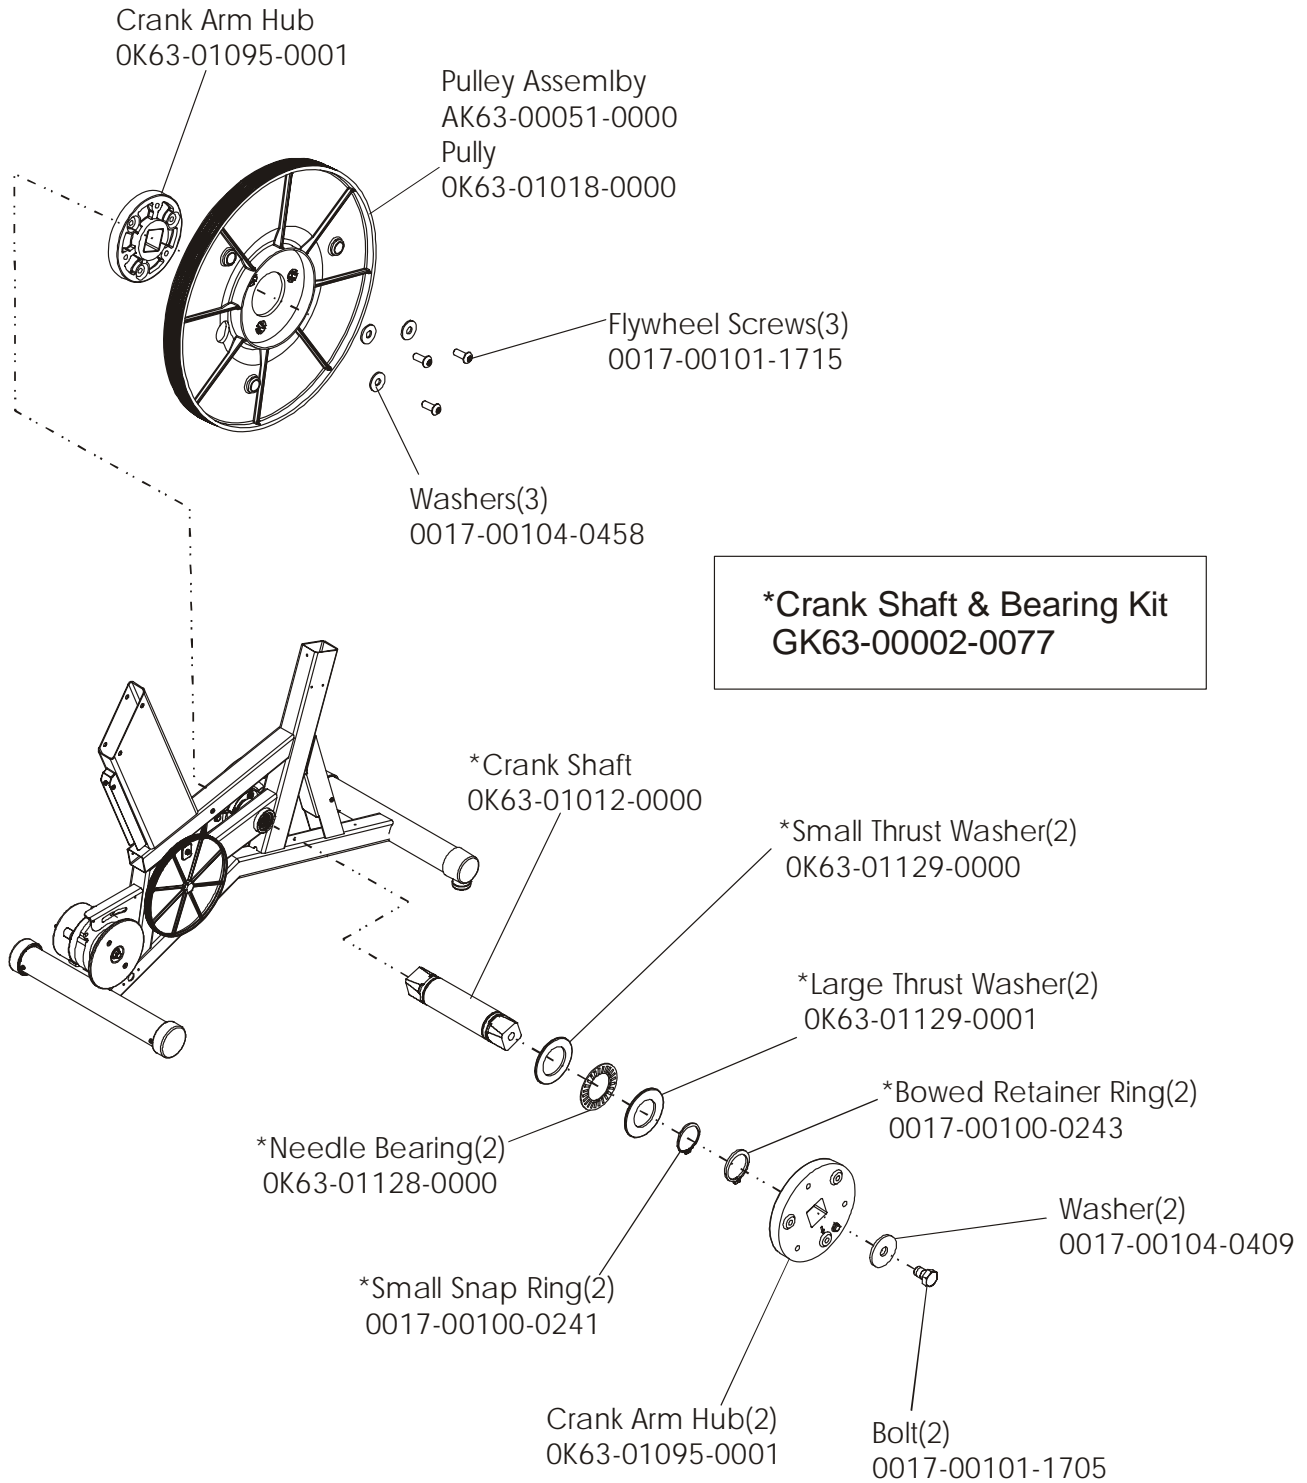

ARCTIC SILVER 93CW


Intermediate Shaft and Bearing Assembly

93CW-0XXX-02

S/N CCM100000 and up

Clutch Assembly
AK63-00026-0000
(not included in kit)

Magnet
118E-00001-0124
(not included in kit)

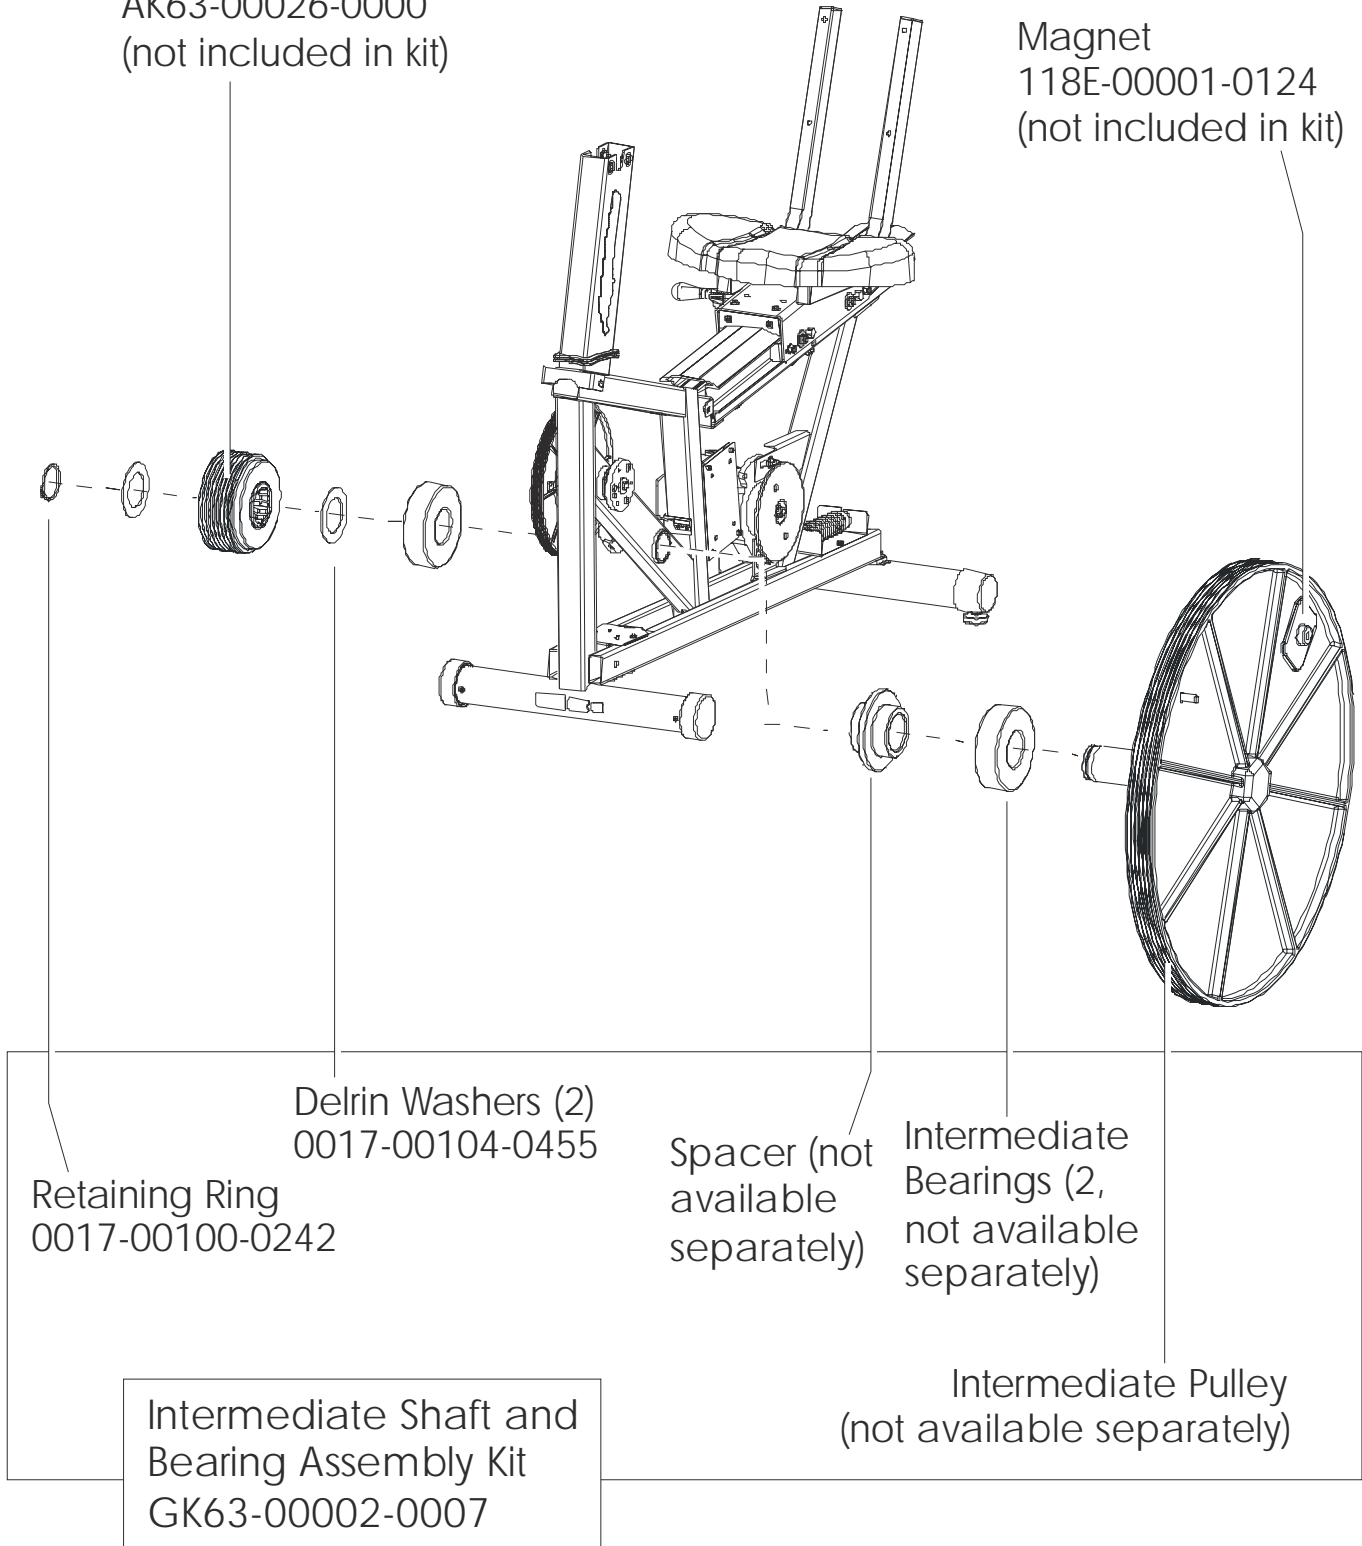

Retaining Ring
0017-00100-0242

Delrin Washers (2)
0017-00104-0455

Spacer (not
available
separately)


Intermediate
Bearings (2,
not available
separately)

Intermediate Shaft and
Bearing Assembly Kit
GK63-00002-0007

Intermediate Pulley
(not available separately)


ARCTIC SILVER 93CW
Seat Latch Assy. -AK63-00043-0001

93CW-0XXX-02
S/N CCM100000 and up

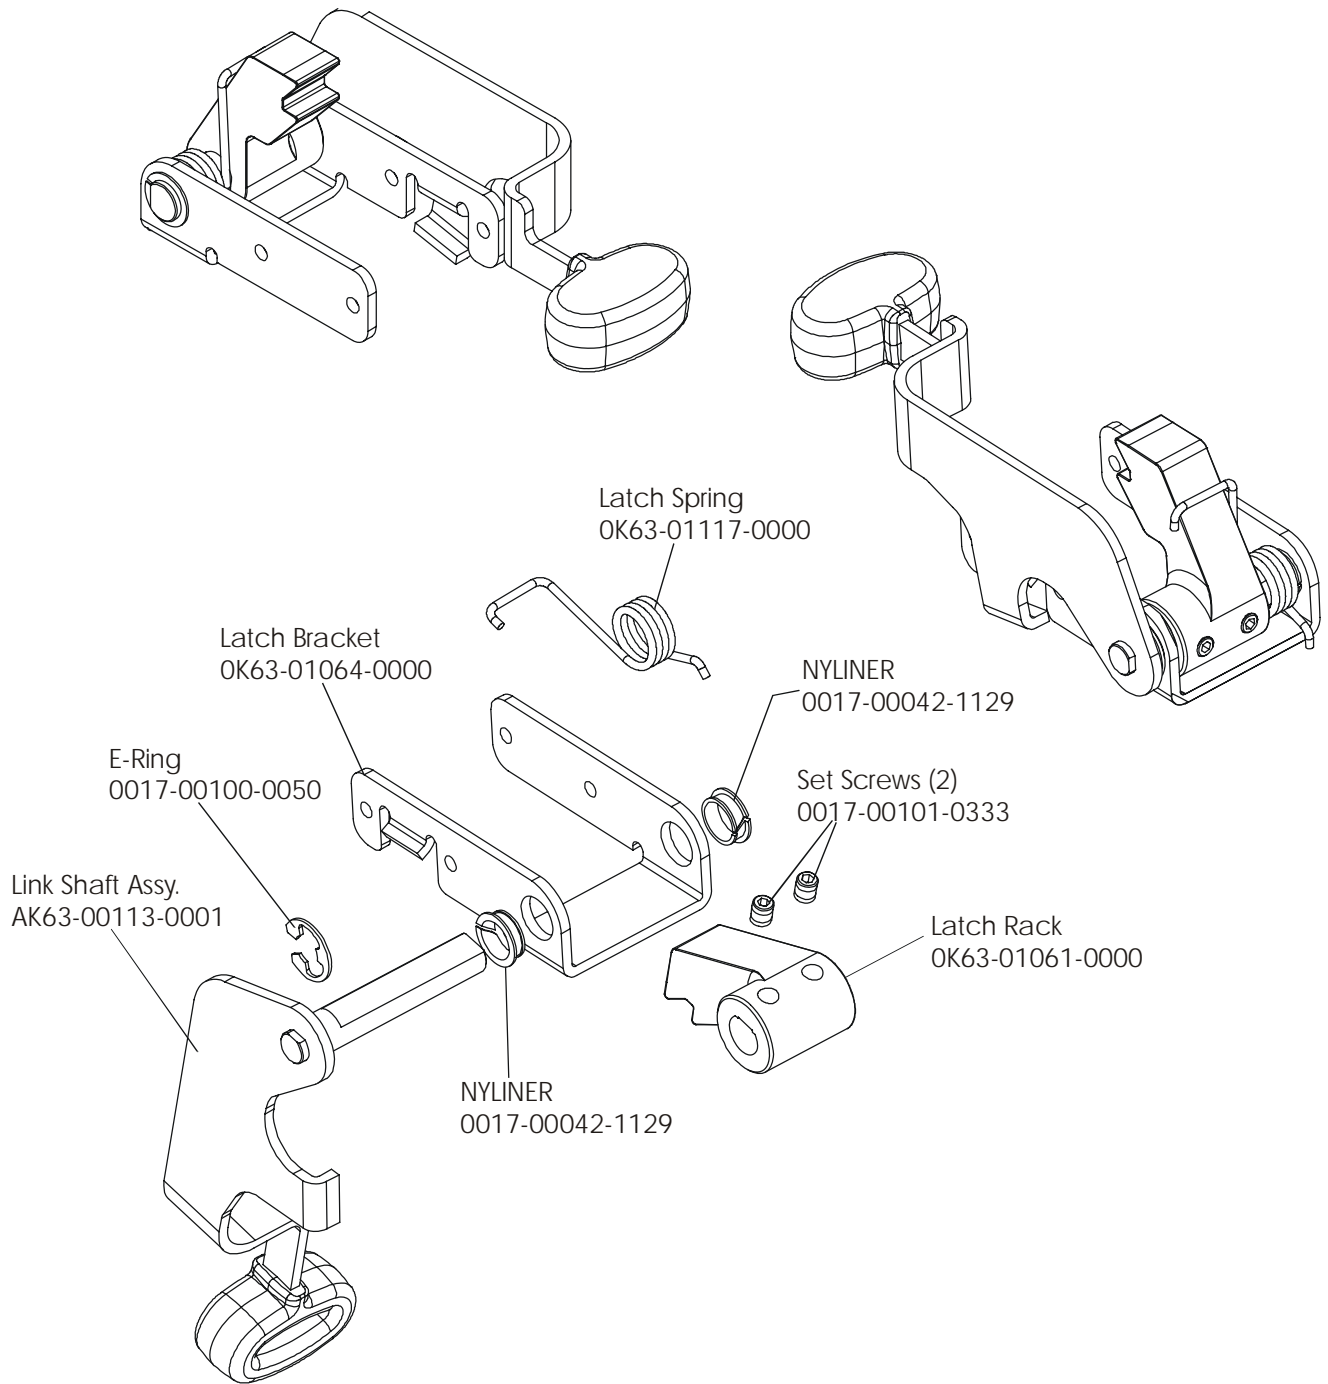



ARCTIC SILVER 93CW
Seat Post Assy. – AK63-00232-0003

93CW-0XXX-02
S/N CCM100000 and up

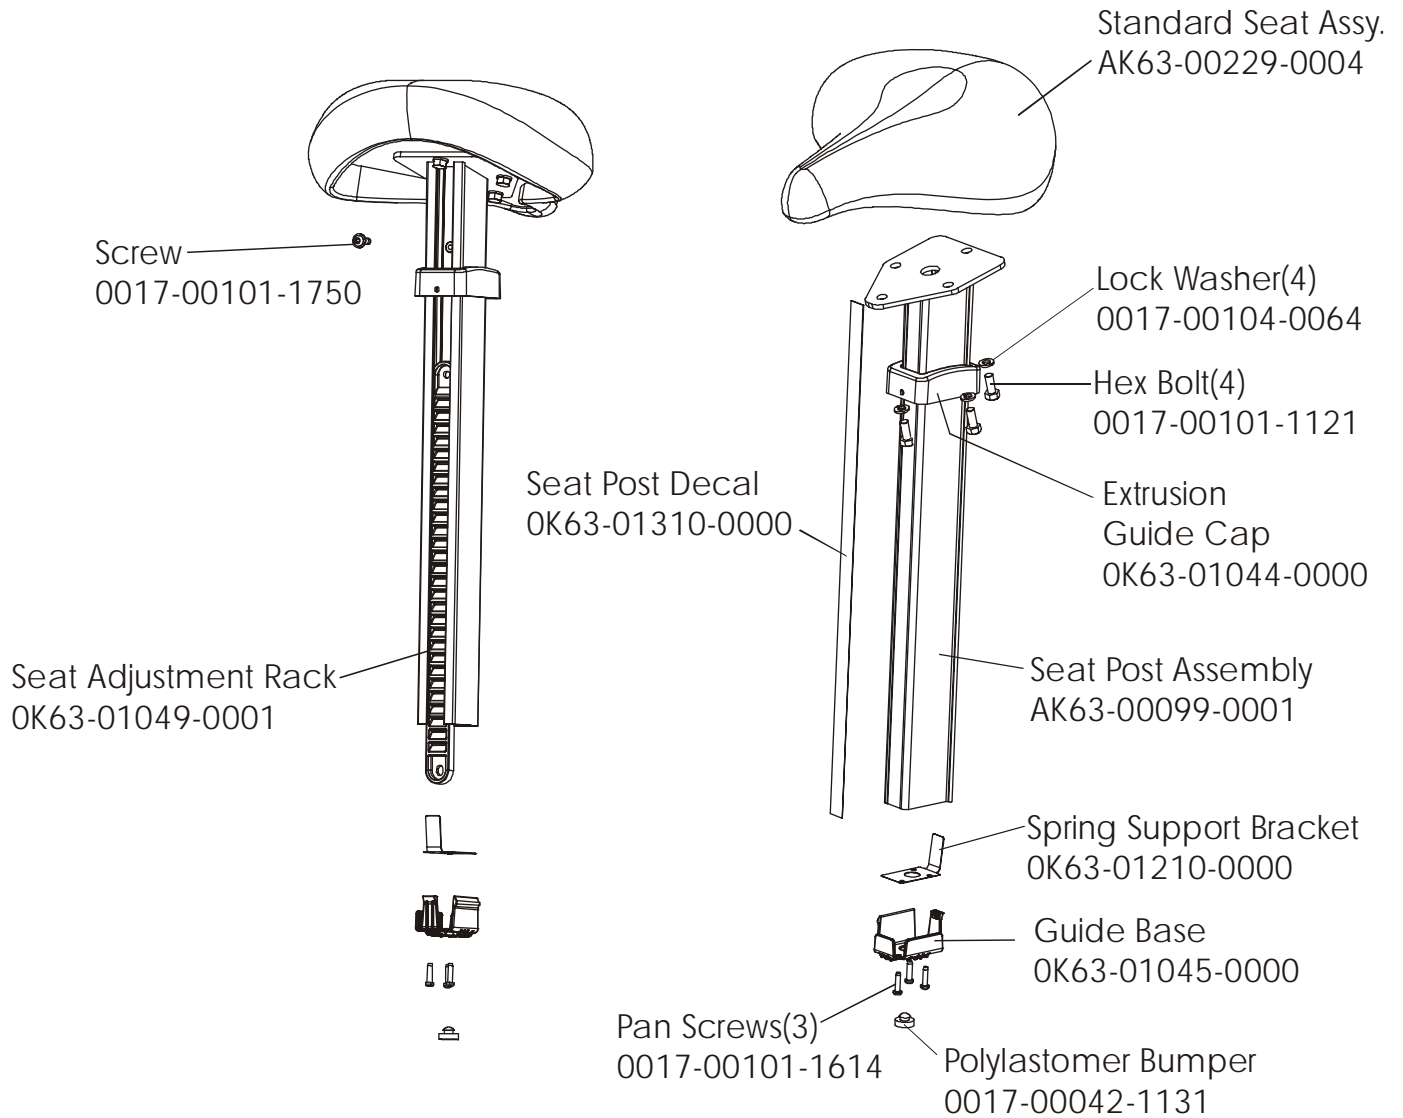

ARCTIC SILVER 93CW
Seat Post Shrouds

93CW-0XXX-02
S/N CCM100000 and up

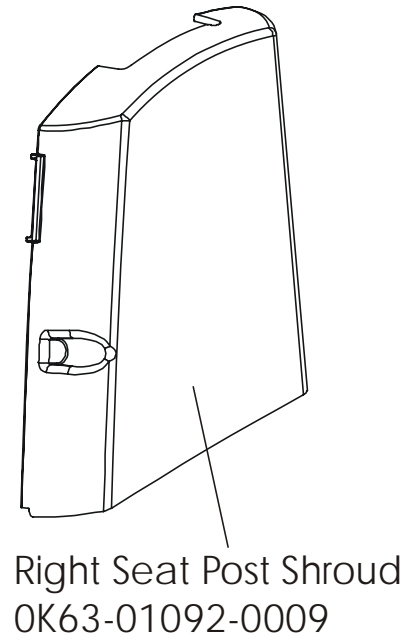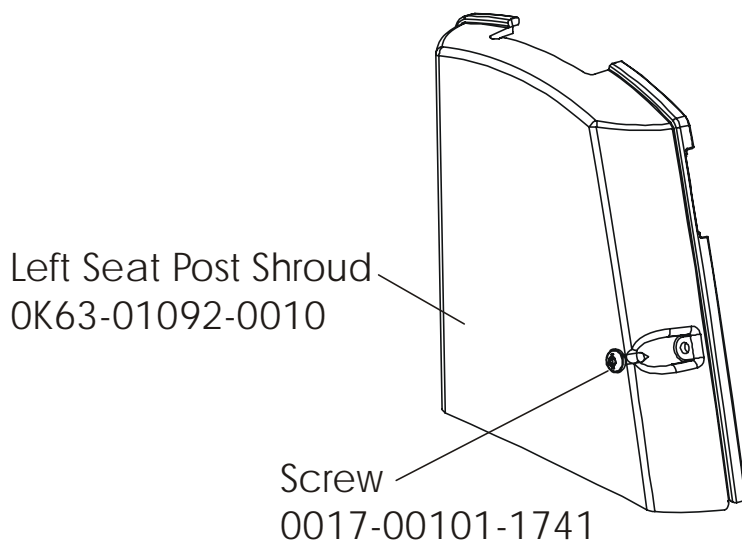


ARCTIC SILVER 93CW

Idler Bracket Assy.-AK63-00021-0000


93CW-0XXX-02

S/N CCM100000 and up

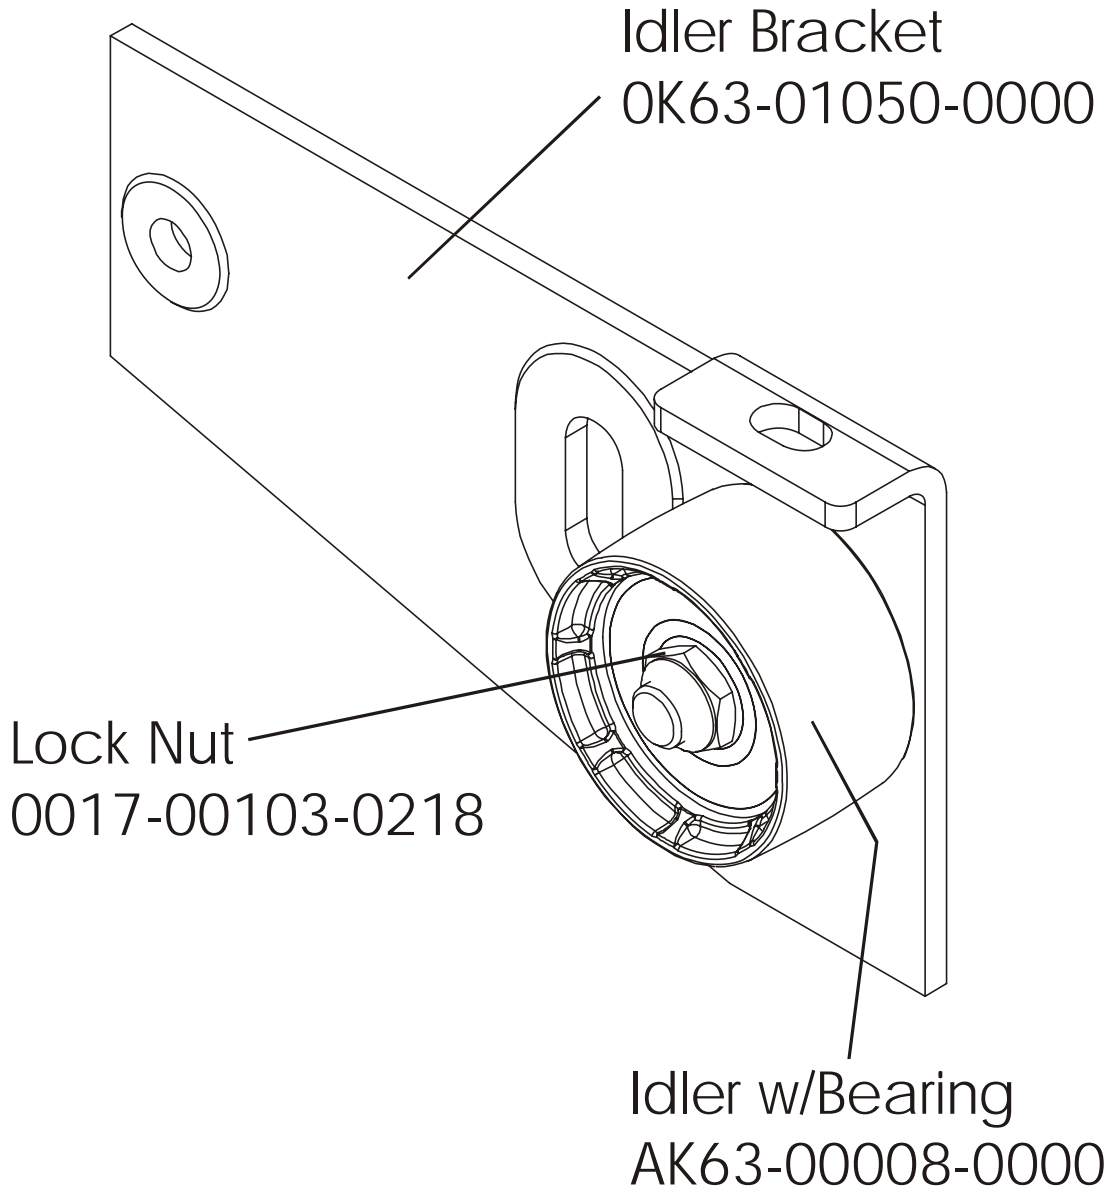


ARCTIC SILVER 93CW
Console Support Assembly

93CW-0XXX-02
S/N CCM100000 and up

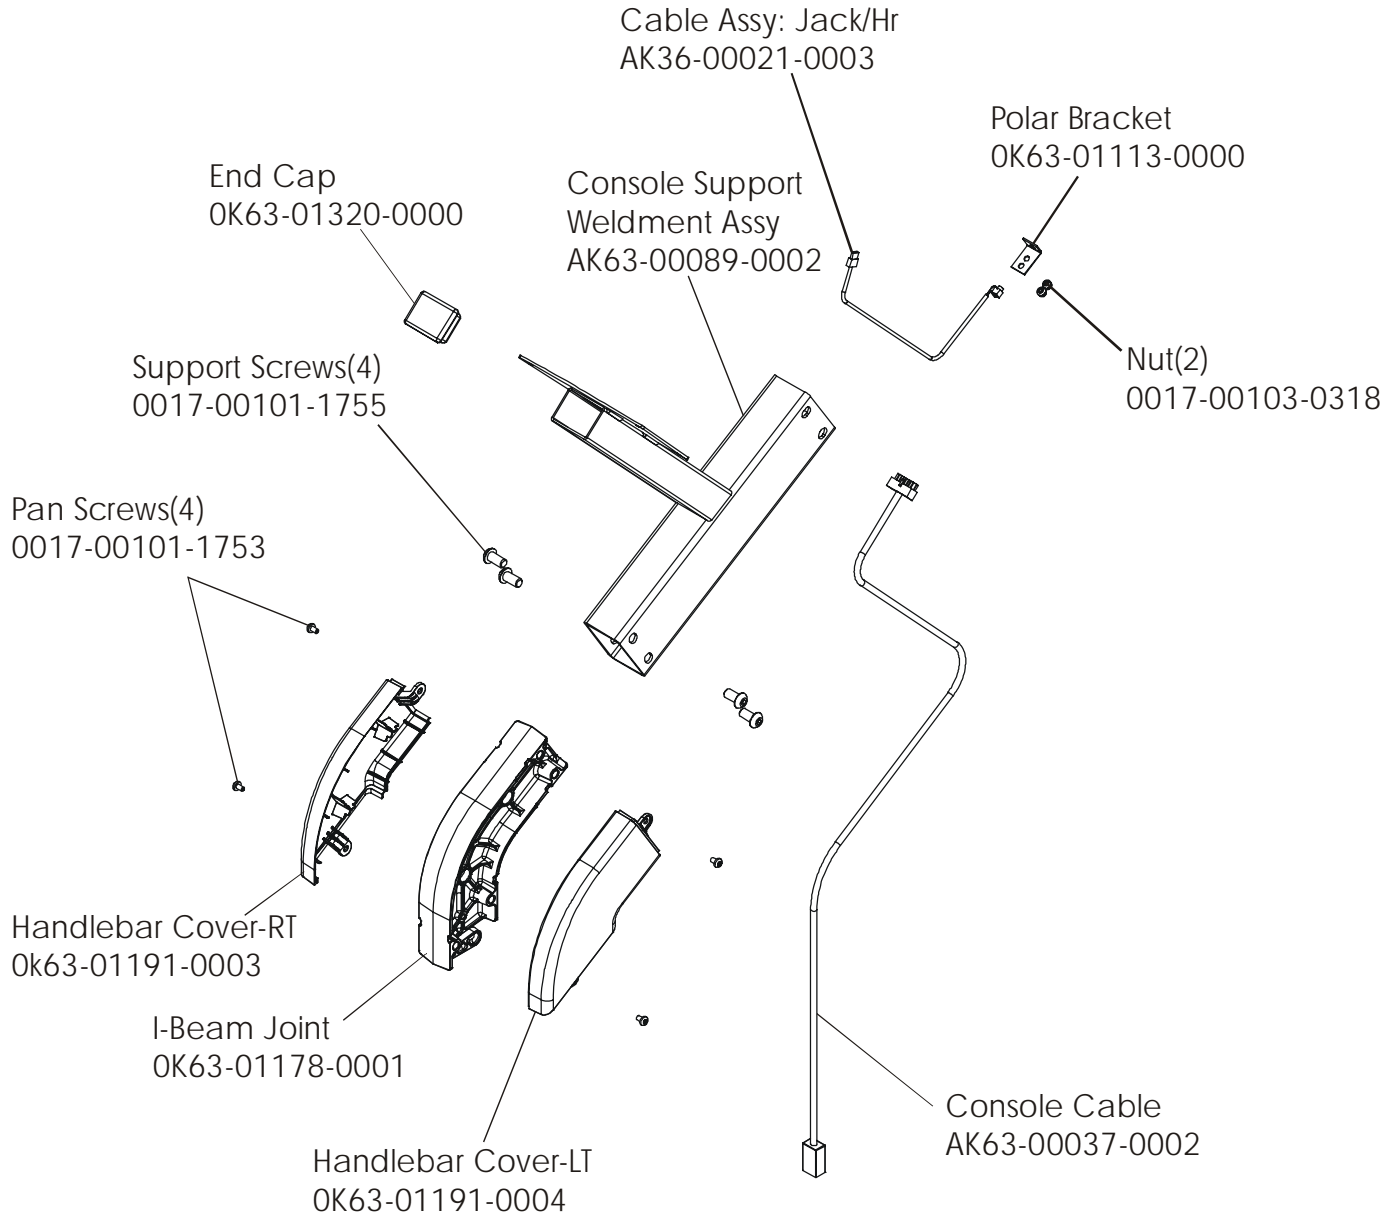


ARCTIC SILVER 93CW
Left Side Shroud and Crankarm

93CW-0XXX-02
S/N CCM100000 and up

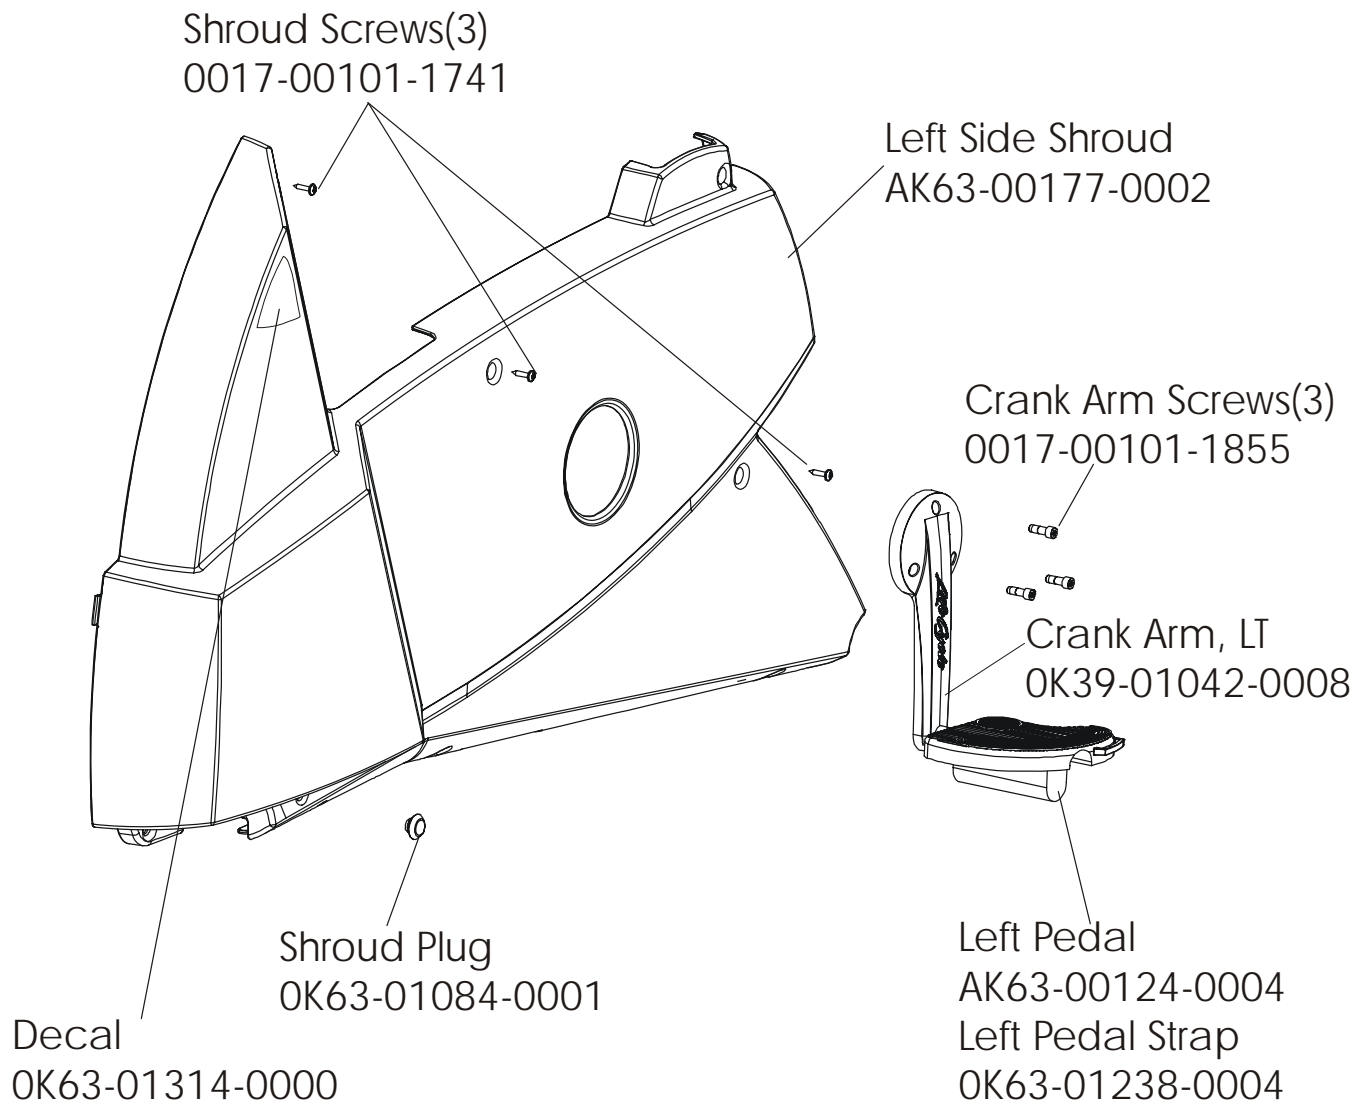

ARCTIC SILVER 93CW
Right Side Shroud and Crankarm


93CW-0XXX-02
S/N CCM100000 and up

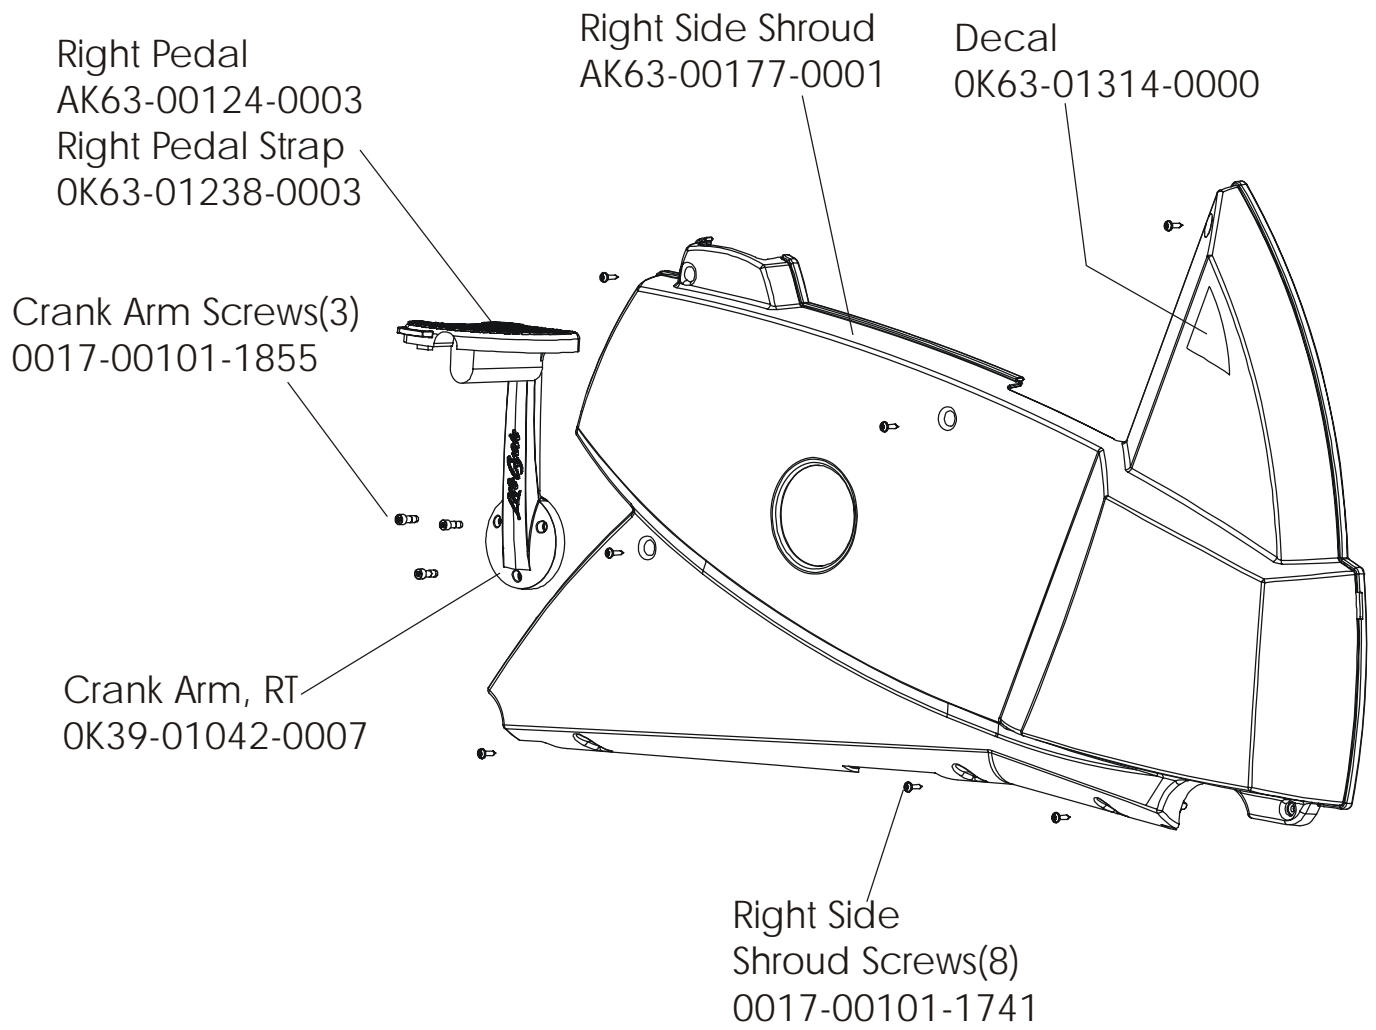

ARCTIC SILVER 93CW
PCB Mounting Bracket Assembly


93CW-0XXX-02
S/N CCM100000 and up

Assembly Number – AK63-00049-0000

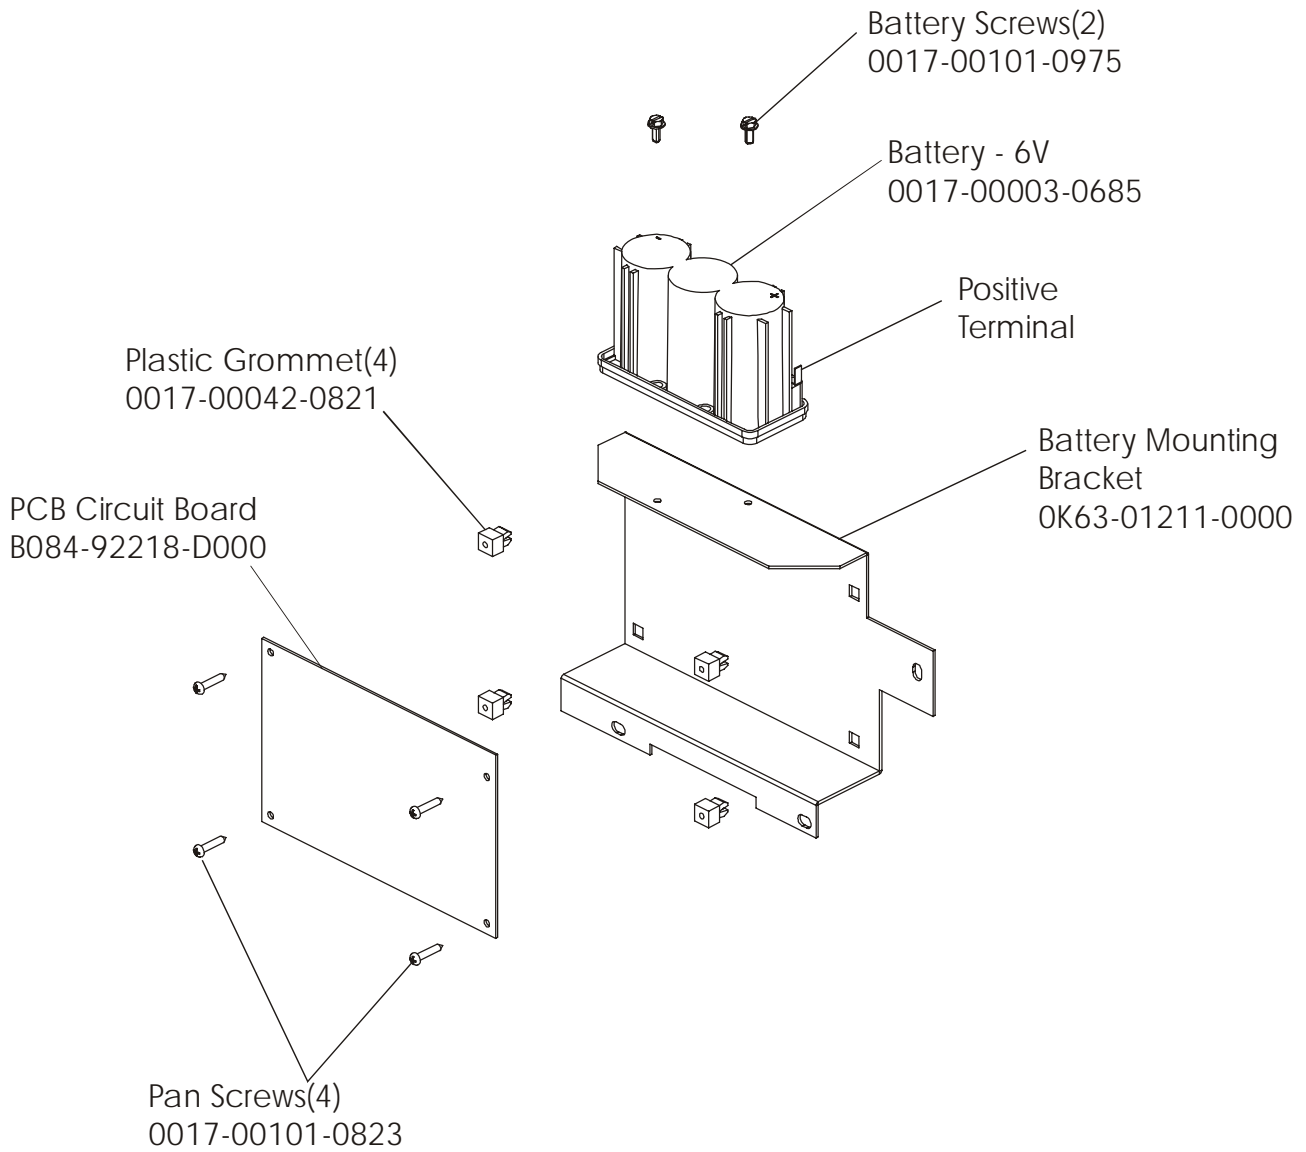


ARCTIC SILVER 93CW
Front Wheels – AK63-00017-0001

93CW-0XXX-02
S/N CCM100000 and up

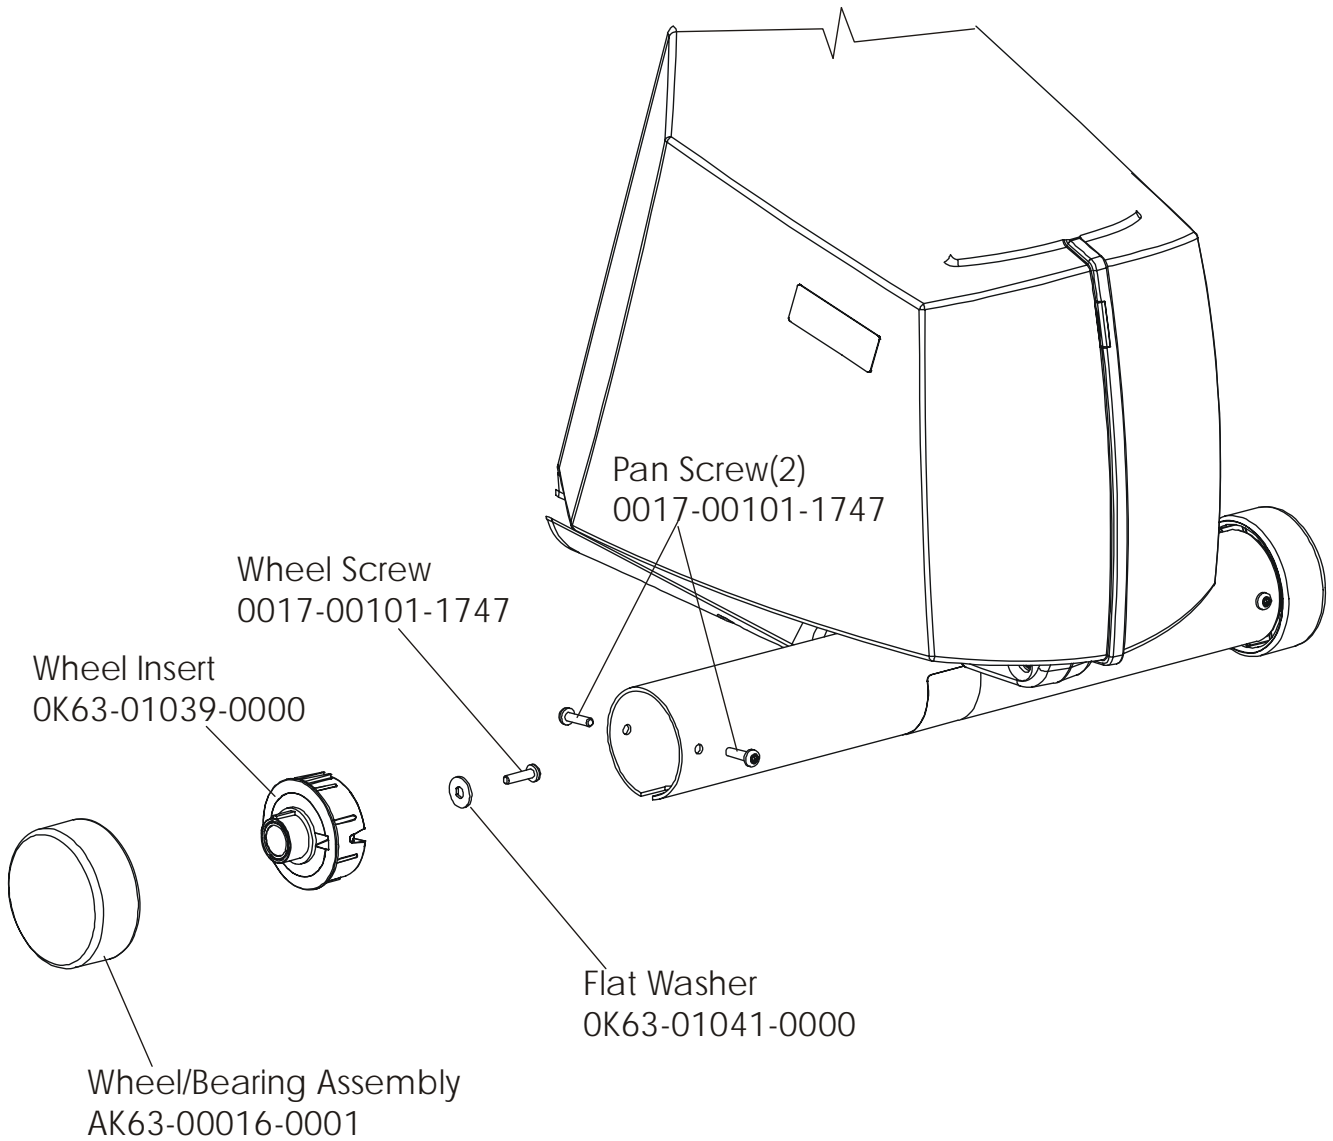


ARCTIC SILVER 93CW
Resistor Assembly- AK63-00047-0000

93CW-0XXX-02
S/N CCM100000 and up

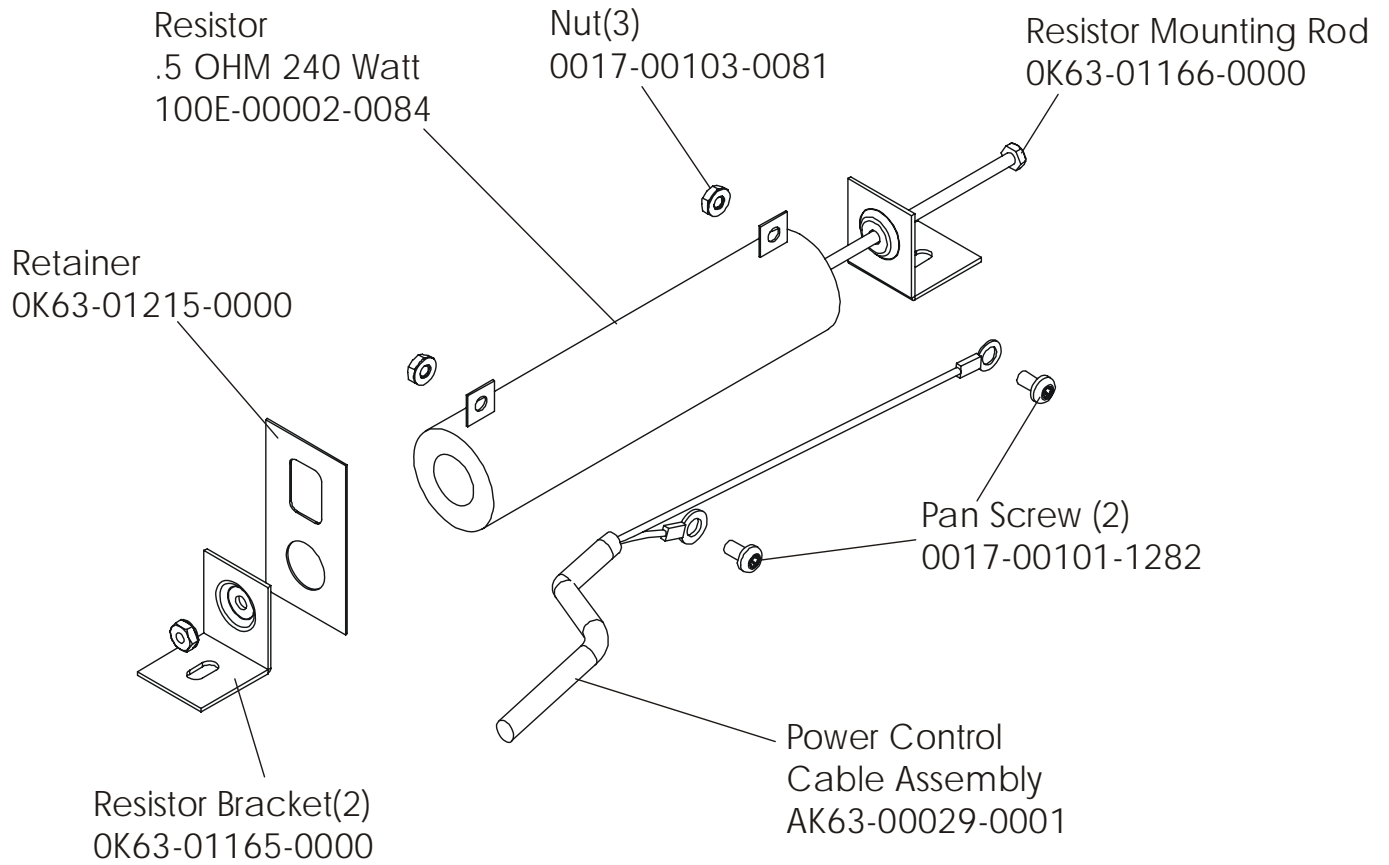



ARCTIC SILVER 93CW
Handlebar Assy. - AK63-00101-0001

93CW-0XXX-02
S/N CCM100000 and up

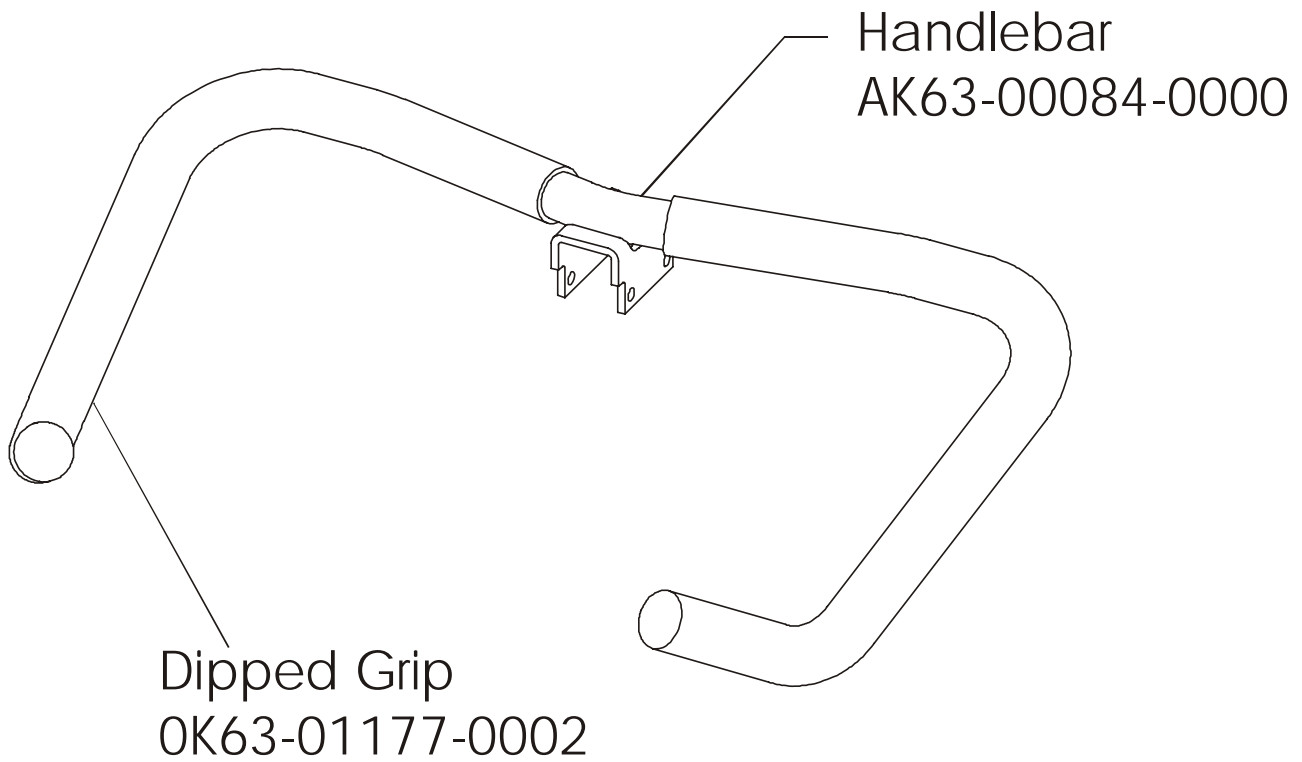

ARCTIC SILVER 93CW
Belts

93CW-0XXX-02
S/N CCM100000 and up

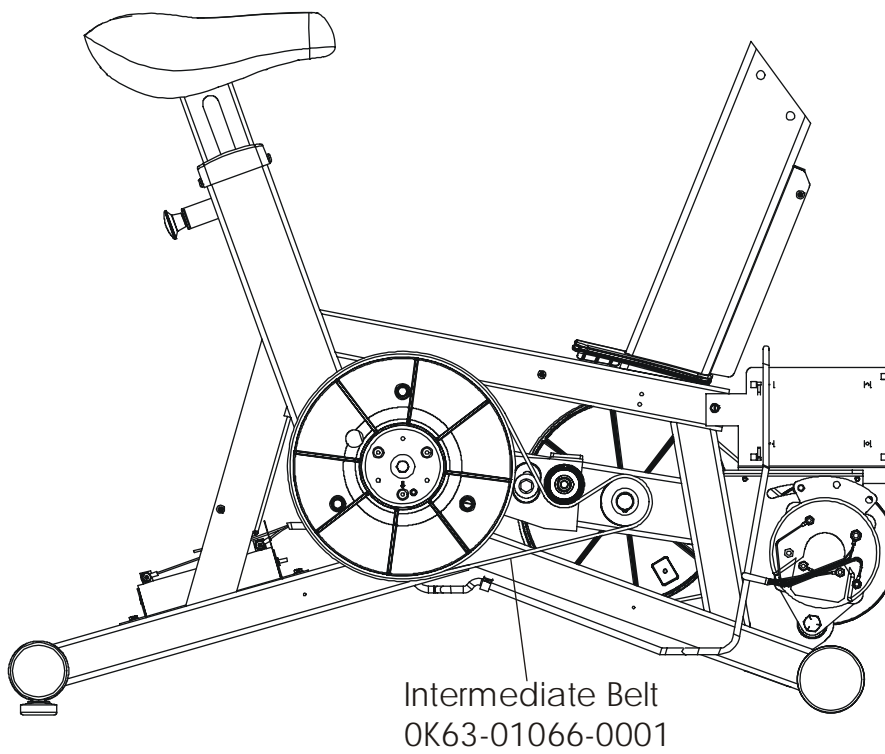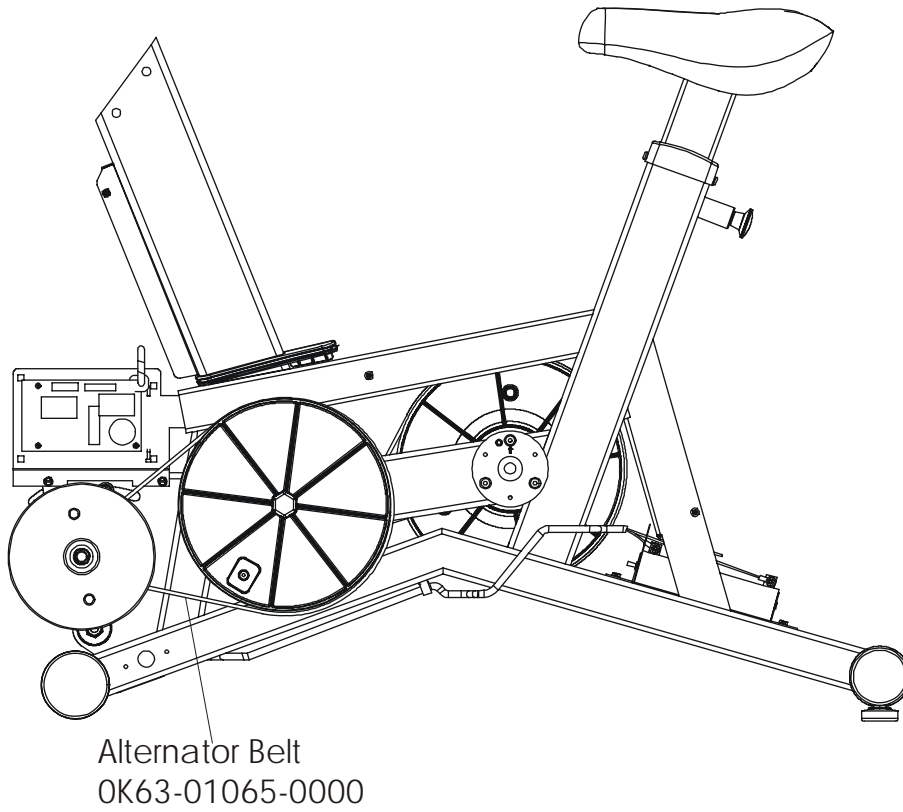

ARCTIC SILVER 93CW

Cables

93CW-0XXX-02
S/N CCM100000 and up

