



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	23196	Housing Assembly (Includes Upper housing Switch Actuator, and Housing Screws, Lower Housing, Housing Sleeve, LED lens, and Screw)	1
2	23197	Mounting Bracket Assembly (Includes Mounting Bracket, Adjuster Arm, Washer, and Screws, Tension Spring, Blade Guide)	1
3	23198	Motor Assembly (Includes Motor, Cam, and Motor Mounting Screws)	1
4	23199	Battery/Switch Assembly (Includes Battery, Foam, Switch, Power Jack, LED, and Wiring)	1
5		Adapter	
	22916	Adapter	1
	22914	Adapter	1

ITEM NO.	PART NO.	DESCRIPTION

IMPORTANT INFORMATION
 When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with A Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., St Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.

--

QTY. REQ'D

Andis
.urtevant,