


# Flymo

 Electrolux

## Multi-Trim GT 250X

**CORDLESS**  
**12V**  
**BATTERY**

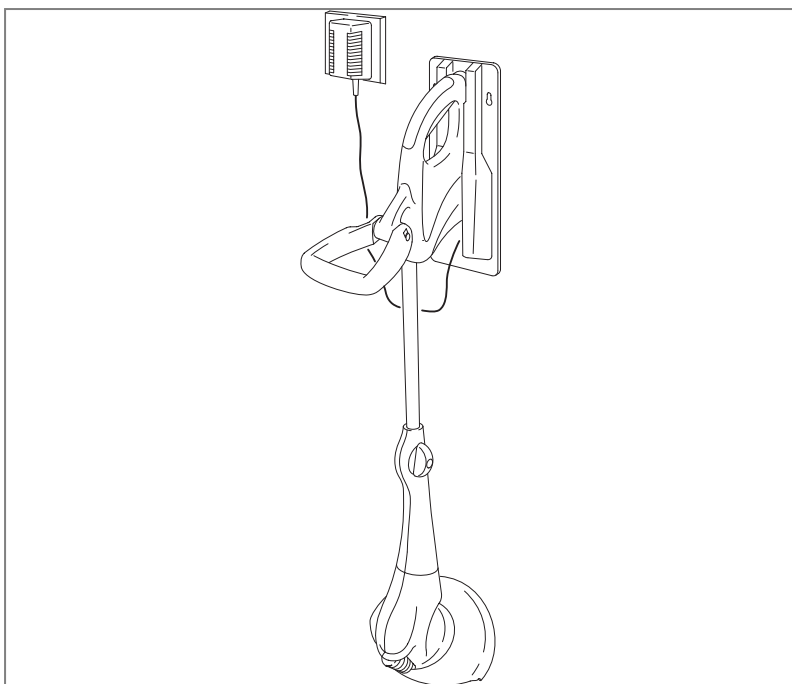


**IMPORTANT INFORMATION**

Read before use  
& retain for future reference



**WARNING**

## Carton Contents

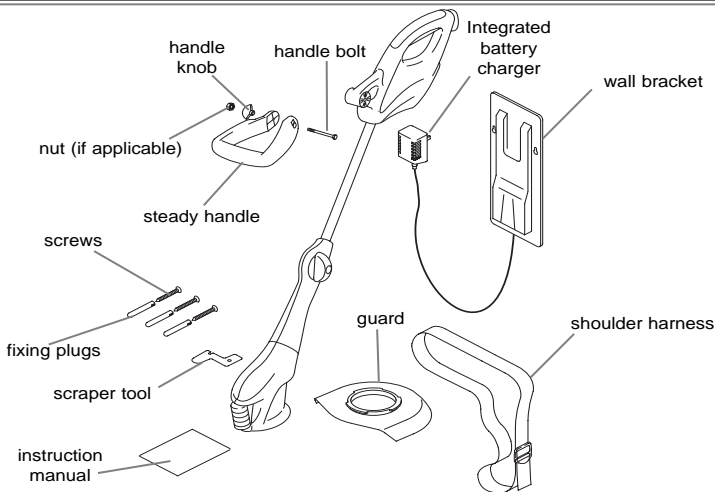

### IMPORTANT !

Please check the contents of the carton are correct **BEFORE** assembling your new Flymo product.

#### IF ANY PARTS ARE MISSING CONTACT:-

Electrolux Outdoor Products Customer Service Department direct

Telephone : 01325 300303

Fax : 01325 318193

## Safety




If not used properly this trimmer can be dangerous! This trimmer can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this trimmer. The operator is responsible for following the warning and safety instructions in this manual and on the trimmer.

### Explanation of Symbols on the Cordless Trimmer



Warning

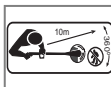

Keep others, including children, pets and bystanders outside the 10 metre hazard zone. Stop the trimmer immediately if you are approached.



Read the user instructions carefully to make sure you understand all the controls and what they do.



The use of eye protection is recommended to protect against objects thrown by the nylon line.

#### Warning

The cutting line continues to rotate after the machine has been switched off.

### General

1. Never allow children or people unfamiliar with these instructions to use the trimmer. Local regulations may restrict the age of the operator.
2. Only use the trimmer in the manner and for the functions described in these instructions.
3. Never operate the trimmer when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

### Battery

#### Cordless Battery Powered Products require special care.

1. AVOID ACCIDENTAL STARTING  
KEEP HANDS AND FINGERS AWAY FROM THE SWITCH LEVER WHILE CARRYING THE TRIMMER.
2. Always charge the product indoors and store in a cool dry place - out of the reach of children.
3. Use only the charger provided with your unit. Use of any other charger could permanently damage the battery and the trimmer.
4. Use the charger with standard domestic household electrical outlets only.
5. Do not abuse the charger or charger cord.
6. Do not use the charger if the charger or charger cord is damaged.
7. Use the charger indoors only.
8. Do not use the charger outdoors.
9. Store and charge this unit in a cool, dry well ventilated location and out of the reach of children.

10. Do not charge the battery or use the unit in an explosive or corrosive environment. Avoid areas where flammable liquids or gases are present to avoid creating a fire or explosion.
11. Do not attempt to repair the unit including the battery. Nylon line replacement and cleaning the unit are the only items suitable for user maintenance.
12. Do not insert any object into the motor area. Keep free of debris to avoid overheating.
13. Do not incinerate or mutilate the battery. Batteries contain hazardous chemicals. Dispose of properly.
6. Switch off before pushing the trimmer over surfaces other than grass.
7. Never operate the trimmer with damaged guards or without guards in place.
8. Never fit metal cutting elements.
9. Keep hands and feet away from the cutting means at all times and especially when switching on the motor.
10. Keep cutting head below waist level.
11. Do not lean over the trimmer guard whilst trimming or edging - objects may be thrown by the cutting line.
12. Beware of cut-off pieces of nylon line ejected during use.
13. If you hit an object, do not use your trimmer until you are sure that the entire trimmer is in a safe operating condition.
14. If the trimmer starts to vibrate abnormally, check immediately. Excessive vibration can cause injury.

#### Preparation

1. While using your product always wear substantial footwear and long trousers.
2. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
3. Inspect the area to be cut before each use. Remove all objects such as stones, broken glass, nails, wire, string etc, which can be thrown or become entangled in the trimmer head.
4. Check that the cutting head, spool and cap are fitted correctly.

#### Use

1. Use the trimmer only in daylight or good artificial light.
2. Avoid operating your trimmer in wet grass, where feasible.
3. Take care in wet grass, you may lose your footing.
4. On slopes, be extra careful of your footing and wear non-slip footwear.
5. Do not walk backwards when trimming, you could trip. Walk, never run.

#### Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the trimmer is in safe working condition.
2. Replace worn or damaged parts for safety.
3. Only use the replacement cutting line specified for this product.
4. Only use replacement parts and accessories recommended by Electrolux Outdoor Products.
5. To avoid the risk of injury keep fingers and hands clear of the line cutter on the leading edge of the guard.
6. Clean unit with a dry cloth. Never use metal objects to clean the unit.
7. Inspect and maintain the trimmer regularly. Any repairs must be carried out by an authorised repairer.

## Battery

#### Battery Care

1. If over a period of time the battery quickly runs down after a full 24 hour charging period, a replacement battery is needed.
2. There will be some charge present in the battery but to ensure maximum running time, recharge your trimmer for 24 hours before use.
3. Permanent connection to the charger in a well ventilated area will automatically keep your battery fully charged ready for use.
4. To prevent permanent battery damage, never store in a discharged condition.
5. Contact your local approved service centre/dealer/distributor for a replacement battery and for safe disposal of your old battery.

#### 6. Battery

12 Volt 7 Amp/Hour  
"High Power"  
Sealed for Life  
No maintenance required

#### • IMPORTANT

**DISPOSE OF YOUR OLD BATTERIES SAFELY  
DO NOT CUT OPEN, BURN OR INCINERATE.**

#### Battery Replacement

Should your battery need to be replaced contact your local approved service centre or dealer who will remove your old battery and fit a genuine Flymo replacement battery.

#### IMPORTANT

**The red lead should always be connected to the red terminal on the battery. The black lead should always be connected to the black terminal on the battery.**

#### Bench Top Re-charging

The wall bracket can also be used as a "bench top" stand for re-charging your cordless trimmer.


#### Winter Storage

1. Fully charge for 24 hours before winter storage.
2. If you are unable to leave your cordless trimmer on permanent charge, re-charge the battery every 3 to 4 months for a full 24 hour charging period to top up the battery charge during winter storage.
3. Avoid extended storage without re-charge.
4. Store in a cool dry place.

**For further information on Battery replacement contact**

**Electrolux Outdoor Products Customer Service direct-  
Telephone : 01325 300303  
Fax : 01325 318193**



## Assembly Instructions

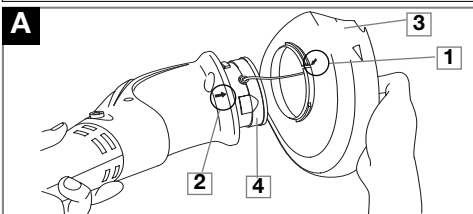

#### Safety Guard Assembly (A), (B) & (C)




1. Align the arrow on the top of the safety guard (A1) with the arrow on the side of the trimmer (A2).
  2. Locate the safety guard (A3) over the cutting head (A4). Ensure the nylon line is fed through the hole in the safety guard as illustrated in **fig A**.
  3. Push into location and turn safety guard in the direction illustrated in **Fig B**, until a click is heard and the safety guard is securely locked in position.
- **ENSURE THE SAFETY GUARD IS SECURELY IN PLACE BY ATTEMPTING TO TWIST GUARD.** See **fig C**.

## Assembly Instructions cont'

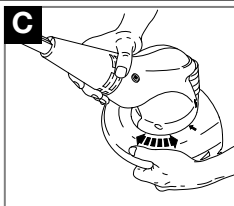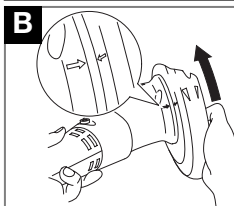

### Fitting the Handle (D & E)


1. Insert the nut into the handle knob. (if applicable)
2. Attach steady handle to product using bolt and handle knob as shown in Fig D.
3. Adjust the steady handle to a comfortable operating position, see Fig E., by unscrewing the handle knob, springing the side lugs apart, moving the handle to the required position, carefully re-engaging the teeth and then tightening the handle knob.

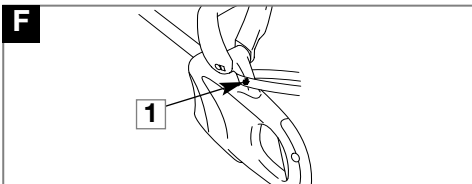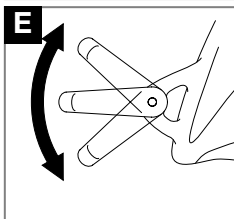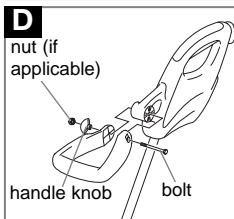

### Fitting the Shoulder Harness (F)

1. Thread the strap through the slot in the battery housing (F1).
2. Thread strap through the buckle. Adjust as required to ensure the shoulder harness is in the most comfortable position.

## Fitting the Wall Bracket and Charging the Battery

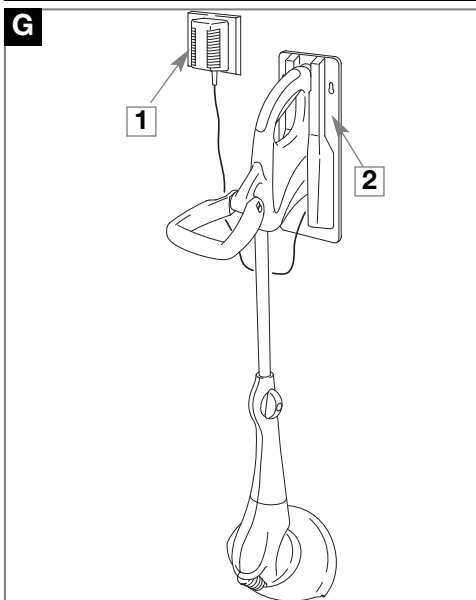

### • IMPORTANT !

**Switch charger off at the wall socket before connecting or disconnecting the trimmer to the wall bracket.**


1. It is recommended that the wall bracket (G2) should be mounted on a smooth, vertical and internal wall which is strong enough to hold the weight of the product, in a well ventilated area between 5°C and 25°C.
2. There are 3 holes on the wall bracket. Position the wall bracket with the two holes at the top. See Fig H.
3. Ensure that when the trimmer is attached the bottom of the trimmer is within 4 inches (100 mm) of the ground, this will make it easier to hang the trimmer and will also ensure that the wall bracket is within easy reach of an electric socket to allow the charger to be plugged in.
4. Fix wall bracket securely to the wall with the plugs and screws provided.
5. Your cordless trimmer can now be attached to the wall bracket for charging.

### Initial Charging Procedure

1. Use the charger indoors only.
2. Ensure the charger is not exposed to moisture. Keep the charger and the trimmer dry at all times. Keep the charger well ventilated during charging.
3. Ensure the trimmer is correctly located into the wall bracket (G2) and the charge connector (H1).
4. Plug the charger (G1) into a suitable household electrical wall socket and switch on.
5. The red indicator lamp glows continuously during charging.
6. Full charge will be achieved in 24 hours. During charging the charger becomes warm. This is normal and means the charger is operating correctly.

### Re-Charging Your Cordless Trimmer

1. Re-charge the battery as soon as the cutting power of your cordless trimmer begins to die and slow down.
2. Avoid running the cordless trimmer into "deep" discharge, i.e. avoid flattening the battery completely.
3. Follow the procedure outlined in the **Initial Charging Procedure**.
4. Charging the battery according to these instructions should ensure maximum battery life.

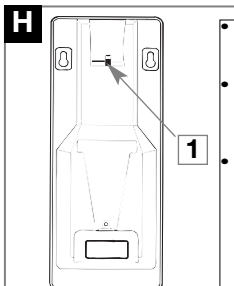


- The battery should be charged for 24 hours before use.
- Re-charge your cordless trimmer immediately after every use for the full 24 hour charging period.
- The cordless trimmer can be left connected to the charger permanently, with the charger switched on, without fear of overcharging.

- The charger will automatically keep the battery topped up with charge during storage and will ensure that the cordless trimmer is ready for use.

## Adjustment


### To adjust the handle length (J & K)

1. Loosen the height adjust knob. (fig J)
2. Adjust length of the handle to the most comfortable operating position (fig K).
3. Re-tighten the height adjust knob.

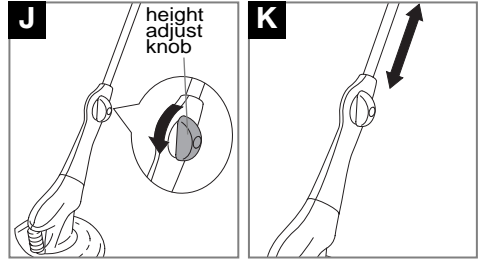

## Auto Line Feed System

1. A short length of new line is fed out every time you switch on, this is caused by the cutting head accelerating up to its full speed.
2. To feed more line, it is necessary to switch-off, allow the motor to stop and then restart. When edging do this frequently.
3. When the line feeds you will hear a change in the motor sound as well as the noise generated by the line being cut to its length.
4. If the line does not feed see **Fault Finding Chart** for further information.

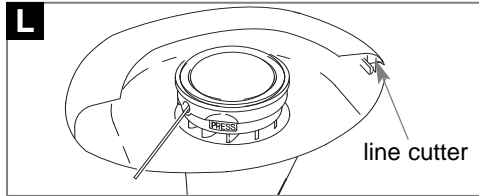

## How to trim and edge

### WARNING

The use of eye protection is recommended. Do not lean over the trimmer whilst trimming or edging, objects may be thrown by the cutting line. Do not allow cutting head to rest on the ground. Do not overload your trimmer. Overloading can be avoided by making sure the motor speed does not drop unduly. Disconnect from the mains electricity supply before attempting any maintenance or adjustment.

### BEFORE USE

- Make sure that the line is fed out.
- Make sure motor is up to full speed before trimming or edging.

### To start your trimmer





- The switchbox is provided with a lock-off button (M1) to prevent accidental starting.
1. To start, press lock-off button (M1), squeeze the switch lever (M2), release lock-off button.

### How to trim

1. Cut with nylon line at an angle using the tip. See Fig N.
2. Swing trimmer in and out of the cutting area taking small cuts (P)
3. Line is fed out automatically every time the trimmer head stops rotating and returns to operating speed.
- Extra line can be fed out manually as described on page 5.
4. To stop your trimmer release the switch lever (M2).

### How to edge

1. To convert to edging mode, depress locking button and twist head anti-clockwise until arrow lines up with "EDGE". An audible "click" will confirm that the head is locked. Ensure the button has returned to its original position. See Fig Q.
2. Rest edger on roller for extra stability and line up with edge of lawn. See Fig R. Edge in direction indicated in Fig S, so that debris is thrown away from you.
3. To return to trimming mode, depress locking button and twist head clockwise until arrow lines up with "TRIM". An audible "click" will confirm that the head is locked. Ensure the button has returned to its original position. See Fig T.

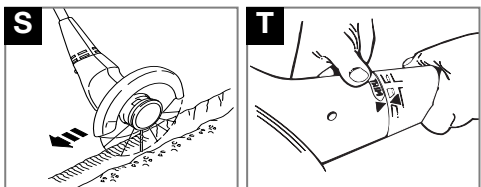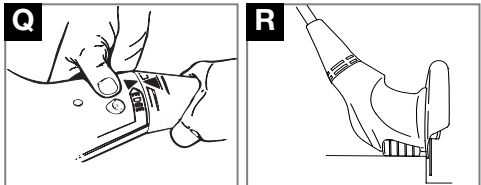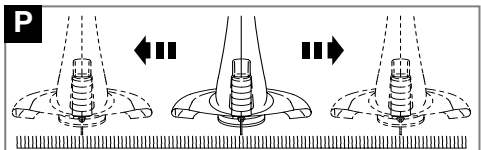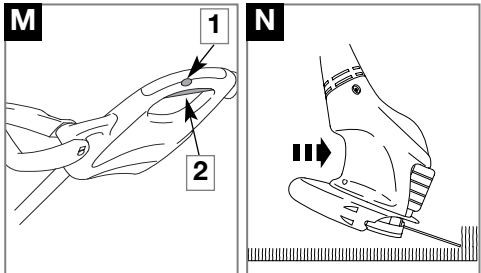


## Fault Finding Chart

**WARNING** Avoid accidental starting, keep hands and fingers away from the switch lever whilst attempting any maintenance or adjustment.

FAULT	CHECK	ACTION
<b>LINE NOT FEEDING OR LINE TOO SHORT OR TRIMMER VIBRATES</b>	Is the automatic line feed working?	<b>No</b> Manually feed out line. <b>SEE "MANUAL LINE FEED"</b>
	Is the line fed out and visible?	<b>No</b> Remove cap and spool, free line and re-fit spool and cap. <b>SEE "SPOOL CAP AND NYLON LINE"</b>
	Is the manual line feed working?	<b>No</b> The line may be jammed on the spool. Rewind line to remove crossed loops.
<b>CONTINUOUS CLATTERING NOISE</b>	Has the motor reached full speed before use?	<b>No</b> Allow the motor to reach full speed before use
	Has too much line been fed out?	<b>Yes</b> <b>SEE "MANUAL LINE FEED"</b>
	Is the line cutter missing from the safety guard?	<b>Yes</b> <b>Contact your local approved Service Centre or Electrolux Outdoor Products Customer Service.</b>
<b>LINE SNAPS CONTINUOUSLY</b>	Are you using the trimmer correctly?	<b>?</b> Only use tip of nylon line to trim. <b>SEE "How to trim and edge"</b>
	Is the line jamming on the spool?	<b>Yes</b> Rewind the line on the spool, if symptoms still persist, change spool and line.
<b>IF NONE OF THE ABOVE OR IF FAULT PERSISTS</b>	<b>Contact Electrolux Outdoor Products Customer Service Telephone : 01325 300303</b>	

## Manual line feed

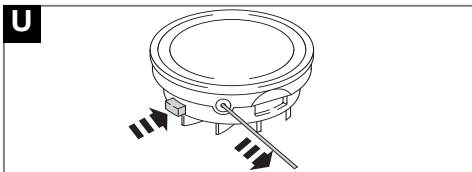


### To manually feed the nylon line

If required, line can be fed out manually. To operate, gently pull on the line whilst at the same time alternately pressing and releasing the button, on the side of the spoolholder. **See fig U.**

**Do not depress the button more than three times.**

**Excessive line will snag the line cutter and cause the trimmer to malfunction.**

## Spool cap and nylon line

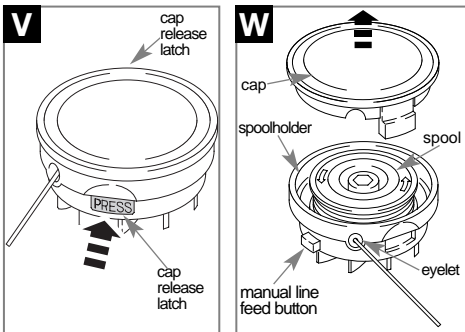

### To remove spool cap

1. Press and hold in the two cap release latches. **See Fig V.**
2. Pull cap away from the cutting head. **See Fig W.**

### When refitting the spool cap

1. Keep all areas of the cap and spoolholder clean. Failure to do so may prevent the cap being securely located in the spoolholder.
2. Align the two latches on the cap with the two windows in the spoolholder, then press down into the locked position.
3. Ensure the two cap release latches are clearly visible and are fully engaged with the windows in the spoolholder.
4. Check that the cap is correctly fitted by trying to remove it without depressing the two latches.

## Spool cap and nylon line cont'



**To replace nylon line.** Replacement nylon line is available from most Electrolux Outdoor Products stockists. You can buy it either as spool and line complete, or as nylon line only.

### To replace spool and line (complete)

1. Unwind approximately 100mm of line and feed this through eyelet, **see fig X**, then drop the spool into spoolholder **smooth side uppermost**.

### To replace nylon line on spool.


1. Take line and insert into hole in spool.
2. Turn spool clockwise to wind on required amount of line, (approx. half = 10m) and cut line to length, **see fig Y**. Care should be taken to ensure that the line is neatly coiled on the spool. Failure to do so will impair the efficiency of the automatic line feed.
3. Leave approximately 100mm of line unwound and feed this through eyelet, **see fig X**, then drop the spool into the spoolholder **smooth side uppermost**.
  - **Ensure spool is fully located by gently rotating it during fitment.**
  - **Remember! Your Flymo Cordless Trimmer is designed to use only nylon line with a maximum diameter of 1.5mm. Use only genuine Flymo nylon line.**

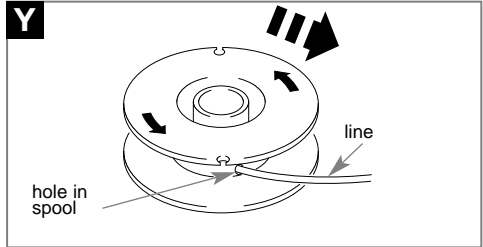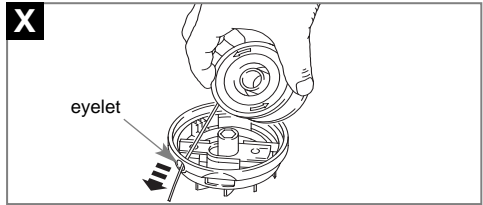

## Caring for your Cordless Trimmer

After you have finished using your Flymo trimmer follow the procedure below:

- **Avoid accidental starting. Keep your hands and fingers away from the switch lever while inspecting, cleaning or carrying out any maintenance work.**
  - **Keep fingers and hands clear of line cutter on leading edge of guard.**
1. Never clean your trimmer with water, cleaning fluids, or solvents, just remove debris with a suitable tool, a soft brush or dry cloth.
  2. Using the scraper provided, clean around the inside of the safety guard to remove any grass and debris. (Z1)
  3. Using a soft brush, clean around the inside of the safety guard (Z2), the cutting head (Z3) and the motor housing. (Z4)
  4. Inspect the trimmer carefully, especially the parts of the cutting head.
  5. If your trimmer is damaged in any way contact your local Electrolux Outdoor Products approved service centre.
- **Never use a damaged trimmer**
  - 6. Store in a cool, dry place and out of reach of children.

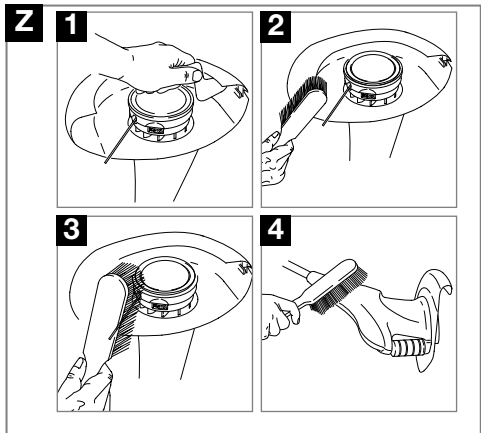

## Environmental Information

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

### BATTERY DISPOSAL

- The battery should be taken to an Approved Service Centre or your local Recycling Station.



**Do NOT dispose of used battery with household waste**



**Do NOT dispose of battery to water.**



**Lead/Acid batteries can be harmful and should be disposed of through the recognised recycling facility in accordance with European Regulation**



**Do NOT incinerate**

## Service Recommendations

1. We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.
2. Always use genuine Flymo Spare Parts.
3. Prepacked spares are available from most Electrolux Outdoor Products stockists.
4. Your product is uniquely identified by a silver and black product rating label.
5. If you have a problem with your machine contact your local Approved Service Centre ensuring you have full details of your product as described on the product rating label.
6. **Should it be necessary for work to be carried out by your**

**Service Centre, it is important to take your complete machine including cable and any extension cables used.**

A network of specialist dealers can be found in your local Yellow Pages. To obtain service on your Flymo product simply telephone or visit your local Service Centre. Should you require service under the terms of our guarantee the Service Centre will require proof of purchase.

**All of the centres listed stock genuine Flymo Spare Parts.**

**NOTE: Our Service Repairers act on their own behalf and are not empowered to commit or legally bind Electrolux Outdoor Products in any manner whatsoever.**

## Guarantee & Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) The fault is reported directly to the Authorised Repairer.
  - (b) Proof of purchase is provided.
  - (c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
  - (d) The failure has not occurred through fair wear and tear.
  - (e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
  - (f) The machine has not been used for hire.
  - (g) The machine is owned by the original purchaser.
  - (h) The machine has not been used outside of the country for which it was specified.
  - (i) The machine has not been used commercially.
- \* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

**Failures not covered by guarantee**

- \* Replacing Nylon Line.
- \* Failures as a result of not reporting an initial fault.
- \* Failures as a result of sudden impact.
- \* Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- \* Machines used for hire are not covered by this guarantee.
- \* The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Nylon Line.

**\* Caution!**

Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

## EC Declaration of Conformity

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, **NEWTON AYCLIFFE**, Co. Durham. DL5 6UP. Certify that the Product:-  
 Category..... **Battery Lawn Trimmer**  
 Make..... **Electrolux Outdoor Products**  
 Conforms to the specifications of Directive 2000/14/EEC

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, **NEWTON AYCLIFFE**, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :-

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, **NEWTON AYCLIFFE**, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-

Type of Cutting Device..... **Cutting Line**  
 Identification of Series..... **See Product Rating Label**  
 Conformity Assessment Procedure..... **ANNEX VI**  
 Notified Body..... **I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England**  
 Other Directives:-..... **EN786:1996, EN786A2:1996, EN60335-1:1994, EN60335-2-29:1996, EN55014:1993, EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995**

Type ..... **CT250X**  
 Width of Cut ..... **25 cm**  
 Speed of Rotation of Cutting Device ..... **9,700 RPM**  
 Guaranteed sound power level ..... **90 dB(A)**  
 Measured Sound Power Level ..... **86 dB(A)**  
 Level ..... **77.2 dB(A)**  
 Value ..... **1.6 m/s<sup>2</sup>**  
 Weight ..... **4.2 kg**



Newton Aycliffe, 2002  
 M. Bowden,  
 Research & Development Director

Electrolux Outdoor Products  
 Aycliffe Industrial Park  
 NEWTON AYCLIFFE  
 Co. Durham DL5 6UP  
 ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339  
 UK Customer Helpline - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ  
 Registered number 974979 England



**The Electrolux Group. The world's No.1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

5118939-02

