




Sing-Along Recorder

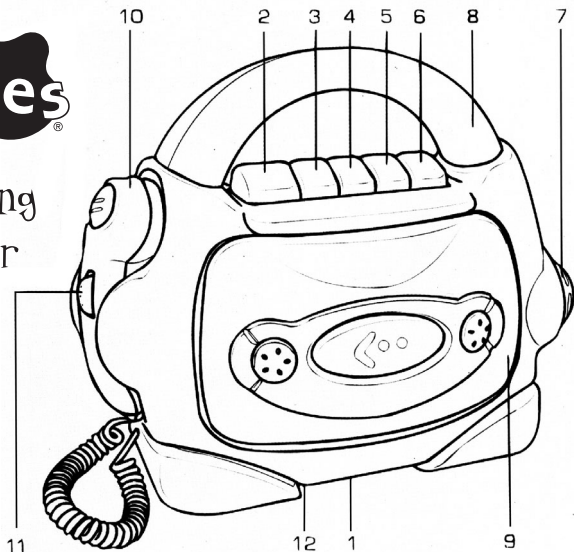

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

Please refer to diagram:

1. Speaker (rear side)
2. Stop/Eject Key
3. Rewind Key
4. Fast Forward Key
5. Play Key
6. Record Key
7. Rotary Volume Control Knob
8. Carry Handle
9. Cassette Door
10. Sing-Along Microphone
11. Microphone On/Off Switch
12. Battery Compartment (rear side)

MODEL: 09002
CASSETTE RECORDER
WITH SING-A-LONG
RATING: 6V 2W
BATTERY: 4X1.5V/UM-2/LR14
OR EQUIV.
44-2315D


© 2003 The Wiggles Touring Pty. Limited. All rights reserved. The Wiggles and The Wiggles logo are trademarks of The Wiggles Touring Pty. Limited. © 2003 Spin Master Ltd. All rights reserved. Conforms to safety standards ASTM F963-96a, EN71 regulatory requirements. Products and colors may vary. MADE IN CHINA.

www.thewiggles.com

SPIN MASTER LTD.
450 Front Street West
Toronto, ON M5V 1B6 Canada
Ph.: 1-800-622-8339
Fax: 416-364-8005
Web: www.spinmaster.com
Email: toys@spinmaster.com

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Battery should always be replaced by an adult.
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Different types of batteries, or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.
- Please retain this information for future reference.

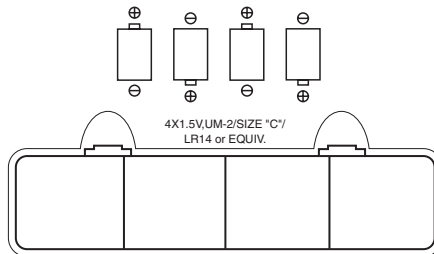

U.S. Representative