


# OWNER'S MANUAL

DIGITAL 8•BUS Version 5.1

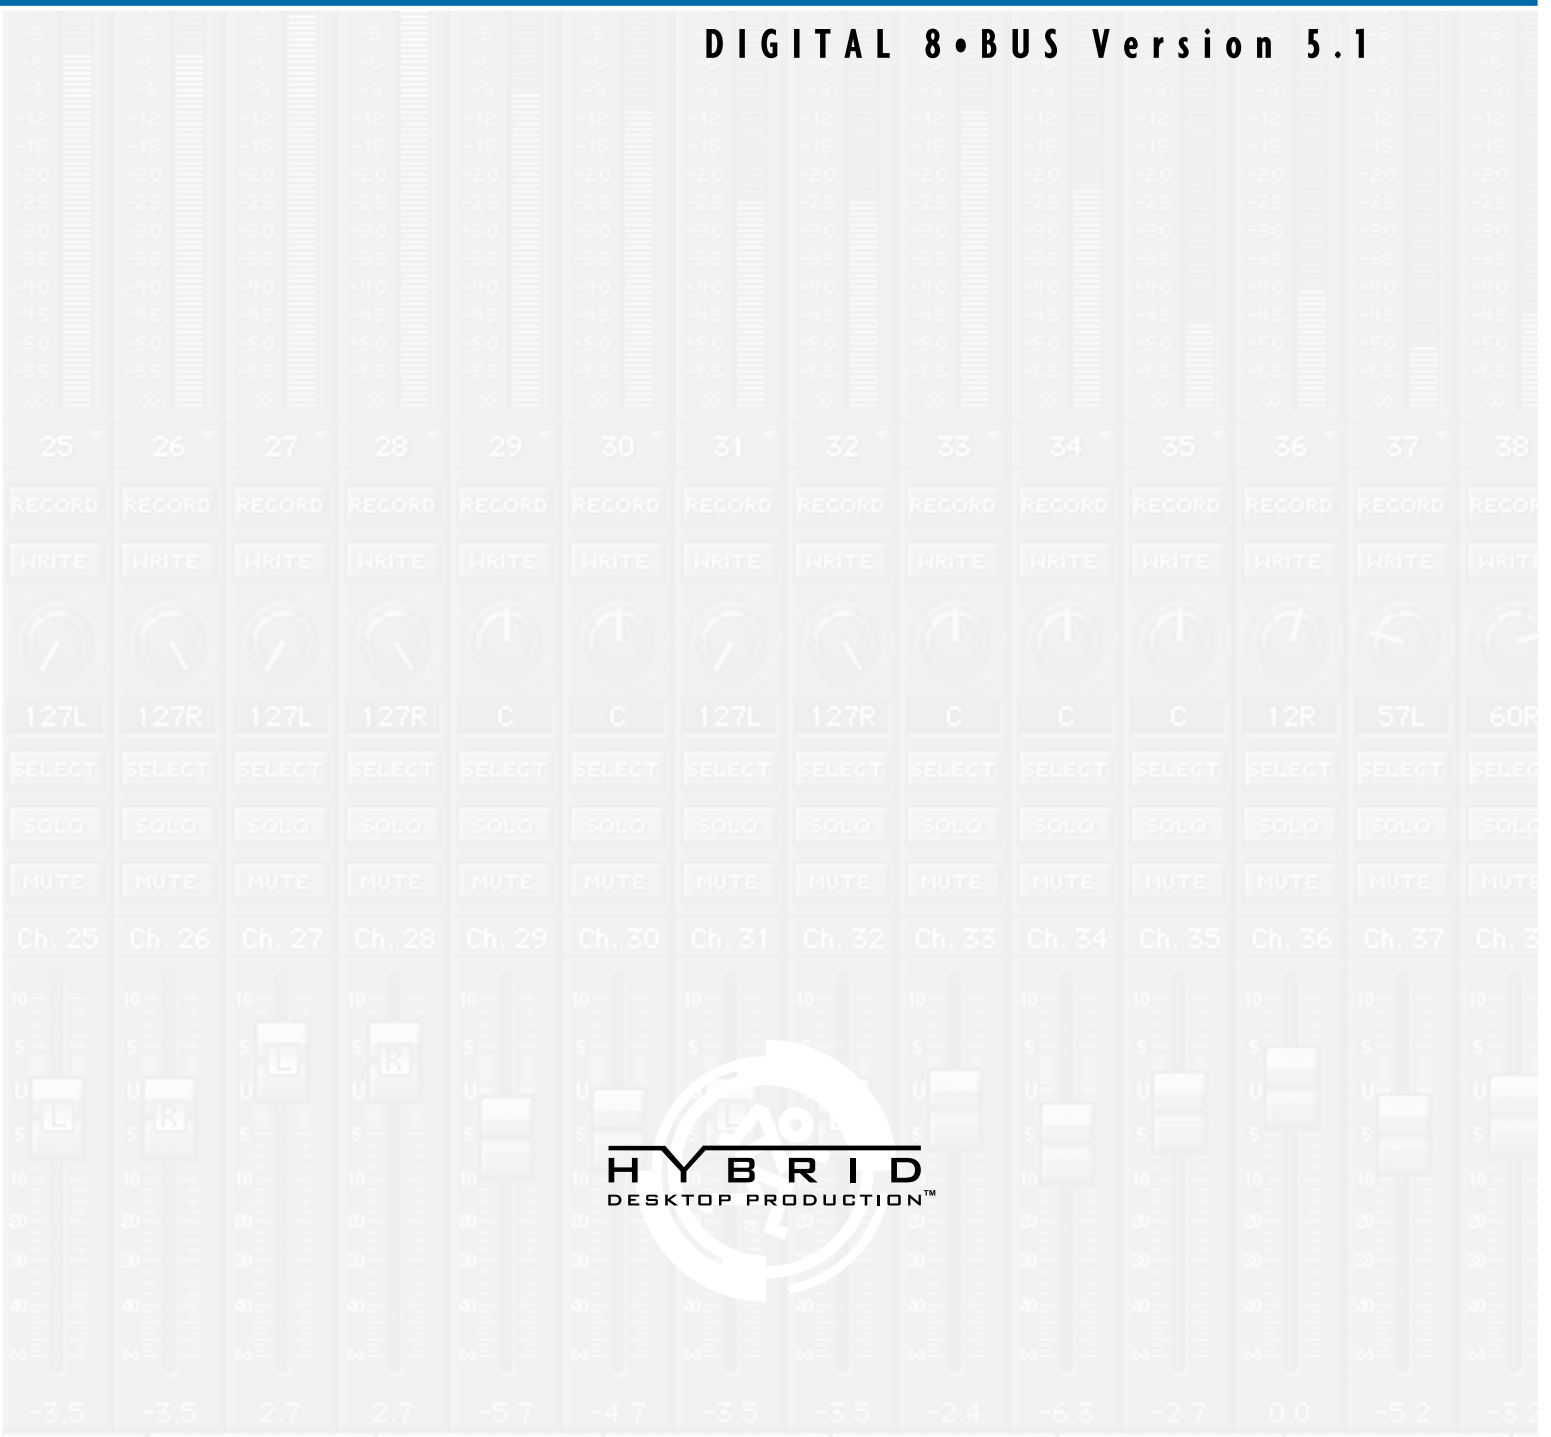

CAUTION AVIS

RISK OF ELECTRIC SHOCK  
DO NOT OPEN  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR

---

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK  
DO NOT REMOVE COVER (OR BACK)  
NO USER-SERVICEABLE PARTS INSIDE  
REFER SERVICING TO QUALIFIED PERSONNEL  
  
 ATTENTION: POUR EVITER LES RISQUES DE CHOC  
ELECTRIQUE, NE PAS ENLEVER LE COUVERCLE. AUCUN  
ENTRETIEN DE PIECES INTERIEURES PAR L'USAGER. CONFIER  
L'ENTRETIEN AU PERSONNEL QUALIFIE.  
  
 AVIS: POUR EVITER LES RISQUES D'INCENDIE OU  
D'ELECTROCUTION, N'EXPOSEZ PAS CET ARTICLE  
A LA PLUIE OU A L'HUMIDITE



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

*Le symbole éclair avec pointe de flèche à l'intérieur d'un triangle équilatéral est utilisé pour alerter l'utilisateur de la présence à l'intérieur du coffret de "voltage dangereux" non isolé d'ampleur suffisante pour constituer un risque d'électrocution.*



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

*Le point d'exclamation à l'intérieur d'un triangle équilatéral est employé pour alerter les utilisateurs de la présence d'instructions importantes pour le fonctionnement et l'entretien (service) dans le livret d'instruction accompagnant l'appareil.*

## SAFETY INSTRUCTIONS

1. Read Instructions — All the safety and operation instructions should be read before this Mackie product is operated.
2. Retain Instructions — The safety and operating instructions should be kept for future reference.
3. Heed Warnings — All warnings on this Mackie product and in these operating instructions should be followed.
4. Follow Instructions — All operating and other instructions should be followed.
5. Water and Moisture — This Mackie product should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, swamp, or salivating St. Bernard dog, etc.
6. Ventilation — This Mackie product should be situated so that its location or position does not interfere with its proper ventilation. For example, the Component should not be situated on a bed, sofa, rug, or similar surface that may block any ventilation openings, or placed in a built-in installation such as a bookcase or cabinet that may impede the flow of air through ventilation openings.
7. Heat — This Mackie product should be situated away from heat sources such as radiators or other devices which produce heat.

PORTABLE CART WARNING

Carts and stands - The Component should be used only with a cart or stand that is recommended by the manufacturer. A Component and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the Component and cart combination to overturn.

8. Power Sources — This Mackie product should be connected to a power supply only of the type described in these operating instructions or as marked on this Mackie product.

9. Power Cord Protection — Power supply cords should be routed so that they are not likely to be walked upon or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit this Mackie product.

10. Object and Liquid Entry — Care should be taken so that objects do not fall into and liquids are not spilled into this Mackie product.

11. Damage Requiring Service — This Mackie product should be serviced only by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged; or
- B. Objects have fallen, or liquid has spilled into this Mackie product; or
- C. This Mackie product has been exposed to rain; or
- D. This Mackie product does not appear to operate normally or exhibits a marked change in performance; or
- E. This Mackie product has been dropped, or its chassis damaged.

12. Servicing — The user should not attempt to service this Mackie product beyond those means described in this operating manual. All other servicing should be referred to the Mackie Service Department.

13. Do not remove the cover on the console. It is permissible to remove the outer cover on the Remote CPU to install accessory cards. Do not remove the inner power supply cover.

14. To prevent electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

*Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, un prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans laisser aucune partie à découvert.*

15. Grounding or Polarization — Precautions should be taken so that the grounding or polarization means of this Mackie product is not defeated.

16. This apparatus does not exceed the Class A/Class B (whichever is applicable) limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

*ATTENTION — Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de class A/de class B (selon le cas) prescrites dans le règlement sur le brouillage radioélectrique édicté par les ministere des communications du Canada.*

### FCC Information

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**WARNING** — To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**Note:** The following notice concerns the lithium battery located on the motherboard inside the Remote CPU.

**CAUTION:** DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

**ATTENTION:** IL Y A DANGER D'EXPLOSION S'IL Y A REMPLACEMENT INCORRECT DE LA BATTERIE, REMPLACER UNIQUEMENT AVEC UNE BATTERIE DU MEME TYPE OU D'UN TYPE ÉQUIVALENT RECOMMANDÉ PAR LE CONSTRUCTEUR. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS DU FABRICANT.

## Statement of Conformity

Mackie Designs' Digital 8•Bus has been tested and conforms to the following standards and directives of the European Council:

73/23/EEC	Low Voltage Directive with amendments 91/263/EEC, 89/392/EEC, and 89/336/EEC
89/336/EEC	EMC Directive
IEC 950(1991)/EN60950:1992	Electrical Safety Requirements
EN55103-1 and EN55103-2	Residential (E1) and Commercial (E2) Environments



# Table of Contents

<b>Preface</b> .....	<b>1</b>
<b>Chapter 1: Getting Ready</b> .....	<b>3</b>
Introduction .....	4
About This Manual .....	4
Let's Get It Working .....	4
Hooking Stuff Up .....	4
A New Way of Thinking: Four Consoles in One! .....	7
Fader Bank Selection .....	8
Let's Get Some Sound Happening .....	8
Figure 1-1 Completing the Microphone Signal Path .....	9
Signal Routing Concept .....	10
Figure 1-2 Simple Microphone Connection/Basic Live Setup .....	11
Figure 1-3 Setting Up to Track .....	11
Figure 1-4 Basic Mixdown Setup .....	12
Keep Close Track of These Concepts .....	12
Figure 1-5 Signal-Flow Diagram .....	13
Figure 1-6 D8B Block Diagram .....	14
Figure 1-7 D8B Gain Structure Diagram .....	16
Specifications .....	17
Physical Dimensions .....	18
Updating Software .....	19
Windows-based Computers .....	19
Macintosh Computers .....	19
Summary .....	20
<b>Chapter 2: Where Is it?</b> .....	<b>21</b>
It's Time to Locate Everything... ..	22
Rear Panel Description .....	22
Channels 1–12 Inputs .....	22
Channels 13–24 Inputs .....	22
Card Cage Section .....	22
Master Input/Output Section .....	23
AUX OUT Section .....	24
Remote CPU Description .....	25
Data and Synchronization I/O .....	25
Connecting a Mouse, Keyboard and SVGA Monitor .....	25
Other Connections .....	25
Control Surface Functions .....	26
Channel Strip Section .....	26
Master Section Description .....	28
Master Fader/Bank Select Section .....	28
Master V-Pot Section .....	29
V-Pot Assign Section .....	30
Figure 2-1 Aux Sends 1-8 (Default – Mackie Stereo Effects [4 MFX Cards]) .....	31
Fat Channel Section .....	32
Studio/Solo Section .....	33
Phones/Cue Mix Section .....	34

Control Room Section .....	34
Clipboard Section .....	35
Master L–R/Shortcuts Section .....	36
Bus Assignment Section.....	36
Automation Section .....	36
Session Setup Section .....	38
Transport Section .....	39
<b>Chapter 3: What’s On TV? .....</b>	<b>41</b>
Using the Graphic User Interface (GUI) .....	42
The Beauty of It... .....	42
The Master Strip .....	47
Signal Path Flexibility .....	49
May I See A Menu Please .....	51
The File Menu .....	51
The Edit Menu.....	53
The Channel Menu .....	56
The Options Menu .....	60
Automation Sub-menu .....	61
Transport Sub-menu .....	61
Meters Sub-menu .....	62
The Plugins Menu .....	63
The Windows Menu.....	65
The Desktop Window (Ctrl+D) .....	66
The Setup Window (Ctrl+1) .....	66
General .....	66
Network.....	66
Digital I/O .....	67
Licensing.....	68
Mix Options .....	69
Surround .....	70
MIDI .....	71
FTP Server .....	71
The Snapshot Window (Ctrl+2).....	71
The Surround Window (Ctrl+3) .....	73
The Locator Window (Ctrl+4).....	77
The Mix Editor Window (Ctrl+5) .....	79
The Fat Channel Window (Ctrl+6) .....	84
The Panning Window (Ctrl+7) .....	89
The Faders Window (Ctrl+8) .....	90
Event Automation Track (Ctrl+9) .....	90
Track Sheet (Ctrl+T) .....	92
The History List Window (Ctrl+H).....	92
The MIDI Map Window (Ctrl + -) .....	93
Erase UFX Memory.....	94
Upgrade UFX Cards.....	94

<b>Chapter 4: Applications</b>	<b>95</b>
Setting Up for a Session	96
Listening Environment	96
Channel Configuration/Planning	96
Power-up Procedure	96
Figure 4-1 Power-up Procedure	96
Figure 4-2 Basic Connection for Multitrack Recording	97
Setup Window	97
Installation and Connection of Optional I/O and Effects Cards	99
Installation of FX Cards	100
Installation of I/O Cards	101
Checklist for Basic Operational Functionality	102
Connecting Analog Multitrack(s)	102
Connecting ADAT (Lightpipe) Multitrack(s)	102
Connecting TASCAM (TDIF) Multitrack(s)	103
Multitrack Recording	104
Multitrack Tracking Checklist	105
Sample Tracking Setup	108
Mixdown Setup	110
Effects/Plug-ins	112
Dynamics and EQ Applications	114
MIDI and the D8B	115
Word Clock and the D8B – The Kitchen Sync	116
Dither - To UV22 or Not to UV22: That Is the Question	119
D8B–HDR24/96 Setup	120
Using the Digital 8•Bus with ADATs	125
Connecting the Digital 8•Bus to a BRC and ADATs	126
Connecting the Digital 8•Bus to ADATs Using an External Sync Box	128
Connecting the D8B to TASCAM MDMs	130
Digital Audio Workstation Setup	132
Live Sound/Live Recording Setup	134
Post-Production Setup	136
Bouncing/Summing Using Bus Outs	136
Using Basic Automation	137
Automation Procedural Checklists	140
<b>Appendices</b>	<b>141</b>
Appendix A: Service	142
Appendix B: IVL Vocal Studio	144
About the IVL Vocal Studio	144
The Interface	144
Operation–Harmony	146
Operation–Pitch Correction Mode	150
Appendix C: Plug-in Configuration and Routing	152
Appendix D: Shortcuts	160
Appendix E: MIDI Implementation Guide	163
Appendix F: HUI Mode	164
Appendix G: Compatible Cables	180
Colophon	191
<b>Index</b>	<b>182</b>

## Preface

The Mackie Digital 8•Bus is an amazing digital audio tool. Its flexibility, depth, and power provide the engineer/artist with nearly limitless creative freedom to produce top quality work.

The D8B v5.1 upgrade offers a host of new features that can make your mixes sound better and speed your workflow. Here's a list of the newest features of the Mackie OS v5.1.



### WHAT'S NEW WITH v5.1

- Great new overview screen graphics improve viewing and productivity
- HTML on-screen Help to quickly answer questions about D8B features and functions
- HUI Mode allows the D8B to operate as a HUI control surface with DAW software applications that support the Mackie HUI (i.e., Pro Tools, DP3, Nuendo, Cubase SX, Soundscape, Logic 6)
- New metering options offer more flexibility:
  - On-screen level meters with choice of bottom view, top view, or off
  - On-screen level Meter Type options include Pre Fader, Post Fader, and Post Mute/Fader
  - On-screen level Meter Reference Point can be assigned to  $-10$  dB,  $-15$  dB, or  $-20$  dB to accommodate different program sources
  - Show Meters In Trim Mode displays the actual signal level in the on-screen meters when in Trim Levels Automation mode
  - Show Peak Holds causes the Overload indicators in the Top meters view to remain lit when triggered by a transient peak
- Numeric Fader Reference—the fader's current level in dB appears just below the fader
- Modify Fader Levels calibrated in dB
- Vertical channel linking
- Individual Aux Send mutes on each channel
- Stereo Aux Send Pan sliders
- Channel EQ window dims when the EQ is disabled instead of flat-lining
- Double-click the channel EQ window to open the Fat Channel for detailed editing
- Improved Fat Channel:
  - Improved EQ algorithms
  - Larger Channel EQ and Dynamics EQ views by double-clicking in either graphic window
  - Expanded Dynamics View opens graphic views of the Compressor and Gate parameters
  - Alternate view of the Compressor and Gate meters
  - Compressor meter switches between Output Level or Compressor Gain Reduction
  - Gate meter switches between Input Level and Gate Gain Reduction
  - Gate Expansion mode allows reduction of the signal level below the designated threshold by a variable ratio
  - Adjustable Dynamics Key Types provides a selection of four EQ types that can be applied to the Key Input (BAND 4 EQ TO DYN)
  - External MIDI Trigger for the Gate
  - Channel polarity can be flipped from the console VFD
- Advanced Mix Editor features including:
  - Insert Event by placing Event markers in the Mix Editor window time bar
  - Event markers can be moved, edited, and locked
  - Events can be committed to Dynamic Automation for further editing
- Independent control of Plug-in Source and Destination
- Plug-in Chaining
- Plug-ins can now be used on Bus Inserts

- Enhanced Surround Sound features:
  - Surround Sound Setup window
  - Surround Sound Monitor Level control in the Surround window
  - Mute option for surround monitoring when in Stereo surround mode
  - Surround mode now selectable from the Surround window
  - Surround panning appears in Fat Channel
- Adjustable attenuation for the Control Room DIM switch includes -20 dB, -30 dB, -40 dB, and off
- Track Sheet stores all pertinent session information with the session itself
- Track Sheet can be exported as an HTML file or text file
- Channel Notes window for keeping additional notes about each channel
- Serial•9 support provides Sony 9-Pin communication with external devices
- Copy Mix to Bus copies the current L/R mix to any consecutive odd/even pair of buses (Bus 1-8)
- Copy Mix to Cues button now provides the option of copying the current L/R mix to any consecutive odd/even pair of aux sends, including the cue mixes (Aux 9/10 and 11/12)
- Global Aux Pre/Post Assign in the Mix Options Setup window now includes Aux 9/10 and 11/12
- Reset Selected Channel provides an easy way to reset all the parameters on the selected channel to their default values
- Screen Saver option can be set to activate after 1 minute, and after up to 1 hour of inactivity
- Extended Memory Usage now supports up to 250 MB of RAM

---

**Note:** If you are updating from version 3.0 to the v5.1 OS, when you open a session that was created in version 3.0, you may experience anomalies in some of the EQ settings due to the new EQ algorithms in v5.1. You may want to finish any sessions you've already started in version 3.0 before updating to v5.1. If you do update midway through a session, be sure to double-check your EQ settings and make sure they are set correctly.

Alternately, there is an option to select version 3.0 EQ settings under Mix Options in the Setup window. This instructs the DSP to use the version 3.0 algorithms for the EQ, rather than the new and improved algorithms for v5.1.

---

---

**Another Note:** You're probably wondering what happened to version 4. Version 5 has so many new features and enhanced graphics that we thought it was appropriate to skip version 4 altogether and jump up to version 5!

---



# Getting Ready

## Chapter 1

## Introduction

This Guide reflects the newest and most progressive features and options available on the Mackie Digital 8•Bus. The D8B is designed to grow with the audio industry. Each software revision provides new features and capabilities, updating your console and ensuring that your investment remains current for many years to come.

An increasing number of other manufacturers have jumped on the D8B band wagon. Through affiliations with companies like Acuma Labs, Apogee, TC Electronics, Massenburg, dbx, and Antares, Mackie Designs has provided an environment where third-party plug-ins let you design the perfect system for your needs—all within the Digital 8•Bus architecture!

## About This Manual

This manual is the “let’s just do it” guide. Each chapter covers an important consideration:

- Chapter 1 describes basic setup procedures with an emphasis on achieving successful routing of an audio source to your monitors.
- Chapter 2 briefly describes all surface controls.
- Chapter 3 describes the on-screen interface.
- Chapter 4 highlights some typical applications.

If you’d like to move ahead at light-speed, try jumping directly to Chapter 4, using Chapters 2 and 3 as a reference. If you crave details, or if you’re new to recording—especially digital recording—don’t forget to check out our website for more info at [www.mackie.com](http://www.mackie.com).

## Let’s Get It Working

This is a step-by-step guide to get the Digital 8•Bus working. We assume you’ve pulled everything out of the box and are ready to start working.

First, you’ll need:


- 1 Stereo Power Amplifier
- 1 pair of Monitor Speakers (you can substitute a pair of powered monitors for the power amplifier/monitor speaker combo, or some stereo headphones)
- Miscellaneous cables
- 1 cup of coffee (we think any native Seattle-based beverage heightens the Mackie experience)


## Hooking Stuff Up

**First, connect the Remote CPU to the console.**

1. Connect the DC power cable between the Remote CPU and the console. Rotate the outer sleeve of the connector clockwise until the sleeve is snug and finger-tight.

**Caution: The Remote CPU weighs 42 pounds, so we recommend that if you mount it in a rack, you place it at the bottom of the rack and provide additional support at the rear of the unit.**

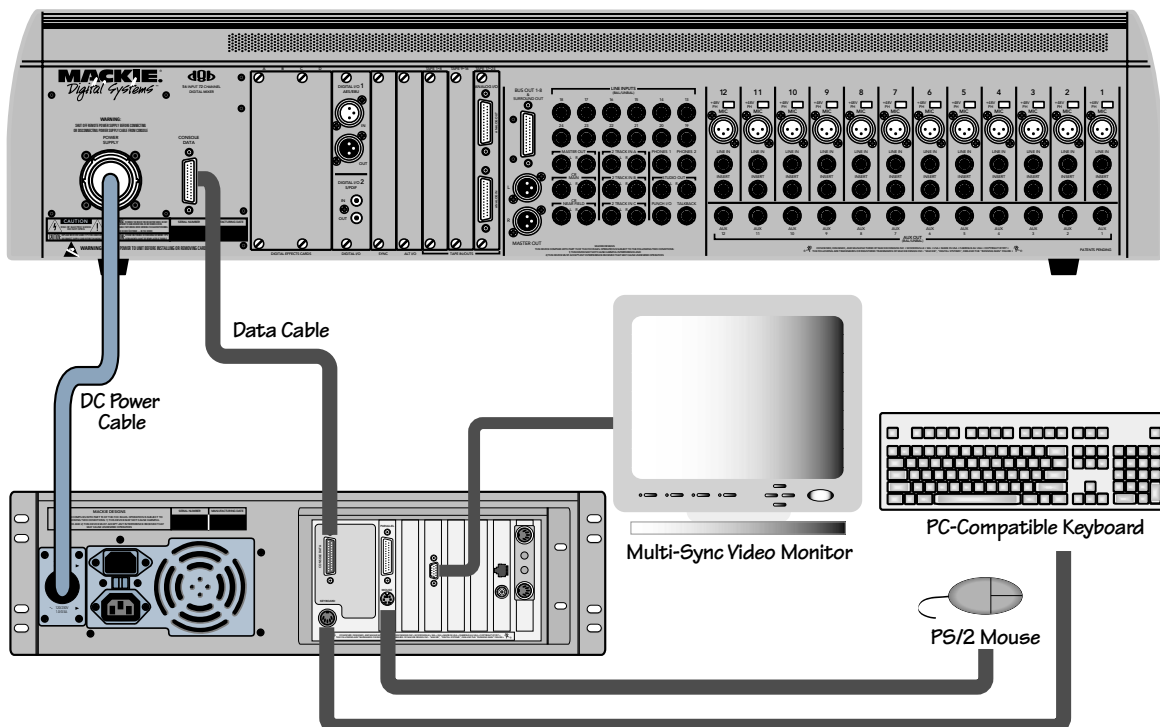


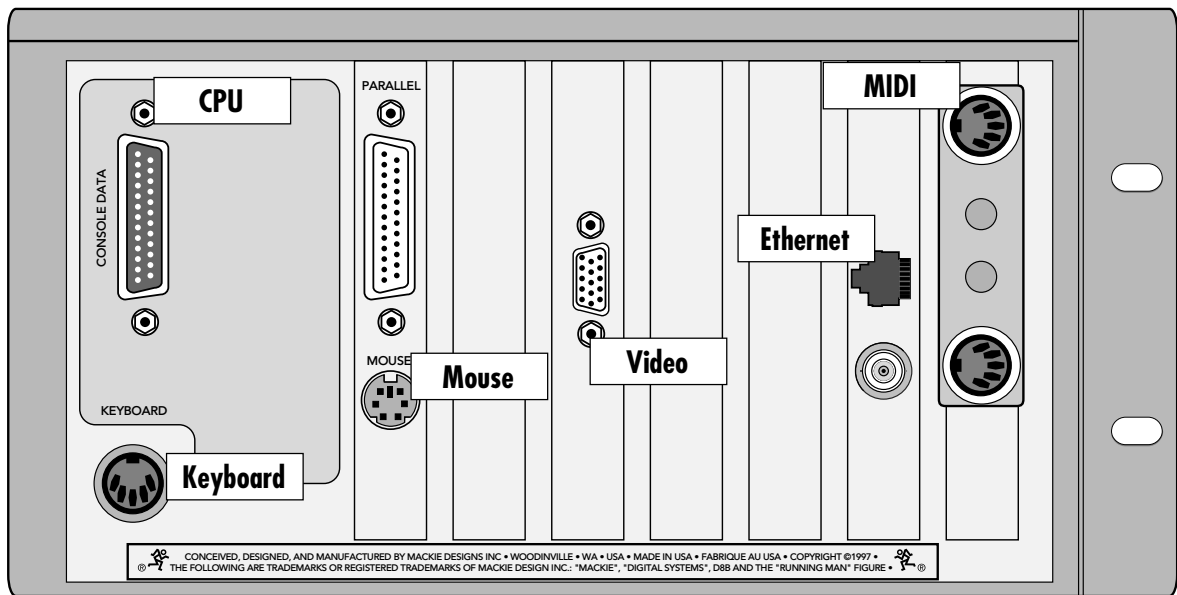

2. Connect the data cable between the Remote CPU and the console. Rotate the thumbscrews on each connector clockwise until they are finger tight.
3. Make sure the POWER switch on the Remote CPU is off.
4. Connect the detachable linecord to the Remote CPU. Shortly, we'll connect to AC power.

**Next, connect the keyboard, mouse, and video monitor.**

These connections are optional, but we strongly recommend using them to get the most from your new Digital 8•Bus console.

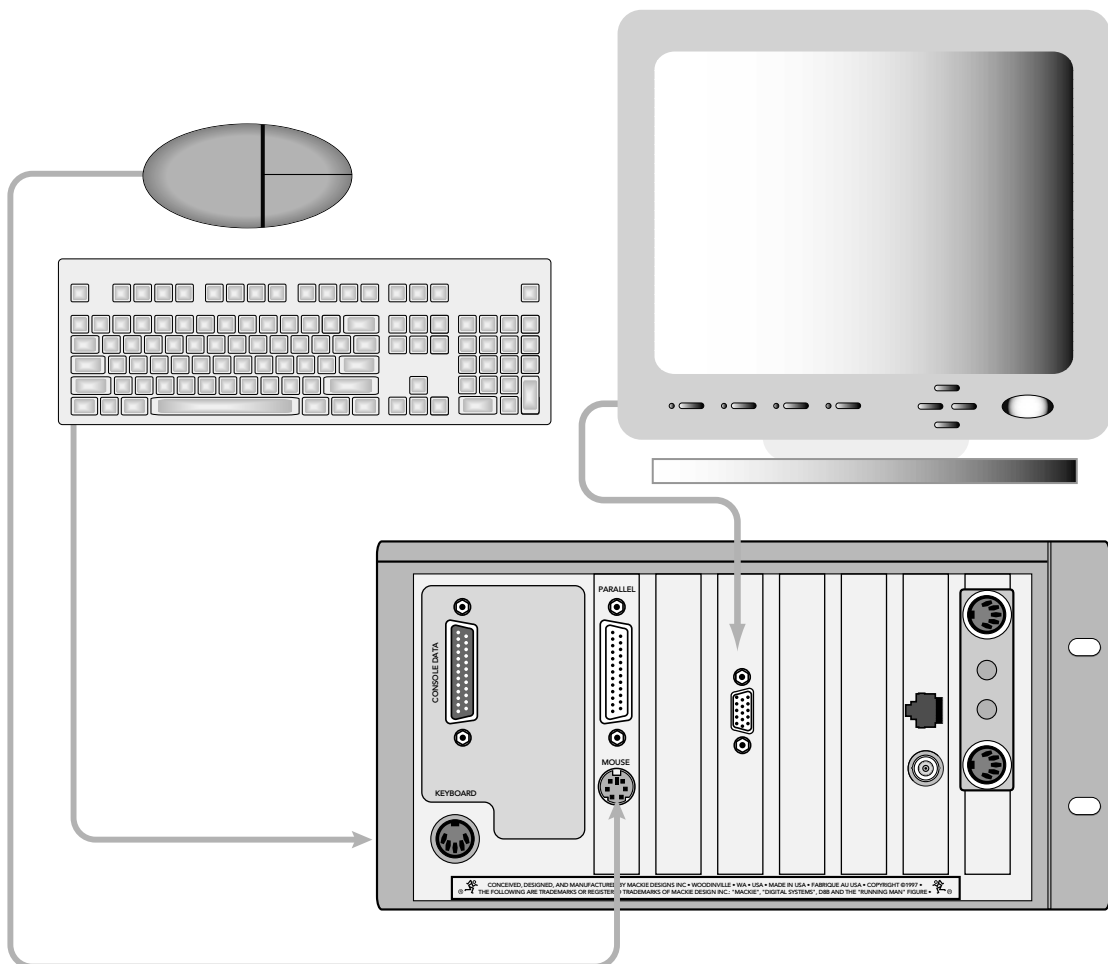

1. Plug a PC-compatible keyboard into the KEYBOARD port on the back of the Remote CPU.
2. Plug a PS/2 compatible mouse into the MOUSE port on the back of the Remote CPU.
3. Plug an SVGA video monitor into the VIDEO port on the back of the Remote CPU.

**Note:** We highly recommend the use of a multisync monitor; however, if one is unavailable you must use a monitor capable of at least a 72Hz scan rate. We recommend using a 17-inch or larger monitor for best results.

### Now connect the audio inputs and outputs to the console.

1. Connect the CR NEAR FIELD or CR MAIN outputs on the back of the Digital 8•Bus to the line inputs of the power amplifier. These outputs are wired balanced when using a tip-ring-sleeve connector or unbalanced when using a tip-sleeve connector. Use instrument/line-level cable for this connection.
2. Connect monitor speakers to the output of the power amplifier using speaker cable. Always use high quality wire. The sound you hear will be more reliable and accurate.

**Note:** If you're using powered monitors, connect the Left and Right CR NEAR FIELD outputs directly to the line inputs on the powered monitors.

#### Optional Refreshments


Have a sip of java and a biscotti.

### Details


Make sure the POWER switch on the Remote CPU is off. Now plug the linecord into an AC outlet properly configured for your model. Leave the POWER switch off while connecting the peripheral equipment to the console.

**Note:** The Remote CPU should be treated as you would any computer. We recommend that you use a UPS (Uninterruptible Power Supply) and a surge protector on the AC line.

**Caution:** Never connect or disconnect anything except microphone or line-level inputs while the console is powered up.

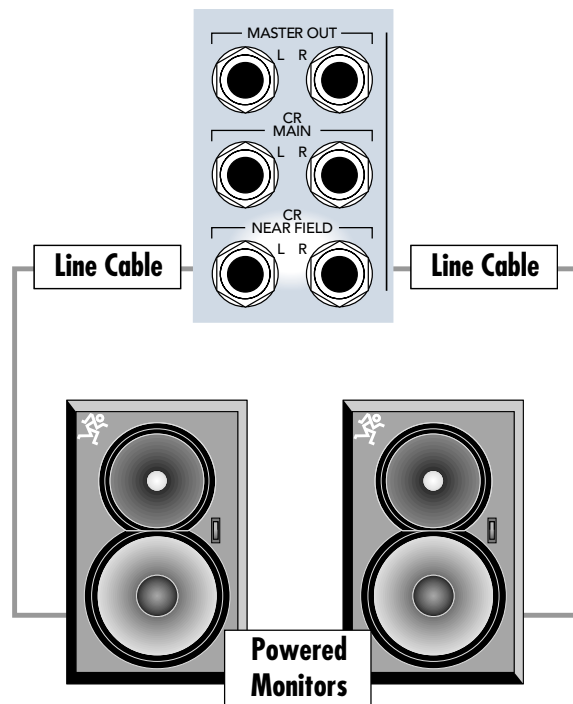

*Connect directly from CR NEARFIELD or CR MAIN to powered reference monitors using line-level cable.*

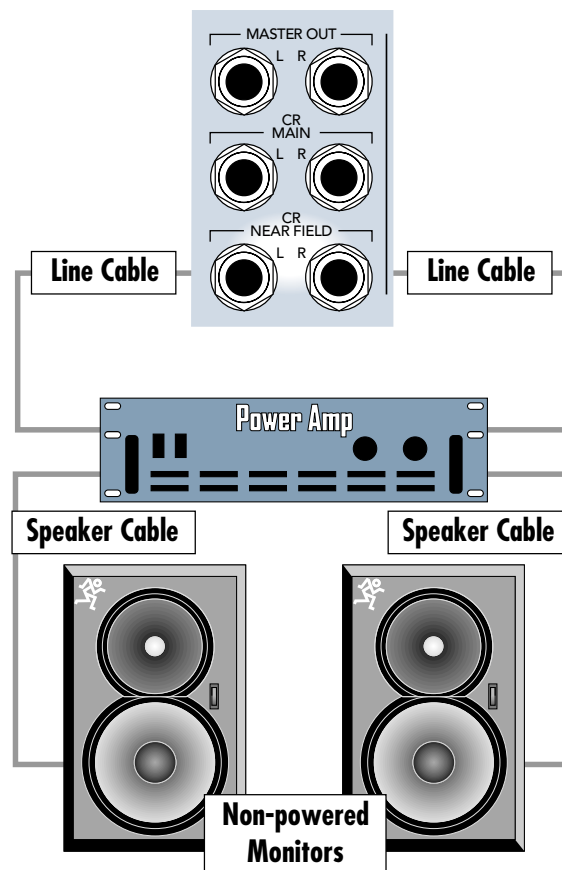

*Connect from D8B outputs to power amp using line cable, then from amp to non-powered speakers using speaker cable.*


Turn on the power switch on the front panel of the Remote CPU, then turn on the power to all your peripheral equipment. The Digital 8•Bus takes a few moments to load the Mackie Real Time OS (Operating System) and initialize the DSPs. When the Vacuum Fluorescent Display (VFD) in the onboard Fat Channel Section indicates EQ settings for channel 1, the console is ready to use.

### Fast Track Power-Up

1. Switch D8B power on.
2. Verify that SPEAKER LEVEL V-Pot is turned all the way down.
3. Switch on all peripherals (processors, recorders, interfaces, etc.).
4. Switch on monitor amplifier or powered monitors.



These buttons let you access four completely different sets of controls, referred to as *Fader Banks*. A fifth fader bank, HUI mode, is available by pressing SHIFT+MASTERS. Even though only one Fader Bank is accessible at a time, all are fully functional at all times. Use of a computer monitor provides on-screen control of two fader banks at a time.

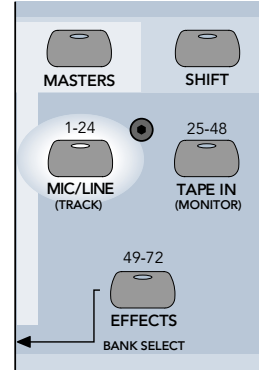


### A New Way of Thinking: Four Consoles in One!

With the Digital 8•Bus, what you get is way more than what you see at first glance. Directly above the Master L/R fader, locate four buttons labeled MIC/LINE, TAPE IN, EFFECTS, and MASTERS.

Now that you've got the Digital 8•Bus powered up, try the different fader banks.

- Press the MIC/LINE button and set up a random set of fader levels.
- Press the TAPE IN button and set up a completely different set of fader levels.
- Do the same for EFFECTS and MASTER.

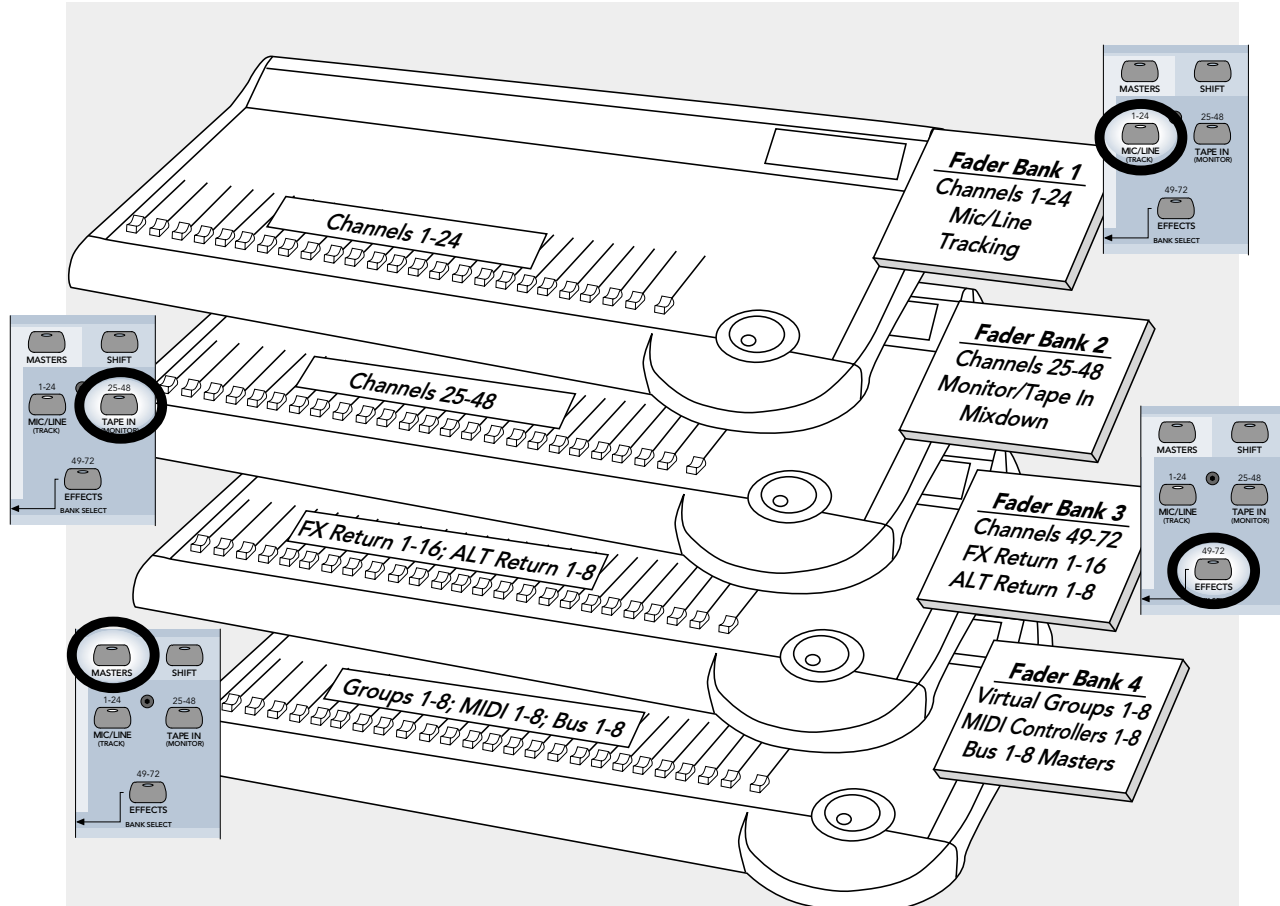

As you switch back and forth between all four fader banks, the faders will move to their respective settings for each bank. You'll find that this becomes your most popular demonstration. Your friends will love it; your spouse will love it; your pet will be mildly amused.

This exercise demonstrates a process that will become second nature as you increase your skills on the Digital 8•Bus. The layered approach to digital mixing is actually very convenient, while at the same time providing tons of features in a compact package. This mixer contains more flexibility and features than most consoles taking up 12 or more feet of desk space and costing up to 50 times more!

## Fader Bank Selection

- MIC/LINE button = Fader Bank 1 (Channels 1–24)
- TAPE IN button = Fader Bank 2 (Channels 25–48)
- EFFECTS button = Fader Bank 3 (Channels 49–72: Internal Effects Returns, FX 1–16, and ALT RETURNS 1–8)
- MASTERS button = Fader Bank 4 (Virtual Groups 1–8, MIDI Controllers 1–8, Bus Masters 1–8)
- SHIFT+MASTERS button = Fader Bank 5 (with HUI Mode active)

This architecture provides a total of 56 inputs, with Fader Banks 1 and 2 providing 48 inputs, and the 8 ALT Returns in Fader Bank 3 providing another 8 inputs.

One of the primary applications the Digital 8•Bus was designed for is multitrack recording (generally up to 24 tracks). This involves tracking and monitoring, bouncing, overdubbing, and mixdown. You can think of Fader Bank 1 and Fader Bank 2 as two separate mixing consoles, where Fader Bank 1 is used for tracking and Fader Bank 2 is used for monitoring and mixdown.

Two 24-track machines can easily be connected to the D8B for mixdown: one into the Fader Bank 1 line inputs, and the other into the Fader Bank 2 (Tape) I/O cards. This setup provides an amazing amount of control through automation, routing, and DSP!

---

**Note:** Although the D8B is perfectly set up for 24-track recording, it's possible to route channels to 46 outputs, all at the same time: 24 direct outputs (3 cards), 8 buses (Alt I/O), 2 main stereo outputs, and 12 auxes.

---

## Let's Get Some Sound Happening

- Mixer Power On.
- Monitors connected and on.
- Microphone or Instrument plugged into Channel One.
- Phantom Power button pushed in if required.
- Fader Bank 1 (MIC/LINE selected).
- Press the MIC button down when using a microphone; leave it up for an instrument.
- While sound source is active, adjust TRIM for a reading around –15 on the channel 1 meter.
- Select L–R in the ASSIGNMENT section, then verify that the ASSIGN button on Channel One lights up green.
- In the CONTROL ROOM section, select MASTER L–R.
- Select the desired SPEAKERS in the CONTROL ROOM section.
- Set the SPEAKER LEVEL V-pot to about 11:00.
- Turn the MASTER L/R fader up to unity.
- Slowly raise the level of the Channel One fader until you hear sound.
- The Master L/R meters should display levels.
- Rejoice in the sense of accomplishment while listening to crystal-clear audio.




Refer to Figure 1-1 for the Fast Track Graphic description of this procedure.

### Details


1. Especially for digital connections, it's important that the Digital 8•Bus is powered up first. This procedure helps establish the mixer as a primary source in the digital sync scheme.
2. Be sure you've noted which output is connected to the monitor system(s) and be sure they're powered up.
3. Be sure the microphone or instrument is plugged into Channel 1 and that Fader Bank 1 (MIC/LINE) is selected. It doesn't take long to get used to selecting the fader bank you really need to access; however, at first make a conscious effort to include this step in your routine.
4. Be sure the button below the gain trim labeled MIC is pressed down for a microphone or is in the up position for an instrument. When working fast this button is sometimes overlooked. If it's in the wrong position there won't be any signal to play with. That's bad. Get in the habit of following the signal from the source to the destination—step by step. If you don't leave any steps out you'll be successful every time.

## Figure 1-1 Completing the Microphone Signal Path


Follow this graphic map to quickly complete a signal path using a microphone to capture the sound source..

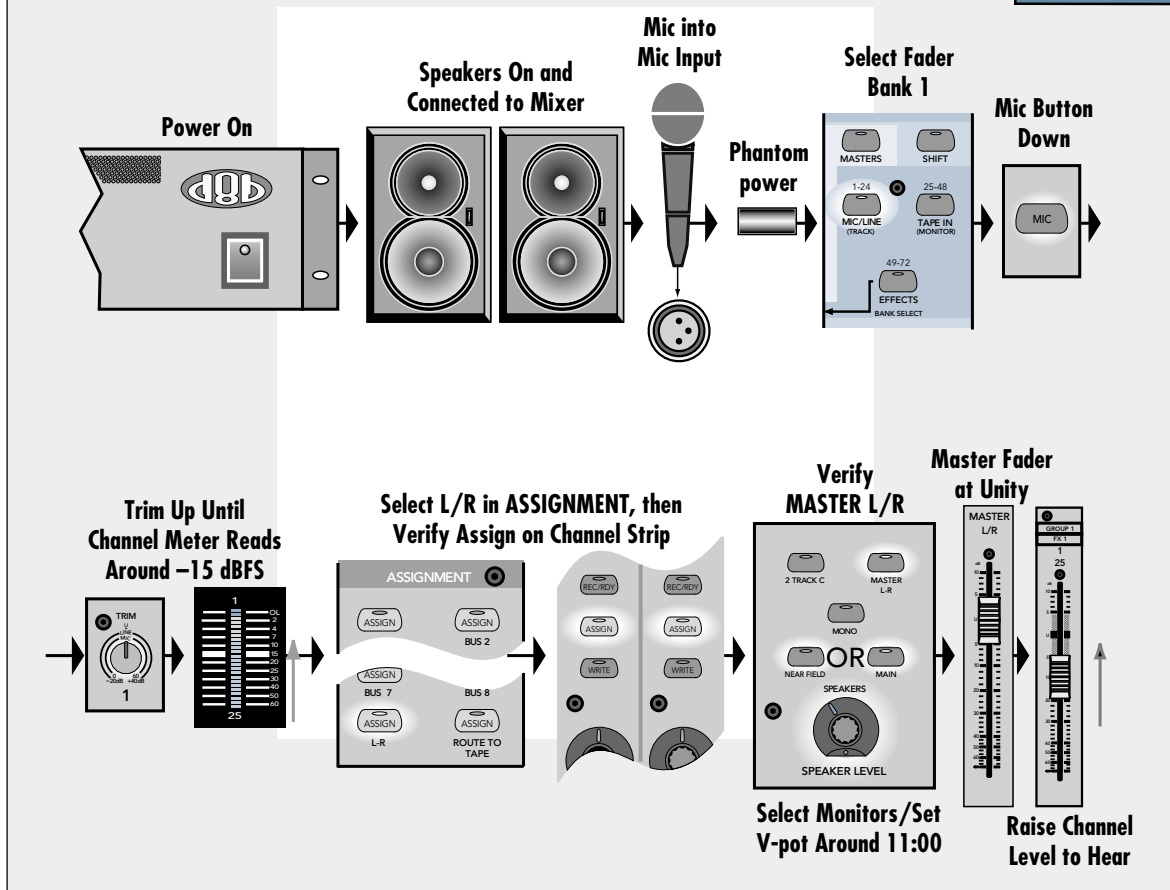

 5. Start with gain TRIM down. While talking into the mic or playing the instrument, turn it up until the level stays around  $-15$  to  $-10$  on the channel one meter.




6. In the CONTROL ROOM section, press the MASTER L-R button so the yellow light comes on. Assigning this button sends whatever is coming from the MASTER L/R fader to the selected speakers.

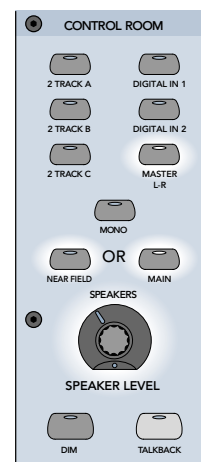


**Note:** The TRIM and MIC button status are two of the only controls that are not written into automation or snapshot data. That's a disadvantage of analog circuitry, but these controls are necessary. Running a strip of white safe-release tape across the top label strip allows for careful recording of each channel's TRIM level and MIC button status. This kind of tape can be removed and folded for storage with session documentation, guaranteeing accurate settings whenever you need to restore the mix.

- In the ASSIGNMENT section, verify that when L-R is selected (green light on) the ASSIGN button in Channel One lights up green. This is basic bus assignment procedure. Anything you want to come out the MASTER L-R bus must light up on the assign button of each desired channel. In similar fashion, any channel that needs to be assigned to Bus 1 must have the channel assign button lit when Bus 1 is selected in the ASSIGNMENT section.

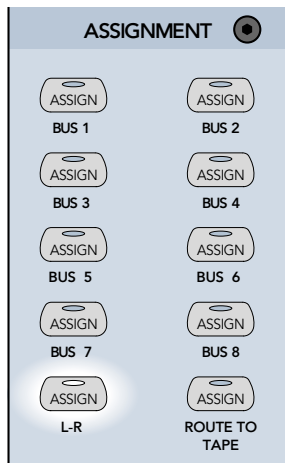

- Be sure the SPEAKER button is lit that corresponds to your monitor system connection—that the yellow light shows on NEAR FIELD or MAIN.
- Turn the SPEAKER LEVEL V-pot up to about 11:00.
- Turn the MASTER L/R fader up to unity.
- Slowly raise the level of the Channel One fader until you hear sound.

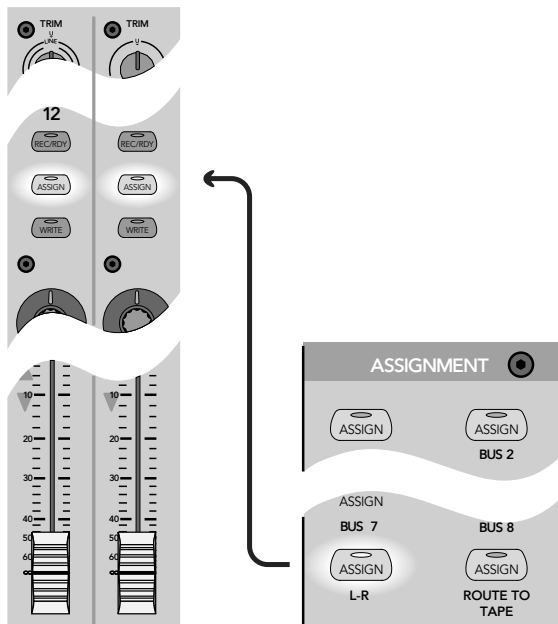

## Signal Routing Concept

The Digital 8•Bus, with its multilayer technology, literally performs the work of at least four consoles. To help organize the various connections, visualize each bank as a new console. The “V” or “Multi-V” diagrams that follow provide a simple and accurate mental image of the signal flow and/or processing while you put the Digital 8•Bus through its paces.

Figure 1-2 demonstrates a simple connection scheme utilizing a microphone that’s routed though the D8B to the monitor system.


Figure 1-3 demonstrates a tracking setup. Notice how the graphic representation of two separate fader banks supports the mental image of the D8B concept: sound source into the MIC/LINE bank, then routed to the multitrack, then back into the TAPE IN bank.

Figure 1-4 adds a mixdown recorder. The beauty of this concept lies in its flexibility. Start at the beginning, middle, or end of the signal path—it doesn’t matter. When the routing concept is understood, the process is simple.




## Figure 1-2 Simple Microphone Connection/Basic Live Setup

This setup illustrates the most fundamental use of the D8B. A very basic live setting might require only this limited level of complexity.

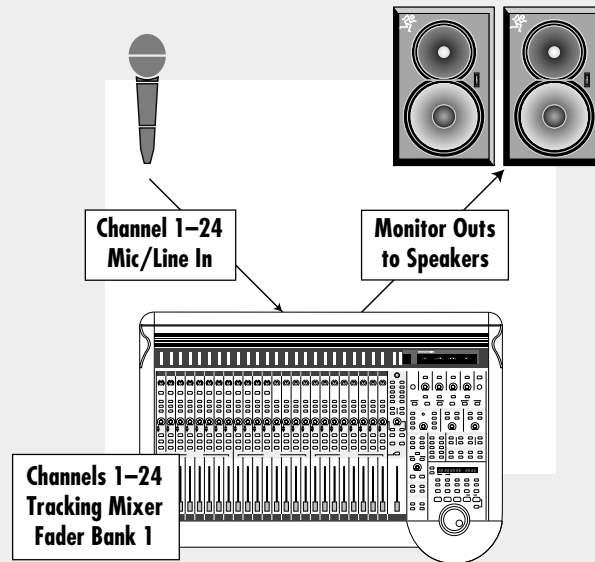


## Figure 1-3 Setting Up to Track

The graphic below highlights the simplicity of the D8B tracking procedure. Once levels to tape are set, using the Channel Trim controls, it's typically best to monitor the mix from the TAPE IN Fader Bank throughout tracking.

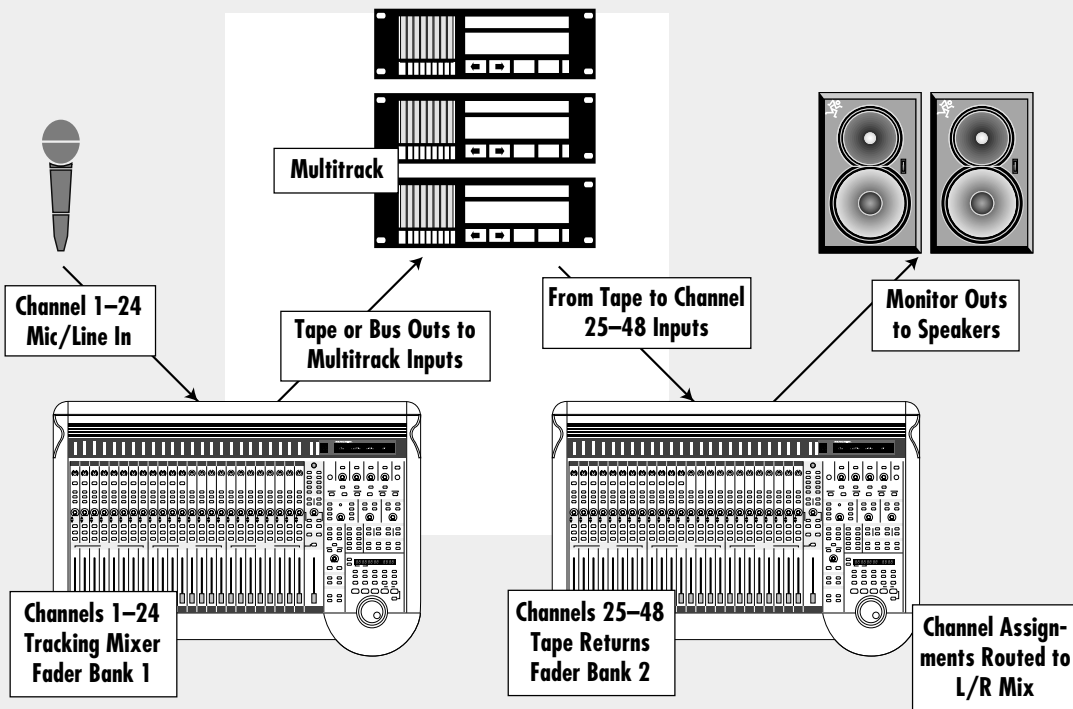

## Figure 1-4 Basic Mixdown Setup


This is a basic mixdown setup. Live Mic/Line input source might be used for any audio source: live vocals, instruments, or effects returns.

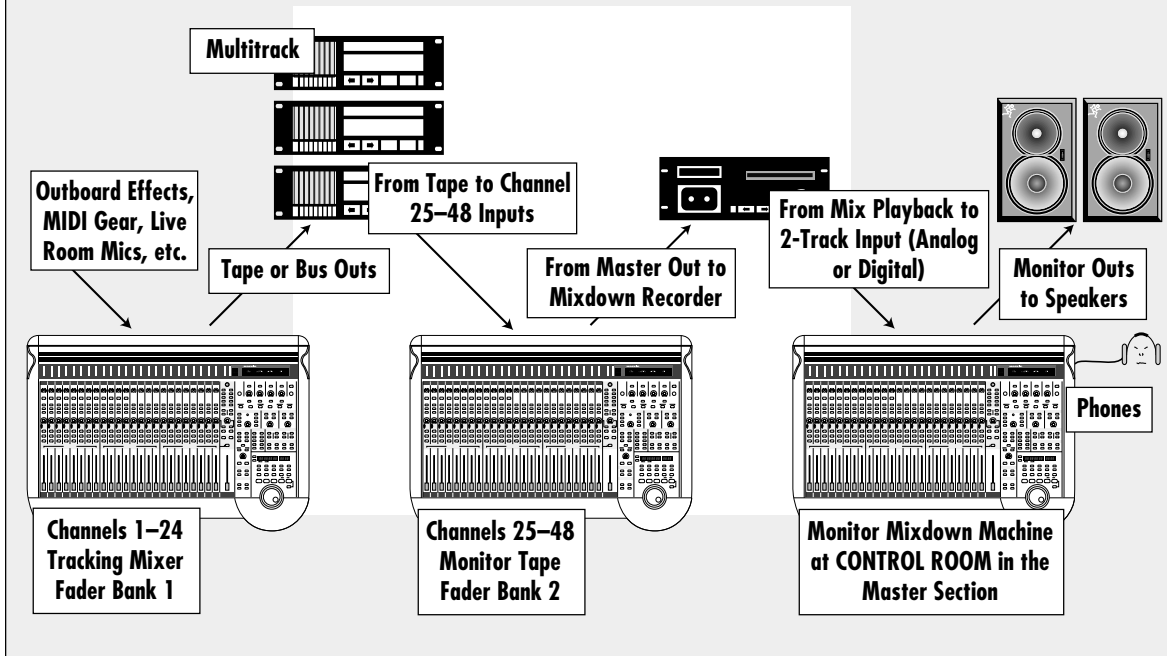

Use this diagram for troubleshooting!

## Signal Flow


The previous diagrams help create an accurate mental image of how the D8B functions. The signal flow diagram in Figure 1-5 (on the next page) looks more closely at the actual path the signal takes from a point of origin to a chosen destination. This is a simplified flow-diagram designed to provide a “bird’s-eye” view. Follow the signal from left to right. Notice the first thing the signal encounters, after the analog inputs (including the analog trim), is the analog-to-digital converter. The audio remains in the digital domain from that point until it finally converts back to analog at the main outputs, bus outputs, and external aux sends. Simply follow the arrows to discover the path—you never know where you might end up. For a more detailed block diagram of the D8B signal path refer to Figure 1-6.

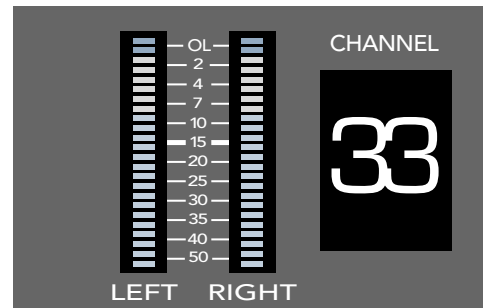

2. Be sure you verify the **Bank Selection** whenever you need to make a change. At first it’s easy to forget to check the Fader Bank status. However, once you’ve adjusted to the layered consoles, maneuvering throughout the entire console will become second nature.


## Keep Close Track of These Concepts

1. **The Channel Select Display**, next to the Master L/R meters, always displays the currently selected channel number no matter which Fader Bank is selected. If an adjustment is required in the Fat Channel, verify that the channel you intend to adjust is displayed here.

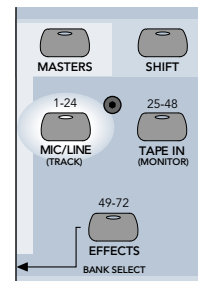



## Figure 1-5 Signal-Flow Diagram

Simply begin at the far left star and follow the route the signal must take to reach the master output. DSP includes all dynamics, equalization, and phase controls.

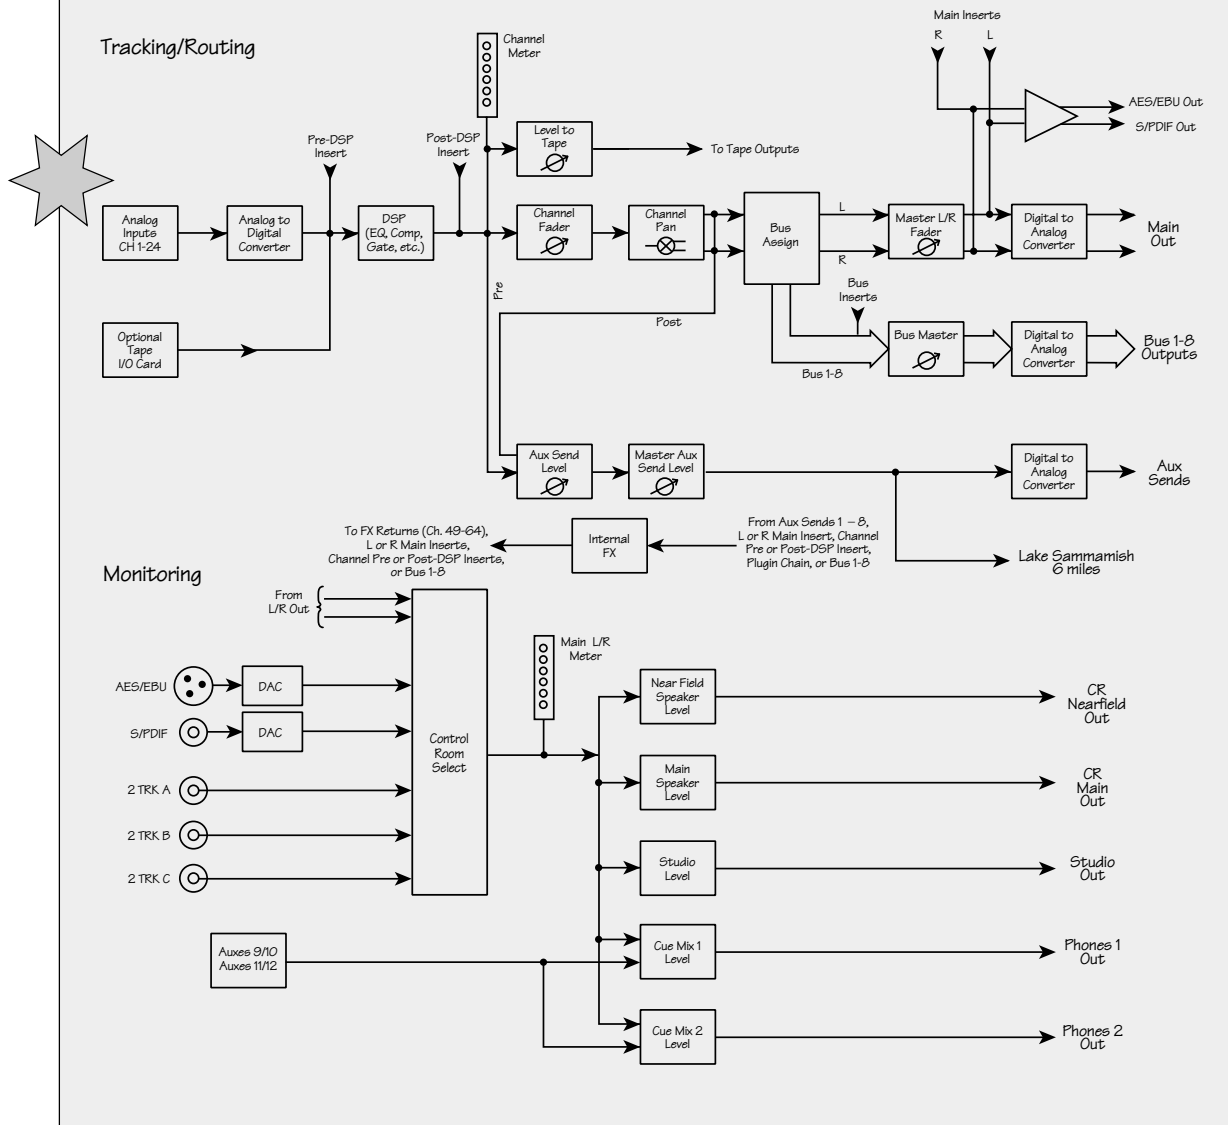


- When using the V-Pot to adjust a parameter, make sure it's assigned to make the change you need. Since the **V-Pot is a multifunction control**, it's easy to assume it's doing the job you want when it might be changing a completely different setting. Intentionally check the status of the V-Pot before making a change.

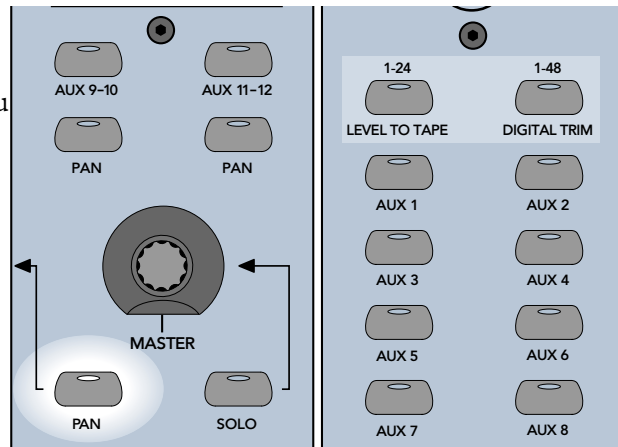

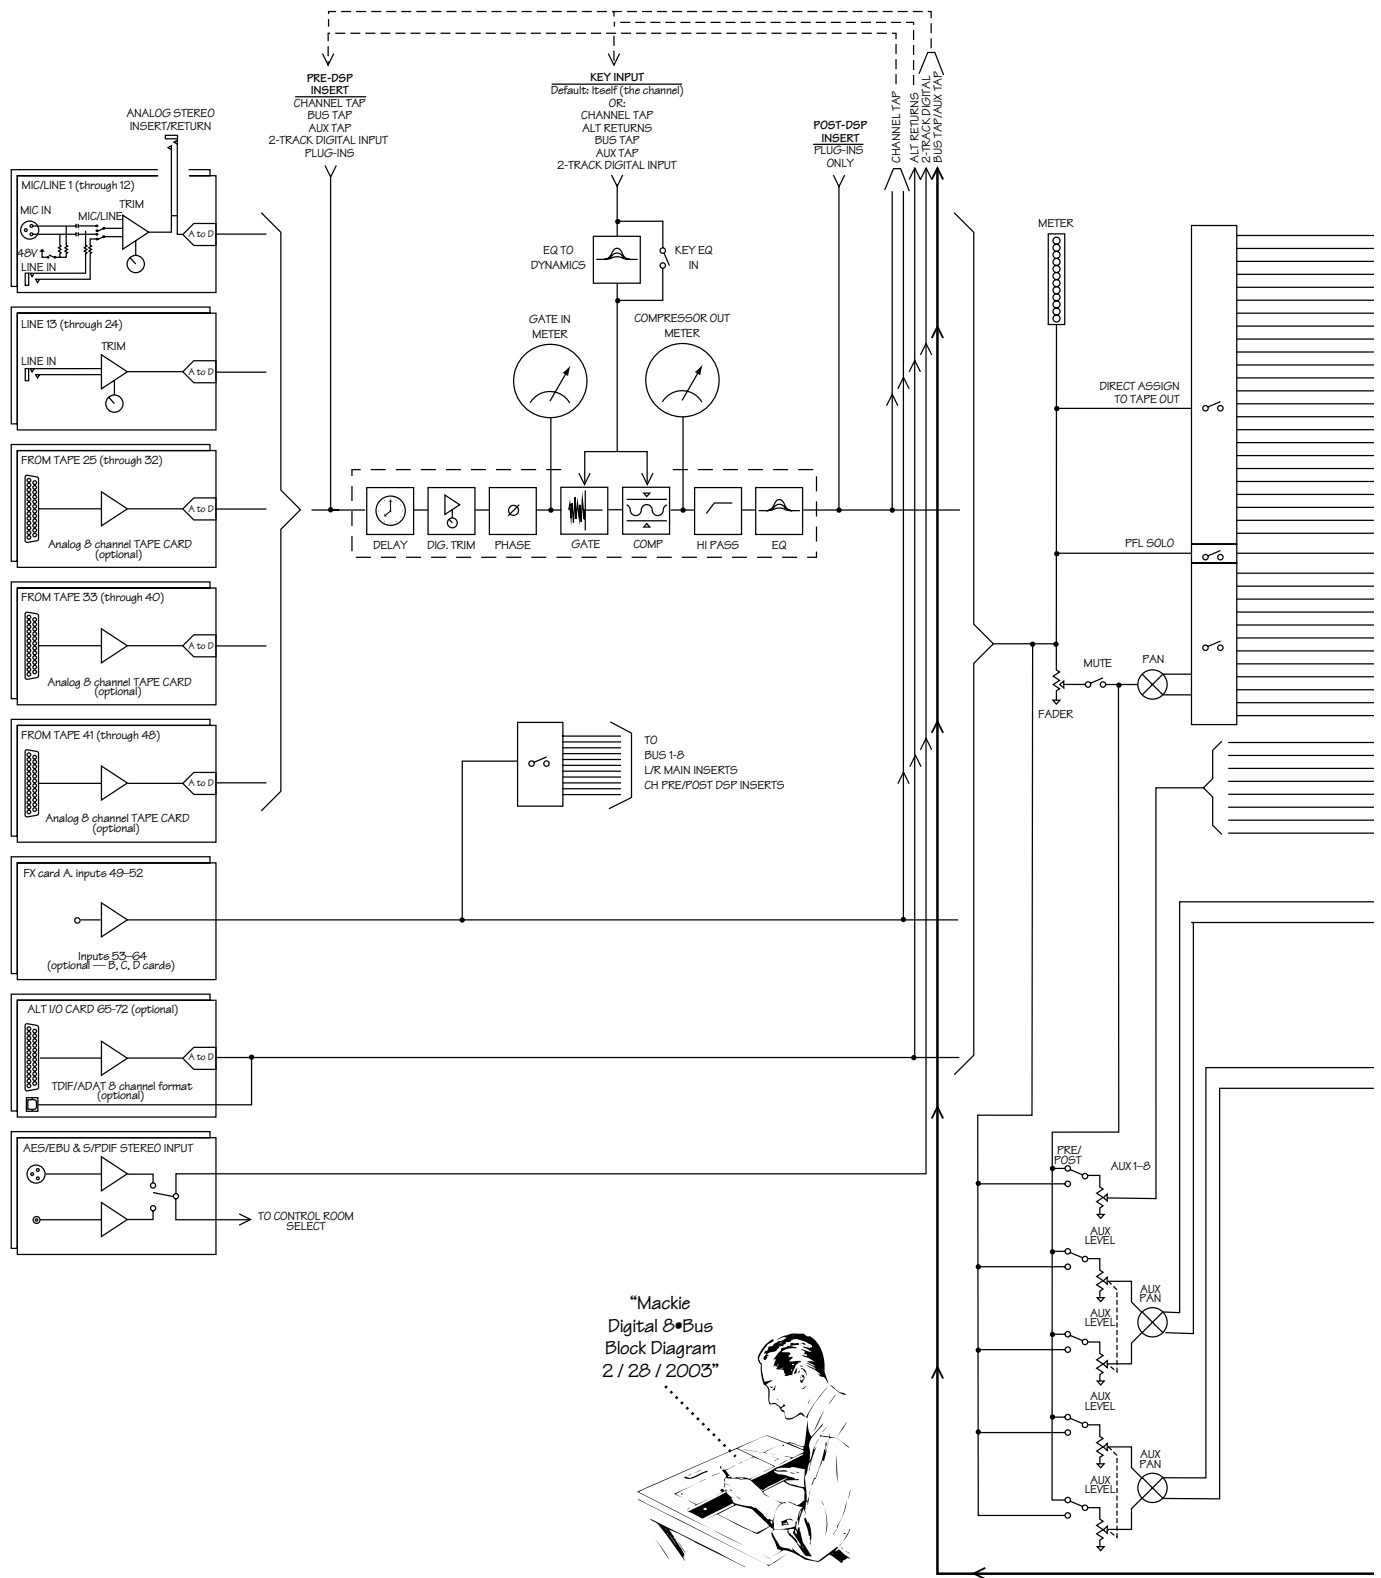

**Figure 1-6 D8B Block Diagram**

This diagram provides a detailed view of the D8B signal path.

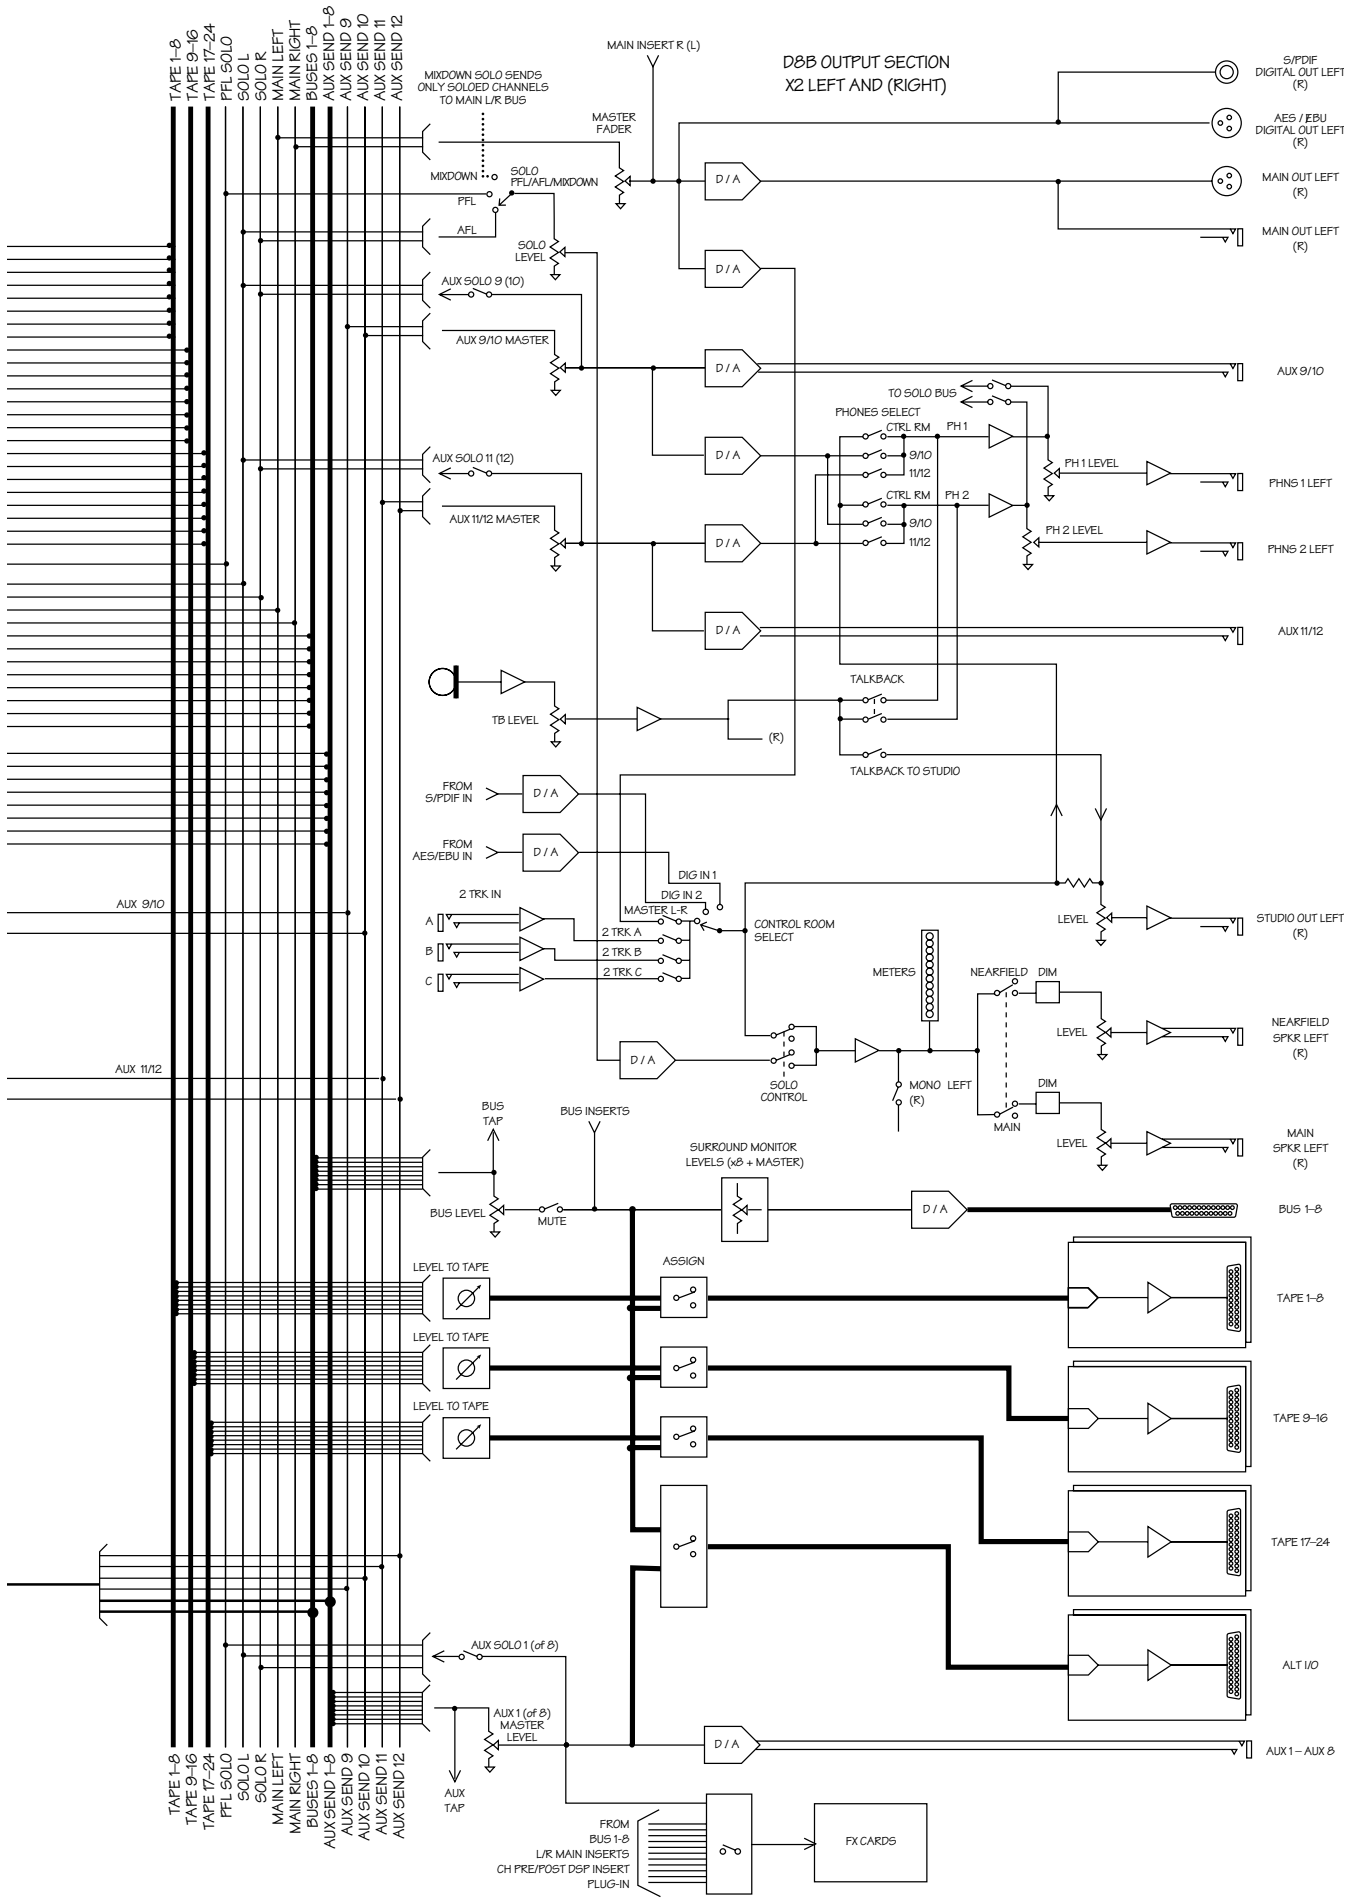

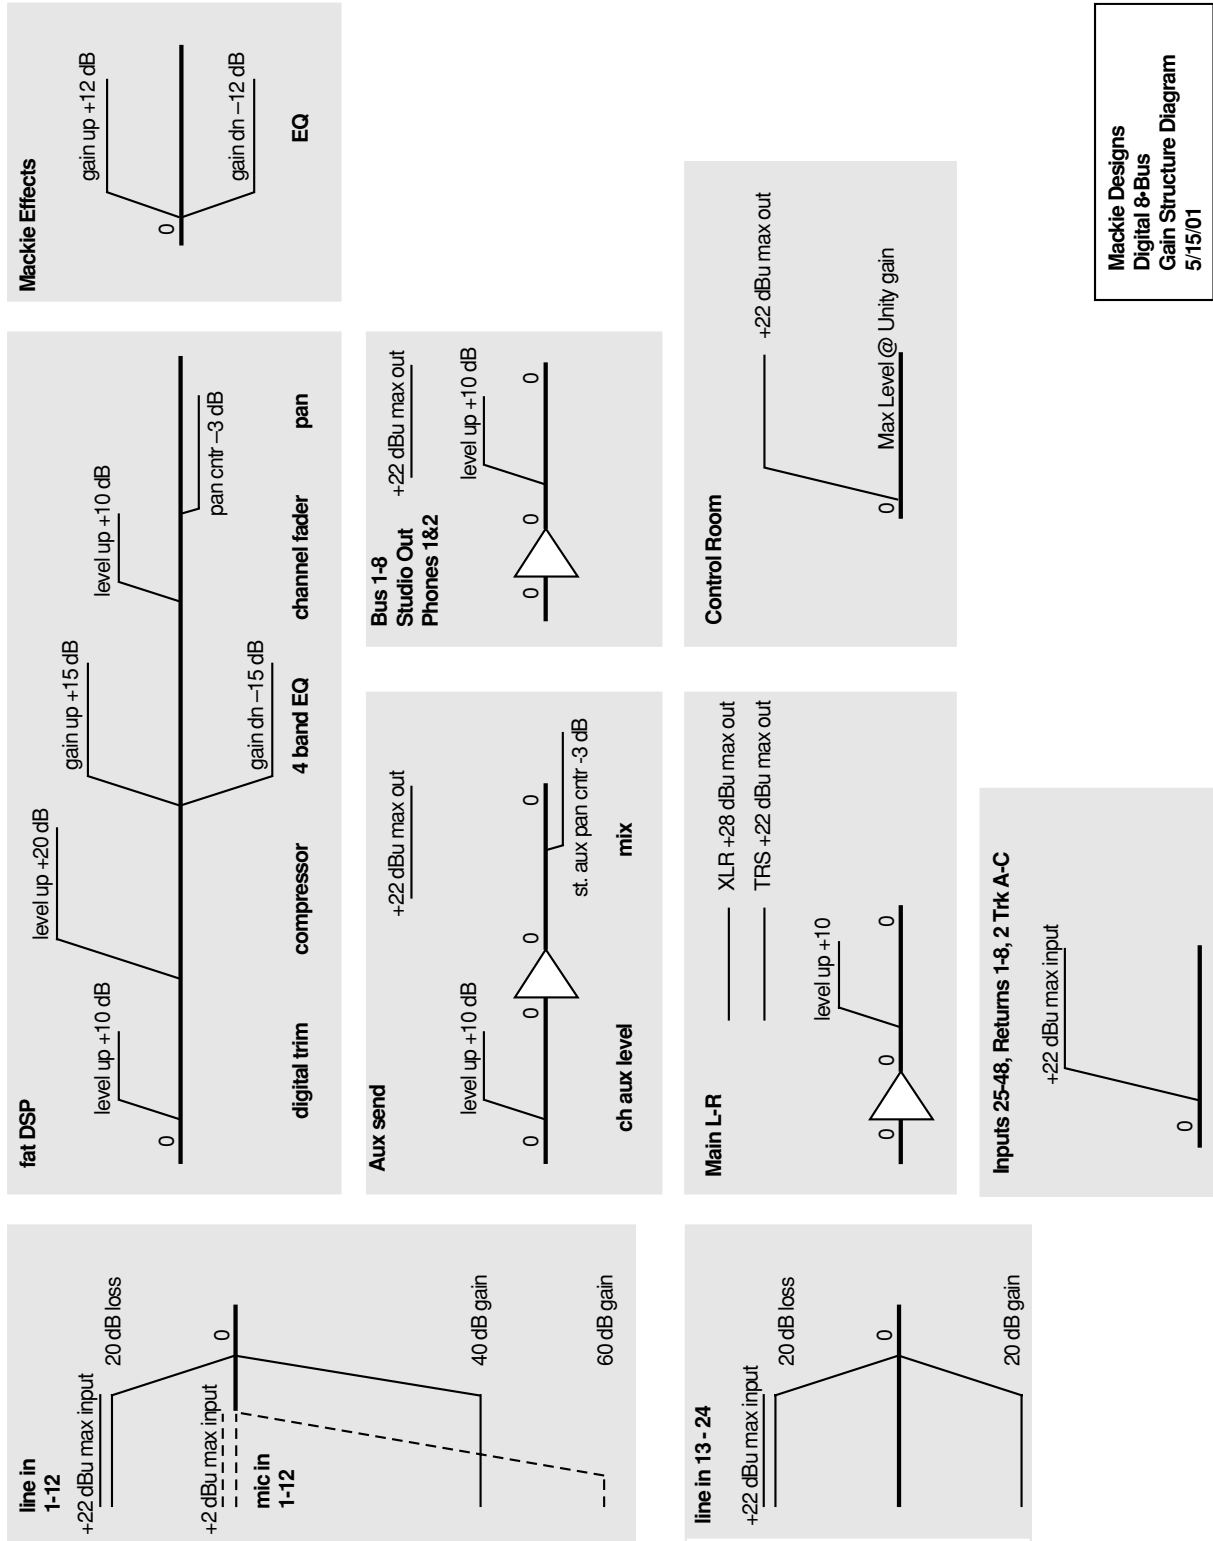


Figure 1-7 D8B Gain Structure Diagram

# Specifications

## Meters:

- LED ladders displaying 24 channels, 24 LEDs per channel from -50 to 0 dBFS (0 dBFS = +20 dBu)

## Frequency Response:

- 20 Hz – 20 kHz  $\pm 0.5$  dB

## Crosstalk (@ 1kHz)

- Adjacent channels: -90 dBu
- Aux sends feed through: -90 dBu
- Main outputs: -90 dBu

## Equalizer

- Gain Range:  $\pm 15$  dB
- Frequency range: 20 Hz – 20 kHz split into 4 bands
- Q: 1/12 to 3 octave

## Compressor

- Threshold: -60.0 to -1.0 dB
- Attack: 0.1 ms to 2.5 sec
- Release: 10.0 ms to 2.5 sec
- Ratio: 1.0:1 to inf:1
- Output: 0.0 dB to 20.0 dB

## Gate

- Threshold: -60.0 to -1.0 dB
- Attack: 0.1 ms to 2.5 sec
- Release: 10.0 ms to 2.5 sec
- Range (Expand off): 0 dB to 100 dB
- Ratio (Expand on): 1:1.0 to 1:inf

## Digital Specs

- Converters: 24-bit, 115 dB Signal-to-Noise-Ratio (EIAJ), 106 dB Dynamic Range, 128X oversampling
- DSP: 32 bit (>190 dB dynamic range)
- CPU: 300 MHz Celeron (166 MHz Pentium in earlier versions)
- Minimum System Requirements for v5.1: 32 MB RAM 166 MHz Pentium D8B CPU
- Recommended System Requirements for v5.1: 64 MB RAM 300 MHz Celeron D8B CPU

## File Storage:

- Floppy drive, internal hard drive or 10-base-T Ethernet network

## Dither:

- Apogee UV22 16-bit Super CD Encoding onboard

## Analog Input/Output Section

- Output Level (0 dBu = 0.775V RMS)
- Left and Right Outputs: +22 dBu balanced 1/4" TRS +28 dBu balanced XLR
- Bus (Tape) out: +22 dBu balanced 1/4" TRS
- Aux sends: +22 dBu balanced 1/4" TRS
- Inserts: +22 dBu unbalanced 1/4" TRS

## Channel Section (mic/line)

- Line input: balanced 1/4" TRS input
- Mic Input: balanced XLR input
- Preamp dynamic range: 114 dB max.
- E.I.N.: -129.5 dBu, 150 ohm source -131.2 dBV, 150 ohm source
- CMRR: -83 dBu @1kHz
- Distortion: 0.005% @ 1kHz +14 dBu output level (20 Hz – 20 kHz filter)
- Mic gain range: Unity to +60 dB
- Line In gain range: -20 dB to +40 dB (channels 1-12) -20 dB to +20 dB (channels 13-24)
- Input max. level: +4 dBu nominal +22 dBu clipping
- Aux send gain range: off to +10 dB
- Bus out gain range: off to +10 dB
- Threshold: -60 to -1 dB
- Ch. fader gain range: -100 to +10 dB

## Physical Dimensions

- Console: 8.7" x 37.6" x 27.1" (221mm x 955mm x 688mm)
- Remote CPU: 5.25" x 19.0" x 20.0" (133mm x 483mm x 508mm)


## Weight

- Console: 73 lbs. (33.1kg)
- Remote CPU: 50 lbs. (22.7kg)


---

**Note:** All specifications subject to change without notice.

# Physical Dimensions

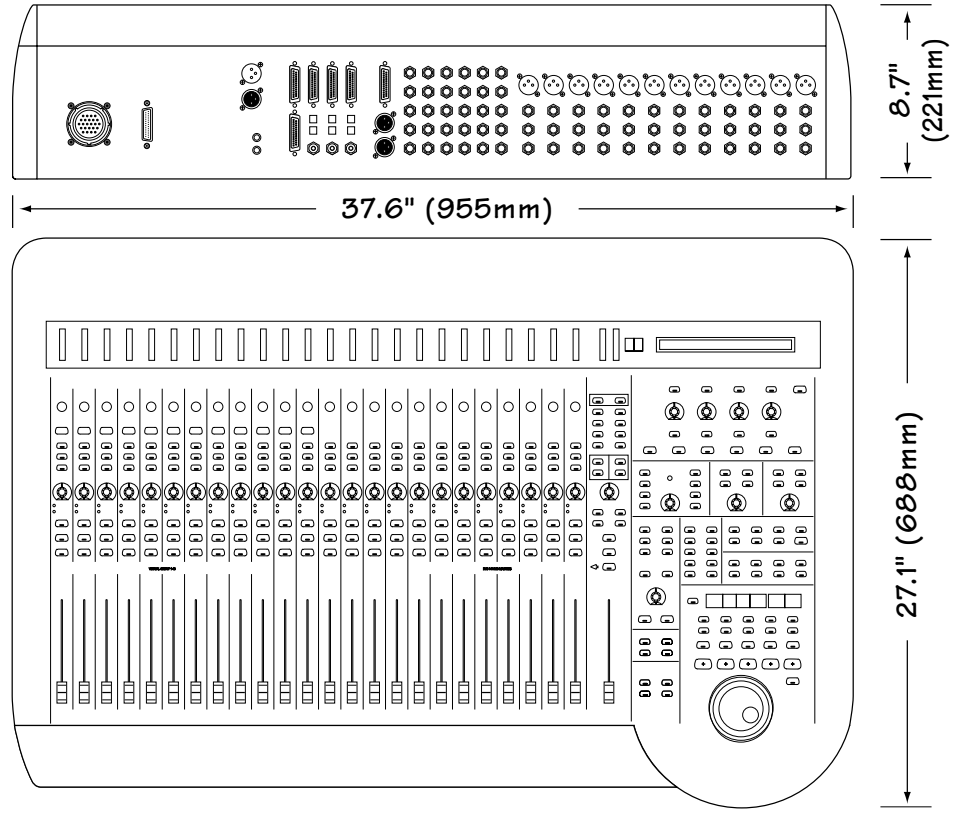

DBB CONSOLE SHIPPING WEIGHT 73 lbs. (33.1 kg)

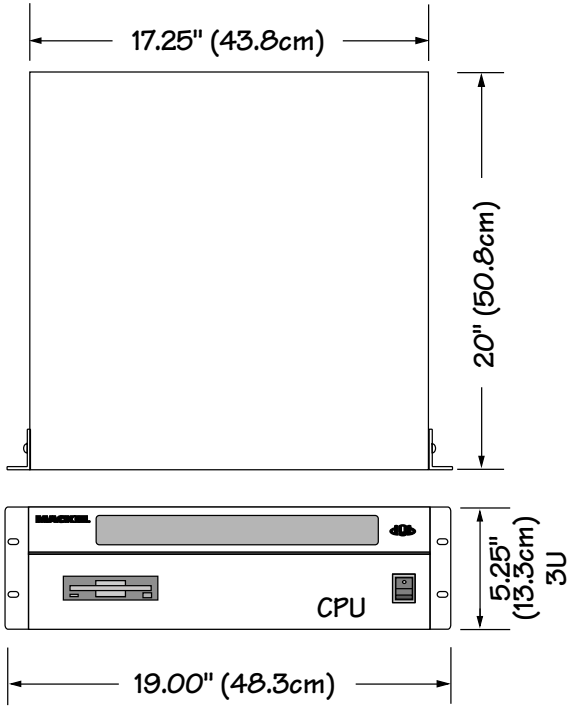

DBB CPU SHIPPING WEIGHT 50 lbs. (22.7 kg)



## Updating Software

Software upgrades can easily be downloaded from the Mackie website at [www.mackie.com](http://www.mackie.com). Find the D8B section and select "Downloads." *Always read the Release notes that accompany the software downloads.* They contain valuable information specific to the current software revisions and install procedures.

### Windows-based Computers

Follow these steps if you are downloading onto a Windows®-based computer:

1. Download the .ZIP files **d8b5xxxx\_PC.zip** for the operating system installation, and the D8B Plug-in Demo Kit (**ServicePack2.zip**) for the plug-ins installation.
2. We recommend that you update the operating system first. Double-click on the **d8b5xxxx\_PC.zip** file. This will launch the WinZip™ self-extraction utility.
3. The default "Unzip To" directory is set to C:\. If you prefer to have the files extracted to a different location, type the path into the provided text box and then press the Unzip button. Quit the WinZip™ self-extraction utility.
4. Locate the three extracted files, labeled **d8b5xxxx Install 1.exe**, **d8b5xxxx Install 2.exe**, and **d8b5xxxx Install 3.exe**, on your hard drive.
5. Double-click on the first file, **d8b5xxxx Install 1.exe**, and you'll see a "WinImage™ Self Extractor" dialog box.
6. Ensure that the "Writing On Floppy" check box is selected, then click the "OK" button in the upper right corner of the dialog box.
7. When the "Batch Assistant" dialog box appears, insert a double-sided, high-density 1.44MB floppy disk into drive A:\ and then click the "OK" button.
8. When the Winimage™ utility has completed writing to the first disk, be sure to label your disks so you know which is #1, #2, #3. Additionally, be sure not to leave a disk in your floppy drive. Rebooting your PC with the disk in the drive can create problems with your PC. Repeat steps 5 through 7 for the second and third disk image files.
9. With the D8B console power supply turned off, insert installation disk #1 into the floppy disk drive.
10. Power on the console power supply.
11. Follow the instructions on the D8B control surface. (**Note:** The installer no longer uses the VGA screen; typical boot is about 30 seconds.)
12. Place the 2nd floppy disk in the drive when prompted by the installation software.

13. Remove the 2nd floppy disk when prompted and insert the 3rd floppy disk.
14. Remove the 3rd floppy disk when prompted and power down the console power supply, then power back on.
15. You now have the updated D8B operating system installed.
16. Make sure you read the release notes. They have important info about this upgrade.

**Note:** Repeat the above procedure with the **ServicePack2.zip** file to install the plug-in update. After updating the plug-ins software on the D8B, you *must* perform the "Erase UFX Memory" and "Upgrade UFX Cards" procedures (under Windows in the upper menu bar) to upgrade the UFX cards that are installed in the D8B (see page 86).

### Macintosh Computers

Follow these steps if you are downloading onto a Mac OS® computer:

1. Download the self-extracting file **d8b5xxxx\_Mac.hqx** for the operating system installation, and the D8B Plug-in Demo Kit (**Plugin Service Pack2.sea**) for the plug-ins installation.
2. We recommend that you update the operating system first. Double-click on the **d8b5xxxx\_Mac.hqx** file to extract the three disk images.
3. Launch Apple's DiskCopy utility (you may need to download the DiskCopy utility from <http://www.apple.com> or check the system installations disks that came with your system).
4. Depending on your version of DiskCopy, either click the "Load Image File..." button or choose "Make a Floppy" from the Utilities menu.
5. Locate the image file labeled **d8b5xxxx Install 1.img** that was extracted onto your hard drive.
6. DiskCopy will prompt you (depending on your version of DiskCopy) to insert a floppy disk into the floppy disk drive. With older versions of Disk Copy, you may need to click the "Make a copy" button first.
7. Once the disk has been ejected from the computer, be sure to label your disk so you know which is #1, #2, and #3. Then follow steps 4 through 6 to create the second and third installation disks from the second and third disk image files (**d8b5xxxx Install 2.img**; **d8b5xxxx Install 3.img**).
8. With the D8B console power supply turned off, insert installation disk #1 into the floppy disk drive.
9. Power on the console power supply.
10. Follow the instructions on the D8B control surface. (**Note:** The installer no longer uses the VGA screen; typical boot is about 30 seconds.)

11. Place the 2nd floppy disk in the drive when prompted by the installation software.
12. Remove the 2nd floppy disk when prompted and place the 3rd floppy disk in the drive.
13. Remove the 3rd floppy disk when prompted and power down the console power supply, then power back on.
13. You now have the updated D8B operating system installed.
14. Make sure you read the release notes. They have important info about this upgrade.

**Note:** Repeat the above procedure with the **Plugin Service Pack2.sea** file to install the plug-in update. After updating the plug-ins software on the D8B, you *must* perform the "Erase UFX Memory" and "Upgrade UFX Cards" procedures (under Windows in the upper menu bar) to upgrade the UFX cards that are installed in the D8B.

**Note to Macintosh USB Floppy drive users:**

Apple's Disk Copy program will not work using the above method with a USB floppy drive because the menu option "Make a Floppy..." will not be available. You must use Aladdin Systems' ShrinkWrap program available for purchase and trial download from <http://www.aladdinsys.com/shrinkwrap/index.html>. Once you have ShrinkWrap installed, substitute these steps for steps 3-6 in the above directions.

3. Launch ShrinkWrap.
4. Select "Write Image back to Disk..." from the Image menu (command-B).
5. Locate the image file labeled **d8b5xxxx Install 1.img** that was extracted onto your hard drive.
6. ShrinkWrap will prompt you to insert a floppy disk into the floppy disk drive.

## Summary

This chapter has been specifically designed to help you understand the basic concept of the Digital 8•Bus architecture. The following two chapters describe the physical surface controls and the software features and capabilities. The last chapter describes specific applications as they pertain to unique recording tasks and needs.

Chapters 2 and 3 support what you'll encounter in Chapter 4. Feel free to jump ahead, but keep in mind that you'll probably need to use these second two chapters as a reference for the terms and controls that are new to you.



**MACKIE.**<sup>®</sup>

# Where Is It?

## Chapter 2


## It's Time to Locate Everything...

No matter how fast you want—or need—to get started, take advantage of this simple map of the territory: it provides the Fast Track overview of the D8B. It's amazing how artistically supportive this console is. It's well worth your time to take a look at all the controls so you can put them to work efficiently.

## Rear Panel Description

This section describes rear panel connector types, their functions, and associated signal buses.


### Channels 1–12 Inputs

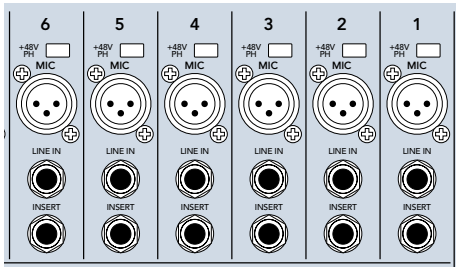

Each channel contains:


- XLR mic input. Be sure the MIC button is pressed down on the control surface channel strip.
- Phantom power On/Off button depending on mic requirements.
- 1/4" TRS line input—balanced or unbalanced. Be sure the MIC switch is in the up position on the control surface channel strip.
- 1/4" TRS channel insert/direct output jack.

### Channels 13–24 Inputs

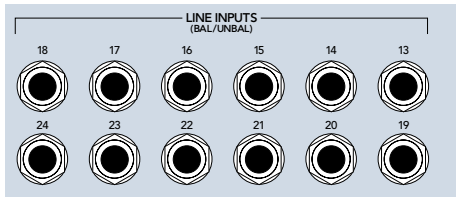

Channels 13 through 24 have 1/4" TRS (Tip/Ring/Sleeve) line input connectors that accept balanced and unbalanced signals.

## Card Cage Section

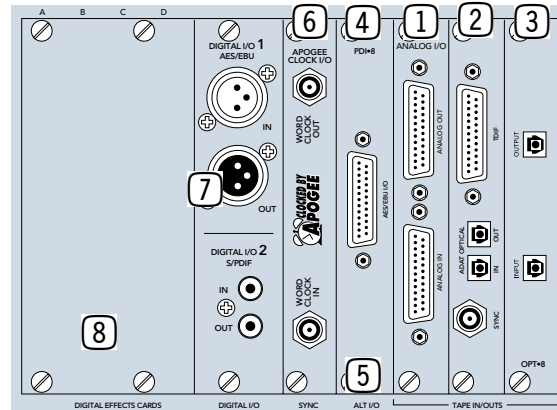

This is where you plug in the optional I/O cards of your choosing, to customize the Digital 8•Bus for your own application.

There are three slots assigned as TAPE IN/OUTS. Each slot provides I/O for 8 channels, so you can add up to 24 tape sends and returns, or additional inputs and outputs.

- **TO TAPE (OUTPUT)** – The D8B can route any channel in Fader Banks 1, 2 and 3 to the multitrack through these connectors. In addition, the bus outputs in Fader Bank 4 (MASTERS) can be routed out the tape outputs.
- **FROM TAPE (INPUT)** – Multitrack outputs are fed back into channels 25–48 (Fader Bank 2) through these connectors. Depending on the specific I/O card, these inputs will receive any line-level analog or digital signal.

Each I/O card contains its own labeling protocol, but the fundamental concepts described above pertain to all.

### 1 Analog I/O (AIO•8)

- Each 25-pin D-sub connector handles 8 balanced analog channels.
- Top connectors send line-level outputs to the multitrack (or other line-level equipment).
- Bottom connectors receive line-level analog signal from the multitrack outputs (or other line-level equipment).
- Each card offers I/O for 8 channels.
- Connectors are compatible with TASCAM DA-88, 25-pin analog connectors.

### 2 Apogee Digital I/O (DIO•8)

- Two digital-format ins and outs: ADAT optical (fiber optic connections) and TASCAM TDIF (25-pin D-sub connections).
- Select one digital format at a time in the Setup screen.
- One BNC sync connector for master clock connection from the D8B to TASCAM clock recipient.
- Use the DIO•8 card as a format converter between either optical and/or TDIF.

### 3 ADAT Optical (OPT•8)

- Two digital ADAT optical (fiber optic) connections.
- Each card offers I/O for 8 channels.

### 4 AES/EBU (PDI•8)

- One 25-pin D-sub connector in digital AES/EBU format.
- Each card offers I/O for 8 channels.

### 5 ALT I/O Card Slot

- Separate input/output card slot offering 8 more ins and outs.
- Holds any card: AIO•8, DIO•8, OPT•8, or PDI•8.
- Inputs show up at RETURNS faders (channels 65–72).
- Outputs are assignable to either the 8 bus outputs (BUS 1–8), the 12 Aux Sends (AUX 1–12), or the MASTER L-R outputs.
- Assignments are made in the Digital I/O menu.

### 6 The Clock I/O Card

- Provides word clock in and out to connect with other digital equipment.
- For use as a master or slave clock source.
- Supports 48kHz and 44.1kHz internal sample rates, with vari-speed capabilities.
- Supports external sample rates between 32kHz and 50kHz.

**Note:** The Apogee Clock I/O card replaces the standard clock card that is shipped in the SYNC slot with the D8B.

### 7 The Digital I/O Card (2-track)

- AES/EBU digital I/O. Stereo interconnect for master record machine. Input is connected to DIGITAL 1 in the CONTROL ROOM monitor section.
- S/PDIF digital I/O. Input is connected to DIGITAL 2 in the CONTROL ROOM monitor section.
- Same source output as MASTER L-R.

### 8 Digital Effects Card Slots


- Room for four separate effects cards.
- MFX – Mackie Effects card with two stereo processors.
- UFX – Universal DSP engine with functions dependent on specific plug-in effects. Each card is capable of four discrete mono, two stereo, or one stereo and two mono effects.

- L-R Mix, Channel Pre or Post Insert, Buses 1-8, and Plugin Chain, in addition to the Aux sends 1–12, internally route to the four card locations.
- Using the configurable plug-in architecture, insert plug-in capability is available for channels 1–48 (Pre- and Post-DSP), Buses 1-8, and Main Mix L-R.
- Effects return to the main L-R mix at Fader Bank 3 via FX 1–16.



**Reminder:** Power down the system before installing any cards!

## Master Input/Output Section

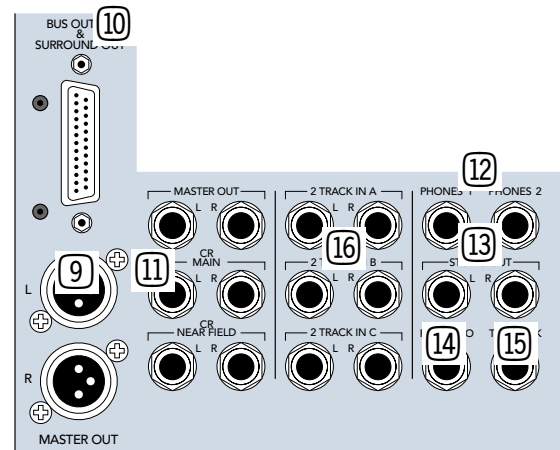

### 9 MASTER OUTPUTS (1/4" TRS and XLR)

- Fed from the Master L/R fader on the console surface.
- Both sets deliver balanced line-level signals. However, the TRS Master Outputs also provide unbalanced line-level signals.
- Post fader, DSP, and D/A converter.

### 10 BUS OUT 1–8 (SURROUND OUT)

- 25-pin D-sub connector provides eight balanced line-level outputs.
- Any channel (1–48), internal effects return, or ALT IN can be assigned to one or more bus outputs.
- In Stereo Mode: Output level is controlled by the BUS 1–8 MASTERS (Fader Bank 4).
- In Surround Mode: Output level is controlled by the Surround Monitor Level controls in the Surround window.

## 11 CR MAIN and CR NEAR FIELD

- Pairs of 1/4" TRS stereo line-level outputs for sending signals to control room speakers.
- Both outputs carry the same signal (as selected in the Control Room section).
- Levels can be adjusted independently or linked together.
- Post-DSP, Master L/R fader, and D/A converter.
- The signal fed to these outputs is selected in the CONTROL ROOM section of the control surface.

## 12 PHONES 1 and 2

- Each jack carries an unbalanced stereo signal through a 1/4" TRS jack.
- Designed to connect to virtually any stereo headphones. Phones 1 and 2 V-Pots adjust to compensate for headphones with exceptionally high or low impedances.
- The signal at these outputs is determined by the PHONES/CUE MIX 1 and PHONES/CUE MIX 2 source selection on the control surface.
- Aux 9–10, Aux 11–12, or the CONTROL ROOM selection can feed either or both Phones/Cue outputs.
- The Master L/R mix can be copied to either or both Aux 9–10 or 11–12 Cue Mixes.

## 13 STUDIO OUT L-R

- Signal at these outputs is determined by the CONTROL ROOM source selection.
- Balanced analog stereo-paired outputs for sending signals to the studio.
- 1/4" TRS outputs can drive a balanced or unbalanced input.
- Level controlled by the V-Pot in the SOLO/STUDIO section of the control surface, when STUDIO LEVEL is selected.

## 14 PUNCH I/O

- A remote switch connection for activating the MMC master record function—to punch in or out of record.
- Use with a normally-open switch.

## 15 TALKBACK

- A remote switch connection for engaging the talkback function.
- Duplicates the Talkback switch in the CONTROL ROOM section.
- Use with a normally-open switch.

## 16 2 TRACK A, B, and C

- Balanced 1/4" TRS inputs for receiving line-level analog signals from a 2-track recorder.
- The separate left/right pairs feed the 2 TRACK A, B, and C buses in the control room monitoring section.
- Can accept balanced and unbalanced signals.

## AUX OUT Section

- There are 12 Aux sends available.
- Auxes 1–8 provide mono 1/4" TRS analog line-level outputs.
- Auxes 9 and 10 are linked together as a stereo pair of 1/4" TRS analog line-level outputs.
- Auxes 11 and 12 are linked together as a stereo pair of 1/4" TRS analog line-level outputs.

**Note:** Auxes 1–12 simultaneously feed the analog Aux sends and the internal effects cards (by default).

Each MFX card handles two separate mono inputs, so auxes are paired. MFX effects returns are stereo, so each card, while receiving two discrete mono inputs, returns two sets of stereo outputs to the EFFECTS Bank. Internally, Aux 1 returns to FX 1/2; Aux 2 returns to FX 3/4; Aux 3 returns to FX 5/6; continuing through Aux 8, which returns at FX 15/16.


UFX cards handle 4 mono, two stereo, or one stereo and two mono inputs.


For each UFX card, no matter what the Aux input selection, returns appear at the FX faders numbered the same as their respective slots.

If all UFX effects are mono, each return correlates directly to the Slot number (9 to 9, 10 to 10, etc.)

- When stereo effects are selected, regardless of the Aux input selection, returns appear at the FX faders numbered the same as their respective slots. For stereo effects with mono inputs, the effects return at the respective slot numbered pair (input 9 returns at FX 9/10; input 11 returns at FX 11/12, etc.)

**Note:** Patching from an Aux output does not interrupt the internal sends to the FX Cards, so it's possible to run both internal and outboard effects at the same time.

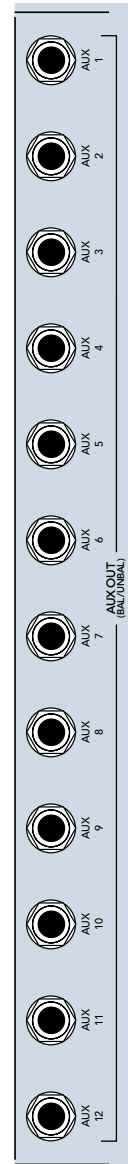

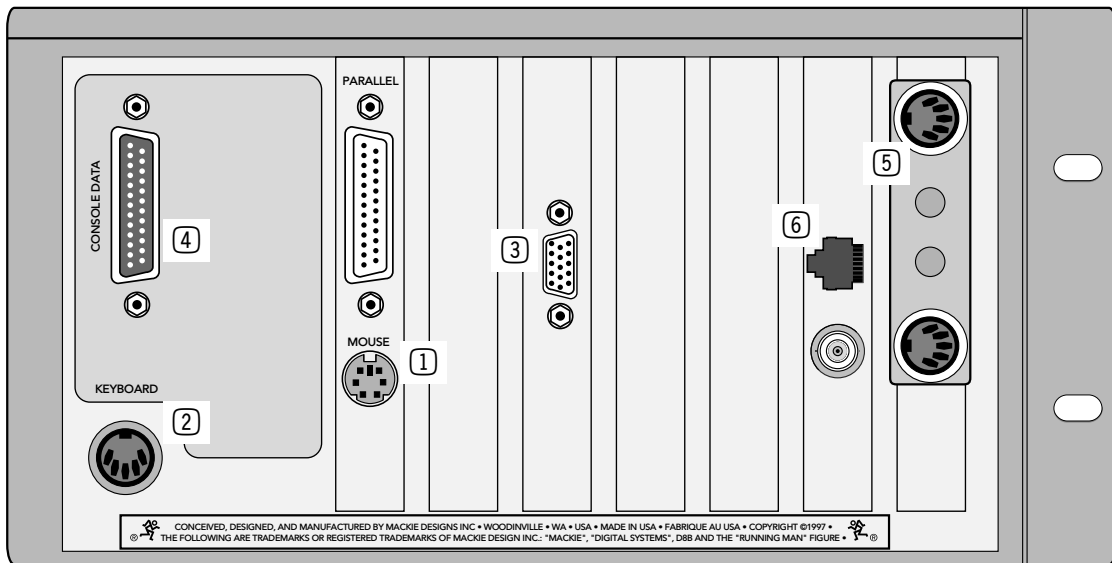

## Remote CPU Description

### Data and Synchronization I/O

These connections are specifically pertinent to non-audio functions (or, in plain English, these aren't audio connections!).

### Connecting a Mouse, Keyboard and SVGA Monitor

The Digital 8•Bus is designed to work as a stand-alone console. However, you'll increase your options and productivity by using a mouse, keyboard, and SVGA monitor. Simply connect them to the corresponding ports on the back of the Remote CPU for access to point-and-click commands with the mouse, as well as key commands and text entry from the keyboard.

#### 1 The Mouse Port

- Connect a PC-compatible mouse (PS/2 style).
- A two-button mouse is sufficient.

#### 2 The Keyboard

- Connect any PC-compatible keyboard (QWERTY style).
- Must have a 5-pin DIN connector. An adapter can be used for the 9-pin keyboard connector.



**Note:** Turn the Digital 8•Bus OFF before connecting these devices. The Digital 8•Bus must boot up with these peripheral devices connected in order for them to work properly.

#### 3 The SVGA Monitor

- A hi-density 15-pin D-Sub connector is provided to connect an SVGA monitor.
- Use at least a 17" multisync SVGA monitor capable of 1024 X 768 resolution and a 72Hz refresh rate. Larger monitors provide greater viewing pleasure.
- Use of monitor provides graphic display and control of most console functions, including equalization, compression, gating, internal effects, automation editing, and file management.
- The SVGA monitor can be connected without turning off the Digital 8•Bus (hot-plugable).

### Other Connections

#### 4 Console Data

- A 25-pin D-sub connector connects the console to the Remote CPU using the cable supplied.

#### 5 MIDI

- MIDI card in the remote CPU uses a 9-pin D-sub connector.
- Install the supplied 9-pin to dual 5-pin adapter to facilitate connection to your MIDI network using standard MIDI cables. This could be a plastic housing adapter or a rattail 9-pin split to 5-pin I/O connection.
- MIDI IN receives MTC, program changes, and controller, note, and poly aftertouch messages.
- MIDI OUT sends MMC commands, program changes, and controller, note, and poly aftertouch messages.
- The MIDI card can be replaced with the Serial•9 card, which provides both MIDI and Sony 9-Pin communication.

## 6 Ethernet Port

- Accepts an RJ45 telco connector.
- Connects to PC/Mac for FTP file transfer through a network or peer-to-peer.
- Can be used to make peer-to-peer connections with other Digital 8•Bus consoles.
- Use CAT5 for standard network FTP connections; use crossover CAT5 for peer-to-peer connections.

# Control Surface Functions

We'll divide the D8B control surface into two sections, the Channel Strip section and the Master section.

## Channel Strip Section

The channel strip on the Digital 8•Bus is very much like the channel strip on an analog mixer. Each channel offers the same set of controls, with a few exceptions. Even with a brief overview of each control, you'll find your understanding of the digital mixing concept closely related to what you already know about analog mixers—that's the beauty of this console design.

- There are 24 channel strips.
- There are four layers (Fader Banks) of feature sets: MIC/LINE (1–24), TAPE IN (25–48), EFFECTS (49–72), and MASTERS.
- Channels 1–12 have both mic and line input capabilities.
- Channels 13–24 have line input capabilities only.
- Channels 25–48 receive signal only from the I/O card inputs.

### 1 Trim Level

- At the top of each channel strip
- The Trim Level controls only input levels for channels 1–24.
- Regardless of bank selection, trims are active and available for channel inputs 1–24. This is handy for tweaking without having to switch banks.
- Used to adjust and optimize input levels.
- This control is one of the few not written in a snapshot.

**Note:** The TRIM levels at the top of each of the 24 channel strips and the MIC buttons at the top of the first 12 channel strips are not written into automation or snapshots. Careful notes as to their status should be manually archived—as in written down—for future reference. *However*, if TRIMs are all left at unity gain—or at least left untouched—throughout the entire session, the console is capable of perfect, total recall! We highly recommend this technique.

## 2 Mic/Line Button

- On channels 1–12 only.
- This button selects between the Mic Input (XLR) and the Line Input (1/4" TRS).
- Up position selects the line input (1/4" TRS).
- Down position selects the microphone input (XLR).

### 3 REC/RDY

- The Record Ready button arms the corresponding tape track to record.
- Communicates via MMC (MIDI Machine Control).

### 4 Assign


- Routes audio to output buses 1–8.
- Routes audio to the Master L-R bus.
- Assigns the selected channel to the channel strip's corresponding tape track for recording. For example, after selecting ROUTE TO TAPE in the ASSIGNMENT section, press SELECT on channel 2, then press the ASSIGN button on channel 12 to route the signal from channel 2 to tape track 12.

### 5 Write

- Manually enables a channel for recording to automation.
- Blinks when on standby; solid when active.
- Automatically lights when Auto Touch automation has been activated.

### 6 Channel V-Pot

- A multifunctional digital control and level display.
- Controls channel pan when PAN is selected in the Master V-Pot section (just to the right of channel 24).
- Controls Aux send levels when Aux 1–12 is selected in the AUX section (just above the Master V-Pot).
- Controls panning between stereo Auxes 9/10 and 11/12 when PAN is selected below either send.
- Controls channel Level to Tape and Digital Trim whenever they're selected (immediately above Aux 1 and 2 select buttons).
- Displays return fader levels (Bank 2) when Level to Tape follows faders.

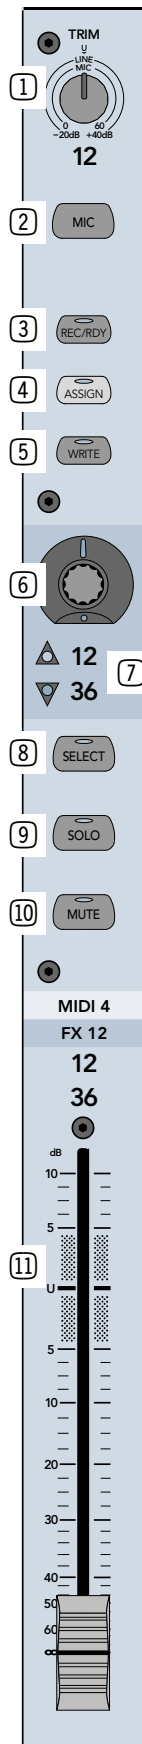



## 7 Fader Bank Select LEDs

- Just below the channel V-Pots.
- When the green LEDs are on, Fader Bank 1 is selected (MIC/LINE).
- When the red LEDs are on, Fader Bank 2 is selected (TAPE IN).
- When both LEDs are on, Fader Bank 3 is selected (EFFECTS).
- When neither LED is on, Fader Bank 4 is selected (MASTERS).
- When flashing, the selected channels are in Punch Run mode (see “Punch Run” on page 56 for more info).

## 8 Select

- Chooses a channel to be edited.
- Enables onboard or on-screen Fat Channel control over the selected channel.
- Operative for copying and pasting data between channel strips.
- Part of the grouping and linking procedures.
- Double-clicking the SELECT button opens and closes the strip’s on-screen Fat Channel.
- Pressing and holding opens a channels preferences page in the VFD, which controls basic channel parameters.
- Pressing and holding two SELECT buttons at once opens a Link options page in the VFD.

## 9 Solo

- Pressing Solo on any channel lets you hear only the soloed channel.
- Mackie’s exclusive Rude Solo Light flashes incessantly whenever any channel is soloed.
- There are three different types of soloing available: PFL, AFL, and Mixdown.
- **PFL** (Pre-Fader Listen) solos the signal before it gets to the fader. PFL is a monitor function only and has no effect on the Master L-R mix send. Any channel is soloed in mono, regardless of pan position. PFL solo level is unaffected by fader changes.
- **AFL** (After-Fader Listen) solos the signal after the fader in the signal path. Therefore, solo level is affected by fader movement. AFL solos the accurate pan positioning and, like PFL, is only a monitor function not affecting the Master L-R mix.
- **Mixdown Solo** is a post-fader, pan-accurate solo that overrides the Master L-R mix.
- **Clear Solo**, in the Solo/Studio section, releases any solo selections. This is particularly useful when working with solos across multiple fader banks.

- **Aux Solo** is accomplished by selecting an aux bus, then pressing the SOLO button by the Master V-Pot. When this solo light is on, the Master V-Pot adjusts the solo level.
- **Soloing multiple channels** is accomplished by holding the shift key (onboard or keyboard) while pressing the solo buttons on all desired channels or, by holding one solo down while pressing others. Also, selecting “Solo Latch” in Setup > Mix Options keeps solos selected until they’re manually switched off.
- **Solo Isolate** mode is accomplished by holding down the Alt key on the keyboard or control surface while pressing a channel’s solo(s). A solo isolated channel is always active to the solo bus and therefore will not mute when other channels are soloed. Only PFL solo mode overrides Solo Isolate mode.

## 10 Mute

- Mutes the signal after the channel fader.
- Prior to the L-R output bus.
- Prior to Bus 1–8 outputs.
- Does not affect the Direct Out to Tape unless console is configured for Faders to Tape mode.

## 11 Channel Fader

- Controls the signal level from the channel to the bus or buses it is assigned to (typically the L/R Master Fader and the Bus 1–8 output).
- Doesn’t affect the signal level to the Tape Outputs unless specifically routed to do so, or if console is configured for Faders to Tape mode.

## Channel Meters

- Indicate post-EQ, pre-fader levels.
- The audio level display is scaled in digital dBFS (decibels full-scale).
- 0 dBFS = +20 dBu (clipping occurs at +22 dBu).
- -15 dBFS = +5 dBu
- The minimum displayed level is -50 dBFS.
- Markings next to the LED ladders are denoted as -50 dBFS to OL; they are similar in function to those of digital recorders. Each LED-segment is accurate within  $\pm 1$  dB.

---


**Note:** Typically, in digital recording devices such as MDMs, HDRs, or DATs, there is a built-in overhead of 3–4 dB above the 0 dBFS mark to match the typical maximum unbalanced analog console bus output value of +22 dBu. The OL LED lights at +22 dBu.

---

# Master Section Description

The Master Section—everything to the right of channel strip 24—is divided into 13 subsections. They are:

- Master Fader/Bank Select Section
- Master V-Pot Section
- V-Pot Assign Section
- Fat Channel Section
- Studio/Solo Section
- Phones/Cue Mix Section
- Control Room Section
- Clipboard Section
- Master Fader/Shortcuts Section
- Bus Assignment Section
- Automation Section
- Session Setup Section
- Transport Section

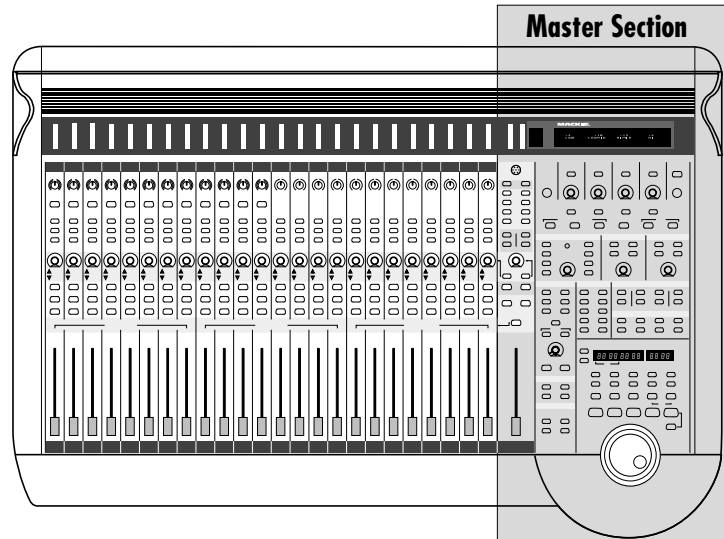

## Master Fader/Bank Select Section

This section consists of:

- The four buttons used to select the four Fader Banks.
- The SHIFT button, which is primarily used to select and deselect multiple channels.
- The Master L/R Fader, which controls the signal level going to the L-R stereo bus.

All 96 channels are always active. However only 24 are available at a time from the control surface (up to 48 are available through the on-screen interface). The buttons used to select the active fader set are:


- MIC/LINE (TRACK)
- TAPE IN (MONITOR)
- EFFECTS
- MASTERS


### MIC/LINE (TRACK)

- Fader Bank 1.
- Selects channels 1–24.
- Combination of Microphone inputs 1–12 and line inputs 1–24.

### TAPE IN (MONITOR)

- Fader Bank 2.
- Selects channels 25–48.
- Requires 1–3 Tape I/O cards installed in the card cage for input signals.

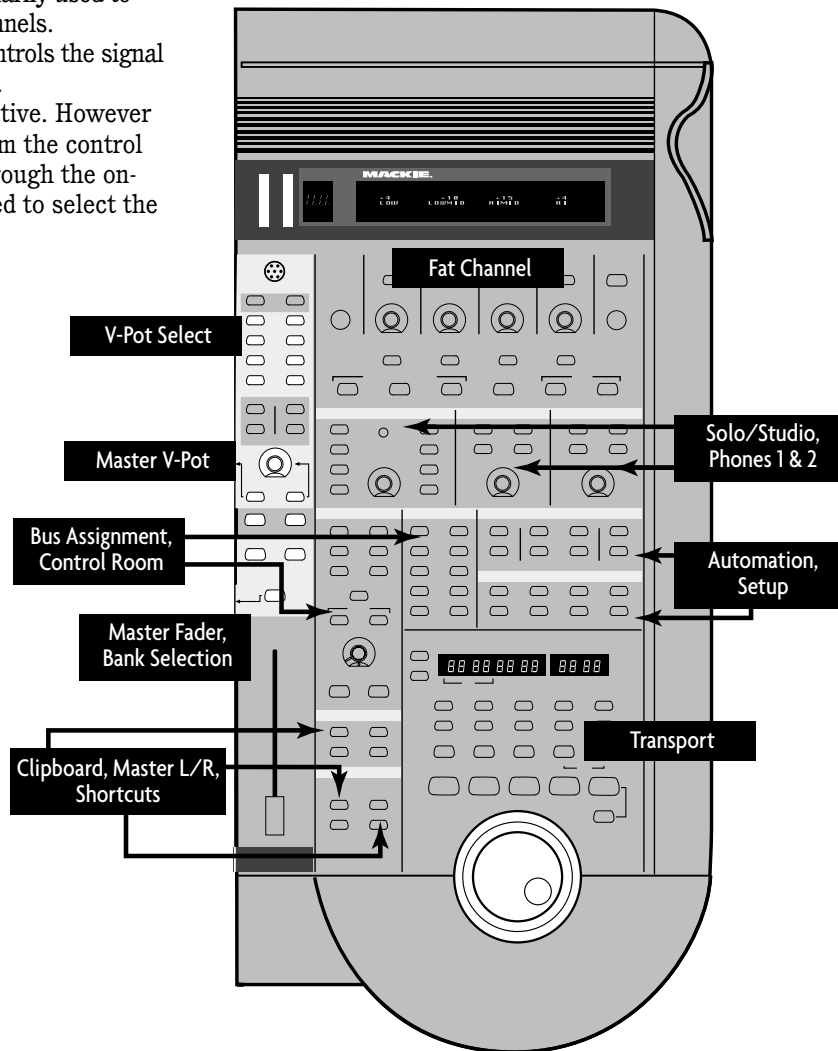

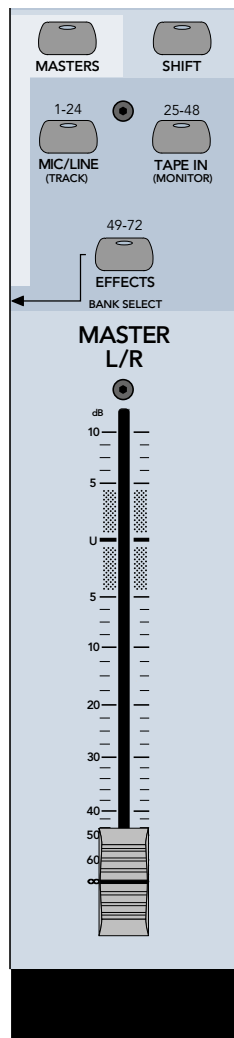

## SHIFT Button

The SHIFT button serves multiple functions. It provides a way to select multiple channels and multiple solo buttons. It also serves as a fine-tune selector for Aux levels and Pan adjustments. Try adjusting an Aux level with and without the SHIFT button depressed—notice the difference in numerical scrolling speed.

- Use to access the HUI layer when HUI mode is active (SHIFT+MASTERS).
- Allows more than one channel SELECT button to be engaged simultaneously.
- Allows more than one SOLO button to be engaged simultaneously.
- Allows fine-tuning of Aux send levels and pan adjustments.
- Allows independent control of channel parameters with linked channels.
- Double-clicking selects all channels on the active fader bank.

## Master L/R Fader

- 100mm logarithmically-tapered fader for smooth fades.
- Remotely controls level via DSP—doesn't pass audio like a traditional fader.
- dB level ranges from +10 dB (fully on) to  $-\infty$  (fully off).
- Mixdown Solo level control.
- Provides level adjustment to tape outputs (if desired).


## EFFECTS

- Fader Bank 3.
- Selects channels 49–72.
- Effects bank controls sixteen internal effects returns and eight ALT I/O returns.

## MASTERS

- Fader Bank 4.
- Selects channels 73–96.
- Faders 1–8 control the virtual group levels.
- Faders 9–16 are assignable MIDI controllers.
- Faders 17–24 control the eight bus or surround outputs (BUS 1–8), which are output via the 25-pin D-sub connector labeled BUS OUT 1–8 & SURROUND OUT on the rear of the console. The BUS 1–8 outputs can also be assigned to the 24 tape outputs, or the ALT I/O slot.

## Master V-Pot Section

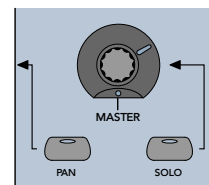

## MASTER V-Pot

- Acts as the Master level control for the currently selected Aux bus.
- In all surround mode settings, the MASTER V-Pot acts as the front/rear pan control for the selected channel (provided the PAN button is lit). When used along with the channel pan V-Pot, the D8B acts like an audio rendition of the family favorite Etch-A-Sketch®!

## MASTER PAN

- Assigns all applicable channel V-Pots to act as pan controls (channels 1–72 and 81–88).
- Stays lit continuously until an Aux Select, Level to Tape, or Digital Trim button is engaged.


## MASTER SOLO (Aux)

- Solos the currently selected Aux.
- Only one Aux can be soloed at a time.
- Master solo can be active at the same time a channel is soloed.
- Aux bus remains soloed until it is manually disengaged or until the CLEAR SOLO button is pressed.
- Solo level is post the MASTER V-Pot.
- Master Solo is not affected by the PFL or AFL Solo status selected in the Studio/Solo section.

## V-Pot Assign Section

These buttons:

- Assign the channel V-Pots to control individual aux send levels.
- Assign the channel V-Pots to control individual channel trim or tracking output levels.

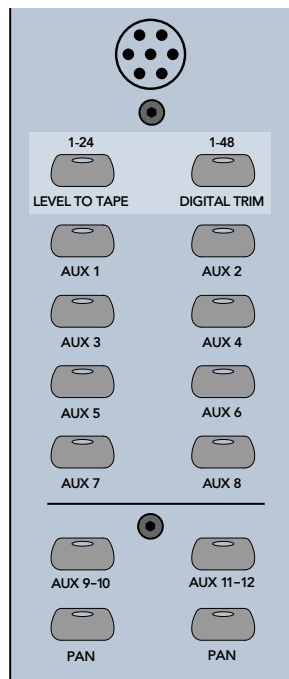

## AUX 1–8 Buttons (Default Operation)

This description highlights the default configuration for aux sends and effects returns. Keep in mind that the new D8B plug-in architecture provides maximum flexibility and awesome creative capabilities with respect to plug-ins, aux sends, and returns.

- Pressing any Aux 1–8 assigns channel V-Pots to control individual send levels to AUX 1–8 output.
- Each Aux 1–8 is simultaneously routed to the corresponding 1/4" jack on the rear of the console and to an internal effects processor.
- Patching from the Aux 1–8 jacks does not interrupt the signal flow to the internal processors.
- Each Aux 1–8 acts as a mono send to a stereo internal effects processor (MFX card only). UFX cards offer complete flexibility.
- Auxes patched to the IVL Vocal Studio effects return to four channels, either in stereo pairs (second pair is the reverb return) or as four separate channels.


## AUX 9–10 and 11–12

- Configured differently than Auxes 1–8.
- Each channel has a stereo pair of controls: one level and one pan. This is ideal for phones/cue mixes or for an additional recording feed in a live setting.
- Pressing Aux 9–10 assigns the channel V-Pot to control the send level for the stereo pair.
- Pressing Pan under Aux 9–10 assigns the channel V-Pot to adjust pan positioning between the stereo pair.
- Aux 9–10 are not routed to the internal effects processor by default, but may be assigned as such in the plug-in configuration window.
- Aux 11–12 operates identically to Aux 9–10.

## LEVEL TO TAPE

- Level to Tape assigns the channel V-Pots as tape output level controls via the I/O cards.
- This control is post channel DSP and pre-fader. Fader adjustments don't affect tape output levels.
- Facilitates optimizing the gain structure from the beginning to the end of the signal path, when used correctly.
- When **Faders to Tape** is active (in the Options menu), the level to tape is controlled by the source channel faders.

Figure 2-1 Aux Sends 1-8 (Default – Mackie Stereo Effects [4 MFX Cards])

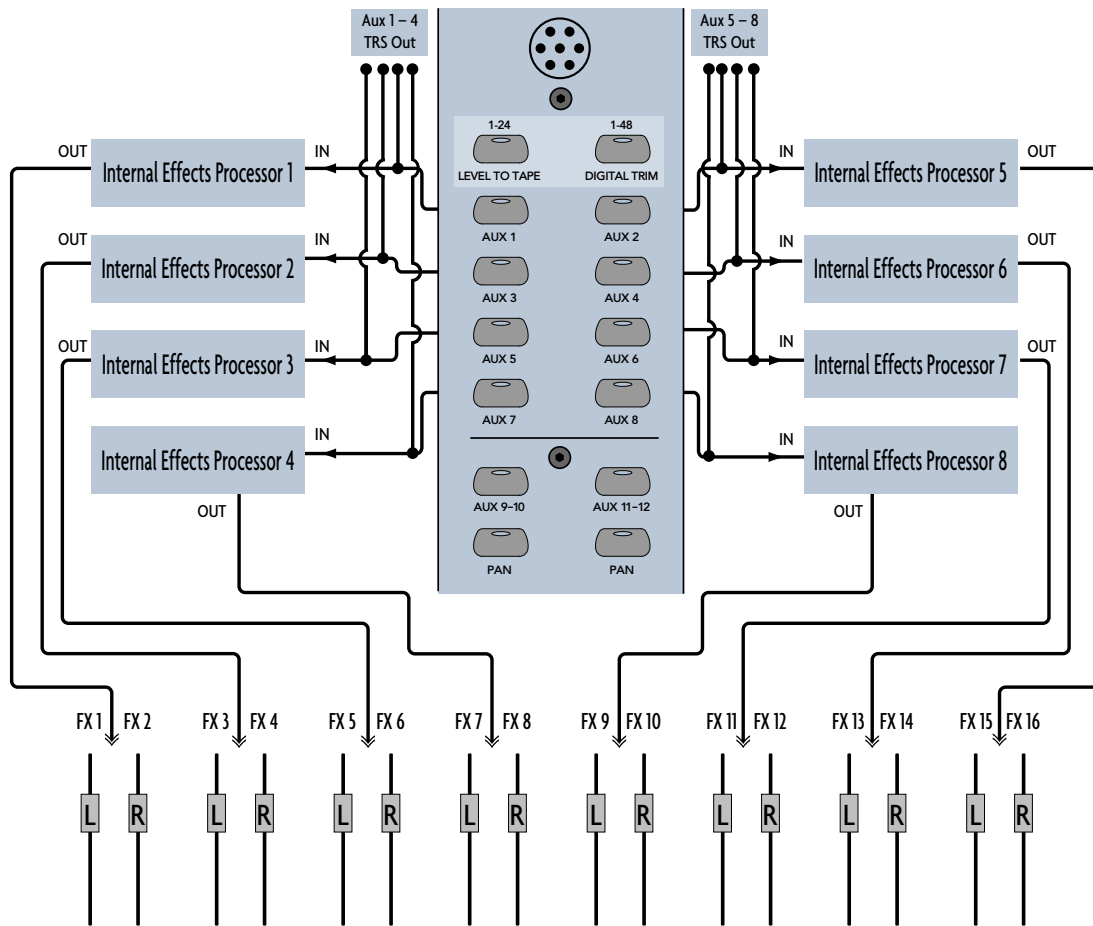

*Eight mono aux sends, each returning a stereo effect*

### DIGITAL TRIM

- Pressing the DIGITAL TRIM button assigns the channel V-Pots to become digital trim (digital input level) controls.
- Functionally located immediately after the A/D converter in the signal path for channels 1–48.
- When using digital I/O cards, for channels 25–48, there is no A/D converter, so the digital trim is simply the first control in the signal path after the card.
- Digital Trim is a recallable function, unlike the analog Trim control. It can be automated or stored in a snapshot.
- Digital Trim is the only input trim control for channel inputs 25–48.

### Talkback Mic

- Located just above the LEVEL TO TAPE and DIGITAL TRIM buttons.

- The Talkback mic is activated two different ways: 1) by pressing Talkback in the Control Room section, 2) by pressing a foot pedal connected to the Talkback jack in the rear of the console.
- Talkback audio is sent to the Phones/Cue Mixes when pressing Talkback or depressing the foot pedal, or to the Studio monitor system when pressing Talkback to Studio.

### Left/Right LED Ladders (Master Meters)

- Located above the Talkback Mic.
- Indicates the signal level of whatever is selected in the Control Room section.
- When Solo is selected, the Master Meters indicate the level of the combined soloed channels.
- When Mono is selected in the Control Room section, both Left and Right meters indicate the mono level.

## CHANNEL Select Display

- Just to the right of the L-R Meters.
- Numeric readout indicates the selected channel —the currently editable channel in the VFD.



## Fat Channel Section

The onboard Fat Channel provides access to all those really cool dynamics and EQ functions. It also provides for configuring Setup parameters, loading, and saving patch information.

The on-screen Fat Channel is an amazing interface that provides the look and feel of a vintage tool as well as precision control and recall.

### Fat Channel Display


- VFD Vacuum Fluorescent Display.
- Provides a text interface to console operation. Nearly all static functions and controls are accessible.

## V-Pots and SELECT buttons

- Four Select buttons and V-Pots used to select and adjust options that show up in the Fat Channel VFD.
- Pressing Select above a Fat Channel V-Pot lets the user adjust or scroll through the pertinent options.
- V-Pots rotate 360° and display the relative adjustment positions as provided by eleven discrete LEDs.

## PREVIOUS and NEXT arrows

- Pages the VFD to more parameters whenever more than four adjustments can be made.
- The PREVIOUS button scrolls the VFD to the left.
- The NEXT button scrolls the VFD to the right.
- An arrow on the left-hand side of the VFD, pointing left, indicates a previous page is available.
- An arrow on the right-hand side of the VFD, pointing right, indicates the next page is available.

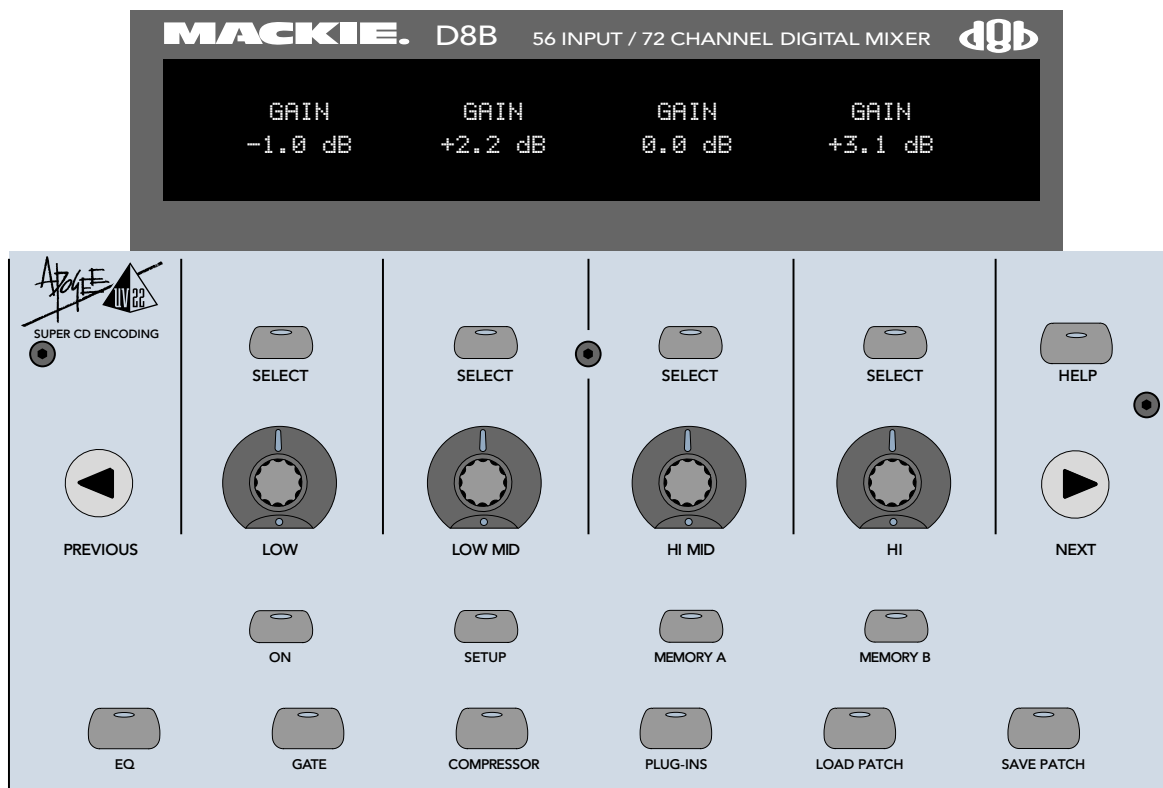

### The Fat Channel

## ON button

Toggles the selected Fat Channel DSP control parameters on and off in bypass fashion.

## SETUP button

When EQ is selected in the Fat channel, the Setup button lets you select the type of equalization and activate the “EQ to Dynamics” mode.

## MEMORY A and B buttons

- Each channel has two memory locations for EQ, compressor, gate, plug-ins, and surround parameter comparisons.
- Any changes to the above controls are temporarily stored in the selected Memory A or B buffers.
- Simply press Memory A to instantly recall the settings you developed while Memory A was selected. Press Memory B to instantly switch to alternate settings.
- Automation of the parameters will overwrite the buffers unless bypassed.

## EQ button

Press this button to see EQ parameters for the selected channel in the onboard Fat Channel display.

## GATE button

Press this button to see Gate parameters for the selected channel in the onboard Fat Channel display.

## COMPRESSOR button

Press this button to see Compressor parameters for the selected channel in the Fat Channel display.

**Note:** Fat Channel SELECT and page (PREVIOUS and NEXT) buttons are used as additional view tools.

## PLUG-INS button

- Press this button and use the prompts from the VFD to select and navigate through the various plug-in specific parameters.
- Use the “Next” and “Previous” buttons to page through all available parameters.

Onboard control of plug-ins is intuitive for basic functionality. Refer to the individual Plug-ins Manual for details regarding the use of each plug-in via the control surface or on screen.

## LOAD PATCH button

Press this button to load an individual EQ, compressor, or gate patch (saved settings) into the currently selected channel. Plug-in settings previously stored in the onboard library can be loaded into an FX card. DSP type must be selected first.

## SAVE PATCH button

Press this button to store an individual EQ, compressor, gate, or plug-in setting to the onboard library of user presets. You must choose EQ, Gate, Compressor, or a plug-in before trying to save a patch.

## HELP button


Press this button to open the on-screen help window. Click a topic from the Table of Contents to jump to the selected topic.

## Studio/Solo Section

This section contains a V-Pot to control Studio, Solo, and Talkback levels, along with buttons to select various solo functions and talkback to the studio monitor system.

### MIXDOWN SOLO button

- This solo status interrupts the L-R Main outputs to front-of-house speakers or 2-track recorders. It is the destructive solo.
- Use this mode whenever you want the soloed track(s) to be the complete mix—a rhythm breakdown is a good example of this.
- Mixdown Solo is post-fader and DSP. Level to tape (e.g., 2-track mixdown recorders) is controlled by the Master L/R fader.

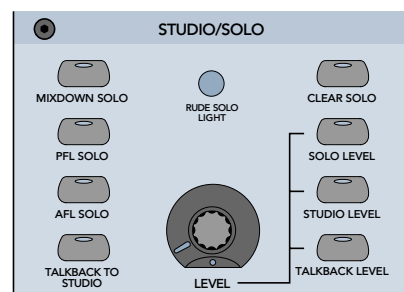

### PFL SOLO button

- Activates Pre-Fader Listen on the solo bus.
- Accesses the signal before it gets to the fader, so the fader has no effect on the soloed signal.
- This is a mono-centered solo feature. Pan has no control over this solo feature.

### AFL SOLO button

- Activates After-Fader Listen on the solo bus.
- Accesses the signal after the fader, so fader moves do affect the soloed signal.
- This is a stereo bus (post-pan) soloed channels are heard in their correct pan position.

**Note:** PFL/AFL only affects channel soloing and has no effect on aux send soloing.

## TALKBACK TO STUDIO button

Routes sound arriving at the in-panel Talkback mic to the Studio outputs.

**Note:** Make sure the speakers that are connected to the Studio Outs are located in another room to avoid feedback when the TALKBACK TO STUDIO button is depressed.

## CLEAR SOLO button

Disengages all engaged solo buttons throughout the entire console. This is especially convenient considering sections may be soloed across multiple fader banks.

## SOLO LEVEL button

Assigns the V-Pot in the Studio/Solo section to adjust the solo level being fed to the Control Room outputs. Not applicable to mixdown solo (use L/R fader to adjust mixdown solo level).

## STUDIO LEVEL button

Assigns the V-Pot in the Studio/Solo section to adjust the output level being fed to the Studio monitor system.

## TALKBACK LEVEL button

Assigns the V-Pot in the Studio/Solo section to control the preamp level for the in-panel Talkback Mic.

## RUDE SOLO LIGHT

Blinks whenever a Solo button is engaged.

## Phones/Cue Mix Section



Phones/Cue Mix 1 and 2 select the sources and sets levels for the Phones outputs.

## AUX 9-10

Assigns the Aux 9-10 mix to the Phones output.

## AUX 11-12

Assigns the Aux 11-12 mix to the Phones output.

## COPY MIX TO CUE button

Pressing this causes all channel settings to be copied to the channel V-Pots for the selected CUE MIX 1 (Aux 9-10), CUE MIX 2 (Aux 11-12), or aux pair (Aux 1-2, 3-4, 5-6, or 7-8). This is a very quick way to copy the MASTER L-R mix, including effects, to the phones output, which can then be easily fine-tuned.

## CONTROL ROOM button

Assigns whatever is selected in the Control Room section to the Phones output. Solos are also routed to the Phones output when Control Room is selected.


## LEVEL V-Pot

Adjusts the Phones output level.

## Control Room Section

These buttons:

- Select the source for the control room outputs.
- Select Main or Nearfield control room outputs.
- Adjust the listening level.

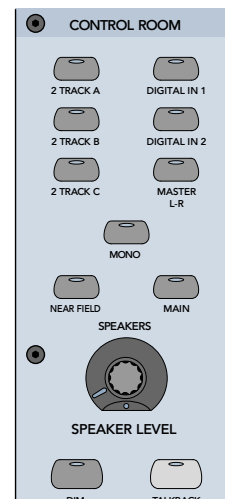

## 2 TRACK A, B, and C buttons

- Selects the signal at the 2 Track A, B, or C input as the Control Room source.
- These inputs can be selected independently or together for simultaneous playback along with the MASTER L-R button.

**Note:** When DIGITAL IN 1 or DIGITAL IN 2 are selected, MASTER L-R and 2-TRACK inputs are unavailable.



## DIGITAL IN 1 button

Selects the AES/EBU digital input as the Control Room source (when AES/EBU is the Stereo I/O Digital In selection in the Digital I/O Setup window).

## DIGITAL IN 2 button

Selects the S/PDIF digital input as the Control Room source (when S/PDIF is the Stereo I/O Digital In selection in the Digital I/O Setup window).

## MASTER L-R button

Selects the main L-R output bus as the Control Room source.

## MONO button

Combines the left and right channels to a monaural signal and sends it to the left and right Control Room outputs (Near Field or Main). This provides for a quick check on the sound of the mix in mono.

## NEAR FIELD button

Turns on the Control Room Near Field output.

## MAIN button

Turns on the Control Room Main output.

---

**Note:** The Near Field and Main speaker selections cannot both be on at the same time.

---

## SPEAKER LEVEL V-Pot

- Adjusts the individual level of the selected Control Room output (Near Field or Main).
- This control does not affect the level sent to the Phones/Cue, or Master L-R mix outputs.
- Near Field and Main levels are completely independent of one another unless linked together in the Mix Options of the on-screen Setup window (Link Speakers).
- When linked, the level control is identical for Near Field and Main. The link can be temporarily broken by pressing the Shift key and adjusting the Speaker Level V-Pot. This is an excellent way to set a fixed level offset between monitor sets.
- Controls the Master Surround Monitor output when in Surround mode.

## DIM button

Quickly attenuates the control room monitors. This is very useful for phone calls or visits from the neighborhood volume cop.

---

**Note:** The amount of attenuation for the DIM button can be changed in the GUI by selecting Mix Opt. in the Setup window. Selection choices include  $-20$  dB,  $-30$  dB,  $-40$  dB, and  $-\infty$  dB (Cut).


---

## TALKBACK button

Routes the signal arriving at the in-panel Talkback Mic to Phones/Cue Mixes 1 and 2 (and to Studio Out if Talkback to Studio is selected). DIM is engaged automatically while the TALKBACK button is pressed.

## Clipboard Section

Provides cut, copy, paste, and undo functions for specific fader operations, channel parameters, and automation events.

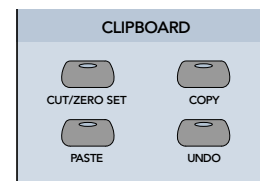

## CUT/ZERO SET button

- Deletes edited parameters from the currently selected channel(s) and returns them to their default settings.
- Static or automated options are selected in the Fat Channel display.
- The parameter settings are placed on the clipboard for desired paste operations.

## COPY button

- Copies parameters from the currently selected channel(s).
- Static or automated options are selected in the Fat Channel display.
- The parameter settings are placed on the clipboard for desired paste operations.


## PASTE button

Pastes copied parameters to the currently selected channels.

## UNDO button

- Reverts the currently selected channels to their previous status, before a cut, copy, or paste.
- Multiple Undo and Redo operations are available by pressing UNDO in the Clipboard section then Undo and Redo in the control surface Fat Channel VFD.

## Master L-R/Shortcuts Section

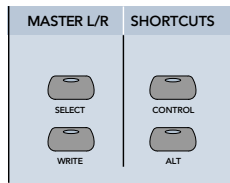

### SELECT button

Selects the Master Fader and Aux Master for edit operations.

### WRITE button

Displays automation status and engages the Master Fader and Aux Master to record automation events—dependent on the automation mode.

### CONTROL button


Used in combination with other buttons as a modifier key. See Shortcuts (Appendix D) for a list of applications.

### ALT button

Used in combination with other buttons as a modifier key. See Shortcuts (Appendix D) for a list of applications.

## Bus Assignment Section

This is a quick and easy way to assign, or tell what's been assigned to, Bus 1–8 or the Master L-R bus.

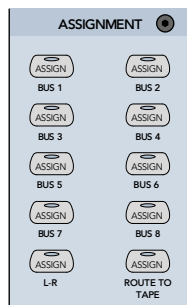

### BUS 1–8 buttons

- Only one bus may be selected in the assignment section at a time.
- Bus assigns are used along with the individual channel Assign buttons.
- Press any Bus 1–8 button. Any channel that's assigned to the selected bus will have its Assign button lit on the individual channel strip (on the currently selected bank).
- Pressing the channel Assign button so the light stays on will assign that channel to the selected bus. Pressing Assign so the light goes off removes the assignment.

### L-R button

- When L-R is selected, the individual channels can be assigned or removed from the Master L-R bus.
- Mic, Line, FX, and Returns (Channels 1–72) can all be assigned in this way to the L-R Master bus.

### ROUTE TO TAPE button

- Assigns a selected channel to any or all of the 24 tape outputs.
- Any of the 48 channels, as well as any internal FX returns, Alt I/O return, or Bus 1–8 can be assigned to one or more, or all (24) Tape Outputs.
- When ROUTE TO TAPE is selected, press the SELECT button on the channel you want to route to tape, then press ASSIGN on the channel strip that corresponds to the desired Tape Output.
- No two channels can be assigned to the same tape output (you can assign two or more channels to a bus, and route the bus to tape). As soon as a channel is assigned to a previously assigned output, it takes over the output, thus removing the previous assignment.

---

**Note:** Great care should be taken whenever a channel is assigned to its own tape track. Beware the dreaded feedback loop. Ouch!


---

## Automation Section

### What Is Automation All About?

Even if you've never worked with an automation system, you'll find the controls in the Mackie Real Time OS intuitive and powerful. Spend a little time grasping the concepts, then start mixing.

If you've worked with other automation systems you'll find the Mackie OS incredibly quick and easy to master. A complete digital system that's been designed well is amazingly powerful and easy to use. Have fun!

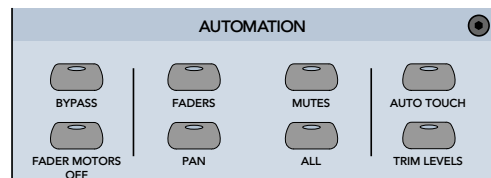

### BYPASS button

- Bypasses the playback of all currently written automation moves.

- This button must be turned off before any automation can be recorded or played back.
- Toggling Bypass doesn't affect the automation filter LEDs (Faders, Mutes, Pan, All). However, when Bypass is on no automation data will be recorded.

### FADER MOTORS OFF button

- Pressing this button (so the yellow light is on) disengages fader motors, which prevents any automated fader movement during automated playback.
- When the button is engaged, all faders snap to off.
- Turning fader motors off does not affect changes that have been recorded during automation record passes. All automated levels still play back even though the faders don't move.
- The on-screen faders still show movement even when the physical faders are off. Fader moves may still be written to automation using the mouse.

### FADERS button

Allows writing of Fader moves during an automation pass. When FADERS is activated, all fader moves on write-enabled channels are written into automation. Can be used in conjunction with MUTES, PAN, and ALL.

### MUTES button

Allows writing of mutes during an automation pass. When MUTES is activated, all mutes on write-enabled channels are written into automation. Can be used in conjunction with FADERS, PAN, and ALL.

### PAN button

Allows writing of Pan moves (stereo and surround) during an automation pass. When PAN is activated, all pan changes on write-enabled channels are written into automation. Can be used in conjunction with FADERS, MUTES, and ALL.

### ALL button

- Allows writing of all automation parameters *other* than faders, mutes, and pan.
- In order to record an automation pass, recording every automatable parameter, FADERS, MUTES, PAN, and ALL must be activated.
- Parameters selected by the ALL button are Aux 1–12 levels, Aux 9–12 pans, Master Aux levels, Digital Trim, all channel DSP functions (EQ and Dynamics), plus Plug-in/Effects parameters, bus assignments, surround panning, etc.


## AUTO TOUCH Mode

- Activates Auto Touch write mode for automation data.
- All activated automation control points become write-enabled and enter automation record mode at the instant they're modified from their current state.
- It's not necessary to engage individual channel WRITE buttons in this mode. Manually engaging WRITE in this mode only affects fader, mute, and pan writing (if they're activated in the Automation section).
- The channel WRITE button illuminates as soon as a channel function is manually adjusted (and the corresponding filter is activated).
- One or more of the automation buttons (FADERS, MUTES, PAN, or ALL) must be activated or nothing will be written to automation.  
**Note:** Fader, mute, and pan data may be overwritten if these filters are activated and the channel is write-engaged. See page 137, "Using Basic Automation" for more information.

## TRIM LEVELS button

- Activates Trim Level automation on all write-enabled channels. This refers to trimming automated moves up or down, not to analog or digital level trim controls.
- All faders move to unity (U) and fader motors are turned off.
- Previously recorded automation remains intact. However, fader and V-Pot changes are simply added to or subtracted from existing data.
- This is a good way to edit parts of an automation track. See "Modify Levels" on page 55 for level-adjusting an entire track.

## Session Setup Section

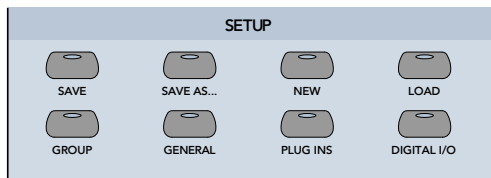

Buttons in this section are used for file maintenance and for setting up system functions such as Virtual Groups, Digital I/O, meter assignment, and MIDI parameters.

### SAVE button

- Saves the currently active session to the internal hard drive or floppy drive. We recommend using the floppy only for backup.
- Saves all snapshot and automation data as well as the status of all digital parameters at the time of saving.

### SAVE AS... button

- Saves the currently active session under a new name.
- Uses the V-Pots and SELECT buttons in the Fat Channel display to rename and complete the operation.
- To finish the SAVE AS... either press Select beneath SAVE in the onboard Fat Channel display or simply press SAVE AS... a second time.
- To quick-save the proposed file name, simply double-click SAVE AS...

### NEW button

- Press this button to start a new session. This is the same as New Session... in the on-screen File menu.
- The New Session menu appears in the onboard Fat Channel.
- All Template preferences are loaded at the beginning of a New session.

### LOAD button

- Brings up the LOAD menu in the onboard Fat Channel display. This is the same as Open Session... in the on-screen File menu.
- Facilitates the loading of previously saved session files from the hard drive or floppy disk.
- Sessions can be scanned in the Fat Channel display by pressing the first two SELECT buttons on the left or by turning the far left V-Pot.

### GROUP button

- Brings up the Group menu in the Fat Channel display.
- This is a virtual group function where faders and mutes are linked to one master fader, solo, and mute button in the Master fader bank.
- After pressing GROUP, press the SELECT buttons on each channel strip to be included in the group, then press Exit to complete the action.
- Control the group from the Master fader bank, where faders strips 1–8 control groups 1–8.

### GENERAL button

Brings up the General menu in the Fat Channel display. Provides access to:

- Solo settings
- The surround sound matrix
- MIDI Machine Control settings
- Console layout (channel reassignment)
- Record Safe and Write Ready status settings
- VFD display brightness
- Network cascading and Alt I/O assignments
- One-button record status
- About current OS version

### PLUG-INS button

Brings up the Plug-In menu in the Fat Channel display for selecting the effects package to load into the internal FX card. Refer to the individual Plug-ins manuals for specific implementation.

### DIGITAL I/O button

- Brings up the Digital I/O configuration menu in the Fat Channel display.
- For selecting Tape I/O, Alt I/O, and Stereo I/O settings.
- For selecting and setting the internal sample rate or assigning the console to sync to external word clock.

## Transport Section

This section provides control for external recorder transports, time display, snapshots, locates, and loops.

### POSITION display

- Shows the numeric representation of SMPTE or MIDI Time Code (Hours: Minutes: Seconds: Frames) or a musically referenced display (Bars: Beats: Ticks).
- When the console is receiving time code, this display continually updates according to the time code position.
- Displays entered values for Locate storage.

### RANGE display

- Shows the snapshot number in Snapshot mode.
- Shows the most recently entered MMC locate point when in Locator mode.
- When looping it shows the beginning (FROM) and ending (TO) locate points for the loop.

### SET TIME button

- Press this button to enter a new time in the Position Display (in Hours: Minutes: Seconds: Frames or Bars: Beats: Ticks)
- The number buttons are used to enter the time.
- Press ENTER to complete the action. This sends an MMC locate command.

### SMPTE VIEW button

This button toggles between SMPTE/MTC time and BBT (Bars/Beats/Ticks) in the Position display.

### Number Buttons 0–9


- Used to numerically enter Snapshot, Locate, and Loop points in the Range display, and time values in the Position display.
- When numeric buttons are used to enter data, you must press ENTER to complete the action.
- Pressing the number keys while holding CONTROL scrolls through the on-screen interface windows.

### ENTER button

- Initiates numeric changes that have been typed into the snapshot, locate, position, or range display from the console number buttons (or standard IBM-style keyboard connected to the console).
- Pressing CONTROL and ENTER increases the SNAPSHOT or LOCATOR selection (control surface only).
- Pressing ALT and ENTER decreases the SNAPSHOT or LOCATOR selection (control surface only).

### LOCATOR button

- Allows the number buttons to be used for entering specific location numbers.

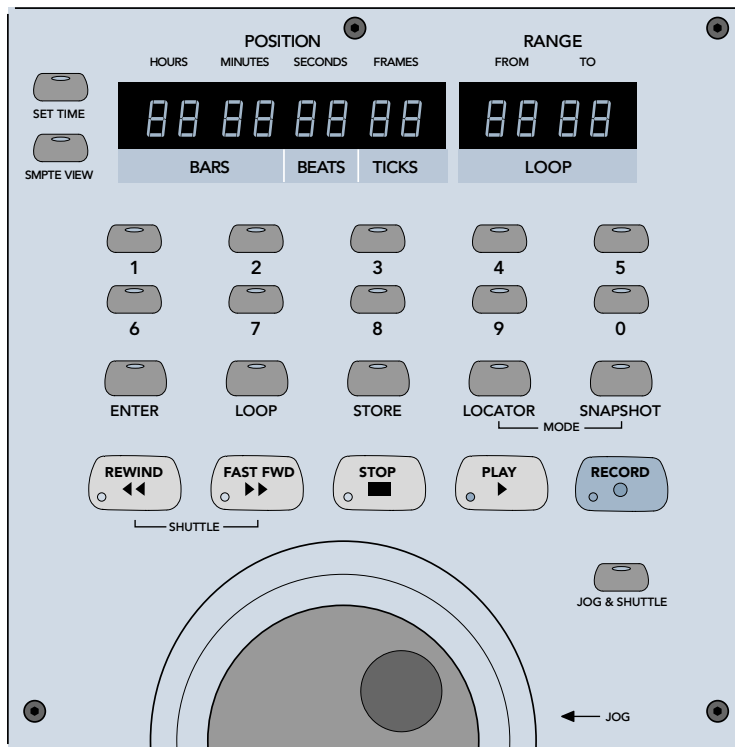

- Each location number (00 – 99) may represent a specific time during an MTC-referenced playback or recording, if previously stored.
- When in this mode, the left two digits in the Range display indicate the locate point number.
- Locate points can be captured while tape is moving. Simply hit STORE, the Locate number, and then ENTER at the instant you wish to store a location.

### LOOP button

- Used to set the start and end Locate points in a Loop.
- To loop a segment, first enter the locate start point using the numeric buttons (onboard or computer keyboard), then press ENTER.
- Next, press LOOP, enter the ending locate point number, then press ENTER.

## STORE button

This button is used to save locate points and console automation snapshots to the currently displayed number or a user-entered number.

## SNAPSHOT button

- Allows the number buttons to be used for entering snapshot numbers.
- When in this mode, the left two digits in the Range display indicate snapshot numbers.
- Onboard snapshot range is from 00–99, equivalent to MIDI program changes 00–99.
- More snapshots are available from the on-screen interface.

## Transport Controls

- These buttons control external devices that respond to MIDI Machine Control (MMC). MMC is transmitted from the MIDI output port on the rear panel of the remote CPU to MMC-compatible devices.
- Transport controls can be programmed to export specific MIDI messages other than standard MMC protocol. See MIDI Mapping on page 85 for more details.

**Note:** MMC is not bidirectional. The D8B sends out MMC commands to your tape recorder(s), but if you arm tracks or operate transport controls from the tape recorders, the activity is not transmitted back to the D8B via MMC. You can, however, press Play on your recorder and, as soon as time code is received by the D8B, it reverts to PLAY mode.

## REWIND button

Engages external machine to fast rewind with no given locate point.

## FAST FWD button

Engages external machine to fast forward with no given locate point.


## STOP button

Stops external machines at the current position.

**Note:** The STOP button lights when time code is not being received by the D8B.

## PLAY button

Engages external machine to play at normal speeds from the current location.

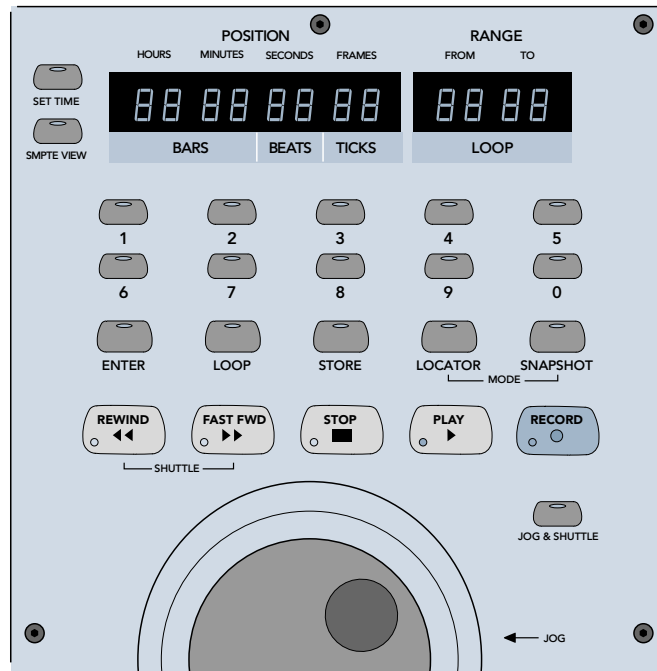

**Note:** The PLAY button lights when time code is being received. It flashes when you press it and no MTC is received.

## RECORD button

- Engages Master record function on external machines and Write Ready engaged automation channels.
- Must be pressed with PLAY to engage record mode unless One Button Punch mode is active.
- One Button Punch allows punching into record without hitting PLAY (see “Mix Options” on page 66).
- Pressing any transport button takes the D8B and peripherals out of record status.

## JOG & SHUTTLE button

Engages the rotary dial (below the REWIND, FAST FWD, STOP, and PLAY buttons) to advance external machines forward or backward with single-frame accuracy when using MMC.

When Jog & Shuttle is enabled, the REWIND and FAST FWD transport buttons send out MMC shuttle commands, usually corresponding to fixed speed increments (i.e., 1/4x, 1/2x, 2x, etc.).

## Rotary Dial Encoder

This multifunction dial enables the scrub function.

# What's On TV?

## Chapter 3





# Using the Graphic User Interface (GUI)

## The Beauty of It...

The Digital 8•Bus provides exceptional power from the control surface alone. However, when combined with an on-screen Graphic User Interface (GUI) the console offers yet another facet of audio bliss.

Some features are only available on-screen and are much easier to perform on-screen. Yet some control surface features are more efficient, like multiple fader moves or inverse fader moves.

The software functions included herein are definitely in the “I always wanted to be able to do that” category. In this section, we touch each control and parameter—section by section.

## The Mouse

All references to mouse clicks imply left-click on the PS/2 mouse unless otherwise specified. Certain keyboard commands combine with mouse clicks to increase capabilities of the OS and to help increase speed and accuracy.

- *Control-click* implies holding the Control (Ctrl) key down while clicking on an item.
- *Alt-click* implies holding the Alt key down while clicking on an item.
- *Shift-click* implies holding the Shift key down while clicking on an item.
- *Double-click* implies clicking twice rather quickly on an item.
- *Drag* implies holding the mouse button down while moving it across the screen or across channels.

## FADER

- Directly mirrors the control surface fader.
- Click and hold on fader; drag up and down to adjust fader level.
- The fader level in dB appears just below each fader.
- When FADER MOTORS is turned off in the automation section, fader level can only be adjusted on-screen.
- Fader Bank 2 can be viewed on-screen along with any other selected Fader Bank (Ctrl-8 or on-screen Faders button).
- To set fader to unity gain, Ctrl-click anywhere in the fader throw region.

- Right-click a channel fader and drag across several adjacent faders to copy its level position to each.
- To jump the fader to a specific point in the fader throw, simply click the mouse on that point.
- This fader has no effect on the channel input level. It controls channel level to bus 1-8, L/R mix, and the post-fader aux outputs or, if Faders to Tape is selected, level to tape.
- When BOT (bottom) metering is selected, the channel meter is displayed next to the fader.

## Fader Label (Scribble Strip)

- Double-click in the channel name region.
- Type in a track name.
- Tab to next channel or shift+tab to previous channel.
- Press enter or click anywhere else on-screen to exit “track” naming.



## MUTE

 
- Highlighting the MUTE button turns the channel off in the main mix and bus 1–8 outputs.
- Use the mouse to click the MUTE button and highlight it.
- Simply click on more MUTE buttons to mute more channels.
- To select or deselect multiple adjacent MUTE buttons, click and hold on any MUTE, then drag across the desired channels.

## SOLO

- The function of the SOLO button (PFL, AFL, or MIXDOWN) is dependent on the solo mode selection in the control surface SOLO/STUDIO section.




- Click the on-screen SOLO button to hear one channel alone.
- Hold the Shift key to solo more channels or select Solo Latch mode in the Options menu.
- With the Shift key held, click and drag across multiple SOLO buttons to select them all.



### Solo Isolate Mode

 This feature is useful when you want a track, or tracks, to remain on, even when a solo button is pressed. For instance, if you want to individually solo each track along with the drums, simply isolate the drum channels, then press individual solo buttons. Solo isolating effects returns is also a common use for this feature.



- Hold the Alt key and click—or click and drag across—any number of channel SOLO buttons to isolate them from the solo action.
- *Alt-click* on a Solo that's in Isolate mode to remove it from Isolate status.
- Channels in Solo Isolate mode have blinking SOLO buttons. In AFL and MIXDOWN solo modes they'll be heard even when other channels are soloed.
- For example, if you always want to hear the FX along with any soloed channels, put the FX channel in Solo Isolate mode.
- Not active during PFL solo status.
- Can also be turned on and off in the Channel List (Ctrl+B).

## Quick Select Fat Channel

Simply double-click the control surface SELECT button to instantly open or close the Fat Channel. On-screen, double-click the select button, click on the Fat Channel tab at the bottom of the screen, or press Ctrl-6 to open the Fat Channel. To close it, press Ctrl-6 again or click the Fat Channel tab at the bottom of the screen.



### SELECT

- Activates a channel for modification of any FAT Channel parameters.
- Double-click Select to view on-screen Fat Channel.

## V-Pots

The onscreen V-Pots, like the onboard V-Pots, are multifunctional. *Click-Drag* up to increase, pan right, etc.; *Click-Drag* down to decrease, pan left, etc. Control-click to set default value.



- Selects channel for cut, copy, and paste actions.
- Press shift, then click or drag across multiple SELECT buttons to choose more than one.
- Right-clicking the mouse highlights multiple channel SELECT buttons in the same way as Shift-click.

### V-Pot

- Controls pan, aux level, aux pan, digital trim, or level to tape, depending on selection in the MASTER section.
- Click and hold on knob, then drag to change setting.
- Drag up to turn knob clockwise or down to turn knob counterclockwise.
- Control-click any V-Pot to set it to default value (center, unity gain, etc.).

### WRITE

- Activates channel to record automation data.

### RECORD


- Arms the record function on up to 24 tracks of any properly connected multitrack(s). The machines must respond to MIDI Machine Control (MMC) and they must have proper MIDI device ID settings.
- Blinking lights indicate tracks are in record-ready mode—as in, they aren't recording yet.
- Solid red lights indicate that the multitrack is running and active—as in, you better hope you're not erasing something you didn't want to lose.
- Click, hold, and drag to select or unselect multiple record buttons.

**Note:** If the record process isn't working as expected, verify that Record Safe is not checked in the Options/Transport menu. With Record Safe selected (checked), neither the D8B nor any connected devices will enter record mode.



## Point and Click Aux Sends

To increase the send level, click to the right of any Aux and drag to the right; drag to the left to decrease the send. Control-click any Aux to set it to unity gain.

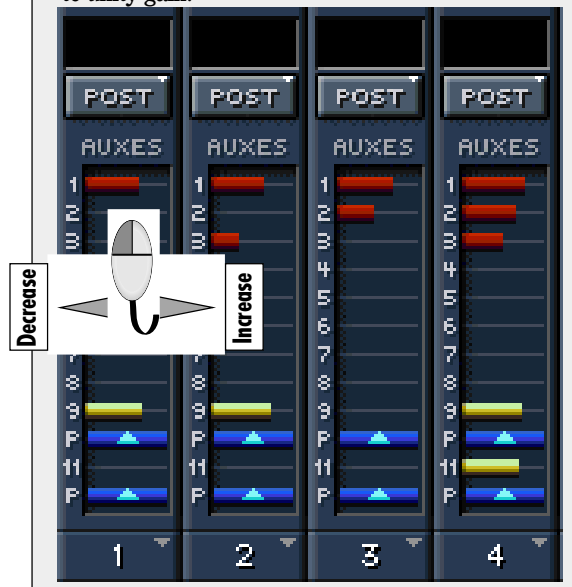

### AUX Send Levels

- Click and drag on the level indicator bar from left to right to increase the Aux send, and drag from right to left to decrease the level.
- The red bar indicates post-fader Aux level.
- The yellow bar indicates pre-fader Aux level.
- Control-click next to any channel Aux to set level to unity.
- Shift-click an Aux level to mute and unmute it.
- Alt-click an Aux level to toggle the Pre/Post status. Red bars indicate post-fader, and yellow bars indicate pre-fader.




- To copy an Aux level across multiple channels, right-click on a level indicator, then drag across several channels.
- A numerical Aux level readout displays directly below the Aux grid where channel numbers normally display.
- Globally change the Pre/Post status for all channels in the Setup/Mix Options window.

## Aux Pans 9-10 and 11-12

- The blue bars with the pointers, located after Aux levels 9 and 11, are pan controls for Auxes 9/10 and 11/12.
- Click and drag left to pan left; click and drag right to pan right.
- Center pan position puts the pointer in the middle of the pan bar (the default setting).
- Control-clicking sets the pan to center position.
- To copy an Aux pan across contiguous multiple channels, Alt-Click or Right-Click on a pan position indicator, then drag across several channels.

## EQ On/Off


- Highlight the EQ button to turn equalization on.

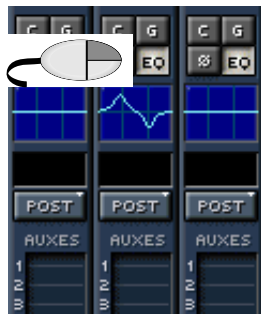

## Cool Quick EQ Box


The blue box directly below the EQ on/off icon offers lightning-fast access to powerful equalization.

- When EQ is on, adjustments to the overall EQ curve can be performed quickly without entering the Fat Channel.
- Click on the EQ line and drag up or down to boost or cut frequency ranges. All four bands can be adjusted here.
- Click on any boost or cut, then drag right to raise the selected frequency or left to lower it.
- Right-click (or Alt-click) on any boost or cut, then drag left to increase bandwidth or right to decrease it.
- Double-click in the box to open the Fat Channel for more detailed editing of the EQ parameters.

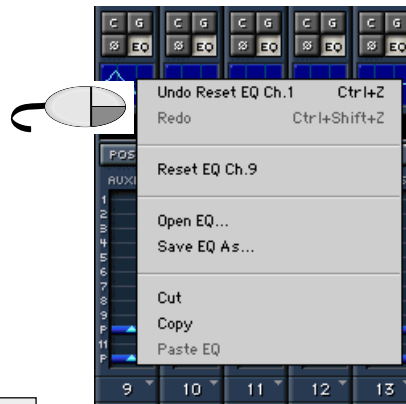

## Quick EQ

You can adjust the EQ by click-dragging directly in the main screen EQ box. This procedure doesn't provide immediate pinpoint accuracy but is very quick in the heat of battle.

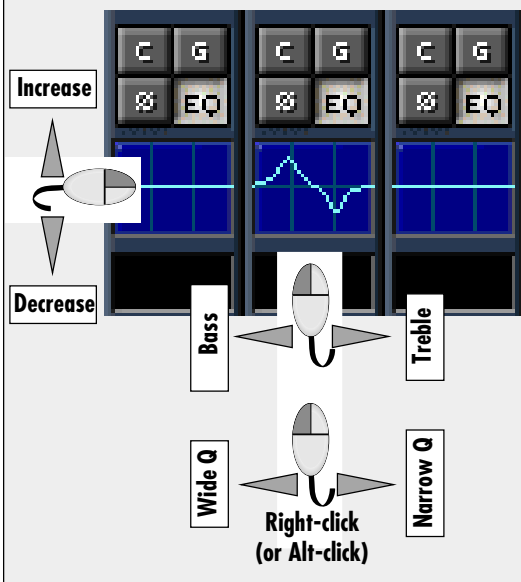

**Note:** Right-click in the box to open an edit menu. This menu provides options to Undo, Redo, Open, Save, Cut, Copy, Paste, and Reset the channel EQ status.

## Compressor On/Off

 
- Highlight the Compressor button (C) to turn the compressor on.

## Gate On/Off

- Highlight the Gate button (G) to turn the gate on.

## Phase

- Highlight Phase button (∅) to invert the channel polarity 180°.



## Digital Trim

- The digital trim is a gain stage that allows you to adjust the input level to the channel before the channel DSP. This can be useful for tracks that were recorded at a very low level.
- The blue bar above the Compressor, Gate, EQ, and Phase buttons graphically indicates the digital trim level.
- While adjusting digital trim, the track number window below the Auxes displays the digital trim level.




- Click and drag left or right to change the trim level.
- Control-click to set trim level to unity.
- Right-click and drag to copy trim level across multiple channels.

## Level To Tape


- The red bar above the Digital Trim indicates Level To Tape.
- Click and drag left or right to change the level.
- Control-click to set level to unity.
- Right-click and drag to copy trim level across multiple channels.
- Faders to Tape mode (Options menu) ties the source channel fader to the tape level output.

## Multitrack Direct Outs

- Fader Banks 1, 2, 3, and the BUS OUTS 1–8 (in Bank 4) can be routed to the direct outs 1–24.
- A hyphen in the OUT box indicates no direct out assignment.
- Click and hold in the OUT box to see the Tape Out list.
- Drag down the list to the desired output, then release the mouse button.

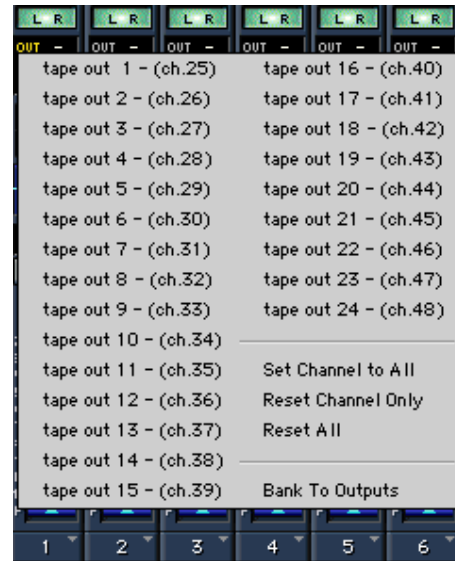

- Click on “Reset Channel Only” to deselect all tape output assignments for the selected channel.
- Click on “Reset All” to globally deselect all channel and bank tape output assignments.
- Click on “Bank to Outputs” to send all 24 channels on the current bank to consecutive tape tracks.
- Click on “Set Channel to All” to send the selected channel to all 24 tape outputs. This is a convenient way to track a single mic or instrument while overdubbing (for the umpteenth time) to multiple tracks. Simply select the desired record track on the multitrack recorder. The signal will always be there for you.

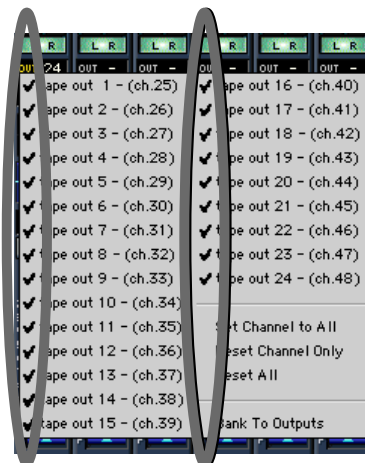

## The Feedback Loop

**Caution:** When Bank to Outputs is selected from the TAPE IN bank—or anytime you assign to a tape track from a tape return channel, then monitor the correlating fader—there is potential for a nasty feedback loop. To create the feedback loop:

- Select the TAPE IN bank.
- Place the multitrack in record-ready.
- Assign a channel to its correlating multitrack input (Channel 25 to Tape Output 1, Channel 26 to Tape Output 2, etc.)
- Slowly raise the Level to Tape V-Pot—or if you're in Faders to Tape mode, raise the level of the TAPE bank channel fader—correlating to the tape track (Channel 25, 26, etc.)
- Watch the nasty feedback loop on the meter bridge. You might not even be able to hear the loop, but it's there.
- Finally, try to never do that again!

**Note:** This phenomenon is not specific to the D8B OS; it's just the way interconnecting gear works. To eliminate the possibility of a feedback loop is to rob creative flexibility from the system. We all learn to avoid creating feedback loops in our working environment. But it helps to be alerted to the possibility from time to time.



- Any channel can be sent to any number of tape outputs by simply selecting multiple tape outputs: however, only the last selected output is displayed in the OUT window.
- No two channels can be assigned to the same tape output. To sum channels to an output, assign them to a bus, then route the bus to a tape out.

### BUS and L/R Output Assignments

- Highlight any BUS out 1–8 to route the channel to the selected bus.
- Highlight the L/R button to route the channel to the Main L/R mix output.



- Click and hold on any BUS or L/R button, then sweep across adjacent channels to assign the selected bus output to multiple channels.

- To assign multiple channels to a mono or stereo set of tape outs, assign them to buses, or a pair of buses, then route the buses to the tape output(s).
- Stereo pairing is selected by assigning a channel to any odd/even bus pair (1/2, 3/4, 5/6, 7/8, L/R, etc.) In this case, the PAN control positions the channel between the bus pairs.

## The Master Strip


### Master Fader


- Controls the Master L/R Mix level.
- Ideally set at unity gain. Control-click anywhere in the fader throw to automatically set the fader to unity.
- Click anywhere in the fader throw to instantly snap to that level.

### MASTERS, EFFECTS, TAPE, AND LINE buttons

These are the on-screen fader bank selectors.

- LINE is Fader Bank 1
- TAPE is Fader Bank 2
- EFFECTS is Fader Bank 3
- MASTERS is Fader Bank 4
- HUI is Fader Bank 5 (only available when HUI mode is active)

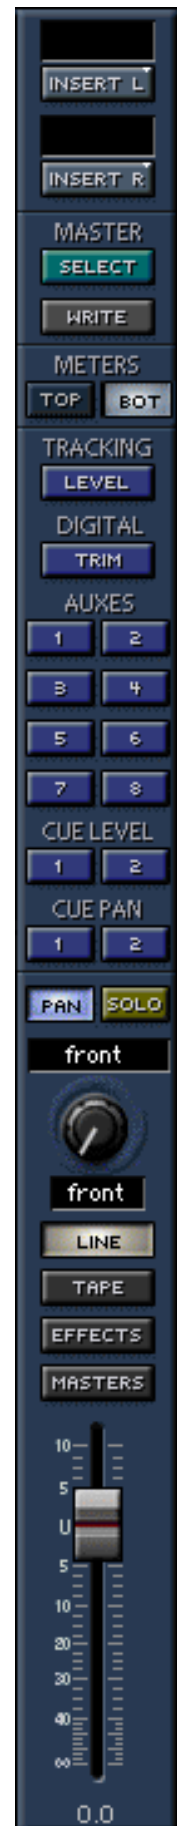

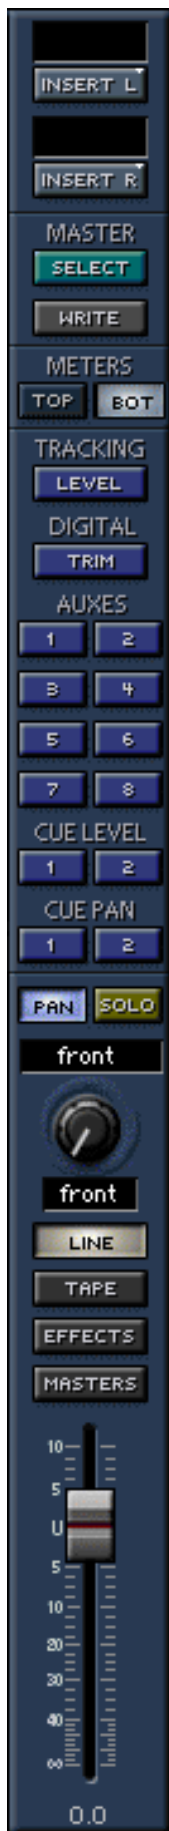

## MASTER V-Pot

- Functional as a master Aux level control when any of the Auxes are selected in the Master Strip.
- When the PAN icon is highlighted, the Master V-Pot functions as a front/rear pan position control for any selected channel in all Surround Modes (not stereo).
- The Master V-Pot SOLO button solos any selected Aux bus.

## CUE LEVEL and CUE PAN 1 and 2

- These buttons activate the channel V-Pots for level adjustments and L-R panning for Auxes 9/10 and 11/12.
- Selecting CUE LEVEL 1 or 2 activates the channel V-Pots for individual stereo send levels and the Master V-Pot for the selected cue master volume/level.
- Selecting CUE PAN 1 or 2 activates the channel pan V-Pots for L/R placement.
- Click-drag the channel V-Pot up to move right; click-drag down to move left.
- Control-click any channel V-Pot to set it to center position (in PAN) or to unity (for LEVEL).
- Right-click a channel V-Pot and drag across several channels to copy its level or pan to each.

## AUX buttons 1–8

- Each button activates the channel V-Pots for Aux send level adjustment.
- When any AUX button is highlighted in the Master Strip, the Master V-Pot is activated to control Master Aux output level.
- Click on the channel V-Pot and drag up to increase level; drag down to decrease level.
- Control-click on the channel V-Pot to set it to unity gain.
- Right-click a channel V-Pot and drag across several channels to copy its level to each.

## DIGITAL TRIM

- This button activates the channel V-Pot to control the digital input level—pre DSP.
- Click on the channel V-Pot and drag up to increase level; drag down to decrease level.
- Control-click on the channel V-Pot to set it to unity gain.
- Right-click a channel V-Pot and drag across several channels to copy its level to each.

## TRACKING LEVEL

- This button activates the channel V-Pots to adjust final post-DSP output level to the multitrack outputs.
- Same control as the onboard LEVEL TO TAPE.
- This control fine tunes the channel output levels to the multitrack.
- Click on the channel V-Pot and drag up to increase level; drag down to decrease level.
- Control-click on the channel V-Pot to set it to unity gain.
- Right-click a channel V-Pot and drag across several channels to copy its level to each.
- When Faders to Tape is selected, the tracking source channel's fader and Tracking Level V-Pot are equivalent functions.

## METERS

- The BOT (bottom) button displays the channel meters next to the faders in the faders view.
- The TOP button displays the meters in a larger view, overlaid across the Aux section.
- With both BOT and TOP buttons off, no metering is displayed.

## WRITE

- Activates the Master Strip to record selected automation data by the Main Fader or Aux Masters.
- Any moves in the Master Strip will be recorded into automation if the automation settings are set to receive them.

## SELECT

- Activates the Master Fader in the Fat Channel display.
- Enables the Master Fader and Aux Masters status to be included in the “Set Default Levels...” prompt or in the clipboard operations.

## Master INSERT L/R

- Allows any plug-in to be patched into the main mix outputs.
- Simply choose the desired plug-ins from the list that pops up when mouse-clicking the INSERT icon.
- This is a post-master-fader insert.



## Signal Path Flexibility


The D8B v5.1 software provides extremely flexible routing options. Selecting an insert on-screen is exactly the same as patching from the signal path into an external effect, then back through a patch bay or dedicated physical insert point. Of course, digital patching induces no extraneous noise, crackles, or degradation—so, in that way it's not like a patch bay at all.

A review of the signal path is helpful at this point:



### PRE Insert


- Patch any plug-in through this insert. This is a great place to insert dynamic controls since the level is constant and unaffected by EQ, dynamics, or fader adjustments.
- Select Channel Patch to route another channel into this Pre-DSP insert point.

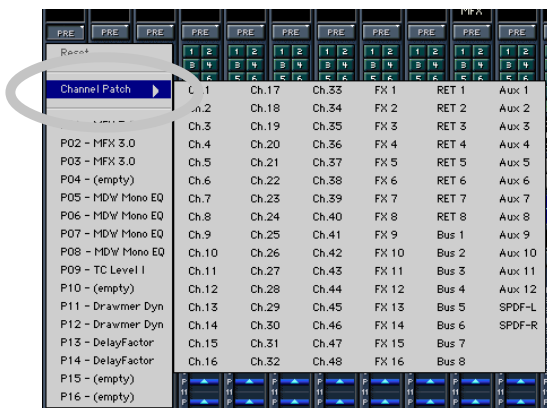

- Source any channel, Aux Send or Return, FX Send, Bus Out, or Digital Playback device at this point.

### POST Insert

The POST Insert accesses the signal immediately past the EQ circuit and before the channel meter and fader. This is an excellent patch point for individual channel effects, where it's appropriate to send the equalized and dynamically controlled signal to effects like chorus or delay. The POST insert is also a good choice when inserting an EQ in place of—or in addition to—the existing channel EQ.

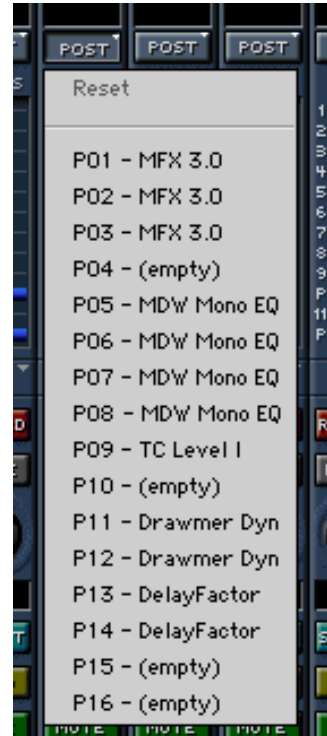


The PRE and POST insert selections are displayed in the readout windows immediately above the INSERT icons. Clicking on the window opens the assigned plug-in module.



## Channel Layout Reconfiguration

The Channel number indicator buttons provide the capability to move channel strips around and reconfigure the channel layout. This is a very convenient feature, especially during mixdown. For example, it helps to have all the vocals together, so just reconfigure the channels so they're all on adjacent channels.

Anytime you need to have immediate access to faders from another bank, this feature is a life saver. Simply click on the channel number and select the desired channel.

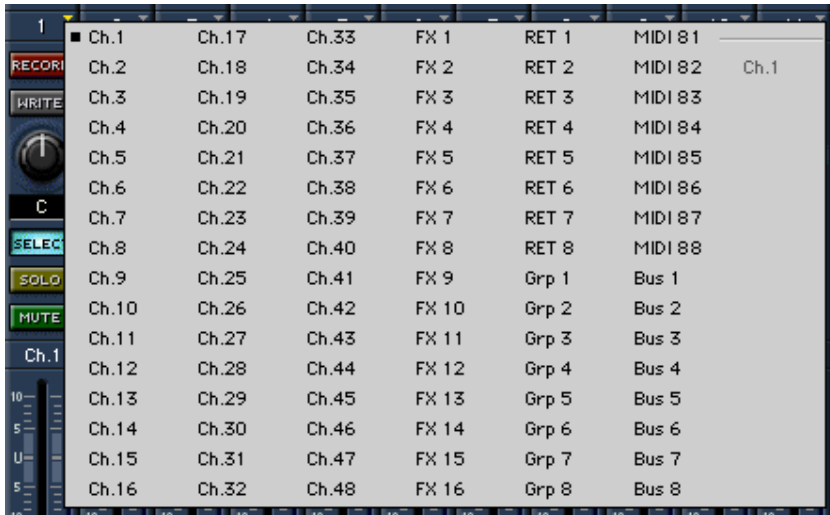

- Click the on-screen channel number icon to reveal the Channel List.
- Drag to select the desired channel for this location and release.
- When a different channel is selected for a location, there is no effect on any other channels. For example, if you select to move channel 30 to the channel 10 position, channel 30 still remains in its original position between 29 and 31.
- When channels are moved, their numbers turn yellow to make it easy to recognize them.
- To reset the channel to its original layout configuration, simply select the original channel number. Notice the Mackie OS places the original number to the right of the main list for your convenience.

Notice, the channels below have been moved around to provide a better mixing configuration.






# May I See A Menu Please

There's amazing power and flexibility in the Menus and Screens built into the Mackie OS. This guide will serve as an excellent Quick Reference for each menu and screen.

## The File Menu

Contains:

- New Session... (Ctrl+N)
- Open Session... (Ctrl+O)
- Close Window (ESC)
- Save Session (Ctrl+S)
- Save Session As...
- Save As Template
- Reset Template
- Desktop (Ctrl+D)
- Shutdown (Ctrl+Q)

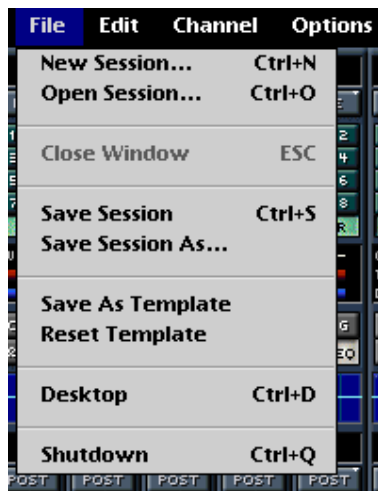

Let's take a quick look at each menu item.

### New Session (Ctrl+N)

- Press Ctrl+N or click the File menu, drag down to New Session, and release.
- Select this to—wait, let me guess—start a new session.
- The OS will ask you to save changes to the current session, if necessary.
- Next, you get the chance to name the new session, select which folder it ends up in, create a new folder to put it in, or cancel.
- The session can be saved to the internal hard drive or to a 3.5" floppy disk.
- A session consists of all snapshots, automation data, and—if you choose—custom EQ, effects, and dynamics patches.
- A new session uses the Template as its initial status.

### Open Session (Ctrl+O)

- Press Ctrl+O or click the File menu, drag down to Open Session, and release.
- Use this to open a preexisting session file.
- As soon as the session is opened, the faders and all other parameters move to their proper settings for the current time code location.

### Close Window (ESC)

- Press Ctrl+W, ESC, or click the File menu, drag down to Close Window, and release.
- Closes the front window (Setup, Snapshots, Locator, Surround, Event List, Mix Editor Fat Channel, or any menu screen with a CLOSE icon in the upper right corner).

### Save Session (Ctrl+S)

- Press Ctrl+S or click the File menu, drag down to Save, and release.
- Saves the current session to its assigned hard drive or floppy disk.
- If you don't choose to activate the D8B automatic save feature, press Ctrl+S often to ensure against lost work—stuff happens.

### Save Session As...

- Click the File menu, drag down to Save Session As..., and release.
- Enter a new file name (or use the default name) and select destination folder and/or drive.
- An extremely useful feature for saving variations of a session.
- Lets the current session be saved under a new name, leaving the original file untouched from that point on.
- Good for backing up session data under a new file name, or to a floppy or external drive.

### Save As Template

All new sessions are based on the template. The Template is stored separately, but it can be updated at any point with the current static mix levels, setup parameters, and track attributes of any given mix. Simply pull down the File menu and initiate the Save Template operation.

The following are stored in the Template:

- Channel Name
- Noise Filter setting (in Channel List)
- Channel Layout (rearrangement)
- MDS Network settings
- Stereo/Surround setting
- Current Tempo (default to 120 bpm)
- Time View (SMPTE/BBT/Milliseconds)
- Mix Editor – Grid Setting (resolution—called Snap Grid in the pull-down), Enable Snapping, Snap to Cues, Snap to Grid

Many other functions carry over from session to session when opening a new session (e.g., sample rate).

If you require a more finely tuned template, try these approaches:

- 1) Import a snapshot of your favorite settings (you must save one to the snapshot library first).
- 2) Do a "Save As..." of the current file. Keep a primary snapshot on tap in this file to reset everything. Then select all channels and apply the Edit/Clear Automation. (This doesn't clear any dynamic automation in the plug-ins, so you may want to remove all plug-ins in the Plugin Configuration window to clear plug-ins of assignment and automation.)

**Note:** It is not possible to update or delete the Template from the control surface VFD. If you are working from the control surface without an on-screen interface, you may want to save a session with all of your favorite parameters in place, then after powering up, recall this session as the starting point for the new session. Remember to immediately save the new session under a different name (using Save As...) so your original settings remain intact.

## Reset Template

Restores a new session to the factory default settings for all static parameters.

To reset the Template to the factory default settings, select the File menu Reset Template command.

## The Desktop Window (Ctrl+D)

The Desktop offers file management features unavailable from the onboard Fat Channel VFD, such as deleting files, flushing the toilet, mounting and refreshing drives, and copying multiple files or folders.

Use the Desktop to:

- Copy files between floppy disks and the internal hard drive.
  - Flush files to the toilet (delete).
  - Create new files.
  - Rename files.
  - Duplicate files.
  - Mount/Refresh drives.
  - Drag and drop files and folders between any two open windows.
- Note:** The destination drive or folder must be opened and displaying its contents for proper placement to occur. In other words, don't drop files or folders onto closed folders.

Gain access to the Desktop by:


- Clicking the File menu and dragging down to Desktop.
- Pressing Control+D from the computer keyboard.
- Clicking Desktop in the window selection bar along the bottom of the on-screen interface.

To close open windows:

- Press Control+W to close the active window (click once in a window to be sure it's active).
- Click in the triangle-shaped icon in the upper left-hand corner of the active window.
- Click Close All in the window selection bar along the bottom of the on-screen interface.


To exit the Desktop:

- Click Mixer in the window selection bar along the bottom of the on-screen interface.
- Press Control+D.

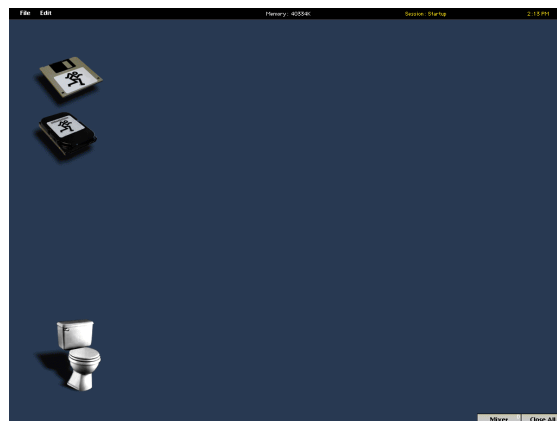

## Hard Disk

- Click the Hard Disk icon to open the internal hard drive.
- Common navigation procedures apply through folders and sub-folders.

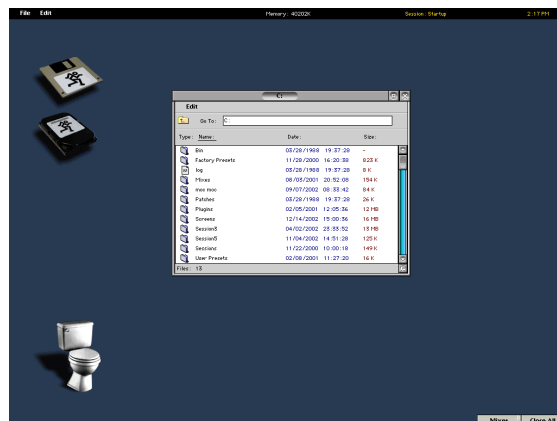


## Floppy Disk

- Click the on-screen Floppy Disk icon to open the floppy disk window.
- Common navigation procedures apply through folders and sub-folders.

## Desktop File Menu

Use the Desktop File Menu to:

- Close windows (ESC)
- Go Back to Mixer (Ctrl+D)
- Shutdown (Ctrl+Q)

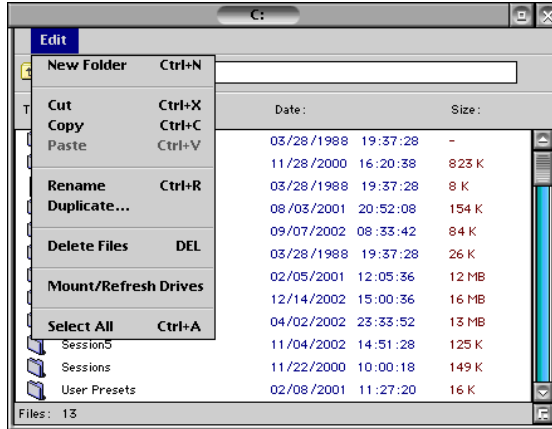

The Edit Menu within the hard disk and floppy disk windows contain the same options.

### New Folder (Ctrl+N)

- This action creates a new folder in the active window.

### Cut, Copy, Paste, Rename, Duplicate Files

You guessed it! All these items do all these things to any selected file or folder.

### Delete Files (DELETE)

- Highlight the file or folder and select Delete from the Edit menu.
- Drag any file or folder to the toilet icon to remove it from the disk.
- A *Warning* window stands between you and complete erasure of the file to verify the action.

**Note:** Once a file is put in the toilet (DELETED), there is no way to recover it. It's flushed!

## Mount/Refresh Drives

Any time a file doesn't seem to have ended up where you thought you put it, or you've swapped floppy disks, selecting Mount/Refresh Drives will update a file directory window to display its current contents.

## Select All

Selects everything that's selectable in the open window.

**Note:** Anytime you save patches (EQ, compressor, gate, plug-ins, etc.) the Mackie OS defaults to the *User Presets* folder. Don't fight this procedure! To guarantee that your file will be around through various OS and plug-in updates, keep your presets in the default locations.

## Shutdown (Ctrl+Q)


Use the shutdown function to close the Mackie Real Time OS prior to shutting off the D8B.

## The Edit Menu

The primary edit menu (top of the faders overview screen) contains some functions common to normal computer use (Cut, Copy, Paste, Undo, Clear) along with several very useful features unique to the D8B operating system.

### The Edit Menu Contains:

- Undo (Ctrl+Z)
- Redo (Ctrl+Shift+Z)
- Cut Channels (Ctrl+X)
- Copy Channel(s) (Ctrl+C)
- Paste Channels (Ctrl+V)
- Delete Events (DEL)
- Set Default Levels...
- Modify Levels (Alt+M)
- Insert Time
- Delete Time
- Insert Global Time
- Delete Global Time
- Clear Automation...
- Clear Edit History
- Copy Mix To Bus
- Play From Selection (Ctrl+Space)
- Select All (Ctrl+A)

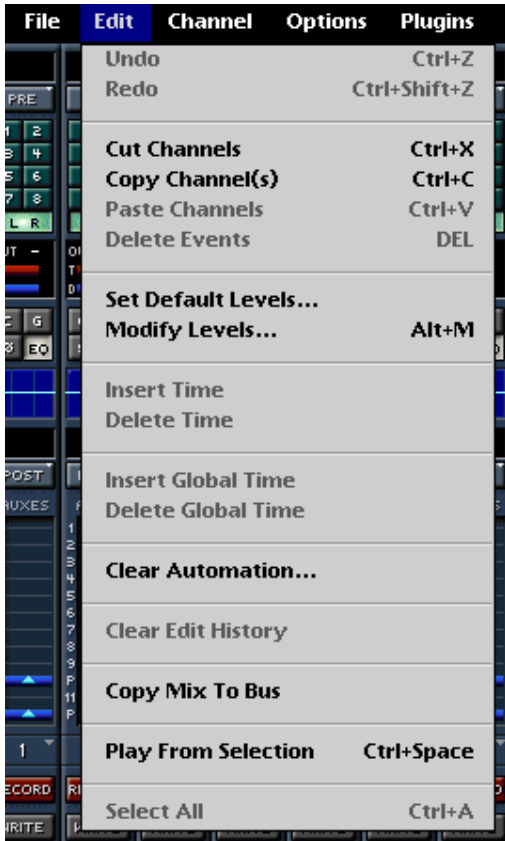

Let's take a quick look at each menu item.

### Undo (Ctrl+Z)

- Reverses an action. If you've made a bad automation pass, cut something you didn't really want cut, pasted somewhere you didn't want to paste, etc., simply select Undo and the D8B reverts to its previous status.
- Selecting Undo multiple times steps back through the history list (list of actions taken), all the way back to the Top Level (starting point) if necessary. Open the History List (Ctrl+H) to check it out.

### Redo (Ctrl+Shift+Z)

- Reverses an Undo. If you've undone an action, or set of actions, you might determine that your original guess was best.
- Redo is a multilevel command, like Undo, so multiple redo commands retrace your steps through any undone actions in reverse order—the last is first and the first is last.

### Cut Channel (Ctrl+X)

- Removes selected data: channel, track, automation, dynamics, etc.
- Information that's been Cut is stored on the clipboard, awaiting reassignment or purging.
- Information in the clipboard can be pasted to another channel, track, region, etc.

- Cutting data typically restores selected channels or regions to their default settings or to off.
- The History List keeps a running list of the Edit choices for later recall.

### Copy Channel(s) (Ctrl+C)

- Places selected data on the clipboard, awaiting reassignment.
- Copying data has no effect on the data being copied.
- Copied data is reassigned using the Paste command (Paste Channels, or the Paste button in the onboard Clipboard section).

### Paste Channels (Ctrl+V)

- Replaces the data in a selected channel, region, or area with relevant data residing in the clipboard.
- When multiple channels are on the clipboard, data from the lower channel numbers are pasted first when there are fewer number of target tracks selected.
- Paste can be undone.

### Delete Events (DEL)

This action deletes any selected events or range of events. This action is entered on the History List and available for Undo, as long as it remains on the list.

### Set Default Levels...



- This is a very useful automation tool and is the primary starting point for the automation process.
- For use in automation, this feature sets the current levels of the faders on the selected channels as the default through the range of SMPTE time code.
- Changes to automation data can be selected to retain their adjusted status until another automation move is written, or to snap back to the default level upon exiting Write mode (see Write Flyback on page 61).

### Modify Levels (Alt+M)



- Use this control to modify all selected channels for the user-selected parameter.

- Choose the type of parameter in the top pull-down button. Set the action to Trim, Set, Min, or Max.
- *Trim* adds or subtracts the selected value from all selected channels for the selected parameter. When Trim Fader is selected, the units are calibrated in dB for highly accurate fader adjustments.
- *Set* moves the selected parameter to the specified value for all selected channels.
- *Min* limits the minimum parameter setting to the specified value for all selected channels.
- *Max* limits the maximum parameter setting to the specified value for all selected channels.

**Note:** The Modify Levels command affects automation data only if the **INCLUDE AUTOMATION** box is checked. If the box is checked, levels are modified globally across the complete SMPTE time line on selected channels, for the selected parameter.

**Another Note:** When the Mix Editor is open, Modify Levels only affects the selected parameter in the Mix Editor window. It also only acts over the selected time range. If no time range is selected in the Mix Editor, Modify Levels will appear greyed out in the Edit menu.

### Insert Time

- Within the Mix Editor, this inserts a region of no data change in the selected channel region.
- The amount of blank time inserted is equal to the length of the selected region.
- Functional on any number of selected tracks.

### Delete Time

- Deletes a selected time region in the Mix Editor window, including all data and changes.
- The amount of deleted time is equal to the length of the selected region.
- Functions on any number of selected channel regions.

### Insert Global Time

- With the Mix Editor open, this feature globally inserts a region of no data change at the selected start point (on all channels for all data).
- Selecting Insert Global Time in the Edit menu opens a window with settings for the insert start point and length of time inserted.

### Delete Global Time

- With the Mix Editor open, this feature globally deletes a region of data change at the selected start point (on all channels for all data).
- Selecting Delete Global Time in the Edit menu opens a window with settings for the deletion start point and length of time deleted.

## Clear Automation




- Removes all automation data globally for the selected channels and the selected categories.
- This action *can* be undone as long as it remains available in the History List.
- Plug-in automation is cleared by removing the plug-in from its assigned slot.

## Clear Edit History

- Removes all items from the History window.
- *This action cannot be undone!*

## Copy Mix To Bus

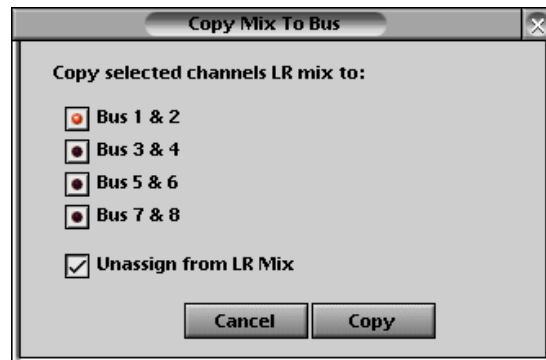

- Copies the current L/R mix to a pair of buses.
- Selections include Bus 1 & 2, Bus 3 & 4, Bus 5 & 6, or Bus 7 & 8.
- Check "Unassign from LR Mix" to remove the selected channels from the L/R Mix and copy to the selected bus pair.

## Play From Selection (Ctrl+Space)

- This action starts playback of the onboard D8B transport from the start time entered in the Mix Editor start time window.


## Select All (Ctrl+A)

- Operates on list type windows (Snapshot, Locator, MIDI Map, etc.) to select all list items for deletion.

# The Channel Menu

## The Channel menu contains:

- Channel List (Ctrl+B)
- Open Channel...
- Save Channel As...
- Group (Ctrl+G)
- Ungroup
- Channel Link... (Ctrl+L)
- Unlink (Ctrl+U)
- Faders to Unity (Ctrl+])
- Faders to Off (Ctrl+[)
- Adjust Channel Delay...
- Reset Channel Delay...
- Reset Selected Channels...
- Reset Channel Layout...
- Select Fader Bank (Alt+A)
- Select All Faders (Alt+Shift+A)
- Channel Notes (Ctrl+Shift+T)

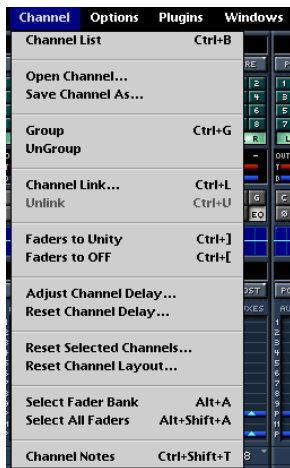

Let's take a quick look at each menu item.

## Channel List (Ctrl+B)

#	Name	Group	Playback	Write	Isolate	Link	Delay	Filter
1	Ch.1	-	Run	Write	OFF	-	OFF	ON
2	Ch.2	-	Run	Write	OFF	-	OFF	ON
3	Ch.3	-	Run	Write	OFF	-	OFF	ON
4	Ch.4	-	Run	Write	OFF	-	OFF	ON
5	Ch.5	-	Run	Write	OFF	-	OFF	ON
6	Ch.6	-	Run	Write	OFF	-	OFF	ON
7	Ch.7	-	Run	Write	OFF	-	OFF	ON
8	Ch.8	-	Run	Write	OFF	-	OFF	ON
9	Ch.9	-	Run	Write	OFF	-	OFF	ON
10	Ch.10	-	Run	Write	OFF	-	OFF	ON
11	Ch.11	-	Run	Write	OFF	-	OFF	ON
12	Ch.12	-	Run	Write	OFF	-	OFF	ON
13	Ch.13	-	Run	Write	OFF	-	OFF	ON
14	Ch.14	-	Run	Write	OFF	-	OFF	ON
15	Ch.15	-	Run	Write	OFF	-	OFF	ON
16	Ch.16	-	Run	Write	OFF	-	OFF	ON
17	Ch.17	-	Run	Write	OFF	-	OFF	ON
18	Ch.18	-	Run	Write	OFF	-	OFF	ON
19	Ch.19	-	Run	Write	OFF	-	OFF	ON
20	Ch.20	-	Run	Write	OFF	-	OFF	ON
21	Ch.21	-	Run	Write	OFF	-	OFF	ON
22	Ch.22	-	Run	Write	OFF	-	OFF	ON
23	Ch.23	-	Run	Write	OFF	-	OFF	ON
24	Ch.24	-	Run	Write	OFF	-	OFF	ON

- Allows for quick and easy setting of global channel parameters.
- Change the channel name.
- Easily set groups.
- Set playback status to Run, Punch-Run, or Disabled.
- Solo isolate channels.
- Quickly set channel links.
- Set individual channel delays of up to 255 samples (see “Adjust Channel Delay” on page 59).
- Turn digital filter on or off (to eliminate analog channel noise).

**Playback**—Allows automation playback enable and bypass for the individual channels. This feature is used in addition to the global automation bypass, but works on a per-channel basis. There are three modes within Playback: Run, Punch-Run and Disabled.

**Run:** This is the default mode, and if dynamic automation is present on the channel, automation moves play back when time code is received and the global automation bypass is disabled.

**Disabled:** This mode simply disables automation playback on the individual channel, regardless of the global Bypass status. “Disabled” is a safe area that you can use to prevent automation playback from chasing and overwriting your latest edits before you get a chance to commit the settings. The “Disabled” feature is also handy for setting up parameters within the context of a mix, relative to whether other individual channels or sections are automation bypassed.

**Punch-Run:** Once you've automated a channel, you might want to preset a punch-in level to drop or boost the parameter of interest (especially a fader). In Absolute mode (Auto Touch off), the parameter cannot be altered if it is chasing automation, as you can see when you grab a fader knob during automation playback and it “fights” you. For this purpose, we created the Punch-Run mode. Place the channel in Punch-Run, which releases the playback chase mechanism until the channel has been placed in any automation Write mode. When Punch-Run is engaged, you can roll back the tape, freely adjust the parameter level and, when the punch-in point arrives to set the new level, press the WRITE button on the channel and the parameter level will be written to the track. At punch-out, two things will occur: the parameter level jumps to any preexisting level on the track, and the channel parameters now chase on subsequent playback.

You cycle through the modes by clicking on the Playback column in the specific channel's row. From the console, hold down an individual channel strip's SELECT button for 2 seconds, and then press the SELECT button under the Playback mode to toggle between the Disabled, Punch-Run, and Run states.

**Shortcuts:** Note the “previous-click” shortcut (the last click has a memory if it was on a “like” parameter, and copies the previous-click setting to the next click). Also you can click and swipe down the list to change the column to the value that’s toggled by the click.

From the control surface (or the keyboard) press the CONTROL button (or Ctrl key) and the channel SELECT button simultaneously to enter or exit (toggle) Punch-Run mode. The red bank LED (for Ch 25-48) above the SELECT button blinks to indicate Punch-Run status.

**Note:** The Disabled state does not automatically reengage itself. Remember to toggle it to Playback status if you want automation moves to play once again.

**Write**—This is an individual channel write-safe function that is independent of the global Automation Bypass and Automation filters. There are two modes, Enabled and Locked, where Enabled allows automation to be written, and Locked prohibits the overwriting of moves on the channel’s dynamic automation track.


Toggle the Write mode by clicking on the Write column in the specific channel’s row. From the console, hold down an individual channel strip’s SELECT button for 2 seconds, and then press the SELECT button under the Write mode in the Fat Channel Display to toggle between the enabled and locked states.

**Shortcuts:** Note the “previous-click” shortcut (the last click has a memory if it was on a “like” parameter). You can also click and swipe down the list to change the column to the value that’s toggled by the click.

**Isolate**—This turns Solo Isolate on and off. When Solo Isolate is on, the channel or track remains on when another channel is soloed.


**Filter**—This noise-shaping filter can improve the signal-to-noise ratio for particularly noisy analog input sources. If you have Digital I/O cards (DIO•8, PDI•8, OPT•8) installed in channels 26 through 48, turn the filter off for those channels. Save the settings in your template so they carry over from session to session.

## Open Channel...

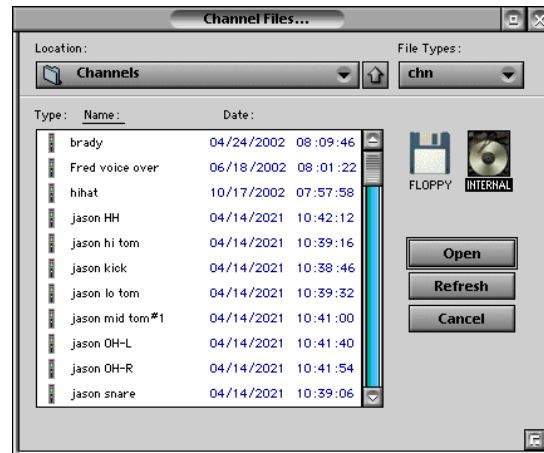

- Static channel parameter settings can be saved and recalled.
- The Open Channel window provides access to previously saved channels on either a floppy disk or the internal hard drive.
- Highlight the desired item and click Open to send the saved channel data to the selected channel.
- Recalls all Fat Channel parameters.

## Save Channel As...

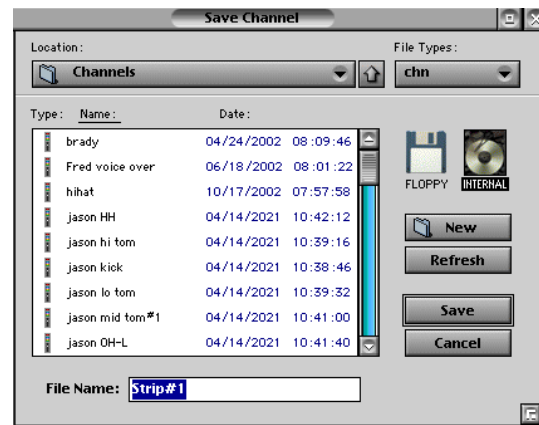

- Allows static channel parameter settings to be named and saved for instant recall at a later time.
- Descriptive naming provides for stress-free recall of a finely-honed channel status.
- Save channel status to either a floppy disk or the internal hard drive.
- Select New Folder to organize channels into logical groups: band name, instrument type, singers, drums, guitars, etc.
- Saves all Fat Channel parameters.

## Group... (Ctrl+G)



- Provides a very convenient way to group faders for control by a group master fader in the MASTERS fader bank.
- Simply select all the desired channels for a specific group by Shift+Selecting throughout the Bank or Banks you choose, then use the pull-down menu to assign them all to a group.
- This does not override any previous group settings outside the selected channels; however, a channel can only be assigned to one group. The most current group selection does override a previous channel group assignment.
- This feature provides a way to add faders to an already existing group.

## Ungroup




- Provides an easy way to remove channels from a previously established group.
- Select some or all of the grouped channels to remove the selected channel from the group status.
- Select "Coalesce" to retain the Group's automation data with the selected channel(s) after ungrouping.
- Select "Dissolve" to retain only the channel's automation data (pre-group) after ungrouping.

## Channel Link... (Ctrl+L)

- Channel linking allows you to control a pair of channels at the same time. All channel parameters can be linked or just selected parameters. For instance, in many cases only the faders need to be linked; all other parameters should remain independent for the individual track.
- Any channel can be linked horizontally to an

adjacent channel on the same bank, or vertically to a channel directly above or below it (Mic/Line and Tape Return Banks only). For example, channel 2 can be linked to channel 1, channel 3, or channel 26. This can be done through the GUI or on the console surface.

- Horizontal linking allows two stereo channels to be input on adjacent channels and controlled as a pair of consecutive faders. Vertical linking allows stereo inputs to be input on vertical pairs (with analog cards installed in the appropriate tape I/O slots) and controlled as a stereo pair from a single fader even though the inputs are on two separate banks. This provides great flexibility to a studio with many stereo inputs, as up to 24 stereo sources can be controlled from a single bank.
- To link a pair of channels from the GUI, select the left channel of a horizontal pair or the top channel of a vertical pair, and choose Channel Link... from the Channel menu, or press Ctrl+L on the keyboard. The Link Setup Window will appear.

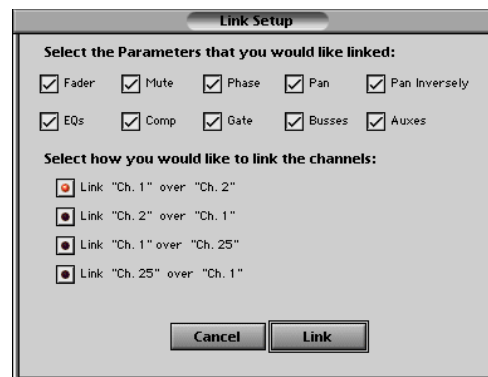

- Select the parameters that you want linked between the channels. All checked parameters are adjusted together for both linked channels. All parameters are checked by default. Next select how you want the channels linked. The following link options are available:

### Link "Ch. 1" over "Ch. 2"

Channel 1 is linked to channel 2 according the selected parameters. All selected parameters are copied from channel 1 to channel 2 when the Link button is clicked.

### Link "Ch. 2" over "Ch. 1"

Channel 1 is linked to channel 2 according the selected parameters. All selected parameters are copied from channel 2 to channel 1 when the Link button is clicked.

### Link "Ch. 1" over "Ch. 25"

Channel 1 is linked to channel 25 according the selected parameters. All selected parameters are copied from channel 1 to channel 25 when the Link button is clicked.

### Link "Ch. 25" over "Ch. 1"

Channel 1 is linked to channel 25 according the selected parameters. All selected parameters are copied from channel 25 to channel 1 when the Link button is clicked.



- Click the Link button to link the channels you have selected or click Cancel to cancel the linking process.
- To link a pair of channels horizontally from the control surface, press and hold the SELECT buttons of the two adjacent channels you wish to link.
- To link a pair of channels vertically from the control surface, press and hold ALT+SELECT on one of the channels you wish to link. In both situations the Fat Channel display changes to the appropriate linking screen after a few moments. Press the NEXT button to adjust the parameters you wish to link. Press the PREVIOUS button to return to the first link screen when you are finished setting link parameters. Press either the Link → or Link ← buttons (Link ↑ or Link ↓ for vertical linking) to perform the Link. Remember, the arrow points to the source channel. Link parameters are copied from the source channel to the other channel.
- *Relative offset:* Pressing [Shift] on the console or keyboard while moving any controller function on the D8B console surface or with the mouse allows a relative distance (or relative offset) of ANY linked parameter. For example, on two linked faders, press and hold [Shift], move one fader, let go of [Shift], and a new relative position is maintained. To maintain a pan spread, press and hold [Shift], move a linked pan V-Pot, release the [Shift] and the pans will maintain the offset spread to the extent of the maximum left or right value.
- Remember that pressing [Ctrl] and moving a controller resets it to a normal, or default, position, so you can always realign and match the relative link to a zeroed offset.
- *Inverse Pan linking:* Pan can be set to link inversely. This means that rotating the Pan control on one channel causes the Pan control on the linked channel to rotate in the opposite direction.
- *Inverse Switch toggling:* You can press [Shift] and then press the MUTE button on a channel, and it will toggle oppositely to the other linked mute. This feature can be especially handy for applications such as vocal comps and bus switching. Inverse switching is set and recalled individually on all parameters, so Bus 1 and the linked Bus 1 can be inversely locked, while Bus 2 and mutes are locked to the same value.
- Holding down [Shift] and enabling a linked channel mute, Bus 1-8 and L-R assigns, EQ on/off, Gate on/off and Comp on/off assignment enables the inverse function. To leave this mode, press [Shift] and the linked button again. The mode may also be initiated by using the keyboard [Shift] and clicking on a linked channel's button.

## Unlink (Ctrl+U)



- Removes a link between channels.
- Initiate by selecting a linked channel and then selecting “Unlink” under Channels in the upper menu bar, or...
- For horizontally linked channels, by pressing and holding a linked channel's SELECT button for two seconds, and then choosing “Link Off” in the Fat Channel Display.
- For vertically linked channels, by pressing and holding the ALT button and a linked channel's SELECT button for two seconds, and then choosing “Link Off” in the Fat Channel Display.


## Faders to Unity (Ctrl+J)

- Sets the selected channel faders to unity.
- Affects faders only (including the MASTER L/R fader). Does not affect other channel parameters.

## Faders to Off (Ctrl+K)

- Instantly sets selected channel faders to off.
- Affects faders only (including the MASTER L/R fader). Does not affect other channel parameters.

## Adjust Channel Delay...

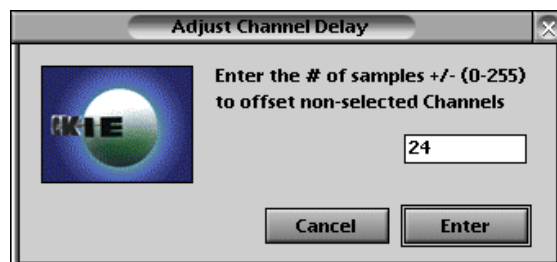

- This feature provides a means to shift channels in time, relative to each other.
- Select the channels that will remain at the original position; all unselected channels will be offset by the selected number of samples ( $\pm 255$ ).
- This feature helps compensate for phase and timing discrepancies in a synchronization scenario or any multi-playback/record device setup.
- For example, if you place a plug-in with 100 samples of delay on a channel, the audio will be behind the rest of the channels by that amount. To compensate, you would select the channel, choose “Adjust Channel Delay” and enter a value of 100.

## Reset Channel Delay...



- This resets the time-altered channels to a status of no offset.

## Reset Selected Channels...

- Resets the selected channels to their default settings (L/R assign, Level to Tape and Digital Trim to 0 dB, EQ on and flat, Auxes off, Pan centered, Fader off, Gate and Compressor off and at default settings).

## Reset Channel Layout...

- This action resets all channels to the default contiguous channel layout (1-97). It “undoes” all channel rearrangements across the board.

## Select Fader Bank (Alt+A)

- Selects all 24 channels in the currently selected fader bank for clipboard, automation, and other operations pertaining to multiple channel modifications.

## Select All Faders (Alt+Shift+A)

- Selects all 97 channels (96 plus the L/R mains) in all four fader banks for clipboard, automation, and other operations pertaining to multiple channel modifications.


## Channel Notes (Ctrl+Shift+T)

- Opens the Channel Notes window for the selected channel.
- Use to keep detailed notes and information about each channel.
- Channel Notes can be opened from the Track Sheet by clicking on the channel number.

## The Options Menu

### The Options menu contains:

- Solo Latch
- Link Speakers
- Automation Submenu
- Transport Submenu
- Meters Submenu
- Faders to Tape
- Use Nine Pin Control
- HUI Mode

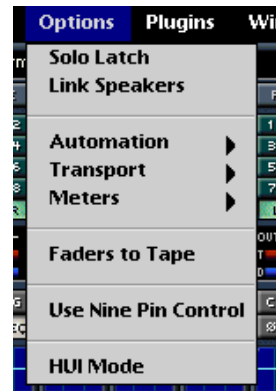

### Solo Latch

To activate Solo Latch, simply select it in the Options Menu, so a check mark appears beside Solo Latch.

Solo may be set to latch (i.e., more than one solo can be enabled as they are swiped across the screen or on the panel) or to radio button (only one allowable at a time).

If solo latch is not set (no check mark), multiple solos may be manually latched by either:

- 1) Pressing and holding another solo switch, while initiating more solos, or pressing multiple solos at one time.
- 2) Pressing and holding [Shift], while initiating more solos.

### Link Speakers

- Links the Near Field and Main speaker levels
- Changing the speaker level when either speaker set is selected changes the level on the other set.
- Hold Shift on the control surface or keyboard while adjusting the speaker level to create an offset between the speaker levels. This is a convenient way to match monitor levels between speaker systems while still linking the overall volume changes.
- Hold Ctrl while adjusting Speaker Level to delete the offset.

## Automation Sub-menu



### Bypass

- With this command selected (Bypass button lit in the Automation section), automation data is neither recorded or played back
- With this command deselected (no light), all write-selected parameter adjustments are written into automation data and referenced to time code.

### Trim Levels

- This mode sets all faders to unity position and assigns all parameter controls (except mutes) to globally add or subtract from existing settings and recorded moves.
- Actual fader settings appear in the meter bar on the right side of the faders (if “Show Meters in Trim Mode” is not checked).
- This is perfect for raising or lowering a complete set of moves.
- For example, if the vocal track automation is perfectly crafted and structured, yet the entire track needs to come up a couple dB in the mix, fear not. Select Trim Levels, start time code, enter WRITE mode, and, with one move, increase vocal track fader 2 dB, throughout the duration of the pass.

**Note:** Trim Levels automation writes linked parameters independently on linked channels.

### Auto Touch

- Mirrors AUTO TOUCH on the control surface.
- Readies all selected automation parameters to enter write mode the instant the parameter is adjusted.
- As soon as a selected channel parameter is altered, the channel strip enters write mode for the adjusted parameter. However, adjustments of parameters that haven't be selected for automation in the onboard AUTOMATION or Automation Menu do not cause the channel to enter write mode.

### Faders

- This readies the automation computer to record all fader movements for any write-selected channel.

### Mutes

- This action readies the automation computer to record all mute activity for any write-enabled channel.

### Pan

- This readies the automation computer to record all Pan movements for the write-selected channels.
- All surround pans are recorded as well as L/R positioning. However, surround output, depth of center, and LFE assignments are not written with this selection (use “All” to write automation for these parameters).

### All

- Sets the automation computer to record all parameter changes for the write selected channels, other than the individually selectable FADERS, MUTES, and PAN.


### Write Flyback

- This controls what happens to the parameter levels upon punch-out of automation record.
- With Write Flyback selected, each parameter recorded into automation returns to its previously adjusted status at the end of a record pass. A track that was off for an entire arrangement snaps back to off, after the level is increased, when punched out of record.
- When Write Flyback mode is not selected, parameter adjustments in automation remain at their last user-adjusted setting, even after the end of the automation pass.

### Write Ready Mode

- This option does not function when Auto Touch is selected.
- When Write Ready is selected, channels are manually engaged to write automation data.
- Write Ready mode assigns the transport RECORD button to punch the Write Ready channels into and out of automation record.
- When the channel WRITE button is pressed, the yellow light blinks, signifying that the channel is ready to record automation. No automation will be recorded until the RECORD Master is enabled in the transport section.

## Transport Sub-menu

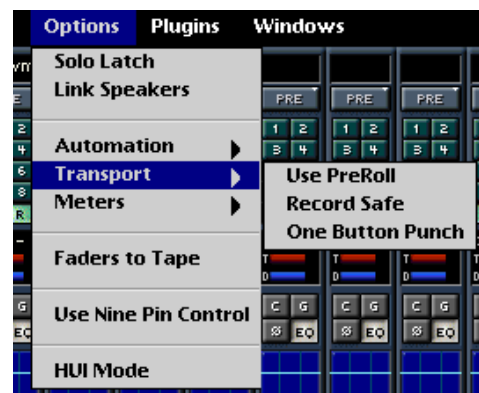

All three of the following menu items are available in the Mix Options section of the Setup window.

### Use Pre-Roll

- Sets machine location a specified amount ahead of the locate point.
- The amount of Pre-roll is set in the Locator-MMC section of the Setup window.
- Pre-roll is used to provide a set time period for all synchronized device transports to lock together.
- Ideally, pre-roll is equal to the sync-lock time for the recording system's transports, so that synchronized playback is a reality by the time the devices roll past the locate position.

### Record Safe

- In Record Safe, the channel RECORD buttons will not engage. However, automation data can still be written.


### One Button Punch

- With this option selected, record mode is activated by pressing the RECORD button in the control surface's transport section. When One Button Punch is not selected, the PLAY button must be held down while pressing RECORD to engage record mode.
- To punch out of record status, simply press PLAY, STOP, REWIND or FAST FWD.
- One Button Punch affects only the punch-in procedure.
- The punch-out procedure is the same no matter what the status of One Button Punch (hit any other transport button to punch out).

### Meters Sub-menu


These meter options apply to the on-screen meters, and not to the meter bridge on the console, which always indicates pre-fader levels.

### Meter Type

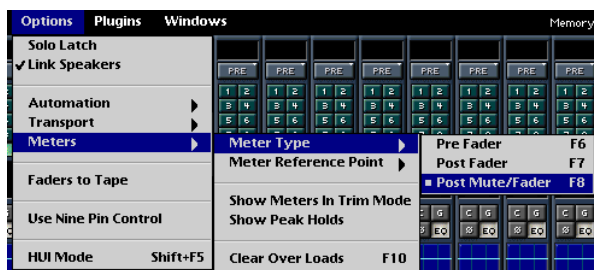

- Pre Fader (F6) metering displays the signal level just prior to the fader. This is the default meter type for the meter bridge on the console.
- Post Fader (F7) metering displays the signal level just after the fader, but before the mute button.
- Post Mute/Fader (F8) metering displays the signal level just after the mute button.

### Meter Reference Point

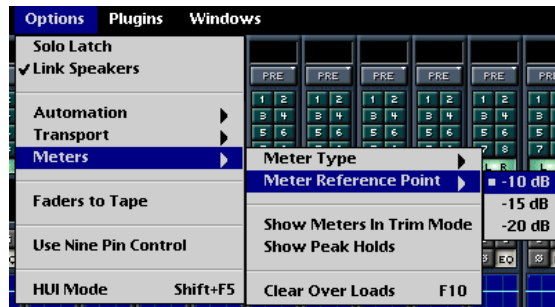

- Use to adjust the point at which the on-screen LEDs change from green to yellow.
- -10 dB corresponds to the meter bridge on the D8B control surface.
- -15 dB provides more operating headroom, and corresponds to the recommended nominal operating level.
- -20 dB provides even more operating headroom for program material containing extreme transient peaks.

### Show Meters In Trim Mode

- When Trim Levels automation is selected, the faders go to unity (U) and the bottom meters next to the faders change to indicate the actual fader positions.
- Selecting “Show Meters In Trim Mode” overrides the default Trim Mode indicators and allows the bottom meters to indicate the signal level.

### Show Peak Holds

- Select this to cause the Overload indicators (in the TOP meters view) to remain lit when a transient peak triggers the OL indicator.

### Clear Over Loads

- Clears the Overload indicators when “Show Peak Holds” is selected. Pressing F10 also clears all the OL indicators, and clicking an individual OL indicator clears it.

### Faders to Tape

- Direct out levels (Level to Tape) from the tape out follow the sourced channels' faders. For example, if channel 12 is assigned to direct out 24, adjusting channel 12's fader directly affects the tape output level.
- Switch this off for independent Level to Tape settings.


### Use Nine Pin Control

- With a Serial•9 card installed in the CPU, this option activates the Sony 9-Pin control via the Serial•9 interface.

### HUI Mode

- This option turns on the HUI layer, giving the D8B control over DAW software applications that support the Mackie HUI (Human User Interface).
- When HUI Mode is turned on, a HUI button appears next to the MASTERS button on-screen, just above the master fader. Use the HUI button to access the HUI fader bank.
- On the control surface, access the HUI fader bank by pressing SHIFT+MASTERS.
- See Appendix F for information about HUI implementation.

## The Plugins Menu

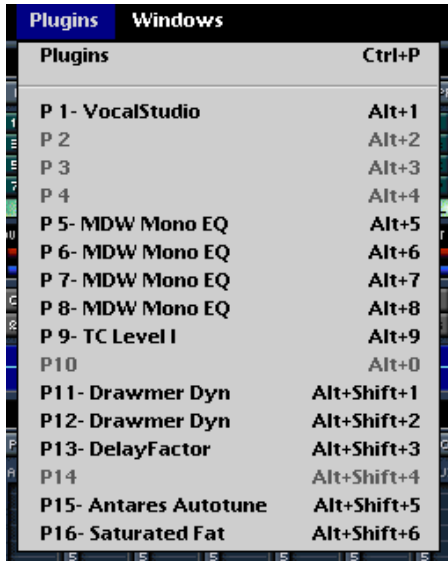

### Plugins (Ctrl+P)



- This command opens the Plugin Configuration window. It is here that plug-ins are selected, input sources are chosen to feed plug-ins, stereo or mono modes are selected, and plug-in output destinations are selected.
- There are sixteen plug-in slots—four dedicated to each FX card. Card one is allocated plug-in slots 1–4. Card 2 is allocated plugin slots 5–8. Card three is allocated slots 9–12. Card four is allocated slots 13–16.
- For each active plug-in, the SLOT number button opens and closes the plug-in window.



**Caution:** Use extreme caution when assigning plug-in outputs to channel inserts to avoid creating feedback loops!

- MODE toggles between STEREO and MONO when using the UFX card. Each UFX card is divisible into two halves. Either half can be selected as stereo or two-channel mono. In other words, each UFX card can be configured as two stereo, four mono, or one stereo and two mono plugins.
- The MODE selection is not applicable to the MFX cards.
- MODE selection determines the plug-in options from the UFX card.
- Select the desired plug-ins in the PLUGIN column. The available options are dependent on the installed plug-in card(s).
- Each of the four card slots is allocated four possible inputs and four possible outputs. MFX cards are automatically configured with two mono inputs, each feeding a separate user-selected effect. Each MFX effect has a stereo output, automatically returning to two faders in the control surface EFFECTS bank. UFX cards offer a potential of four discrete inputs and outputs, configurable into plugin-specific stereo and mono configurations.
- When using the MFX card, each mono input feeds a stereo effect; each stereo effect returns to two faders on the EFFECTS bank by default. For example, with an MFX card installed in mixer card slot 1 and selected in the Plugin Configuration window, INPUTs are available at slots 1 and 2. If Aux 1 is selected for SLOT 1, the Aux 1 send feeds the input to Stereo Effect 1, whereas the returns enter the mixer at EFFECTS bank faders 1 and 2.
- Once the plug-in is selected, the plug-in-specific input options appear in the INPUT menu.
- In addition to an aux send, a plug-in can also receive its input from a channel pre- or post-DSP insert, the main stereo left and right bus, or a Bus 1-8. When a plug-in is inserted “in-line” in this manner, its output is routed directly back into the channel or bus by default.
- A plug-in can also receive its input from an FX Return. This allows two or more plug-ins to be chained. For example, assign a plug-in output to its default FX Return, and assign the input source of the next plug-in to the FX Return of the previous plug-in.
- In addition to an FX Return, a plug-in output can be routed to a channel pre- or post-DSP insert, the main stereo left and right bus, or a Bus 1-8.

- To deactivate a plug-in, select “none” in the associated PLUGIN column pull-down assignment menu. Click “OK” in the Alert dialog box.



**Warning:** Deactivating a plug-in erases all automation data for the plug-in.

### Basic MFX Use Procedure

1. Open the Plugin Configuration window.
2. Select MFX 3.0 in the PLUGIN menu. When a plug-in card slot contains an MFX card, a single box covers the four plug-in slots allocated to that card.
3. Once MFX is selected, two mono inputs become available in the INPUT menu.
4. Click and hold on the input box to open a drop-down menu. Drag to select the desired input.
5. Open the STEREO EFFECTS windows by clicking on the SLOT buttons to the left of each active input.
6. Verify audio send to the plug-in at the STEREO EFFECTS input meter, and that the ON button below the input meter is yellow.
7. Manually set up the desired effect or select from effects presets.
8. Click and hold on the Destination box to open a drop-down menu. Drag to select the desired output.

### Basic UFX Use Procedure

1. Open the Plugin Configuration window.
2. Select the desired Stereo or Mono MODE status. Change status by simply clicking on the current MODE status button.
3. Click and hold in the plug-in list to open the drop-down list of available plug-ins. Drag to select the desired plug-in from the PLUGIN menu.
4. Once a UFX plug-in is selected, the plugin-specific inputs become available in the INPUT menu.
5. Click and hold on the input to open a drop-down menu. Drag to select the desired input.
6. Open the selected plug-in window by clicking the SLOT buttons to the left of each active input.
7. Verify audio send to the plug-in at the input meter, and that the plug-in is ON.
8. Manually set up the desired effect or select from effects presets.
9. Click and hold on the Destination box to open a drop-down menu. Drag to select the desired output.

See “Appendix C: Plug-in Configuration and Routing” for more information and examples.

### Shortcut to Plug-in Windows

Plug-in windows can be opened and closed from the keyboard by using a combination of the shift, number, and Alt keys. Plug-in windows correspond to the active input slots in the Plugin Configuration window.

- To open and close plug-in windows for SLOTS 1–9 press:  
Alt 1–9
- To open and close plug-in windows for SLOTS 10–16 press: Alt+Shift 0–6

### Plug-ins Selector

Toggle between Windows menu selections and Plug-ins menu selections by clicking the 1/4" TRS icon on the far left end of the window selector strip.



**Windows Menu Selections**



**Plug-ins Menu Selection**

---


**Note:** See Appendix C (Plug-in Configuration and Routing) for more information about configuring and routing plug-ins.

---

## The Windows Menu

### Contains:

- About
- Help (Alt+H)
- Hot Keys
- Close All (Ctrl+\)
- Desktop (Ctrl+D)
- Setup (Ctrl+1)
- Snapshot (Ctrl+2)
- Surround (Ctrl+3)
- Locator (Ctrl+4)
- Mix Editor (Ctrl+5)
- FatChannel (Ctrl+6)
- Panning (Ctrl+7)
- Faders (Ctrl+8)
- Event Track (Ctrl+9)
- Track Sheet (Ctrl+T)
- History List (Ctrl+H)
- MIDI Map (Ctrl+ -)
- Upgrade UFX Cards...
- Erase UFX Memory...

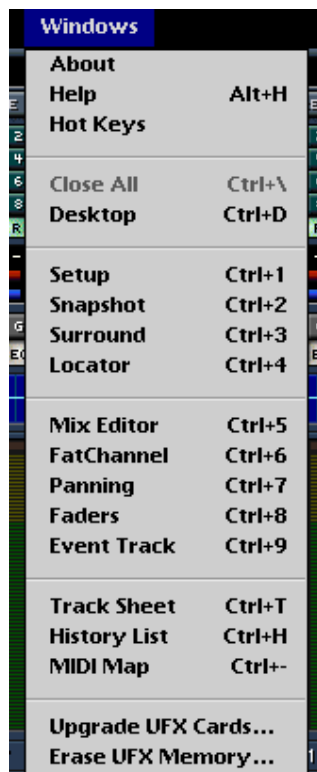

Let's take a quick look at each menu item.


## About

This window displays the OS version, software authors, artist, etc.

## Help (Alt+H)


Select Help to open the on-screen help window. You can also press the HELP button in the Fat Channel section on the console, or Alt+H on the keyboard to open the Help window.

Click on the chapter titles to bring up the associated Help files. Use the Back and Forward buttons to move to the next page or to go back.

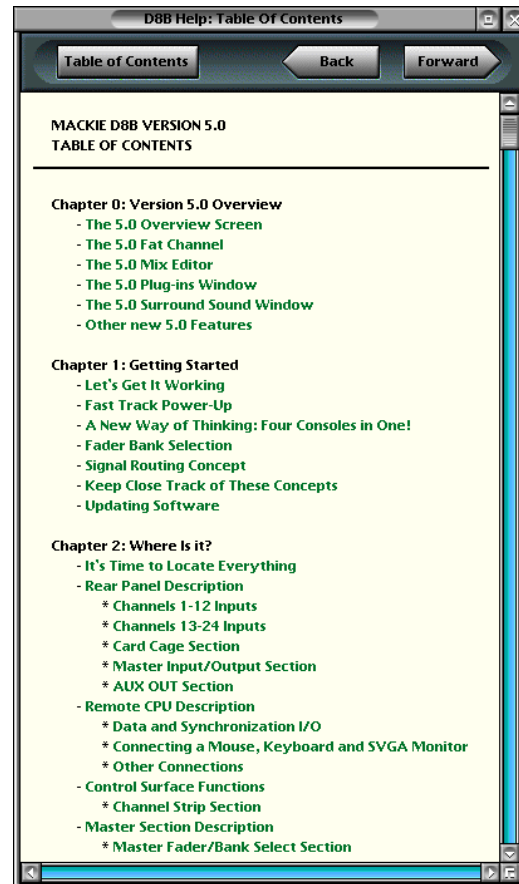

## Hot Keys

The more of these key commands you learn, the faster and more efficient you'll be at recording. Some adjustments are necessary on the control surface or with the mouse, but many control settings flow very quickly from the keyboard. Once you begin to incorporate these into your routine you'll quickly realize the power and creative freedom they offer. See Appendix D (Shortcuts) for a more comprehensive list of hot keys and shortcuts.

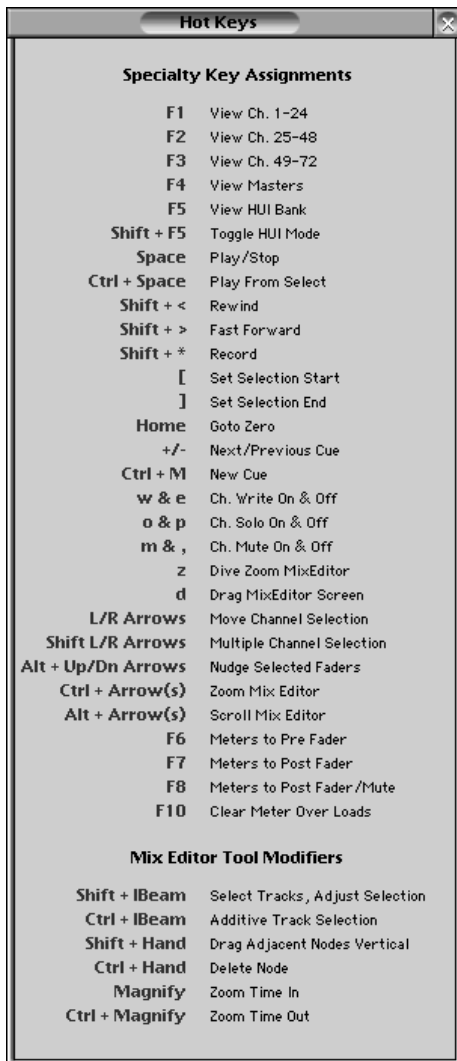

## Close All (Ctrl+V)

This command closes all open floating windows.

## The Desktop Window (Ctrl+D)

The Desktop is where files are saved, named, copied, and organized. See the description in this chapter under the File menu (page 52).

## The Setup Window (Ctrl+I)



## General

These personal preference settings are straight ahead. What's the date and time? Do you like the mouse to be quick and nimble or a bit more deliberate? What's the best refresh rate for your video monitor? Enter your studio name here and it automatically appears in the Track Sheet.

Display Intensity refers to the control surface VFD display, not the computer monitor display.

Smart Save is a function that automatically saves your session every five minutes. Check the Create New Files box to save the session as a new session without overwriting the previously saved version. Check "Load Last Session at Power-up" to automatically open the last session you were working on when you boot up the D8B, rather than the default Startup session.

If you have an older CPU for the D8B (166 MHz Pentium), the enhanced graphics in the GUI may cause screen redraws to be slower than you are accustomed to. Deselecting the Advanced Graphics checkbox will speed up screen redraws.

**Note:** Changing the Advanced Graphics setting requires rebooting the D8B to take effect.

## Network



The Network Setup window allows any number of consoles that are on the same Network Channel to either generate or receive common



Link Option controller actions. There are eight Network Channels that are not unlike TV channels via Ethernet, where the console has a unique Device Name (like 'Jolene' or 'Spike') and after setting the Device Name and assigning one of the eight Network Channels, the console may then join the party.

Consoles are normally linked audio-wise via the ALT I/O 1–8 card slot where audio buses are configured to be transferred from a slave console to a master console for further mix processing. If using the buses for digital audio, all allowances for word sync must be made (both consoles need to be clocked from the same source).

**Note:** All of these Ethernet messages are broadcast from any given control surface that is on-line and transmitting or receiving. Updating only occurs after the connection is established and the console linking parameters are modified.

**Another Note:** All D8Bs in a network must have a unique IP address. See “FTP Server” on page 71 for more info.

### Network Channel

- Each Digital 8•Bus assigned to the same Network Channel is linked according to the functions selected in the Console Linking options.
- Communication between devices is dependent on common network channel numbers. All devices assigned to Network Channel 1 communicate together and act as one console across the selected Console Linking options. All devices on Network Channel 2 communicate; all devices on Network Channel 3 communicate; etc.
- Communication between all devices sharing a common Network Channel is bidirectional on common Link Option selections.

### Local Mixer Name

- This simply allows the D8B to be given a unique name for identification purposes across the network.

### Alt I/O 1–8

- This provides for the routing of the audio signals from Aux 1–12, Bus 1–8, or L/R output through any I/O card installed in the Alt I/O slot.

### Console Linking

- This provides the selection of control signals that are sent or received on the Ethernet connection.
- When multiple D8Bs are linked together via their individual Ethernet connections, they communicate and respond according to the selections in the Link Options list.
- Whichever parameters are selected are transmitted and received across the network on two or more D8Bs.
- Whichever parameters are not selected act independently on each individual D8B.

Console Linking options are enabled and disabled according to what control surface actions you want to have linked on two or more consoles assigned to the same Network Channel.

- *Fader Banks:* This option provides for bank selection across the network from any Digital 8•Bus sharing a common Network Channel number.

- *Aux Strip:* This option links the selection of any aux bus across the network. For example, if Aux 1 is selected on any networked Digital 8•Bus console, it will be selected on all networked Digital 8•Bus consoles with Aux Strip selected.

- *Bus Assign:* This links the BUS ASSIGN selection across the network. For example, selecting Bus 1–8, L–R, or Route to Tape in the ASSIGNMENT section selects that assignment status in each networked D8B with Bus Assign selected. This allows the ASSIGN buttons to function identically on each D8B.

- *Cue Controls:* This links the Phones/Cue selection across the network. For example, selecting any parameter in the PHONES/CUE MIX 1 section selects that parameter in each networked D8B with Cue Controls selected.

- *Solo Logic:* This links the SOLO/STUDIO selection across the network. For example, selecting any solo or studio status in the SOLO/STUDIO section selects that status in each networked D8B with Solo Logic selected.

- *Speakers:* This links the Speaker selection across the network, including NEAR FIELD, MAIN, MONO, and DIM.

- *Sample Rate:* This links the sample rate setting across the network. Selection of a sample rate status on any networked Digital•8 Bus sets the sample rate on the others with Sample Rate selected. This link syncs the sample rate setting but not the source setting (Apogee Clock Internal or Word Clock setting). Word clock connections must still be made using real live cables.

- *Automation:* This links the automation control across the network. For example, enabling automation by selecting ALL in the AUTOMATION section, enables ALL automation in each networked D8B with Automation selected.

## Digital I/O



The Digital I/O setup window allows you to make input and output settings for the I/O cards that are installed in the Tape In/Out card slots. The D8B automatically senses the card configurations and provides selection and patching options accordingly.

## Tape Banks

Any of the following tape I/O cards can be installed in the three Tape In/Out slots and the Alt I/O slot in the back of the Digital 8•Bus.

- **DIO•8:** This digital card provides input and output connections via ADAT and T/DIF protocol. Tape bank I/O selections are completely selectable on both inputs and outputs. The DIO•8's provide direct dubbing capabilities from ADAT optical to T/DIF format, and vice versa. Powerful patching options interconnect the Alesis ADAT format and the TASCAM DA series format.
- **PDI•8:** The PDI•8 AES/EBU card connects to any digital device that supports the AES/EBU digital audio format. The PDI•8 allows for real-time sample rate conversion and status bit designation on its four pairs of inputs (click the Setup button in the Digital I/O Setup window).



- **OPT•8:** The low-cost OPT•8 I/O card provides 8 channels of ADAT light pipe digital I/O.
- **AIO•8:** This analog card offers 8 balanced line-level inputs and outputs per card through two 25-pin D-Sub connectors.


## Alt I/O

- The Alt I/O 1–8 operates according to the type of I/O card installed (AIO•8, DIO•8, PDI•8, OPT•8).
- The Alt Inputs feed the 8 Alt Return channels on Fader Bank 3.
- The Alt Outputs are configured via the Alt I/O 1–8 pull-downs in the Network Setup window.

## Stereo I/O

- These settings apply to the Stereo Digital I/O AES/EBU and S/PDIF connections on the back of the Digital 8•Bus.
- The Stereo I/O is configurable for three levels of UV22 dither: Off, Low, and Normal.
- In addition, Status Bits can be designated as Pro or Consumer, usually applicable to DAT mastering. Check with the device manufacturer (i.e., DAT, CD-R, MiniDisc) for the proper setting.
- The Digital In toggles between AES/EBU and S/PDIF. This selection determines which Digital source is displayed on the Pre Insert>Channel Patch list, and which Digital In is available to the Control Room section.

## Licensing

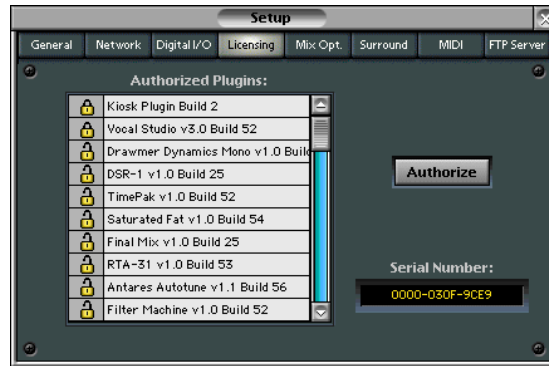


- This window provides an interface to install and authorize plug-ins.
- Authorized plug-ins are indicated by an opened padlock icon.
- Locked plug-ins are indicated by a closed padlock icon.
- To authorize a locked plug-in, highlight it in the Licensing window and click Authorize.
- Enter a valid UNLOCK CODE to authorize each locked plug-in. Unlock codes are furnished by Mackie Designs.

## Unlock Procedure

1. Locate your D8B's Electronic Serial Number (ESN). This is displayed at the bottom of the Licensing window. The 12 digit ESN is made from numbers 0–9 and letters A–F. It is unique to the D8B console, and is not the serial number label on the rear of the control surface or CPU chassis.
2. You will also need your plug-in's serial number which is printed on the floppy disk label or on a card that came in the plug-in's box.
3. To obtain the unlock code, have the ESN and plug-in serial number ready. Then you have two options:
  - Log on to the Mackie plug-in authorization web page: ([http://www.mackie.com/products/d8b\\_v5/plugin\\_reg.html](http://www.mackie.com/products/d8b_v5/plugin_reg.html)), or
  - Phone Mackie Tech Support at 800-258-6883.
4. When you have obtained an unlock code, click Authorize in the Licensing window and enter your unlock code in the UNLOCK CODE box. Click Enter, restart the CPU, and enjoy your newly expanded console.



## Mix Options

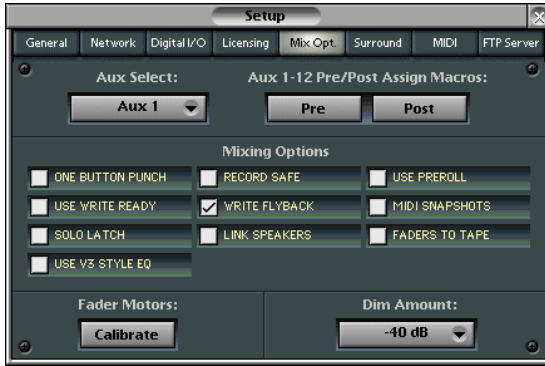

### Aux Select — Pre/Post

- Select the desired Aux bus using the Aux Select pull-down list.
- Set global pre/post status for the selected aux bus by clicking PRE or POST under Aux 1-12 Pre/Post Assign Macros.
- Individual channel aux pre/post assignments are made by Alt-clicking on the aux send's level bar in the overview screen. Red indicates post fader and yellow indicates pre fader. Aux pre/post assignments can also be performed in the Fat Channel screen.

### One Button Punch

- With this option checked, connected record devices are placed into record mode by simply pressing the RECORD button in the Transport section.  
**Note:** The record devices must be in play mode.
- When this option is cleared, both PLAY and RECORD must be pressed at the same time to enter record mode on connected record devices.

### Record Safe

- When this option is checked, the D8B is prohibited from engaging connected record devices into record active status.
- Use this mode when you want to guard against inadvertently erasing previously recorded material.

### Use PreRoll

- Checking this option instructs the playback transports to begin before the specified locate point based on the Pre-Roll time specified in the MIDI Setup window.

### Use Write Ready

- When this function is enabled, the transport Master Record button becomes a Master Write button and functions as a global Master write enable for the absolute and (absolute) trim dynamic automation modes.
- When “Use Write Ready” is toggled (in the Mix Options Setup window, or under the GENERAL MIDI Setup menu in the Fat Channel Display), the Write LEDs begin flashing (when enabled) to indicate Write Standby mode. Individual channels remain in Write Standby (if write armed) up until the point that the Write Master is engaged (time code must be rolling), and returns to standby mode

when the Write Master is toggled off. “Standby” is indicated by flashing LEDs, and “Armed” is indicated by solidly lit LEDs (actively writing).

- Conversely, when “Use Write Ready” is disabled, and absolute and (absolute) trim dynamic automation is enabled, any channel Write may be immediately punched in and out of armed status. There is no standby mode. The transport Record Master only applies to MMC control (Record enable).

**Please Note:** The Record Safe and Master Write functions provide protection against the accidental overwriting of audio and automation data.

### Write Flyback

- This feature provides a choice for the punch-out ending level of an automation pass. You can choose to either leave levels at the current state or to snap levels back to the original punch-in state.
- The purpose of the Write Flyback feature is to establish a rough mix on any given channel at the point when the channel is first punched in, so that a default level may be maintained right up to 23:59:59:29. Whether Write Flyback is enabled or not, any subsequent punches that occur after the last dynamic event on a track will always “rubber band” snap back to the original level state upon punch out.

There are also applications when you may not necessarily want to have the automation track return to the original level, such as an ending track fade, where the levels started high but end low, or for an effects parameter that goes from one state to another and remains that way for the rest of a song. Disable Write Flyback when you don't want the OS to create final levels for you.

### MIDI Snapshots

- When enabled, incoming MIDI program changes (received on any MIDI channel) can recall Snapshots numbered 0-99 on the console.
- The D8B sends MIDI Program changes on MIDI channel 1 (by default, selectable in the Snapshot Window) when snapshots are recalled on the console, either via the event list or by manually recalling a snapshot from either the snapshot window or the control surface.
- Incoming program changes may be used to write snapshot events into the dynamic automation track.

Please note that incoming program changes do not currently update the snapshot number displayed on the panel transport 7-segment displays.

To avoid a snapshot thru MIDI feedback loop, we recommend (as is normal practice with any MIDI instrument) that you avoid looping the MIDI Out to the MIDI In, unless it is meant to be done intentionally (e.g., a normal exception is master keyboard control over a workstation type instrument, through a sequencer). Bottom line—avoid mapping the D8B to control itself through a sequencer.

### Solo Latch

- When Solo Latch is checked, SOLO buttons remain engaged even when a new SOLO button is pressed.
- When Solo Latch is not checked, new SOLO selections disengage previous SOLO selections.
- If Solo Latch is not set (checkbox not selected), multiple solos may be manually latched by either:
  - pressing and holding another solo switch while initiating more solos, or pressing multiple solos at one time.
  - pressing and holding [Shift] while initiating more solo's.

To allow this operation, set the "Solo Latch" checkbox in the Mix Options Setup window, or press GENERAL in the Setup Section and, under Solo, select "SOLO LATCH" ON or OFF in the Fat Channel Display.

### Link Speakers

- When the Link Speakers checkbox is enabled, the Mains and Near Field SPEAKER LEVEL control is linked. Increasing or decreasing the SPEAKER LEVEL control simultaneously adjusts both the Near Field and the Main Control Room Output. This provides a consistent level when A/B'ing between speaker sets. The default option is an unlinked state.
- Holding down the [Shift] key and spinning the SPEAKER LEVEL V-Pot temporarily breaks the link. This can be used to establish a level offset between the two stereo output pairs. The level difference is maintained in the same operational manner as linked channel parameter offsets. The link offset may be updated at any time, using the [Shift] key.

### Faders to Tape

- When this option is checked, source channel faders control the level to the tape outputs 1–24.
- When this option is not checked, level to tape outputs 1–24 are adjusted by selecting LEVEL TO TAPE in the V-Pot Assign section and adjusting the channel V-pots.

### Use V3 Style EQ

- When checked, the D8B uses the version 3.0 EQ algorithm for channels 1-48. This allows complete backward compatibility with 3.0 sessions.
- When not checked, the new and improved v5.1 EQ algorithm is used.

### Calibrate

- This operation resets the minimum and maximum fader values for the OS.
- For optimum performance and positioning response, the fader calibration may be used periodically. The calibration takes a few minutes to perform its routine, so take a break, will ya?


**Caution:** Do not touch the faders during the calibration procedure. Doing so could damage the servo motors.

**Note:** This procedure is only available from the Mix Options Setup window on the screen.

### Dim Amount

- This sets the amount of attenuation for the DIM button in the Control Room section.
- Choose from –20 dB, –30 dB, –40 dB, and –inf dB (Cut).

### Surround

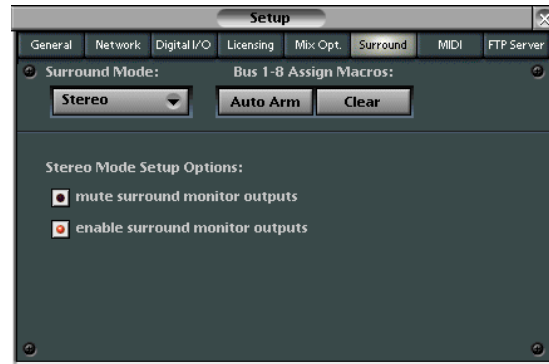

### Surround Mode

- This pull-down list provides access to the various Surround Sound modes available on the D8B.
- All standard mix modes are selectable through the Surround Mode list, including Stereo, Quad, LCRS, 5.1, 6.1, 7.1 (SDDS), and 7.1 (TP).

### Auto Arm

- Once the Surround Mode is selected, Auto Arm provides a quick and easy way to arm all the channel buses to feed the appropriate outputs.
- Stereo automatically activates all L/R assignments for all appropriate channels.
- Quad automatically activates bus assignments 1, 2, 5, and 6.
- LCRS automatically activates bus assignments 1, 2, 3, and 4.
- 5.1 automatically activates bus assignments 1–6.
- 6.1 automatically activates bus assignments 1–7.
- 7.1 automatically activates bus assignments 1–8.


### Clear

- Automatically clears all bus assignments (whether set manually or activated automatically through the Auto Arm feature).

### Stereo Mode Setup Options

- Choose whether to mute the analog Bus 1-8 outputs when Stereo mode is selected for the surround mode.
- This is recommended when using the bus outputs for surround monitoring.

## MIDI

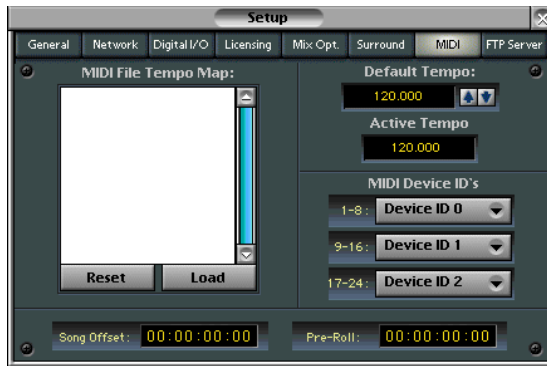

### MIDI File Tempo Map

- Import a MIDI Tempo Map from a standard MIDI File to synchronize the D8B Bars/Beats/Ticks display with your MIDI sequencer MTC reference.

### Default Tempo

- Sets the automatically-set MIDI tempo reference for position alignments during an automation pass or locator activities.

### Active Tempo

- Displays the actual tempo currently in use.

### Device ID selection

- Sets the Device ID reference for connected record devices such as the HDR24/96, SDR24/96, ADATs, or DA Series multitracks.

### Song Offset


- Sets the consistent time difference between the record device time code and the D8B reference time code.
- Generally used to 'zero reference' a song's starting point in BBT. It's easier to jump to measure 1 than 2:01:23 (usually).
- Offset can be as little as one frame or as much as 23 hours, 59 minutes, 59 seconds, and 29 frames.

### Pre-Roll

- Sets the time difference between a Locate point and the actual start point.

Many record devices require a few seconds to synchronize, so the Pre-Roll time allows a brief time period in advance of the locate point to ensure transport sync and accuracy.

## FTP Server

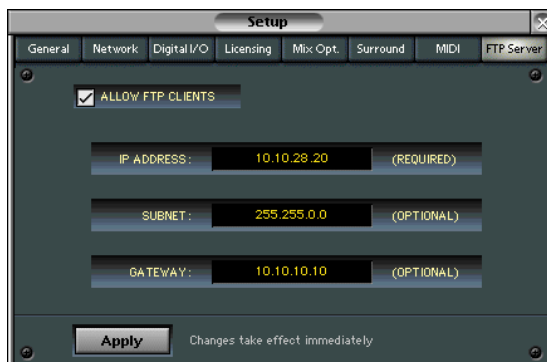

## Allow FTP Clients

Check this option to enable the D8B for inter-network communication and file transfer.

**Note:** To transfer files from your D8B to a computer for backup, you need to use an FTP client on your computer to communicate with the D8B.

### IP Address:

- Note the D8B IP address displayed. The factory default is 10.10.28.20
- Set the first three fields of the D8B IP address to match your computer's fixed IP address, and set the last field to something different. Be sure you don't set it to the address of another device that you have on your network.
- If you have two D8Bs linked via Ethernet, they must have different IP addresses.

### Subnet:

- In the Subnet window type 255.255.0.0 (default value) unless your network requires a different subnet mask.
- In most cases, you will want the D8B and the computer to have the same subnet mask.


### Gateway:

- If no Gateway is being used you can usually leave this setting blank, though some FTP clients require an entry even for a simple network. 10.10.10.10 is the default value.

### Apply

When all parameters are set properly, click APPLY to instantly activate the changes.

## The Snapshot Window (Ctrl+2)

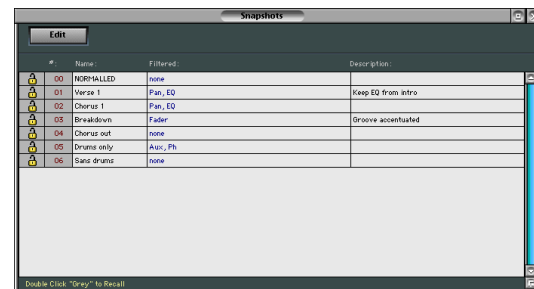

### Selecting

- Click once on the snapshot name to highlight it.
- A highlighted snapshot can be saved as a selection for recall from within a different session, or it can be deleted from the list.
- To make a snapshot active from the on-screen list, double click the snapshot number.
- To make the snapshot active from the control surface, press SNAPSHOT in the transport section, use the numeric keys to type the snapshot number, then press ENTER.

### Naming

- Each new snapshot is automatically given a number and the name "snapshot."
- To change its name, double click on "snapshot," then type the new name. Press ENTER on the keyboard to complete the naming procedure.

## Filtered

It's often convenient to eliminate a parameter or set of parameters from a snapshot change. If, for example, you've set all the basic EQs in the first snapshot, it might be efficient to filter EQ changes out of any new, or subsequently recalled, snapshots. In this way the original equalization settings remain active throughout.

- Filters are selectable on each snapshot.
- Parameters which can be filtered from changes are: Fader, EQ, Phase, Mute, Compression, Plugins, Pan, Gate, Direct Routing, Auxes, and Buses.




## Description

- Double click in the description column of the desired snapshot to enter a text description, which is then saved with the snapshot data.
- Don't write your agent's telephone number here, or say bad things about the guitar player...

## Snapshot Edit Window

This provides access to the snapshot edit parameters. Simply click on the word "Edit" to reveal the snapshot edit parameter pull-down list.

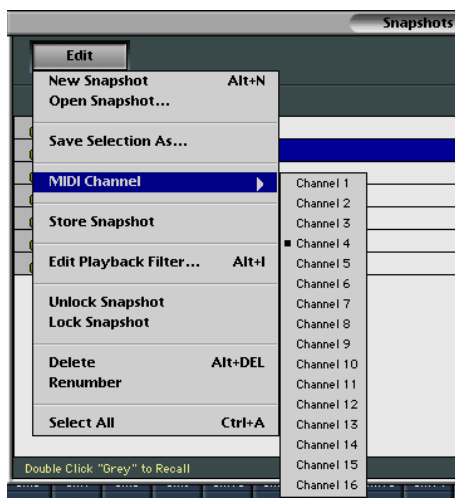

## New Snapshot (Alt+N)

- Creates a new snapshot of the current mixer status throughout all parameters (channel and plug-in settings) except analog TRIM and the selection of MIC or LINE on channels 1–12.
- Parameters not affected by snapshot recall are: Surround mode, Channel Key Input, ALT I/O Output assignment, Plug-in routing, Plug-in module

type and parameter values (loading/unloading of configuration), and Channel List settings.

## Open Snapshot...

- This opens a previously saved snapshot file from the disk. This is a very convenient feature that enables immediate recall over the mixer status for tracking, overdubs, mixdown, etc., such as a default mix setting.

## Save Selection As

- Saves current mixer snapshot selection (highlighted in the snapshot list) to a file for recall at a later date.
- This is different from a stored snapshot in that it saves data in a file for retrieval, even from a different session. Snapshots, on the other hand, are stored specifically as a portion of a session file.

## MIDI Channel

- Determines the send channel for MIDI program change data sent by a snapshot recall.
- The snapshot number is sent via a program change on the selected MIDI channel.

## Store Snapshot

- Updates the selected snapshot to the current settings on the D8B. This allows you to change a snapshot once it has been created.

## Edit Playback Filter (Alt+I)

- Opens the Snapshot Filter window.
- Allows for elimination of specific parameter change information from snapshot data.
- This window can also be opened by double-clicking the "Filtered:" field in the Snapshot window.

## Unlock Snapshot

- Allows the snapshot to be updated by the Store command.
- An unlocked snapshot can be overwritten by storing data in the same snapshot number.
- An unlocked snapshot is indicated by the open padlock to the left of the snapshot number in the snapshot list.

## Lock Snapshot

- Sets the snapshot to ignore updates.
- A locked snapshot cannot be altered or overwritten.
- Once you have stored a snapshot you'd rather not lose, lock it.
- A locked snapshot is indicated by a closed padlock to the left of the snapshot number in the snapshot list.

## Delete (Alt+Delete)

- This removes the highlighted snapshot(s) from the snapshot list, even if they're locked.
- This cannot be undone.

## Renumber

- Renumbers the snapshot list in ascending numerical order.

## Select All (Ctrl+A)

- Highlights all snapshots in the list.
- All highlighted snapshots can be edited at once (e.g., locked, unlocked, filtered).

## The Surround Window (Ctrl+3)

The surround window offers precise control over image positioning in any mixing panorama along with individual subwoofer level and depth of center control.

Surround position control is available from the control surface by using the individual Channel pan for L/R positioning and the Master Pan V-Pot as the selected channel's front/rear position control. The control surface can perform surround pan positioning using the Etch-A-Sketch® (Etch-A-Mix) approach.



### Surround Panner

- Simply drag the colored ball to position a channel anywhere in the surround panorama.
- The top of the pan grid represents the front speakers.
- The bottom of the pan grid represents the rear speakers and the subwoofer.
- The subwoofer (Bus 4) is not affected by pan, but in the case of LCRS, Bus 4 is the rear (surround) panned bus output.

### Monitor Levels

- When a surround mode other than stereo is selected, the Monitor Levels faders appear in the MON LEVELS box. Each fader corresponds to an analog surround output at Buses 1-8.
- A Master fader controls the overall output level of the eight surround outputs. The SPEAKER LEVEL V-Pot in the D8B Control Room section also controls the Surround Master Monitor fader (when in a surround mode).
- The Monitor Levels affect the signal at the analog Bus 1-8 outputs. They do not affect the signal at the ALT 1-8 outputs when Bus 1-8 is assigned to them. This allows you to fine tune your surround sound monitoring speaker system without affecting the digital surround output.
- Once the Monitor Levels are set, you can lock the monitor level settings by clicking the MENU button and choosing Lock Monitor Levels. The LOCKED LED illuminates when the Monitor Levels are locked. This allows you to calibrate your setup for any number of standard reference levels.

### Flyback

- Adjust surround position as usual, by dragging the red or green ball. However, when FLYBACK is selected, the ball (surround position) immediately snaps (flies) back to its original position once the mouse button is released.

### Output Assignment/Speaker Icons

- Toggles channel sends to individual speakers within the surround system, between on and off.
- Click the desired speaker position to include it in the channel's surround pan position.

### Pan Position (MEM A)

- Selected by clicking the MEM A button.
- Represented by the green ball in the Surround Panner.
- Acts as a retrievable surround pan, divergence level, and sub-effect level preset that is instantly recalled when MEM A is clicked.

### Pan Position (MEM B)

- Selected by clicking the MEM B button.
- Represented by the red ball in the Surround Panner.
- Acts as a retrievable surround pan, divergence level, and sub-effect level preset that is instantly recalled when MEM B is clicked.

### Morph

- Activated by clicking the MORPH icon.
- Automatically pans between the MEM A and MEM B surround positions, divergence level, and sub-effect level.

### Morph Time

- Controls the amount of time it takes for the MORPH process to move between the two preset positions (MEM A and MEM B).
- Can be adjusted between 1 and 121 seconds.

### Divergence

- This control spreads (from the Center to the Left and Right) the channel surround pan position in the front half of the surround panorama.
- The resultant moves can be recorded into automation.

### Divergence Meter

- This display indicates the width of the center image from 0 (Center) to 100 (Left and Right only—phantom center channel).
- 50 is an even level distribution among L, C, and R.

### Low Frequency Effect

- Acts as an individual channel level control to the subwoofer output.
- The number four speaker icon controls the subwoofer on and off status (except LCRS).
- Since low frequencies are omnidirectional, individual channel sends to the subwoofer are not controlled in the surround pan positioning grid. Their sends to the subwoofers are adjusted by the Low Freq Effect fader.
- The fader control attenuates from 0.0 (full level) to -100 (off).
- The level may be further boosted or attenuated at the Bus 4 fader for the entire subwoofer output.

## Channel Number Display

- This numeric readout indicates the selected channel.
- Click and drag in the display to select another channel for editing.

## Surround Modes

There are seven surround modes available:

- Stereo
- Quad
- LCRS
- 5.1
- 6.1
- 7.1 (SDDS) (Sony Dynamic Digital Sound)
- 7.1 (TP) (Theme Park)

Surround mode selection is accomplished in the Surround Setup window or the Surround Panning window. The Surround Mode setting determines the look and functionality of the Surround Panning window. Each Surround Mode shares similarities in functionality, yet there are also distinct differences.

Surround modes other than stereo use 4 to 8 speakers. While mixing in surround, the main stereo L/R bus is still available and active. Pan positions between various front and rear speakers are sent to the L/R mix as simple L/R positioning. For example, a channel panned fully right-rear (speaker 6) displays equal level in the L/R mix as a channel panned fully left-front.

## Speaker Icons

Speaker icons are numbered consistently throughout the surround modes. Speakers 1 and 2 are always Front L/R; speaker 3 is always Front Center; speaker 4 is always the Subwoofer (except in the case of LCRS, when it's the Mono Surround); speakers 5 and 6 are always Rear L/R; and speakers 7 and 8 are always Left Center and Right Center.

To set speaker status across a 12 channel row (or portion of a row), open the Panning Overview window (Ctrl+7), click on a speaker icon, and drag parallel left or right—all channels in the row will adopt the speaker status of the originally selected icon.




## Stereo




- Since stereo is a two dimensional mix mode, there's not much use in using the surround window to pan.
- MORPH and FLYBACK are available only in the surround pan window. These features offer creative possibilities in any multichannel mix mode.
- Low Frequency Effect and Divergence are not functional in this mode.

## Quad

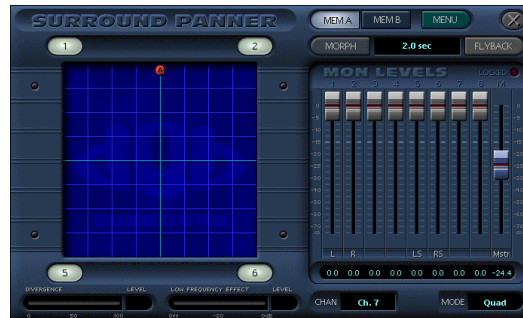

- Notice the speakers are numbered 1, 2, 5, and 6. This provides consistency throughout the available surround configurations. Speakers 1 and 2 are always Front L/R, and speakers 5 and 6 are always Rear L/R.
- Low Frequency Effect and Divergence are not functional in this mode.

## LCRS

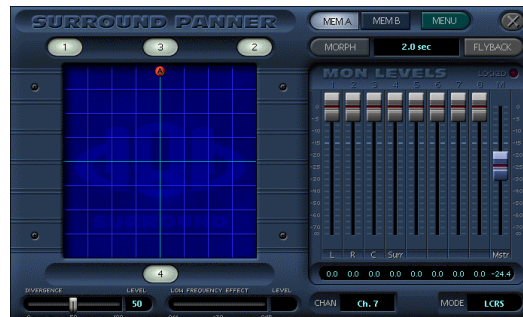

- Notice the speakers are numbered 1, 3, 2, and 4. Speakers 1 and 2 are Front L/R, speaker 3 is Front Center, and speaker 4 is Mono Surround.

## Divergence

- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).
- With a Divergence setting of "0," the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of "100" the center-panned channel is routed equally to the left and right speakers (speakers 1 and 2).

## Low Frequency Effect

- This control is not functional in LCRS mode.



## 5.1



- Notice the speakers are numbered 1, 3, 2, 5, 4, and 6. Speakers 1 and 2 are Front L/R, speaker 3 is Front Center, speaker 4 is the Subwoofer, and speakers 5 and 6 are Rear L/R.

### Divergence

- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).
- With a Divergence setting of “0” the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of “100” the center-panned channel is routed equally to the front left and right speakers (speakers 1 and 2).

### Low Frequency Effect

- This control varies the channel send level to the subwoofer (speaker 4).
- This is the only control over channel levels to the subwoofer (speaker 4).
- The pan grid has no effect on this adjustment.
- With this control set to OFF there is no send level to the subwoofer.
- Unity gain is achieved when this control is set to “0.0”.

## 6.1



- Notice the speakers are numbered 1, 3, 2, 5, 4, 7, and 6. Speakers 1 and 2 are Front L/R, speaker 3 is Front Center, speaker 4 is the Subwoofer, speakers 5 and 6 are Rear L/R, and speaker 7 is Rear Center.

### Divergence


- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).

- With a Divergence setting of “0” the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of “100” the center-panned channel is routed equally to the front left and right speakers (speakers 1 and 2).
- Since there is a rear center channel in 6.1 surround mode, the Rear Divergence is not adjustable and is fixed at “0.”

### Low Frequency Effect

- This control varies the channel send level to the subwoofer (speaker 4).
- This is the only control over channel levels to the subwoofer (speaker 4).
- The pan grid has no effect on this adjustment.
- With this control set to OFF there is no send level to the subwoofer.
- Unity gain is achieved when this control is set to “0.0”.

## 7.1 (SDDS)

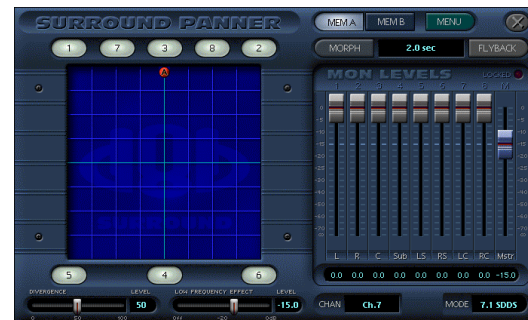

- SDDS stands for Sony Dynamic Digital Sound, which is designed for motion picture sound and optically printed on digital film.
- Notice the speakers are numbered 1, 7, 3, 8, 2, 5, 4, and 6. Speakers 1 and 2 are Front L/R, speaker 3 is Front Center, speaker 4 is the Subwoofer, speakers 5 and 6 are Rear L/R, and speakers 7 and 8 are Front L/R Center.

### Divergence

- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).
- With a Divergence setting of “0” the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of “100” the center-panned channel is routed equally to the front left and right speakers (speakers 1 and 2).
- **Note:** Speakers 7 and 8 are unaffected by the Divergence control.

### Low Frequency Effect

- This control varies the channel send level to the subwoofer (speaker 4).
- This is the only control over channel levels to the subwoofer (speaker 4).
- The pan grid has no effect on this adjustment.
- With this control set to OFF there is no send level to the subwoofer.
- Unity gain is achieved when this control is set to “0.0”.

## 7.1 (TP)



- TP stands for Theme Park. This configuration provides a symmetrical distribution of speakers surrounding the listener.
- Notice the speakers are numbered 1, 3, 2, 7, 8, 5, 4, and 6. Speakers 1 and 2 are Front L/R, speaker 3 is Front Center, speaker 4 is the Subwoofer, speakers 5 and 6 are Rear L/R, and speakers 7 and 8 are Side L/R.

### Divergence

- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).
- With a Divergence setting of “0” the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of “100” the center-panned channel is routed equally to the front left and right speakers (speakers 1 and 2).

### Low Frequency Effect

- This control varies the channel send level to the subwoofer (speaker 4).
- This is the only control over channel levels to the subwoofer (speaker 4).
- The pan grid has no effect on this adjustment.
- With this control set to OFF there is no send level to the subwoofer.
- Unity gain is achieved when this control is set to “0.0”.

### Right Click

Right click in the Panning window to reveal the Surround Menu. This menu provides opportunity to:

- Reset the channel surround parameters
- Undo previous action
- Open previously saved surround channel status
- Save existing surround channel parameters
- Cut, Copy, or Paste all channel settings

## MENU



Surround Menu commands are only active on pannable channels. If a menu command is unavailable, it will display in gray upon Menu activation. Menu selections are not available in the Master Fader bank.

### Undo

- This feature is available to Undo cut, copy, paste, arm, and reset commands.
- As an added aid, the Undo command specifies the target of its action.
- This feature does not undo changes in surround pan positioning.

### Reset

- Resets the selected channel to front-center pan position.
- Deactivates all speaker selections.
- Sets Divergence status to “0” (center pan routes to speaker 3 only in surround or equally to L/R in stereo).
- Sets Low Freq Effect to 0.0 (unity gain).
- Reset affects only the selected morph setting (MEM A or MEM B).
- Channel settings that are reset are not stored on the Clipboard, and therefore they are not available for Paste functions. However, a reset can be reversed by selecting “Undo” in the Surround Sound window Menu or by pressing Ctrl+Z.

### Open Surround...

- This action opens the Surround Files folder where previously saved surround settings are stored.
- Highlight the desired setting and click Open or simply double click on the item to activate it for the selected channel.

### Save Surround As...

- Enables archival of specific surround positions.
- Opens the Surround folder and automatically names the file “Surround#X”.
- To rename the file, simply type the desired text into the auto-highlighted File Name field or, if necessary, highlight the existing text and type the new file name.
- Click Save to complete the action.

### Cut

- This action cuts all settings from the selected channel and resets it to the default settings. Pan is centered, speakers are deactivated, Depth of Center is set to “0”, and Low Freq Effect is set to “0.0”.

- Though the result of a cut is like the result of “Reset,” settings that are cut are stored on the Clipboard and can be pasted into a selected channel. (Channel settings that are Reset are not stored on the Clipboard.)
- Morph selection and time adjustments are not part of the Cut action. They are unaffected by cut, copy, or paste.

### Copy

- This action copies all current surround channel settings to the Clipboard. Copied settings can be pasted to other selected channels.
- All Surround Sound parameters are copied and are part of the Paste function. However, only data for the selected memory (MEM A or MEM B) is copied.
- Morph selection and time adjustments are not part of the Copy action. They are unaffected by cut, copy, or paste.

### Paste Surround

- This action replaces any current settings on a selected channel with previously copied or cut surround data.
- Morph selection and time adjustments are not part of the Paste action. They are unaffected by cut, copy, or paste.

### Lock Monitor Levels

- Select this option to lock the Monitor Level controls once they have been adjusted to optimize your surround sound monitoring speaker system.
- The LOCKED LED lights when Lock Monitor Levels is active.



## The Locator Window (Ctrl+4)



## Transport Controls

### REWind, FFWD, STOP, PLAY, RECord

These controls operate any connected record or playback devices. Devices are controlled through MIDI Machine Control (MMC) and must be set properly to receive transport control commands.

### Numeric Transport Position Indicator

- This window defaults to SMPTE time code position, but can also indicate transport position in Bars/Beats/Ticks or Milliseconds.
- To change the transport position readout, right-click anywhere in its numeric window, then scroll and select from the pop-up menu, or choose from the options just above the cues list (SMPTE, Bars Beats Ticks, or Milliseconds).
- From the control surface, toggle between SMPTE and Bars/Beats/Ticks by pressing the SMPTE VIEW button next to the POSITION readout.

### Ways to Enter Locator SMPTE Position

- Click in desired field (Hours, Minutes, Seconds, Frames) and drag up to increase and down to decrease. Press Enter or click out of the field to complete.
- Click in the desired field and enter the number from the keyboard number row or numeric keypad. Press Enter or click out of the field to complete.
- Press Tab to enter the SMPTE window, starting at the Hours field and enter the desired setting. Press Tab to move from field to field; press Return to complete action and to exit data entry mode.
- Press the SET TIME button (in the Transport section on the console) to enter a locate time. Using the numeric keypad on the control surface, enter the desired time in hours, minutes, and seconds, then press Enter to complete. Store locate time by selecting LOCATOR mode, entering the locate number, then pressing Store followed by Enter.
- Locate points can be entered on the fly by simply clicking the New button at the desired time during playback.
- Selected Locate points can be updated by clicking the Store button to overwrite with the current time.

## Automation Parameters

These settings activate and deactivate the write status of all automation parameters. In addition, Bypass controls the read/playback status for all automation data.

### BYPASS

- When this is highlighted, automation data is completely ignored.
- When this icon is not highlighted, all previously recorded automation data plays back and any selected automation data can be written, as long as channels are in automation write mode and time code is received at the MTC input.

- See the Playback column in the Channel List (under Channel in the upper menu bar) for individual channel automation playback status.

#### FADER

- Highlight this button to enable the recording of fader movements into automation.

#### MUTE

- Highlight this button to enable the recording of mute on/off selections into automation.

#### PAN

- Highlight this button to enable the recording of pan and surround positions into automation.

#### ALL

- Highlight this button to enable the recording of all other automation parameters besides fader, mute, and pan, into automation.

#### TOUCH

- Highlight this button to enable automation data recording by simply moving an automation parameter control.
- While automation is playing back, moving any selected parameter control begins instant recording of that automation parameter.

#### TRIM

- Highlight this button to move all faders to unity position for TRIM automation.
- This status adds or subtracts the TRIM fader movement to or from all previous channel automation data.
- Use this feature anytime you want to keep all previously recorded fader moves intact while offsetting the relative track level.

#### HIDE OPTS

- Click this button to hide the transport and record options in the Locator window.

#### HIDE CUES

- Click this button to hide the cue list in the Locator window.

#### Mix Options Parameters

A number of transport-related options are available, which are mirrored in the Setup/Mix Options window. These include:

- Single Btn Rec (One Button Punch) — puts connected record devices into record mode by simply pressing the RECORD button.
- Use Write Ready — the Master Record button becomes the Master Write button.
- Solo Latch — Solo buttons remain engaged even when a new Solo button is pressed.
- Record Safe — prohibits engaging the RECORD function.
- Write Flyback — causes the levels to snap back to their original punch-in states after an automation pass on a track.
- Use PreRoll — causes playback transport to begin before the specified locate point based on the Pre-Roll time entered in the MIDI Setup window.
- See Mix Options in the Setup section (page 69) for more information about these parameters.

#### Locator Parameters



- The numeric transport position indicator can be set to SMPTE time, Bars/Beats/Ticks, or Milliseconds by clicking the corresponding option above the cues list, or by right-clicking in the numeric window and selecting the desired option in the pop-up menu.

#### New Cue

- Click this button to create a new cue point.
- The new cue point is created at the existing SMPTE, millisecond, or measure position.
- Cue point readout changes form depending on the readout format selected in the main Locator window (SMPTE, Bars, Milliseconds.)

#### Delete Cue

- Click this button to Delete the highlighted cue point(s) from the Cue list.

#### Renumber

- Cue points are ordered on the Cue list according to their Locator position (SMPTE, Bars, Milliseconds). If cue points are not created progressively from the beginning of the recording to the end, the Locator numbers (left of the Cue name) might become random. Click Renum to restructure the cue numbers into ascending order from the beginning of the recording to the end.

#### Store Cue

- Click Store to enter the current Locator position into the highlighted Cue point.
- If multiple cue points are highlighted, the Locator position is stored in the earliest occurring Cue point only.

## The Mix Editor Window (Ctrl+5)


The Mix Editor window contains a graphic representation of automation data. Though automation data is primarily entered through the control surface knobs, buttons, and faders, it can also be altered graphically in the Mix Editor. Precise level and timing information is easily entered and adjusted here. The resizable window supports various selectable views from 1 to 24 channels, or parameters, of data on the Y axis and any length of time region on the X axis (up to 24 hours). A vertical scroll bar allows for paging or incremental viewing of the channels or parameters, and the horizontal scroll bar allows for paging or scrolling time chunks, according to the current time resolution.

The Mix Editor can view a single channel with all of its parameters or, by selecting the “Channel View” checkbox, you can view multiple channels of one parameter type (plus a background event of a different type). This allows you to view, for example, 12 EQ parameter tracks stacked on top of one another, or 6 stacked pan automation curves.

Automation Event curves are displayed as dots (actually, small squares) that represent nodes, and lines that represent value ramping. The nodes represent editable points that are either created during the automation process in real time, or by the hand tool in the Mix Editor.

Note that on/off or radio button-type parameters (e.g., Mutes, EQ On/Off, or Snapshots, etc.) that aren't of a ramping type, are displayed as stepped values.


Events such as Snapshot Recall, Load Plug-in Preset, Load EQ Preset, etc., can now be inserted in the Mix Editor window by right-clicking on the time bar.

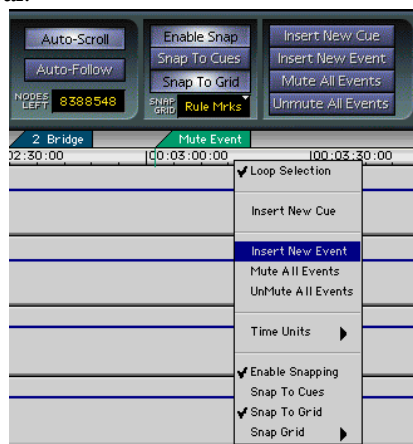

A drop-down menu appears that offers the following options: Loop Selection, Insert New Cue, Insert New Event, Mute All Events, UnMute All Events, Select Time Units, Enable Snapping, Snap To Cues, Snap To Grid, and Snap Grid options. Events include Snapshots, Load EQ, Load Compressor, Load Gate, Load Channel, and Load Plug-in.

Dedicated buttons for Insert New Cue, Insert New Event, Mute All Events, and Unmute All Events are also provided in the upper right corner of the Mix Editor window.


Event markers appear in the Mix Editor's time bar, and can be dragged forward or backward. Right-click on the event marker to open a drop-down menu for selecting Mute Event, Delete Event, Edit Event, Commit Event, and Lock Time.

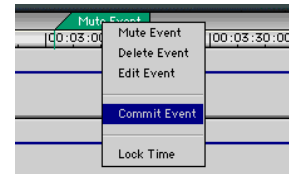

**Note:** Committing an event means that the selected event becomes part of the Mix Editor automation data, and no longer operates as a separate event. See “Commit Event” on page 82 for an in-depth discussion of this feature.

Automation tracks may be cut, copied and pasted, in typical graphic editor fashion, using click and drag highlighting with the mouse cursor and the Highlighter tool (Crosshair). Single segment copy and multiple pasting may be performed easily with repeatable segments for a “groove” repetition approach. An entire time region across all parameters or channels (according to the current filter views) may be selected by clicking and dragging across the top time bar. Highlighted regions may be “nudged” up, down, left or right, for trim or offset needs, using the 4 nudge arrows (top center of the Mix Editor window).


**Note:** Refer to the History List as well. It is of great value when using the Mix Editor.

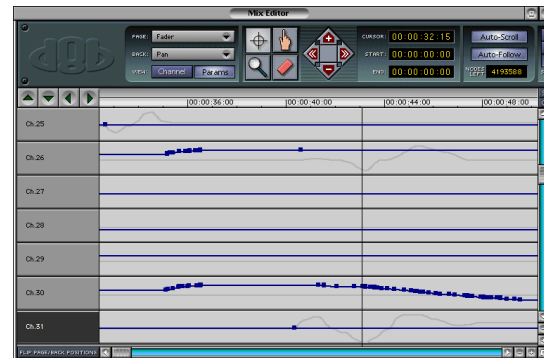

### Page and Back Pull-downs

- Allows two automation types to be viewed as foreground (Page) and background (Back) data (great for seeing relational data like fader and pan, or surround front/rear pan vs. L-R pan). The

foreground data curve is subject to all clipboard operations, while the back page curve remains untouched. To update either the foreground or background view, click on the drop-downs, drag across the type field or channel and release the mouse on the highlighted desired item.

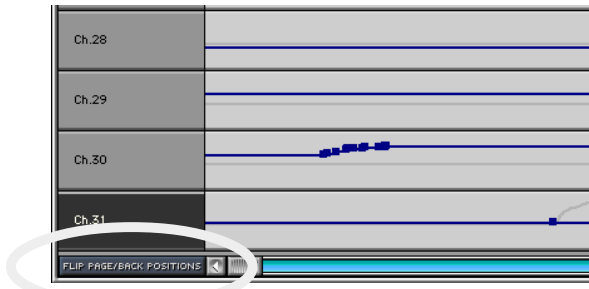

### Flip View Button

This button swaps the Page and Back parameter views in the Mix editor. For example, if “Fader” is foreground and “Mute” is background, clicking on the flip button toggles the view to show “Mute” as foreground and “Fader” as background. Toggling the flip once more flips the view back to the original view of “Fader” as foreground and “Mute” as background.

### Channel/Params Views

- When Params (Parameters) view is selected, the Mix Editor provides a view of a single parameter across multiple channels. The parameter is selected in the Page pull-down box.
- When Channel view is selected, you can view multiple parameters of a single channel. The channels are selected in the Page pull-down box, which include Channels 1-48, the Master Fader, Groups 1-8, Buses 1-8, Plug-ins 1-16, FX 1-16, Returns 1-8, and MIDI channels 1-8.



- The Back pull-down box allows you to view parameters for a different channel in the background for comparison.

The six buttons to the left of the Page and Back pull-down lists act as filters for parameter selection:

- When none of these six buttons is pressed, all data is displayed for the selected channel.
- Highlight the EQ button to display EQ data only.
- Highlight the Comp button to display compression data only.
- Highlight the Gate button to display gate data only.

- Highlight the FMP button to display fader, mute, and pan data only.
- Highlight the Busses button to display bus data only.
- Highlight the Auxes button to display aux data only.

These buttons can be selected in combination with each other. For example, to view EQ and compression data, simply highlight both EQ and Comp.

### Edit Tools

Left-click on the Mix Editor tools to select them. At any time, right-click in the Mix Editor automation data to open a pop-up list for quick and easy selection of the desired Edit Tool (Crosshair, Hand, Magnify, or Eraser).

### Pointer Tool (Hand Tool)

- Use this tool to enter new data nodes and to alter existing ones.
- While the Pointer tool is selected, press the Control key to momentarily select the Erase tool.
- The Pointer tool can create and move new or current automation nodes (curve turning points) while time code is being received (on the fly editing—before or to the left of the current time) or while time code isn’t being received (at any point on the timeline).

### Shift+Pointer Tool

- With the Pointer tool selected, press and hold the Shift key and notice that the hand turns into a double-headed vertical arrow. This editing mode allows you to drag automation lines (and surrounding nodes) vertically without changing the time (horizontal value) at which the automation occurs. This is useful if you want to raise or lower a section of automation as a group.
- Shift+click an automation line to edit the line and the two nodes on either end of the line you click.
- If you select a region with the Highlighter tool first, and then hold the Shift key and edit with the Pointer tool, all nodes contained within the selection are edited as a group. Again, they are constrained to vertical motion only.

### Highlighter Tool (Crosshair)

- Use this tool to select data by time and channel.
- Select the Highlighter tool and click and drag across a track to highlight a specific time region.
- Click on another track name field to move the current highlighted region (time segment) to the selected track.
- Click and drag across the top timeline bar to select specific sections of time across all tracks.
- Double-click on one track to select the entire 24 hours of data.

**Note:** You can select multiple adjacent channels (in Channel View) or multiple adjacent parameters (in Param View) by pressing the Shift key on the keyboard while clicking on tracks.


You can select multiple non-contiguous channels or parameters by pressing the Ctrl key on the keyboard while clicking on tracks.

## Magnify Tool

- Use this tool to select specific data lengths and to expand the data time to fill the overview screen.
- Click and drag with the Magnify tool to zoom into a specific area. Double-click to double the magnification.
- Hold the Control key while in magnify mode to toggle between zoom in and zoom out.


## Eraser Tool

- Use this tool to click on and remove the data inflection nodes.

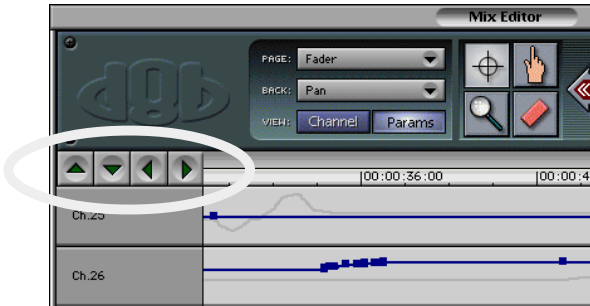

## Zoom Arrows

- The four green zoom arrows at the top of the channel/parameter list expand and contract the time axis (left and right arrows) and change the displayed number of automation tracks or parameters (up and down arrows) when clicked with the mouse.
- The keyboard arrows are mapped to control the same view display changes when the Mix Editor is open, using modifier keys as follows:
  - ◆ Press the Alt key on the keyboard along with the left/right arrows to scroll across the Mix Editor timeline.
  - ◆ Press the Control key along with the left arrow on the keyboard to zoom out.
  - ◆ Press the Control key along with the right arrow on the keyboard to zoom in.
  - ◆ Press the Alt key along with the up/down arrows on the keyboard to scroll up and down the channel/parameter list.
  - ◆ Press the Control key along with the up/down arrows on the keyboard to vertically zoom in on the channel/parameter list.

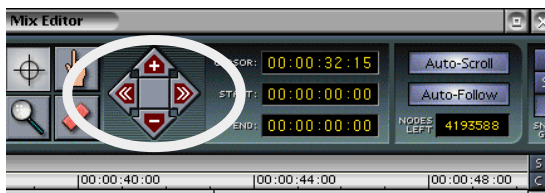

## Four Nudge Arrows

These arrows are located in the Mix Editor control palette immediately to the left of the Cursor, Start, and End time windows.

- When these arrows are clicked with the mouse, highlighted data regions are moved back and forth in time (left-right arrows), or values within the highlighted regions are incrementally increased or decreased by using the up-down arrows.

- The resolution of these moves is relative to the current screen resolution, so the greater the zoom-in value, the finer the resolution of any modifications.
- Using the nudge arrows is a good way to toggle mute events on and off by highlighting regions on a mute track and simply nudging up or down to change mute states.

## Time Code Displays


- Three time code displays indicate the highlighted region start and end points, and the current cursor position (displayed in either SMPTE or BBT).
- Values may be manually entered in the Start/End point fields for specific edits.
- When adjusting an event or cue, the cursor display changes to indicate the event or cue start time.

## Auto Follow

- This feature causes the Mix Editor to change views on the fly. When enabled, Auto Follow updates the Mix Editor to focus on any parameter you touch (by channel and function).

## Auto Scroll

- When enabled, Auto Scroll updates the Mix Editor to scroll the screen past the timeline cursor, located at the screen's halfway point.

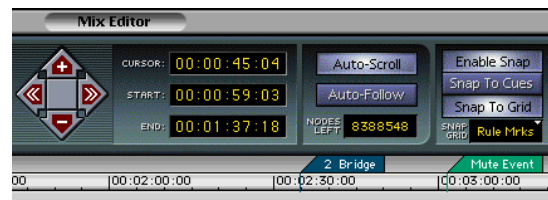

## Nodes Left

- The box under the Auto-Follow button displays Node availability.
- The maximum number of automation nodes you can use is directly related to the amount of RAM in your D8B CPU.



## Enable Snap

- Click this button to enable the selected "Snap To" function (see below).

## Snap To Cues

- Click this button to allow the highlighter tool to snap to a cue point when in the vicinity of a cue marker.

## Snap To Grid

- Click this button to allow the highlighter tool or a cue to snap to the grid, as defined in the Snap Grid Drop-Down box (see next paragraph).

### Snap Grid Drop-Down Box

- Click here to select the “Snap To Grid” parameter. Selections include Rule Mrks, Minutes, Seconds, and Frames for SMPTE time, and Bar, 1/2 Note, 1/2 Note Triplet, 1/4 Note, 1/4 Note Triplet, 1/8 Note, 1/8 Note Triplet, 1/16 Note, and 1/16 Note Triplet for Bars:Beats:Ticks.

### Insert New Cue

- Click this button to insert a new cue the current time cursor point.

### Insert New Event

- This button opens the New Event window for inserting new events, as described in the Event Track section.

### Mute All Events

- Click this button to disable all automation events.

### Unmute All Events

- Click this button to enable all automation events.

### S Button

- Click the “S” button (at the right side of the time line) to return the Mix Editor to the start of the session.

### C Button

- Click the “C” button (at the right side of the time line) to return the Mix Editor to the current time code cursor position.

### Cue Points and Event Markers


Tabs along the top of the time line indicate cue points and event markers. Simply click and drag the cue point tabs or event markers to reposition them in the Mix Editor window.

*Performance Note:* For optimum graphic update performance during automation and playback, it is best to close all windows other than the Mix Editor.


### Commit Event

Event automation is convenient for many types of sessions. However, sometimes you may need to edit an event further, or maybe you want to start a session with snapshot automation and then add some dynamic automation to it. The act of turning an event into dynamic automation is called committing an event. The event automation is turned into dynamic automation nodes. Automation nodes are added to the Mix Editor tracks, and horizontal automation lines extend to the right, along the automation track. How far they go is dependant upon the options selected when committing the event.

- Right-click an event in the Mix Editor and choose “Commit Event” to open the Commit Event dialog box.

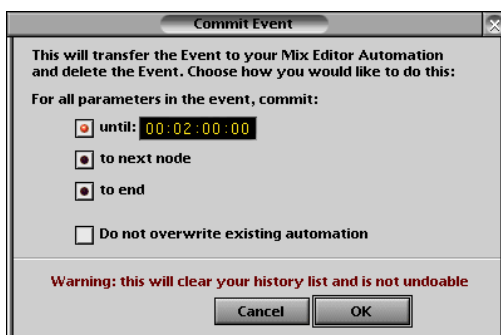


### Mix Editor Before Commit:

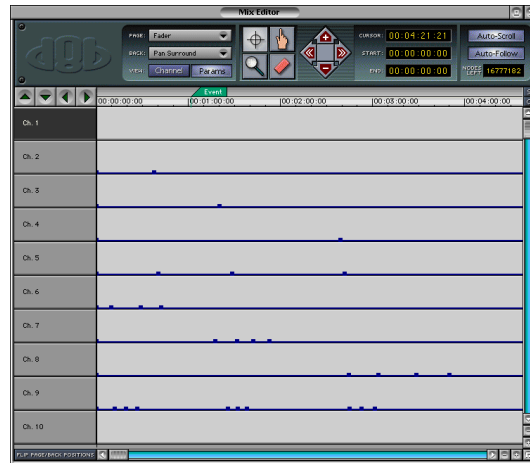

- ◆ **Commit until Time:** The automation is committed from the time of the event until the selected time. Use this if you want to commit a snapshot from 2:00 to 4:00, for example. After the specified time, the automation returns to the previous existing value. This is similar to how write flyback works. In the example below, an event consisting of a snapshot with all faders at maximum was committed until the 00:02:00:00 time.


### After Commit Until Time:

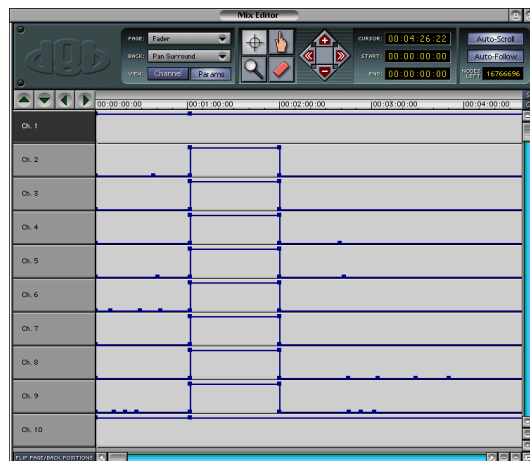

- ◆ **Commit until Next Node:** Automation is written at the time of the event until the next existing node on the track. This is done on a track-by-track basis so depending on when the next node occurs, the automation may be written for a short (channel 3 below) or long (channel 4 below) period of time. If there is no node following the commit time on a particular parameter, then automation will be written to the end of the session on that parameter (channel 2 below).




### After Commit Until Next Node:

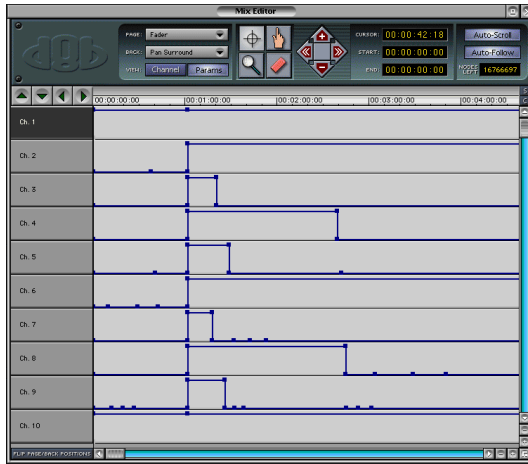


- ◆ **Commit until End:** With this option checked, automation is written from the time of the event until the end of the session.

### After Commit Until End:

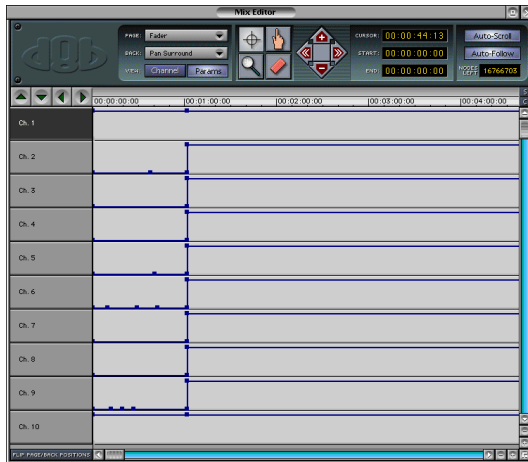

- ◆ **Do not overwrite existing automation:** With this option checked, automation will not be written to parameters with existing automation. Automation will only be written to empty parameters. In the example below, notice that automation is only written on channel 1 and 10 because they are the only channels that did not contain automation before the commit.

### After Do Not Overwrite Existing Automation:

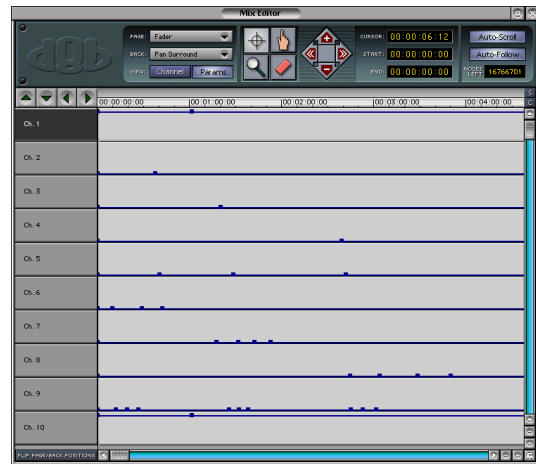

---

**Note:** When committing snapshots, the snapshot filter settings are taken into account. For example, if the snapshot has Mutes and Faders filtered out, then no automation nodes will be written to fader or mute automation tracks for all channels.


---

## The Fat Channel Window (Ctrl+6)



The Fat Channel overview is opened and closed by clicking on the “Fat Channel” button in the lower menu bar, or by pressing Ctrl+6 on the keyboard. The shortest way to open and close the Fat Channel is to double-click on a channel SELECT button.

### EQ

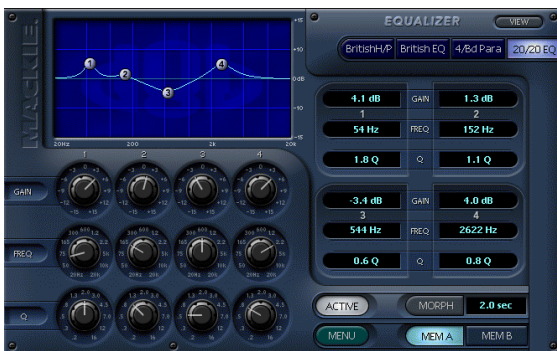

There are four EQ types to choose from:

- 4 Band Parametric
- 20/20 EQ
- British EQ
- British H/P

The default EQ type is the “4 Band Parametric EQ.” A quick summary of the EQ choices follows:

#### 4-band Parametric

- 4 parametric bands with analog style overlaps

#### 20/20 EQ

- 4 parametric bands with full 20Hz to 20kHz frequency sweep on each

#### British EQ

- Low-band shelving filter, 2 mid-parametric bands, and a high-band shelving filter

#### British H/P

- High-pass filter, 2 mid-parametric bands, and a high-band shelving filter

EQ types are saved and recalled with patches, snapshots, and sessions, and transferred via clipboard operations.

- Click the ACTIVE button near the bottom of the EQ window to turn on the EQ for the selected channel.

- There are three methods to modify parameters in the EQ.
  - Click and drag on the editing ball in the display window. Drag up and down to change the gain, left and right to change the frequency, and right-click (or Alt+click) and drag left and right to change the Q.
  - Click and drag up or down on a control knob below the display window.
  - Click and drag up or down in the numeric display boxes (Gain, Freq, Q).
- Ctrl+click on an editing ball to zero the settings for an EQ band.

### VIEW


- Click the VIEW button to open a larger view of the EQ graph in the Fat Channel for more detailed editing.

**Tip:** Double-click in the EQ graph window to open the larger view superimposed over the Compressor and Gate windows. Double-click again to close it. You can also double-click the EQ button in the Fat Channel section on the console to open and close the expanded EQ view.



### MENU

- Click the MENU button to Open, Save, Reset, Undo, Cut, Copy, and Paste an EQ patch.

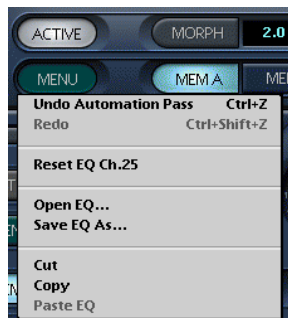

### MEM A/B

- Each MEMORY stores the most recent MEM A or MEM B EQ settings made for the selected channel.
- Click either of these memory positions to instantly recall the stored settings.
- Ideal for making quick A/B comparisons between EQ settings.

### MORPH

- Click the MORPH button to smoothly fade from one MEMORY setting to the other.
- The amount of time it takes for this transition is set in the time window directly below the MORPH button.
- MORPH time can be set as low as 0.1 second or as high as 120 seconds.

### COMPRESSOR



The meter in the Compressor section indicates either the output signal level (from the compressor) or the amount of gain reduction, depending on the setting of the METERING switch next to the meter. This setting is global and is not recalled with any individual channel. The default meter setting is OUT (Output level). Click on the meter to change to the alternate meter view. This can be useful for lower-level signals.





When there is no signal applied, the Reduction meter indicates 0 dB of reduction, with the needle all the way to the right. As the signal level increases above the Threshold setting of the Compressor, the needle moves down, indicating the amount of compression being applied at any given moment in time, to a maximum of 20 dB of reduction.

Additionally, there is a “signal present” indicator (the green LED) near the top of the meter, which simulates an analog signal present LED. It begins to light at -40 dB and becomes fully lit when the signal passes -20 dB.

Note that the Reduction meter is triggered by the Compressor function only, and does not indicate the closing or opening of the gate.

#### THRESHOLD

- Determines the level at which the compressor begins to act on the incoming signal. It is calibrated in decibels, ranging from -60.0 dB to -1.0 dB.

#### ATTACK

- Determines how fast the compressor reacts once the threshold has been exceeded. It is calibrated in milliseconds, ranging from 0.1 ms to 2500 ms (2.5 seconds).

#### RELEASE

- Determines how fast the compressor turns off once the signal falls below the threshold. It is calibrated in milliseconds, ranging from 10.0 ms to 2500 ms (2.5 seconds).

#### RATIO


- Determines the change in output level as a function of the change in input level, once the threshold has been exceeded. The Ratio control ranges from 1.0:1 to inf:1. Thus, if the ratio is 10:1, an increase in input level of 10 dB (assuming the input is above the threshold level), results in a 1 dB increase in output level.
- When set to inf:1, the compressor acts as a peak limiter. After the initial attack time, the output does not get any higher than the threshold.

#### OUTPUT


- Determines the amount of make-up gain applied after the compressor. Use this control to compensate for the loss of gain caused by the action of the compressor. It is calibrated in decibels, ranging from unity (0.0 dB) to +20.0 dB.

#### SOFT

- This button turns on the compressor soft knee function. The knee of the compressor describes the point on the input-output graph where the threshold begins to reduce the output.
- A hard-knee compressor means that, up until the moment the input signal crosses the threshold, no compression occurs; once the threshold is crossed, the full ratio of gain reduction is applied to the input signal (assuming the attack time has passed).

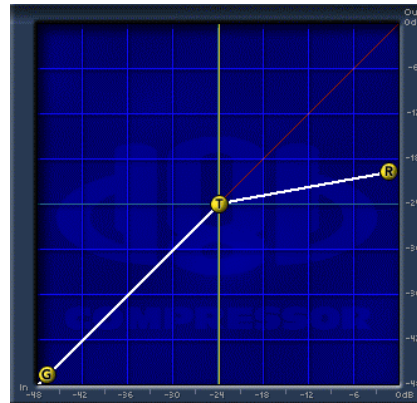

- With the soft knee engaged, the gain reduction begins to occur before the input signal reaches the threshold. The amount of reduction gradually increases until the full ratio setting is reached slightly after the threshold is crossed. This can be seen as a curve around the knee point on the compressor graphic display.

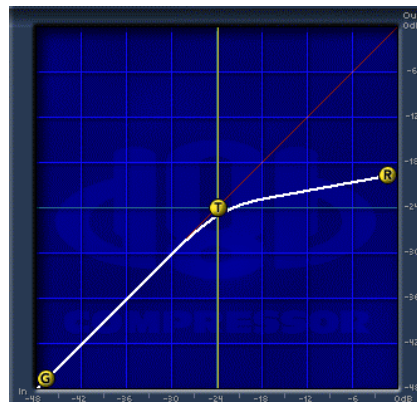

#### VIEW

- This button opens a graphical view of the compressor and gate gain reduction curves (input signal level vs. output signal level).
- Click and drag on the nodes in the windows to change the parameters of the compressor and gate.

**Tip:** Double-click the COMPRESSOR and GATE buttons in the Fat Channel section on the console to open and close the expanded dynamics view. Double-click in the blue background of the expanded dynamics view to close the expanded view window.

## ACTIVE

- Click the ACTIVE button to turn on the compressor for the selected channel.

## MENU

- Click the MENU button to Open, Save, Reset, Undo, Cut, Copy, and Paste a Compressor patch.

## MEM A/B

- Each MEMORY stores the most recent MEM A or MEM B EQ settings made for the selected channel.
- Click either of these memory positions to instantly recall the stored settings.
- Ideal for making quick A/B comparisons between compressor settings.

---

**Note:** Soft Knee, Meter View, and Meter Mode are not stored in the MEM A or MEM B settings.

---

## GATE

The meter in the Gate section indicates either the input signal level or the amount of gain reduction, depending on the setting of the METERING switch next to the meter. This setting is global and is not recalled with any individual channel. The default meter setting is IN (Input level).



The Input Signal meter displays the channel's input signal, as measured at the post-Digital Trim/pre-Compressor point.

When there is no signal applied, the Reduction meter indicates 0 dB of reduction, with the needle all the way to the right. As the signal level decreases below the Threshold setting of the Gate, the needle drops down, indicating the amount of gain reduction being applied at any given moment in time, to a maximum of 20 dB of reduction. With normal gating the amount of reduction is “minus infinity” (or OFF). With EXPAND turned on, the amount of reduction is determined by the RATIO setting. Click on the meter to change to the alternate meter view. This can be useful for lower-level signals.

The red LED, near the top of the meter, is a “gate threshold” indicator and lights up to indicate when the Gate is on.

## THRESHOLD

- Determines the level at which the gate acts on the incoming signal. It is calibrated in decibels, ranging from -60.0 dB to -1.0 dB.

## ATTACK

- Determines how fast the gate opens once the threshold has been exceeded. It is calibrated in milliseconds, ranging from 0.1 ms to 2500 ms (2.5 seconds).

## RELEASE


- Determines how fast the gate closes once the signal falls below the threshold. It is calibrated in milliseconds, ranging from 10.0 ms to 2500 ms (2.5 seconds).

## RANGE

- Determines the amount of gain reduction applied to the signal once the signal level drops below the threshold. It is calibrated in decibels, ranging from 0 dB to 100 dB.

## EXPAND

- Activates the expansion function of the gate. The RANGE control is removed and a RATIO control appears.

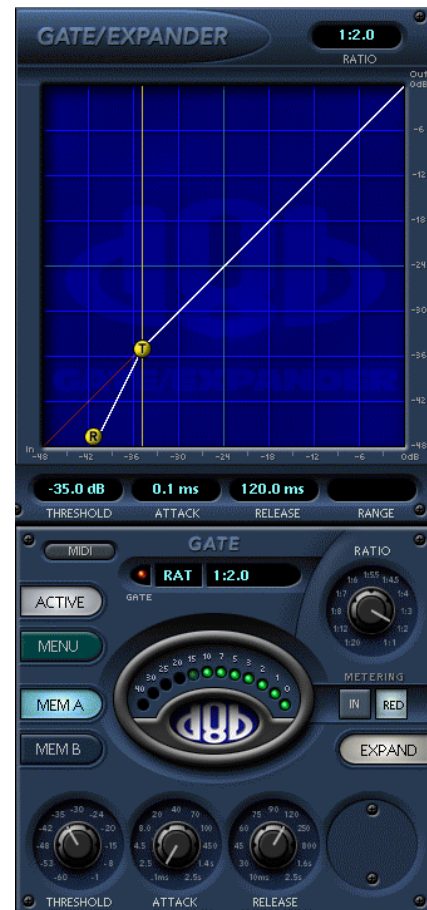

## RATIO

- Determines the change in output level as a function of the change in input level, once the signal level drops below the threshold. This is sometimes called downward expansion. The ratio control ranges from 1:1.0 to 1:inf. Thus, if the ratio is 1:2, a decrease in input level of 10 dB results in a 20 dB decrease in output level (assuming the input is below the threshold level).

## MIDI

- Enables external MIDI triggering for the gate.
- This can be useful for gating drums based on a sequenced MIDI drum pattern.
- To set up MIDI gate triggering:
  1. Select MIDI Map from the Windows menu.
  2. Select New MIDI Route from the Edit window.
  3. Assign a MIDI note by selecting Note from the MIDI Status drop-down menu.
  4. Select Gate MIDI Trigger from the Parameter column.
  5. Send a MIDI note to the D8B from a sequencer or other MIDI device. The Mode setting in the MIDI Map determines when the gate opens and closes (see “Creating a Route” on page 94).
- Gate MIDI Enable can also be turned on and off via external MIDI note commands.

## ACTIVE

- Click the ACTIVE button to turn on the gate for the selected channel.

## MENU

- Click the MENU button to Open, Save, Reset, Undo, Cut, Copy, and Paste a Gate patch.

## MEM A/B

- Each MEMory stores the most recent MEM A or MEM B EQ settings made for the selected channel.
- Click either of these memory positions to instantly recall the stored settings.
- Ideal for making quick A/B comparisons between gate settings.

---

**Note:** Meter View and Meter Mode are not stored in the MEM A or MEM B settings.

---

### Additional Fat Channel Controls

#### CHANNEL SELECT

- Use the arrows on either side of the channel number (or the arrow keys on the keyboard) to scroll up or down through the D8B channels.
- Click in the “Chan. Select” window for a pull-down of all the channels.

#### CHANNEL NAME

- This displays the channel name.
- Double-click on the name to highlight it, then type in the new channel name (up to 16 characters). Press Enter or click elsewhere to complete the operation.

#### ASSIGNMENT

- Assign the channel to the main L/R bus or any of the 8 bus outputs.



## ROUTE TO TAPE

- Assign the channel to a tape output.
- Highlight the desired numbers to send the channel to one or many tape outputs.
- This is the most visual way to tell if a channel is routed to several tape outputs.
- A channel can be assigned to more than one tape out, but only the last one selected appears in the channel's OUT window (in the overview screen).
- No two channels can be assigned to the same tape output. To sum channels to a tape output, assign them to a bus, then route the bus to a tape out.

## Phase

- Highlight PHASE to invert the channel polarity by 180 degrees.

## Aux Sends

- Use the on-screen knobs to adjust any of the aux send levels.
- Press Control while clicking the Aux knob to set Aux send level to unity gain.
- Click the PRE button directly below the Aux send knob to toggle the individual Aux Pre/Post status.
- Click the OFF button directly below the Aux send knob to toggle the individual channel Aux on and off (mute).

## DIGITAL TRIM

- Use the on-screen knob to adjust the channel digital trim.
- Press Control while clicking the knob to set the Digital Trim to unity gain.

## WRITE

- Highlight this button to put the selected channel into automation Write Ready mode.
- This cannot be activated when the console is in automation BYPASS mode.

## PAN

- Pan channel in the L/R spectrum.
- Control-click on the PAN button to snap to center position.
- In surround mode, a miniature panner is displayed instead of the rotary pan control. Double-click to open a larger surround window.

## SOLO

- Highlight SOLO to solo the channel.
- Press “O” on the keyboard to solo the selected channel(s).
- Press “P” on the keyboard to release the SOLO status on the selected channels.

## MUTE

- Highlight MUTE to mute the channel.
- Press “M” on the keyboard to mute the selected channels.
- Press the comma key on the keyboard to release the mutes on the selected channels.

## Fader

- Use the on-screen fader to adjust the selected channel level.
- Press Control while clicking anywhere in the fader throw area to snap the fader to unity gain.

## PRE-DSP INSERT

- Click the PATCH button to insert a channel, aux, bus, return, or plug-in into the signal path before the channel’s DSP.
- This insert is at the beginning of the signal path, just after the A/D converter and before Digital Trim, EQ, Dynamics or other processing.

## POST-DSP INSERT

- Click the PATCH button to insert a plug-in into the signal path post EQ, Dynamics, and other processing.

## KEY INPUT

- Use another channel’s audio to trigger the dynamic processor of the selected channel.
- Click the PATCH button to select the key input source.

## DYNAMICS EQ


- Use this window to filter the dynamics key input. This is often necessary to properly trigger the dynamics processor. For example, compress oversibilant vocals by accentuating the mid/high frequencies feeding the dynamics key input.
- This EQ is edited as described for other EQ edit operations.

- KEY Button: This enables use of the Dynamics EQ by stealing the fourth band of EQ from the selected channel’s equalizer to filter the Dynamics Key input.
- EQ IN Button: Activates the Dynamics EQ on the Key signal. This can be used to automate the Dynamics EQ.


**Tip:** These two buttons sound pretty similar in operation, so here is the skinny on how they work together. If you plan to use Dynamics EQ on a session, then enable the KEY button on the desired channel(s). As stated, this steals the channel’s fourth EQ band for Dynamics EQ purposes.

Even though the KEY button is on, the Dynamics EQ is not yet affecting the Key signal. This only occurs once the EQ IN button is pressed. So in most cases you will click both buttons and adjust your Dynamics EQ to taste. If you wish to use Dynamics EQ on some sections of a session but not others, then automate the EQ IN button but leave the Key button enabled.

Allowing only a single band of EQ for the Dynamics EQ might not sound like much, but this is one flexible band. Double-click in the DYNAMICS EQ window to open the expanded EQ view (BAND 4 EQ TO DYN) for more detailed editing. Here you can select the EQ type for the Dynamics EQ. Selections include Parametric (Para), High Shelving (Shelf), High-Pass Filter (HP), and Low-Pass Filter (LP).

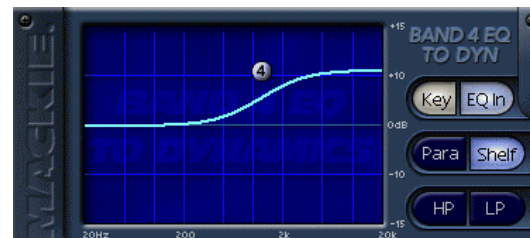

The Panning Window (Ctrl+7)

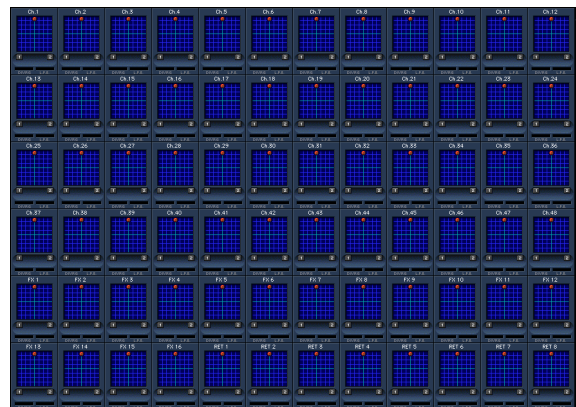

This window is extremely useful in an active surround mixing environment. All the basic surround pan function are available for each channel (mics, tape, FX, and returns).

**Note:** The panning window functions are only active when a surround mode is selected.

## Speaker Select

- Highlight the desired speaker number icon to send a specific channel to any or all speakers.
- Speakers are always numbered according to function: Front L/R are speakers 1 and 2; Front Center is speaker 3; Rear L/R are speakers 5 and 6; L/R Center are speakers 7 and 8; Speaker 4 is the Subwoofer (or Mono Surround for LCRS).
- To set speaker status across a 12 channel row (or a portion of a row), click on a speaker icon and drag parallel left or right—all channels in the row will adopt the speaker status of the originally selected icon.

## Divergence

- This control continuously varies the center image from dead-center (speaker 3) to a phantom-center (equally split between speakers 1 and 2).
- With a Divergence setting of “0” the center-panned channel is routed to the center speaker only (speaker 3).
- With a Divergence setting of “100” the center-panned channel is routed equally to the left and right speakers (speakers 1 and 2).

## L.F.E. (Low Freq Effect)

- This control varies the channel send level to the subwoofer (speaker 4).
- This is the only control over individual channel levels to the subwoofer (speaker 4).
- The pan grid has no effect on this adjustment.
- With this control set to OFF there is no send level to the subwoofer.
- Unity gain is achieved when this control is set to “0.0”.


## Pan Ball

- Click and drag the pan ball to change surround pan positioning.
- Top of the pan grid is front; bottom of the pan grid is rear.
- Hold the Control key to restrict the pan ball to vertical movement.
- Hold the Alt key down to restrict the pan ball to horizontal movement.


## Right Click

Right click in the desired window to reveal the Surround Menu. This menu provides opportunity to:

- Reset the channel surround parameters
- Undo previous action
- Open previously saved surround channel status
- Save existing surround channel parameters
- Cut, Copy, or Paste all channel settings

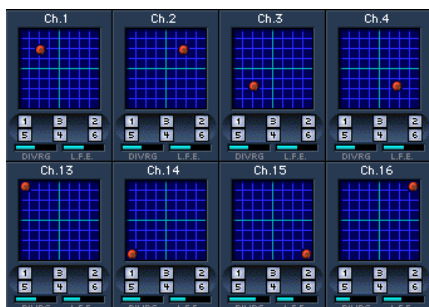

## The Faders Window (Ctrl+8)

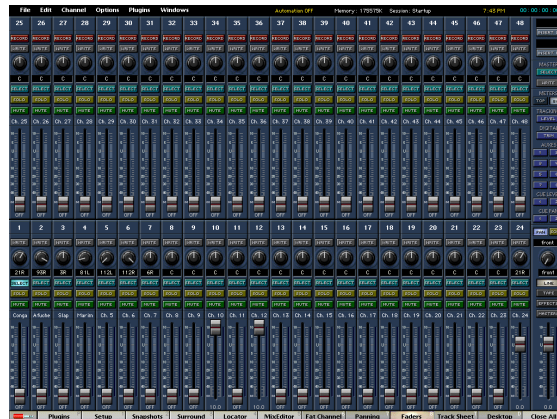

## TAPE Bank on top


This mode places the tape return fader bank in the upper half of the screen display. Now all input faders are available at all times. This offers incredible value in many practical applications, even though the tape fader bank masks the Aux Sends, Bus Assignments, Tape Outs, Digital Trims, as well as EQ, phase, Compressor and Gate on/off buttons.

- Record buttons are available on the tape fader bank.
- Automation Write buttons are available on all 48 channels.

## Channel Numbers

- Maintains previous channel layout. However, it's not possible to reconfigure channels, once the Faders option is selected.

## Event Automation Track (Ctrl+9)

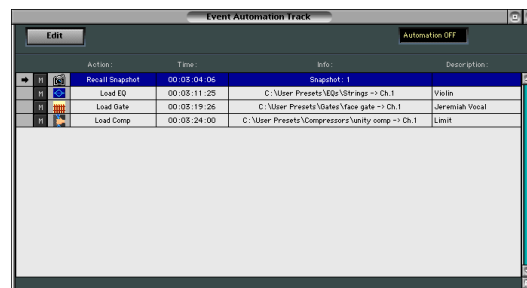

The Event Automation Track allows for time stamping snapshot recall and modular DSP recall. A list of events can be easily placed, moved, and edited from this handy window. Snapshots, Plugins, Channels, as well as EQ, Compressor, and Gate Patches can all be accessed from the disk and placed with frame-accurate precision.


Use this list to trigger files to load at a given timestamp. This is a handy way to automate an EQ, because you can edit the Patch and all references change. One way of looking at the patch event is as a mini snapshot.



All events appear in the Mix Editor window as event markers in the time bar. Events can be edited from either window. Any text entered in the description column in the Event Automation Track also appears in the event marker tab in the Mix Editor.


## Edit

Click this button to choose from the Event Automation Track Edit Menu.

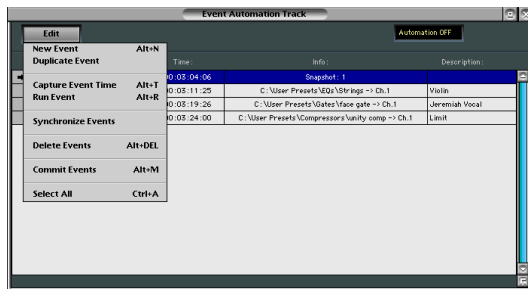


## New Event (Alt+N)

- Select this item to add a new event to the list. The New Event window opens.

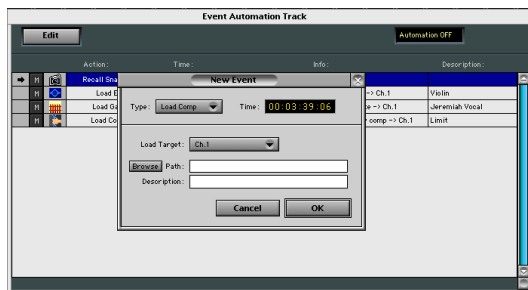

- New Event Type lets you select the specific type of automation event: Snapshot, EQ, Compressor, Gate, Channel, or Plug-in.

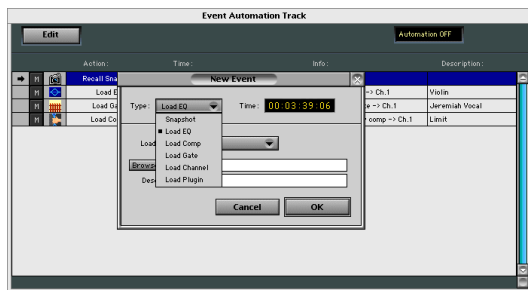

- Load Target lets you select a channel destination for the selected data type.
- A snapshot event does not permit target selection; it only requires the entry of the specific snapshot number.
- Browse/Path allows you to search your D8B patch files for the desired automation event.
- Highlight the proper patch in the list, then press "Open" to load the event into the automation event list.

**Note:** The folder that opens automatically for each event type contains user patches, so if you haven't saved any patches, you won't see any items on the list.

- You can enter the exact frame-accurate time for the automation event in the Time window.
- Click each time segment and drag up or down to increase the time setting.
- Time settings are also selectable by pressing the Tab key until the appropriate time field is highlighted, then entering the number from the numeric keypad or number keys on the keyboard. Tab from field to field.

## Duplicate Event

- Highlight any list item, then select Duplicate Event.
- This creates an identical copy of the selected event.
- Use this feature to duplicate an action at a different time stamp. Simply duplicate the event, then edit the time stamp field by double-clicking on the time reference. Place the cursor on the desired time unit, then drag up to increase or down to decrease.

## Capture Event Time (Alt+T)

- Highlight and release this Edit Menu item to copy the current Locator time position to the time reference window of the highlighted Event Automation Track item.

## Run Event (Alt+R)

- Click any where in the event row to highlight it.
- Choose Run Event from the Edit menu to activate (send) all event data to the designated destination. For example, when Run Event is selected while a snapshot event is highlighted, the snapshot data is instantly loaded into the D8B.
- Avoids having to run time code to preview the event.

## Synchronize Events

Synchronize Events is used to match file data from the current opened session with the DSP patch files (EQ, Comp, Gate, Channel, Plug-in) on disks that are referenced by the Session's Event Automation Track. In short, it is a 'Disk to RAM' correlation. DSP files that the Event track references may need to be resynchronized due to the files having been renamed, deleted, updated, or moved. An important thing to keep in mind is that a session saves all of the Event Automation Track parameters, whether or not the original referenced DSP files exist at all. This 'safety net of reproducibility' was an important design issue; a session should completely reproduce snapshots and dynamic automation playback, regardless of file dependencies outside of a session.

Synchronize Events does not act upon snapshots, because it does not directly reference snapshots from disk. Any changes to snapshots within a session operation will not be displayed as modified Event lines in the same manner as DSP patch file references.

Visually, when a session using Events is loaded, the OS performs a match against the dependent files, and displays any detected changes by adding an asterisk to the 'Action:' column to any or all Event lines. Event lines must be highlighted first before performing a sync operation.

### Delete Events (Alt+Delete)

Guess what! Select this item to delete any selected automation events.

### Commit Events (Alt+M)

- Select this to convert the selected event to the mix editor as a mix node or nodes. It no longer appears as a separate event in the Event List or the Mix Editor time bar.
- You cannot Undo this action, other than opening the Mix Editor and editing or deleting the nodes that were created from the event.
- See "Commit Events" in the Mix Editor section on page 82 for more information.

### Select All (Ctrl+A)

Choose this item to select (highlight) all automation events on the list.

### Mute Icon

Highlight any of the "M" icons to mute the triggering of automation event playback.

### Current List Item Arrow

- The arrow in the far left column represents the current or last triggered automation event.
- The arrow moves to the next event as soon as the time code reaches the automation event time; it remains there until another event time is passed.

- Any channel with notes appears with an orange outline in the Track Sheet. This makes it easy to find notes at a glance.
- Session setup information is automatically loaded by clicking the MENU button and selecting Refresh Session Info.



- The track sheet can be exported as a text file or as an HTML file from the MENU list. The "Save Track Sheet To..." window opens, allowing you to name the file and choose the location to save it. Once saved, the file can be copied to a floppy disk and transferred to a computer where it can be saved or printed.

**Note:** It's a good idea to select Refresh Session Info before exporting the track sheet as a text or HTML file to make sure all the information is up to date.


**Another Note:** We recommend taking detailed notes of your session and printing a copy to keep with your backup audio data (CD-ROM, M90, ADAT, etc.). You are making backups of everything, right?

## Track Sheet (Ctrl+T)



- The Track Sheet window allows you to keep track of all the pertinent information for the session. You can manually enter the information about the studio and client at the top of the left column, and there's room for general notes at the bottom of the column. Additional notes for the selected channel can be recorded in the Channel Notes window (Channel/Channel Notes, Ctrl+Shift+T, or by clicking on the channel number in the Track Sheet window).


## The History List Window (Ctrl+H)

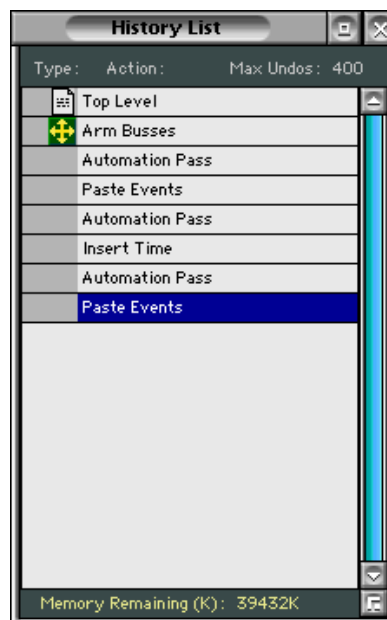

- The History List Window lists actions taken in the Mix Editor. In addition, Automation Passes, Clear


Automation..., Delete Global Time, Insert Global Time, Delete Events, and Modify Levels... commands are logged as single list items. Each of these actions is available for Undo, as long as they remain on the History List.

- Using this list, it is possible to regress to any point in the mix. If at some point things went in the wrong direction, it's easy to go back to where the mix was on the right track.
- Highlight any item in the list to deactivate all forthcoming listed actions. When the mix is played, no actions listed below the selected event will occur.

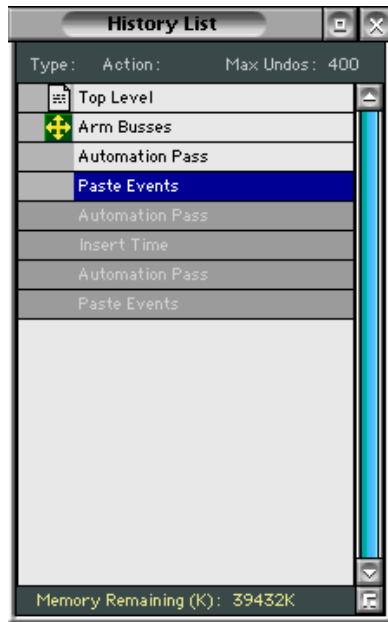

- If an event is selected in the list, then a change is made in the Mix Editor, all events following the selection will be replaced by the new event.
- Use the Undo command from the Edit Menu (Ctrl+Z) or the control surface to regress through the History List steps one at a time.
- Use the Clear Edit History command from the Edit Menu to remove all events from the History List. *This action cannot be undone.*

### The MIDI Map Window (Ctrl + -)

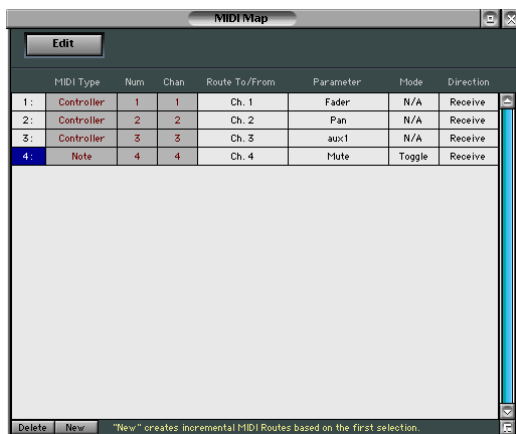

The MIDI Map window offers setup options for bidirectional MIDI control of practically the

entire console's parameter set. The MIDI Map provides complete parameter access to almost all channel functions, master fader, channel strip, and Aux master controls, and all plug-in parameters. In addition, the Master section and Transport controls are assignable to MIDI messages. Additionally, a 'roving' Fat channel map routing may be added, so that MIDI control may follow the selected Fat Channel, which is great for external devices such as a joy stick or X-Y pad controlling (for example) a channel's Surround Pan without hard mapping (and subsequent remapping). MIDI Maps may be created and saved to disk for subsequent recall.

MIDI continuous controller, polyphonic aftertouch, and note on messages are assigned to the various parameters via the MIDI Map, in a linear approach of one controller type per parameter. Any variable controller may be a continuous control message or a poly aftertouch message, and any switch message (on/off or assignment switches) can be assigned to a note on (or note off as note on of velocity 0) message.

Messaging may be bidirectional. This means you can control the console from a sequencer or control a sequencer from the console. Note that MIDI program changes may also be used to trigger D8B snapshots. Snapshot program change messages may occur simultaneously with MIDI Map control messaging. The shorter length MIDI program change messages allow for much greater MIDI bandwidth utilization, and in some cases can accomplish the required control without totally mapping the console via the MIDI Map. Snapshot triggering via MIDI is not enabled in the MIDI Map, but is set via the GUI Setup>Mix Options window, by checking the MIDI Snapshot box.

A listing of D8B console parameters is found in the MIDI Implementation Chart at the end of this document. The off, minimum, and maximum values are listed with the associated MIDI controller values to aid in setting up a remote control map. Note that many of the console's values are 8-bit resolution (255 values). Since MIDI conventionally sends only 128 values (two byte MSB/LSB precision is not supported by the D8B), intermediate steps will be interpolated by the D8B.

Applications for the MIDI Map include remote transport control from MIDI applications that don't support MMC or the HUI protocol (but do allow their own internal parameter mapping), surround joystick control, or any continuous controller or two-state switch application (lighting, remote mixing, show controls, etc.). Any mapped control information may be transmitted via manual adjustment on the console, snapshot recall, and/or automation playback (which may include snapshot or other Event track playback).



### Creating a Route

A Route is created by opening the MIDI Map from the Windows menu, then selecting “New MIDI Route” from the MIDI Map Edit menu or simply clicking the NEW button at the bottom of the MIDI Map screen. A Route is made up of the following attributes:

- **(Selection):** The first column (with no column header) denotes the Route number and selected Route within the map list. The number is a simple identifier, as there is no sorting mechanism for the MIDI Routes. The selection paradigm is the same for any D8B listing function; Shift-click allows for multiple selections and Ctrl-click allows for discontinuous selections.
- **MIDI Type:** This choice offers the type of MIDI message (as XNh, where X is the status type, N is the MIDI channel, and h denotes that it's listed in hexadecimal values). If the Route is mapping a switch parameter with two value states, it will be assigned as a Note On (9Nh) message. If the parameter is continuously variable, the Continuous Controller (BNh) or Polyphonic Aftertouch (ANh) may be used.
- **Number:** This assignment is in the range of 0-127 decimal values (00h-7Fh) for the associated Status type. A static value is selectable for a switch message type, in the range of 0-127 decimal values (00h-7Fh). It is not selectable and is the implied variable (dynamic, changing, whatever) output when using the continuous type status messaging. Note that for D8B controls that use less than 256-step resolution, (e.g., EQ type uses 4 values, whereas a fader uses 256 values), the full range of 128 MIDI values may not be used.
- **Channel:** This is the MIDI channel that is used for the selected route.  
**Note:** Maps using Ch 1 will not function when HUI mode is enabled. It is recommended that you use only channels 2-16.
- **Route To/From:** This assigns the MIDI route to a console channel strip, master fader or aux send master, master section, or transport parameter. The actual Parameter within any chosen function is assigned in the Parameter column.
- **Parameter:** Available choices follow either the switch or variable control types of categories, as set by the MIDI Type column selection.

- **Mode:** A value is displayed when the Route is a switch type. The two options available are Normal and Toggle. These refer to how the switch responds to received MIDI data and is therefore only relevant if the Direction is set to Receive on both.  
In Normal mode, a Note On message engages the switch and a Note Off (or Note On with velocity of zero) disengages the switch.  
In Toggle mode, alternating Note On messages engage and disengage the switch, while Note Off messages are ignored.
- **Direction:** The MIDI Route is set to Receive, Send, or Both. Take care to avoid MIDI feedback.
- The Edit menu inside of the map contains the following additional commands:
  - New MIDI Route (Alt+N): Creates a new MIDI Route.
  - Open MIDI Map: Recalls a saved MIDI Map from disk. If a map is currently in place, it will be entirely overwritten by the map from disk upon loading.
  - Save MIDI Map As...: Saves the current MIDI map to disk as a Map file, which is available for recall at a later date.
  - Delete MIDI Route (Alt+DEL): Deletes the currently selected Route(s) within the list. The DELETE button at the bottom of the MIDI Map window does the same. Multiple Routes may be selected using the Shift-Select or Control-Select keyboard combinations.

### Erase UFX Memory...

When you update the plug-ins software on the D8B, it may be necessary to clear the flash memory in the UFX cards that are installed in the D8B, and upgrade their memory to the latest version of the software. Normally, this is not required unless advised by tech support. **See Note below.**

1. Select “Erase UFX Memory...”.
2. Follow the on-screen instructions for erasing the flash UFX OS.
3. When the procedure is completed, click “Continue.”
4. Reboot the console by turning the power switch off on the Remote CPU, wait 5 seconds, and turn the power switch back on.

### Upgrade UFX Cards...

After completing the procedure for erasing the UFX memory, it may be necessary to upgrade the UFX cards to the newest software. Normally, this is not required unless advised by tech support.

1. Select “Upgrade UFX Cards...”.
2. Follow the on-screen instructions for downloading the UDOS package to the UFX cards.
3. When the upgrade is completed, click “Continue.”
4. Reboot the console by turning the power switch off on the Remote CPU, wait 5 seconds, and turn the power switch back on.

---

**Note:** These procedures require you to reboot the D8B after they are completed.

---

# Applications

## Chapter 4

## Setting Up for a Session

This section of the Digital 8•Bus Owner's Manual provides very application-specific descriptions of some common usages. Follow the checklist format to help ensure everything is set just right for your configuration.

As your skills and knowledge increase, try new techniques. Build a system that's optimized for your specific application.

## Listening Environment

In any serious recording or live audio situation, the listening environment is one of the most important considerations. In a recording application, be sure the Digital 8•Bus is connected to excellent reference monitors, like the Mackie HR824's. In addition, set up the system in an acoustically controlled and balanced environment. Avoid a control room with identical dimensions in any direction and set it up with a good mixture of absorption and reflection.

In a live-sound setting, place the console out in the house at a good visual and auditory vantage point. If you're mixing in mono, it's okay to sit in line with one of the speaker clusters. When mixing in stereo or surround, select the best location—typically called the “sweet spot”—to critically assess the entire mix. Eliminate guess work. Maximize efficiency.

## Channel Configuration/Planning

This actually has a lot to do with how well any audio experience unfolds. If you know where you're headed with track expectations and instrumentation, you'll be able to make better choices along the way. Plan; plan again; think about it; then, plan some more.

Use the Track Sheet (Ctrl+T) to plan your session before you begin recording. You'll know more about how to get where you want to be.


## Power-up Procedure

A well-thought-out power-up procedure saves wear and tear on all your gear. This procedure helps minimize the opportunity for equipment damage while maximizing the chance of success. Refer to Figure 4-1 for a Fast Track Graphic representation of this procedure.

- Amplification system off: power amps or powered monitors**
- Master Fader down**
- Switch Console Power on**
  - The D8B will create a Startup file with default settings if the User-Set Template has not yet been specified.
- Open and load a snapshot or a session (optional)**

**Figure 4-1 Power-up Procedure**

Follow this procedure for a safe and sure startup routine. Deliberate, well-thought-out procedures help eliminate uncomfortable pauses in a session. They make recording a more enjoyable experience.

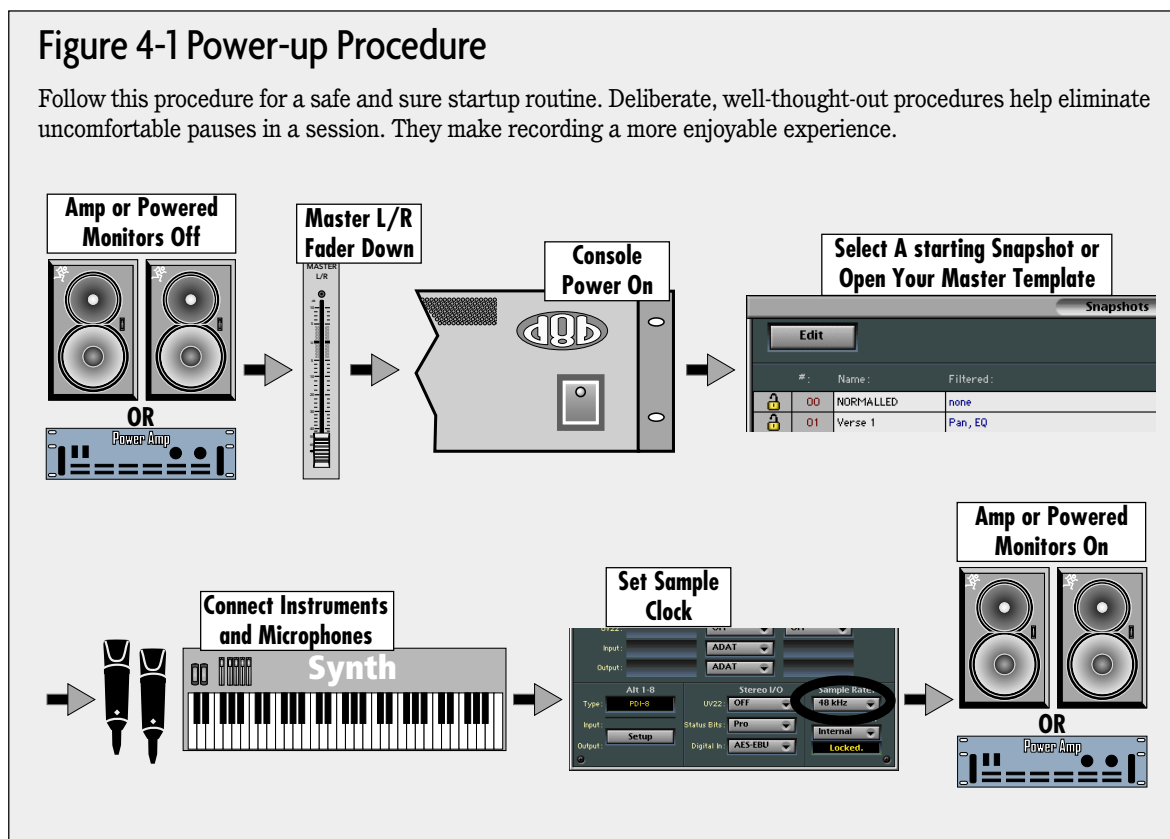

- It's a good idea to keep a snapshot of each working configuration as a starting point: tracking, overdubs, symphony, grunge band, etc.
- ❑ **Connect all mics and instruments**
    - Be sure all channel faders are down.
    - Turn Master Fader down.
    - Turn Speaker level down.
  - ❑ **Set up sample clock**
    - Verify consistent sample rate settings throughout all digital multitrack recording devices.
    - Word clock and digital data transfer connections are very important to the efficiency and functionality of any digital system. Verify them.
    - Most systems work best when the D8B is the Master word clock source. Use the Apogee Clock I/O card to send word clock to slave devices.
  - ❑ **Turn amplification system on**
    - Wait until all other gear is powered up before turning on the monitor system.
  - ❑ **Enjoy the creative process**

## Setup Window


The Setup Window is very important to the functionality of the Digital 8•Bus. Its settings determine how the console functions within its own architecture as well as how it interfaces with other digital equipment.



Follow the checklist on the next page to verify that each Setup Window parameter is intentionally set. For specific recommendations for various parameter settings, refer to “The Setup Window” on page 64.

## Figure 4-2 Basic Connection for Multitrack Recording

This diagram represents the fundamental connections in a D8B-based multitrack system. Sound sources feed Fader Bank 1 (MIC/LINE); Fader Bank 1 feeds the multitrack inputs via the AIO•8, DIO•8, or ADAT card outputs; the multitrack outputs feed Fader Bank 2 (TAPE) via the AIO•8, DIO•8, or ADAT card inputs; the mix output feeds the control room monitor system, master 2-track recorder, headphones, etc.

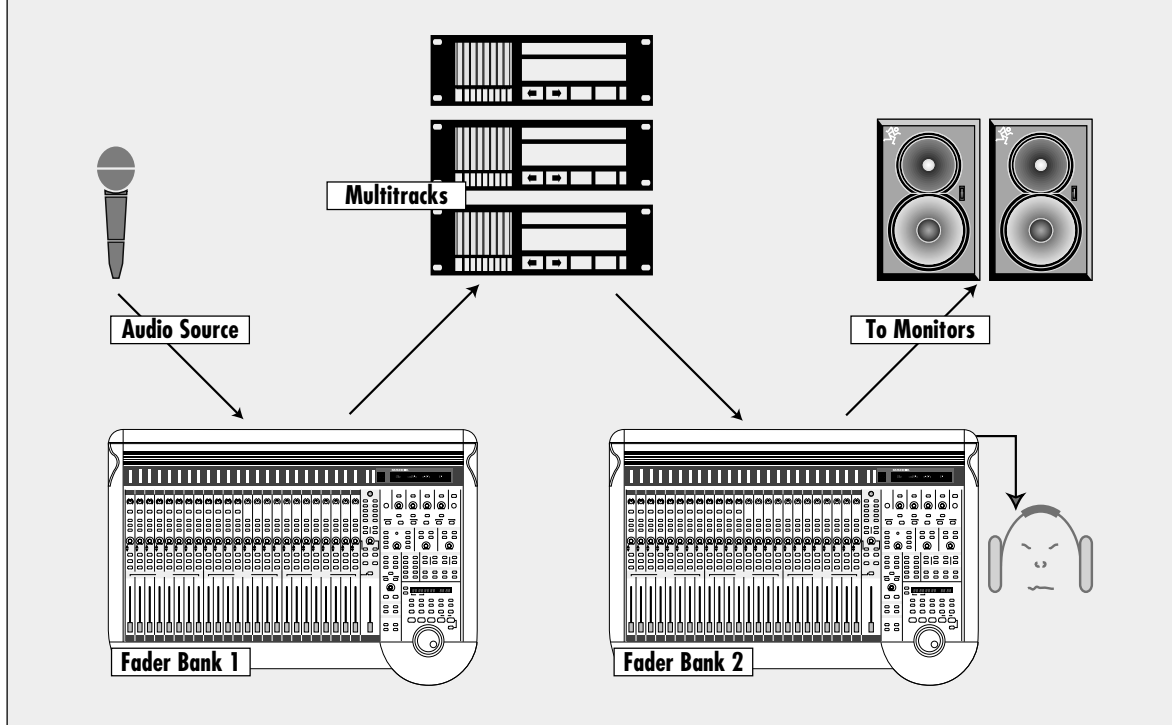

Setup Window settings are automatically stored and are recalled in subsequent boot ups.

- General
  - Mouse Speed
  - Display Intensity
  - Refresh Rate
  - Studio Name
  - Date and Time
  - Smart Save selection
  - Screen Saver
  - Load Last Session at Power-up
  - Advanced Graphics
- Network
  - Network Channel
  - Local Mixer Name
  - Alt I/O 1–8 assignments
  - Console Linking Options across the digital network (connected Digital 8•Bus consoles)
- Digital I/O (Tape 1–24)
  - Tape I/O Card settings (Type, UV22, Input, Output)
  - Alt 1–8 Card settings (Type, Input, Output)
  - Stereo I/O settings (UV22, Status Bits, Digital In)
  - Sample rate
  - Apogee Clock status: Internal/Word Clock
- Licensing
  - Displays authorization status (locked or unlocked) of D8B plug-ins
  - Enables authorization of plug-ins
  - Displays mixer serial number
- Mix Options
  - Aux 1–12 global Pre/Post selection
  - Selection of One Button Punch, Record Safe, Use PreRoll, Use Write Ready, Write Flyback, MIDI Snapshots, Solo Latch, Link Speakers, and Faders to Tape
  - Fader Motors Calibration
  - Dim Amount
- Surround
  - Surround Mode selection
  - Bus arming
  - Clear bus assignments
  - Stereo Mode setup options
- MIDI
  - MIDI File Tempo Map loading and resetting
  - Default Tempo setting
  - Device ID selection
  - Song Offset
  - Pre-Roll time
- FTP Server
  - Choose to allow FTP client
  - Set IP Address, Subnet, and Gateway





## Installation and Connection of Optional I/O and Effects Cards

The Input/Output cards are an essential part of the D8B multitrack system. These cards provide up to 24 tape outputs and inputs for use with any common analog and digital formats.

Since the I/O cards are optional and interchangeable, you probably need to install them before you begin creating hit recordings. If you install multiple types of I/O cards, note which slots they're installed in. Making a note of each I/O card type and its exact slot will help avoid subsequent problems.

There are several optional cards available for the Digital 8•Bus, which you can install into the card cage in the rear panel of the console. These cards provide additional inputs and outputs for specific applications, or additional digital signal processing power for effects.

### AIO•8 (Analog Hookup)

This card provides 8 analog line-level inputs and outputs. Connections are made through two 25-pin D-Sub connectors. You can install this card in any of the Tape In/Out slots, or in the ALT I/O slot.

### DIO•8 (Digital Hookup)

This card provides 8 digital inputs and 8 digital outputs. Connections are provided in both ADAT Multichannel Optical Interface and Tascam T/DIF-1 formats. You can install this card in any of the Tape In/Out slots, or in the ALT I/O slot. You can mix any combination of the AIO•8 and DIO•8 cards in the Tape I/O slots to suit your particular application. You can configure the card in the GUI (Setup>Digital I/O) and select the I/O connector you wish to use.

#### Connections for ADAT

The connection for ADAT is made with a fiber optic cable, sometimes referred to as "lightpipe." This connection provides 8 channels of digital audio. You can purchase this cable from your Alesis dealer, Monster Cable, Hosa, or other cable manufacturer.

#### Connections for DA-88

The connection for T/DIF-1 is made with a 25-pin D-Sub connector. This connection provides 8 channels of bidirectional digital audio. This connection requires a 25-pin D-sub cable (Tascam Part Number PW-88D).

### OPT•8 Card (ADAT Optical)

The inexpensive ADAT optical card functions with any device incorporating the ADAT format digital optical lightpipe. The OPT•8 card configures itself automatically; it doesn't need to be adjusted in the Setup>Digital I/O window. Lightpipe connections between the D8B and the connected record/playback device are clean and efficient.

### PDI•8 Card (AES/EBU)

This card provides 8 digital inputs and 8 digital outputs in the AES/EBU standard format. Connection is made through a 25-pin D-Sub connector. You can install this card in any of the Tape In/Out slots, or in the ALT I/O slot.

AES/EBU is a standard two-channel digital protocol used for long balanced cable applications. Thus, each conductor actually transmits two channels of digital audio data.

### MFX Effects Card

This card provides two additional DSP engines for running internal effects. The Digital 8•Bus is shipped with one MFX card installed in Slot A. You can install up to three more MFX cards in Slots B, C, and D.

### UFX Effects Card


This card provides up to four additional DSP engines for running internal effects. The UFX architecture provides access to the newest and coolest third-party plug-ins, as well as an array of groovy new Mackie plug-ins. The D8B effects card slots accommodate any combination of UFX and MFX cards.

## Installation of FX Cards




**IMPORTANT:** Shut off power to the Digital 8•Bus' Remote CPU before installing or removing cards. Also, install your FX cards in order. For example, put your first FX card in the slot marked "A," your second FX card in slot "B," etc.

1. Loosen the four spring-loaded screws on the blank cover plate to the FX card slot you want to fill.

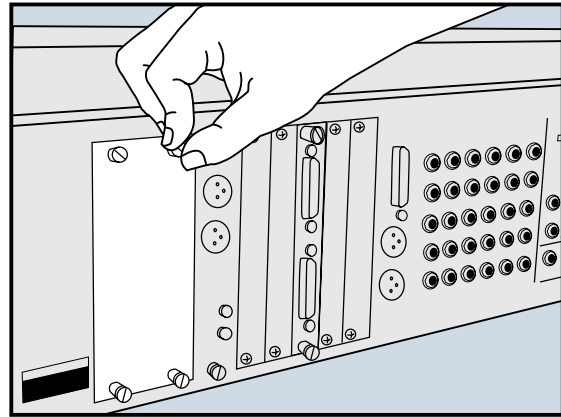

*FX Card Cover Plate Removal*

2. With your finger in the hole on the FX card (and the components on the circuit board facing to the left), push the card firmly into the white connector slots so it fits snugly. Do not touch any of the circuit board components or solder joints.
3. Replace the cover plate and tighten the screws securely using a slotted screwdriver. **DO NOT OVERTIGHTEN THE SCREWS**, or you run the risk of stripping the threads in the D8B.

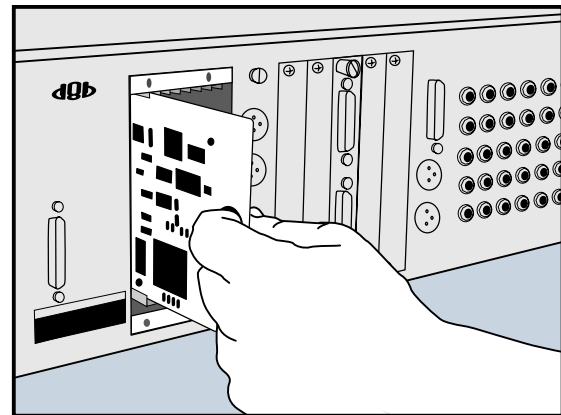


*FX Card Installation*

## Installation of I/O Cards




**IMPORTANT:** Shut off power to the Digital 8•Bus' Remote CPU before installing or removing cards.

1. Using a #2 Philips screwdriver, unscrew the blank cover plate corresponding to the I/O card slot you want to fill.

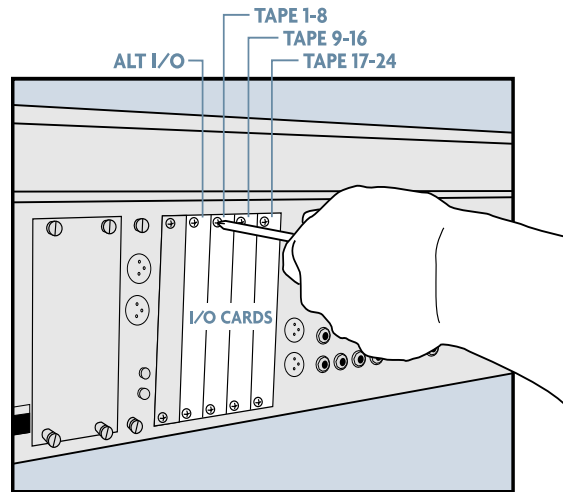


*Remove Cover Plate for Tape I/O Card*

2. Holding the I/O card so that the components on the green circuit board face to the left (see diagram), line up the card so the top and bottom edges fit into the white guide slots. Do not touch any of the circuit board components or solder joints.
3. Be sure to push the card in all the way—until the front of the I/O card is flush with the back panel of the D8B. This may require a good, solid push, so don't be shy.

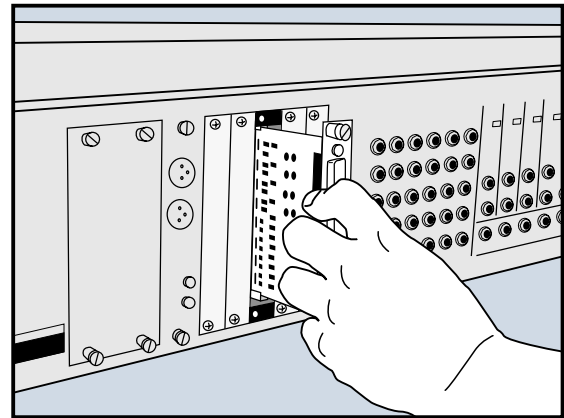

*Installing a Tape I/O Card*

4. Tighten the spring-loaded screws on the I/O card securely using a slotted screwdriver. **DO NOT OVERTIGHTEN THE SCREWS**, or you run the risk of stripping the threads in the D8B.

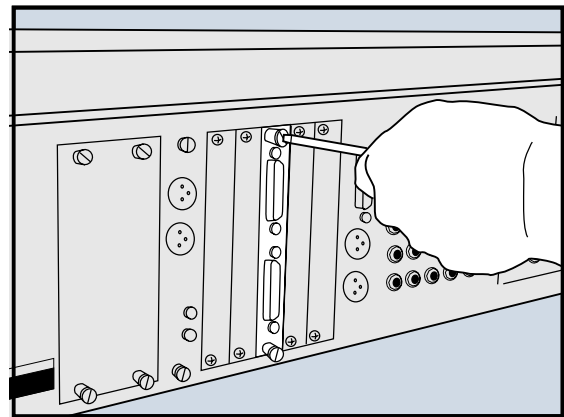

*Tighten Screws on Tape I/O Card*

## Checklist for Basic Operational Functionality

Basic system functionality depends greatly on the accurate selection of a few key items. Work through this checklist to verify console settings. The previous chapters provide an explanation of each item. This checklist simply provides a mental road map to verify proper functionality.

- Control Room selection correct
- Monitor Speaker selection correct

### Input source

- Mic/DI
- Line/Instrument

### The Fat Channel

- EQ
- Compression
- Gate
- Busing/Routing

### Signal Routing

- To L/R
- To Tape
- To Bus

## Connecting Analog Multitrack(s)


- Install AIO•8 card(s) into one or more of the D8B TAPE CARD slots. This provides up to 32 tracks of I/O (including the ALT I/O card).
- Using the appropriate cable, connect 25-pin D-sub TAPE OUT connector to the multitrack inputs.
- Using the appropriate cable, connect the multitrack outputs to the 25-pin D-sub TAPE INPUT connector.
- Make sure all connections are tightly secured.

## Connecting ADAT (Lightpipe) Multitrack(s)

- Install DIO•8 or OPT•8 card into one or more of the D8B TAPE CARD slots.
- Using a fiber-optic lightpipe cable, connect the D8B Optical output to the ADAT Digital input connector.
- Using a fiber-optic lightpipe cable, connect the ADAT Digital output connector to the D8B optical input.
- If the D8B is to be the slave, the sync source should be connected to the sync card BNC Word Clock input.


## Connecting the Analog Multitrack

Simply connect the AIO•8 outputs to an analog console's inputs for up to 32 channels (8 channels per card) of flexible and assignable audio routing, (including the ALT I/O).

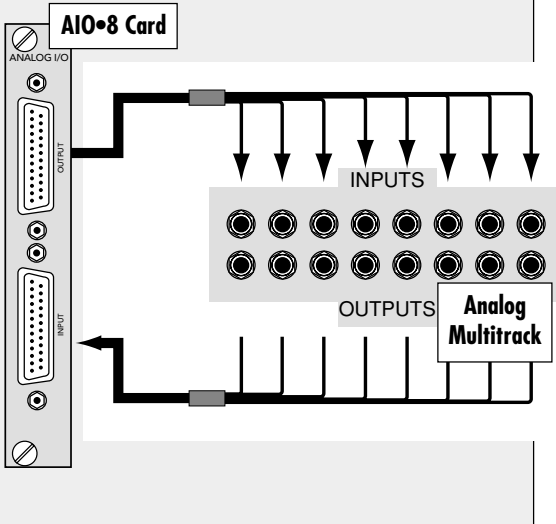

## Connecting ADAT Lightpipe

Using two fiber-optic lightpipe cables, simply connect the DIO•8 digital outputs to the ADAT lightpipe inputs, and the ADAT outputs to the DIO•8 inputs, for up to 32 tracks (8 channels per card) of flexible and assignable digital audio (including the ALT I/O).

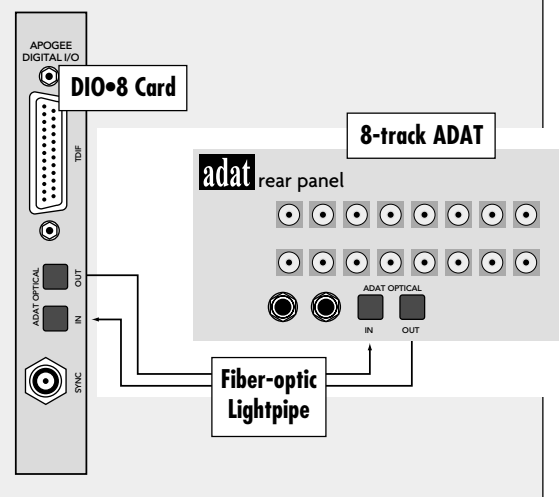


## Connecting TASCAM (TDIF) Multitrack(s)

- ❑ Install DIO•8 card into one or more of the D8B TAPE card slots.
- ❑ Using a 25-pin D-sub digital cable (TDIF), connect the D8B Digital I/O connector to the TASCAM MDM (e.g., DA-88) Digital I/O connector.
- ❑ Install BNC clock cable and make sure all connections are tightly secured.
- ❑ If the D8B is to be the slave, the sync source should be connected to the sync card BNC Word Clock input and the D8B Apogee Clock should be set to External in the Setup>Digital I/O window.

### Connecting TDIF Digital

Use a 25-pin D-sub digital cable (TDIF) to connect the D8B Digital I/O connector to the TASCAM MDM (e.g., DA-88) Digital I/O connector, for up to 32 tracks (8 channels per card) of flexible and assignable digital audio, including the ALT I/O.


In addition, connect the Sync output from the DIO•8 card to the Word Sync input of the DA-88. This connection indicates use of a DIO•8 Card with firmware version 127v2.

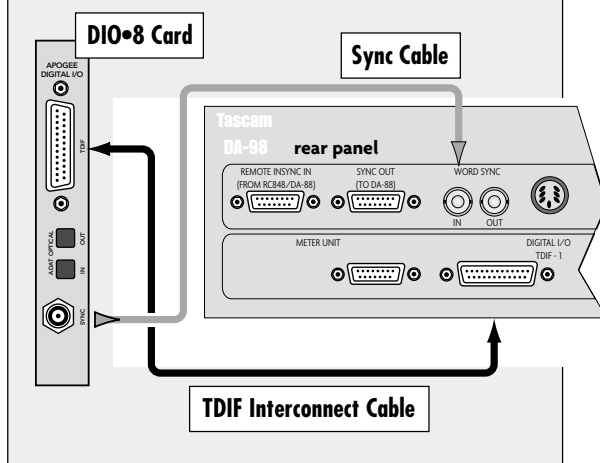

## Multitrack Recording


Multitrack recording involves a continuous assessment of signal flow. If you follow a well-planned thought process from the beginning of the signal path to the end, you'll succeed in each audio task.

When multitrack recording using the D8B, it's helpful to visualize the basic signal flow between fader banks. For any multitrack setup, it's important to keep track of the signal path from the console to the multitrack, then from the multitrack back into the console. The illustration below is a review demonstrating an important signal flow concept.

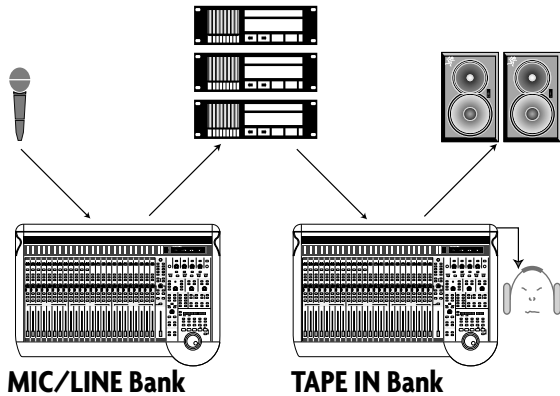


Work your way through this checklist for multitrack recording.

- Connect multitrack ins and outs to D8B.
- Follow basic power-up procedure.
- Select Mic/Line fader bank.

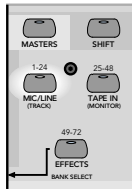

- Press phantom power button on the rear of the console for necessary mic inputs. .

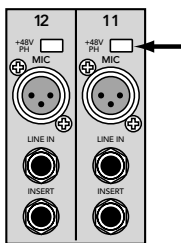


**Note:** Condenser mics and active DIs use phantom power. Moving coil mics, ribbon mics, and most electronic instruments don't need phantom power.


- Press Mic button on channels using microphone inputs.



- Configure Auxes for desired Pre/Post status, select Surround Mode, set Mix Options.

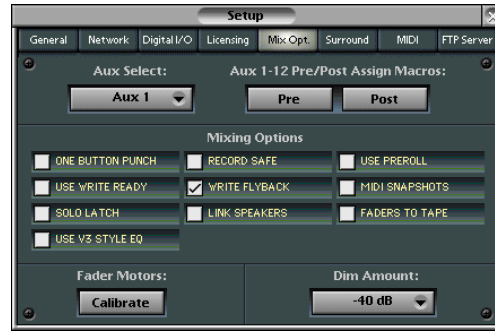

 
- Test each instrument and mic to verify sufficient level at console input meter.



- Adjust input trim for a reading around -15 on the meter.



- Select L/R in the ASSIGNMENT section to confirm Assign lights on for all desired channels, or look on-screen to verify that all necessary channels have L/R button highlighted in Bus Assign section.

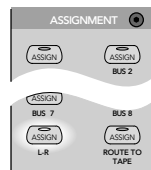


## Multitrack Tracking Checklist




- Connect multitrack ins and outs to D8B.
- Follow basic power-up procedure.
- Select Mic/Line fader bank.
- Press phantom power button on the rear of the console as necessary for mic inputs.
- Press Mic button on channels using microphone inputs.
- Set pre-fader auxes in Setup Window for monitor use.
- Test each instrument and mic to verify sufficient level at console input meter.
- Adjust input trim for a reading around -15 on the meter.
- Press L/R in the ASSIGNMENT section to confirm Assign lights on for all desired channels. Or, look onscreen to verify all necessary channels have L/R button highlighted in Bus Assign section.
- Set Master Fader to Unity position.
- Turn channel faders up to hear instrument or mic.
- As each channel is verified and audible, press channel mute.
- Assign Fader Bank 1 channels to desired tape track inputs.
- Place tape inputs in record/ready to verify signal at machine. It's typically best to monitor signal from the multitrack rather than from the channel input.
- If levels on the multitrack appear too hot or cold, adjust level with the LEVEL TO TAPE control. Select TRACKING LEVEL. This sets the channel V-Pots to adjust the D8B output level to tape.
- Remove Fader Bank 1 from the L/R mix.
- Adjust control room monitor mix from Tape return in Fader Bank 2.
- Set levels in headphone system for musicians.
- Adjust headphone monitor volume in the PHONES/CUE MIX section.
- Adjust channel aux levels to onboard or outboard effects from Fader Bank 2.
- Verify that Master Output is connected to the mixdown machine.
- Record a pass on the multitrack.
- Play multitrack back.

 
- Set Master Fader to Unity position.**




- Once each channel is verified and audible, press channel mute.**

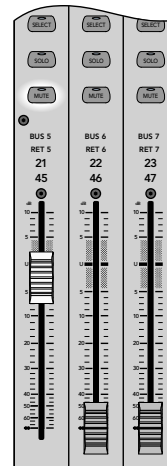

 - Turn channel faders up to hear instrument or mic.**




- ❑ Assign MIC/LINE bank channels to desired tape tracks.

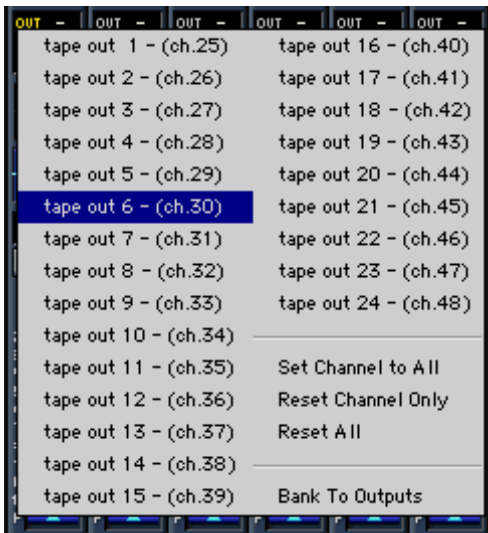

- ❑ Place tape inputs in record/ready to verify signal at machine.

It's typically best to monitor signal from the multitrack rather than from the channel input.

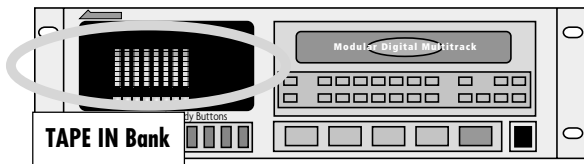


- ❑ If levels on the multitrack appear too hot or cold, adjust level with the LEVEL TO TAPE control.

Select TRACKING LEVEL. This sets the channel V-Pots to adjust the D8B output level to tape.



- ❑ If you want to monitor from the multitrack, remove the MIC/LINE Bank from the L/R mix. This has no effect on the output to tape.

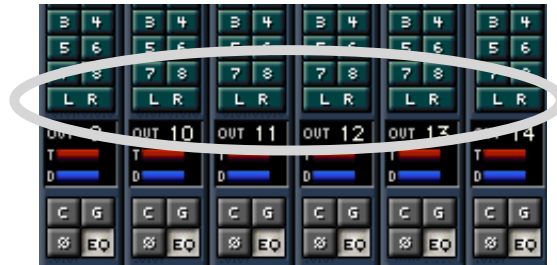

- ❑ Adjust control room monitor mix from TAPE IN Bank. Verify channel assignment to the L/R bus.




- ❑ Set levels in headphone system for musicians.

Aux 9/10 and 11/12 are perfect for stereo headphone sends. It's often convenient for the musicians to, at first, monitor the L/R mix in the cue section (PHONES/CUE MIX 1 and 2). Once the initial L/R mix is established, copy it to the appropriate cue, then customize for individual monitoring needs.





- ❑ **Adjust headphone monitor volume in the PHONES/CUE MIX section.**

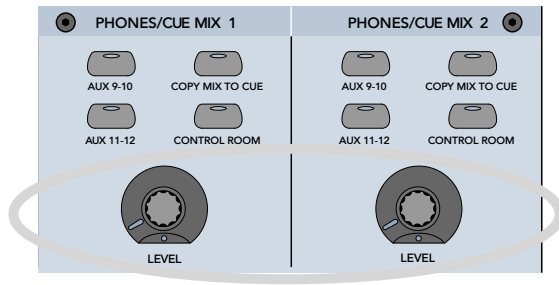


- ❑ **Adjust channel aux levels to onboard or outboard effects from Fader Bank 2 (TAPE IN).**



- ❑ **Verify that Master Output is connected to the mixdown machine.**

The mix should be arriving at the mixdown recorder. It's good to check this as part of your tracking process. At the conclusion of a session the artist will probably want to take a rough mix for evaluation—you'll look better if it's already set to go.

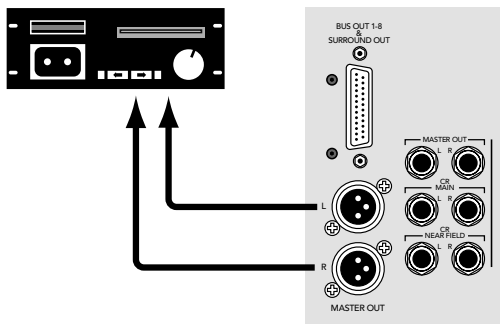

- ❑ **Record a pass on the multitrack**

Play multitrack back—playback should sound identical to tracking and you're ready to print a rough mix.

## Sample Tracking Setup

This diagram shows a typical hookup for tracking. Four microphones are connected to channels 1–4 for vocals. Two of them are condenser mics, which require phantom power, so the +48V PH switch is pushed in on those channels. A vocal enhancer is connected to the channel 1 INSERT jack to add a special effect to the lead vocal.

---

**Note:** During tracking, dynamics control, like compression and limiting, are often included (insert or onboard) at the beginning of a signal path. Effects, like reverb, delay, and chorus are best left for adjustment during mixdown, or during tracking for monitor use only.

---

Various instruments are connected to the line inputs of channels 11–14, either directly from their line-level outputs or through effects boxes or direct boxes.

Each input from channels 1–24 is assigned to a tape output, which can be connected to an 8-, 16-, or 24-track recorder—simply use the appropriate I/O card for your setup. You can assign any input (1–48), any return (FX 1–16, RET 1–8), and Bus 1–8 to any unused tape out using the ROUTE TO TAPE button in the Bus Assignment Section (refer to Chapter 2 for review).

## Monitoring

Connect the outputs from the recorders to the TAPE Inputs on the Digital 8•Bus. This allows you to monitor the signal as it's being recorded (assuming your recorder has that capability).

To do this:


- Assign channels 25–48 (or whatever channels are being used for tape returns) to the L-R bus.
- In the Control Room Section, assign MASTER L-R as the Control Room Source.

The configuration shown has two external effects devices connected for monitoring. Aux 8 send goes to a digital reverb, which has stereo outputs that feed into the line inputs of channels 19 and 20. Aux 11–12 goes out to a multi-effects stereo processor, which then comes back to the Digital 8•Bus through the line inputs of channels 23 and 24.

In addition, Aux 1 and 2 are routed to the internal FX Card, which processes the signal with whatever plug-in has been downloaded to it. The processed signal is returned to the L-R bus via the FX 1–4 channel strips in Fader Bank 3.

The signal at the CR MAIN, CR NEAR FIELD, and the STUDIO OUT is determined by the Control Room Source selection in the Control Room Section.

You can connect a pair of headphones to the PHONES 1 or 2 jack and monitor the signal there as well. Select CONTROL ROOM as the source in the PHONES/CUE MIX 1 or 2 Section.

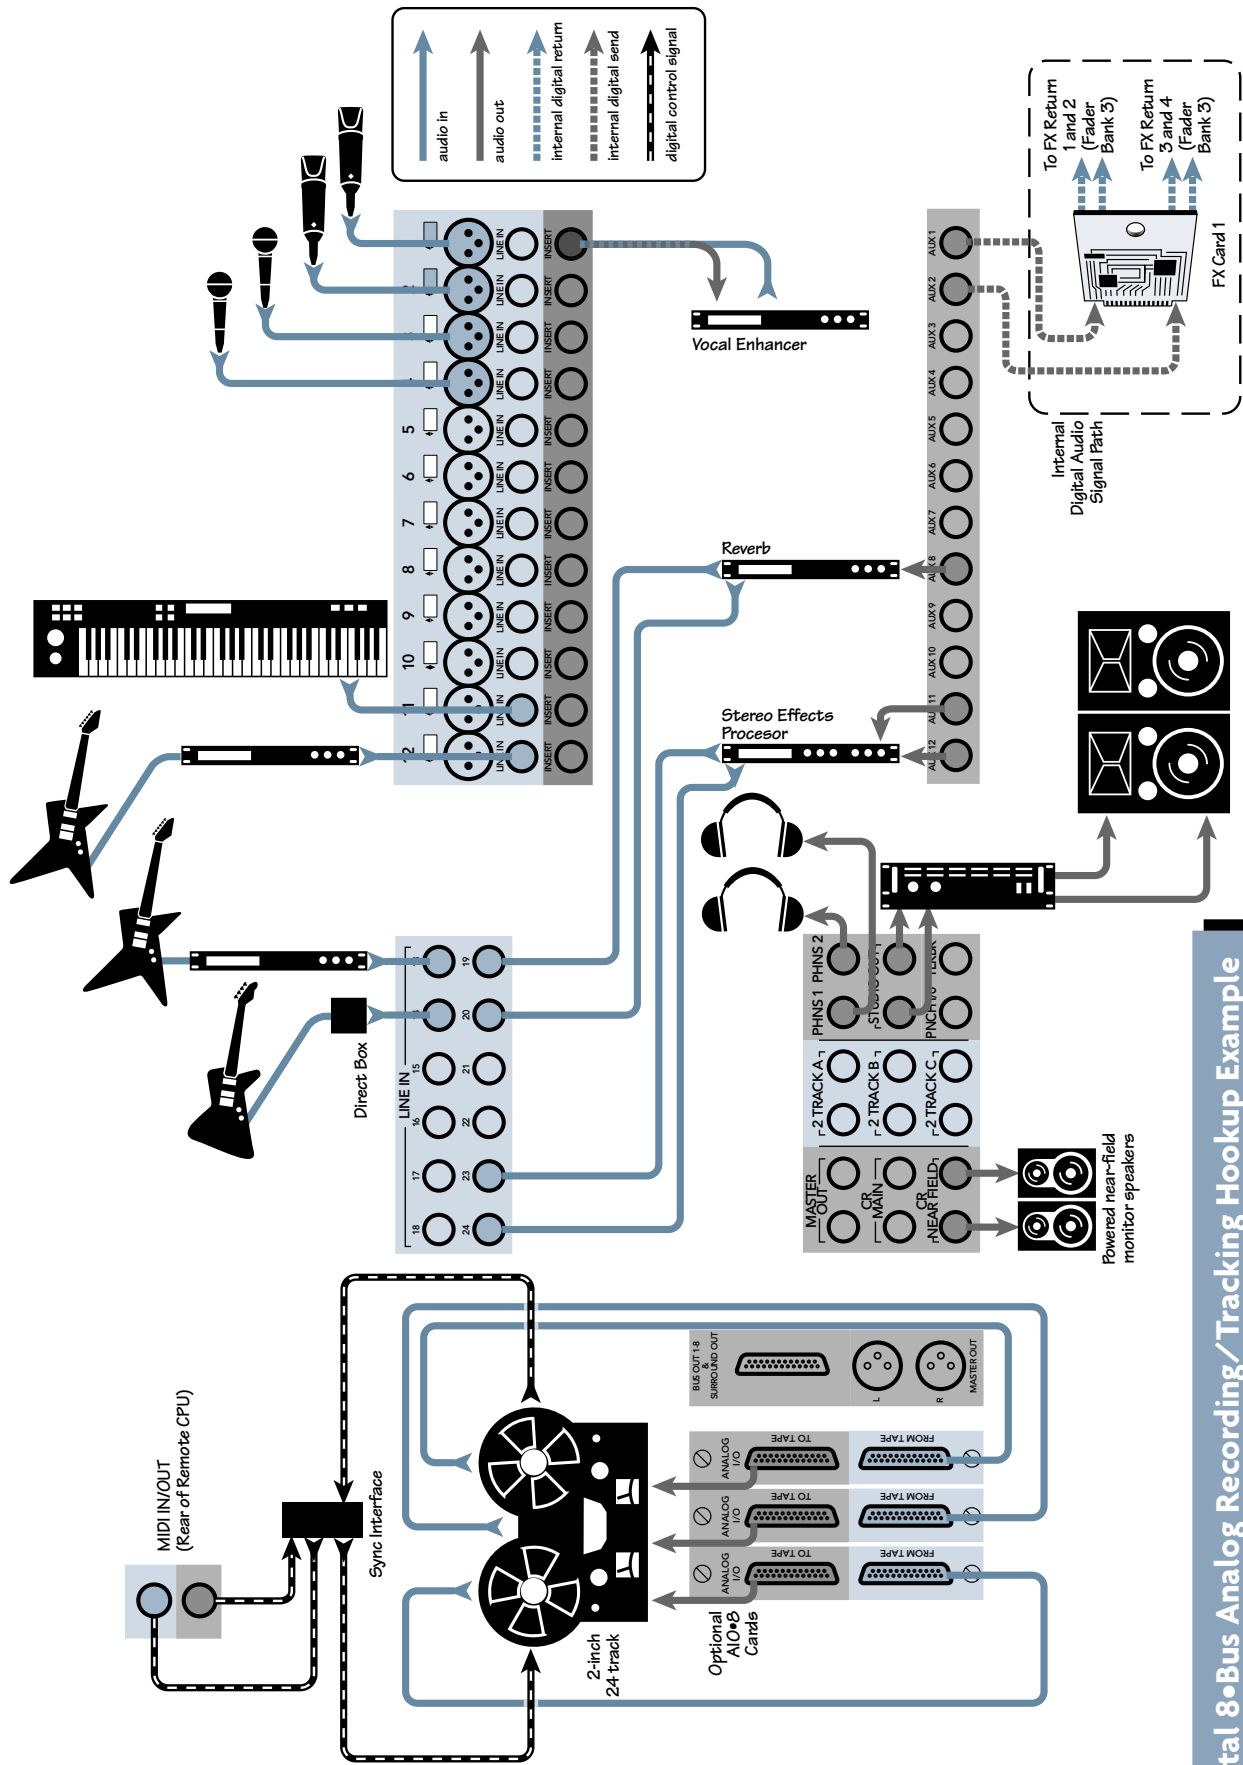

**Digital 8-Bus Analog Recording/Tracking Hookup Example**

## Mixdown Setup

This simple checklist will help get the mix started. Notice that, each time, we follow the signal path from its source to its destination.

- ❑ **Be sure the multitrack recorder is connected properly to the Tape In card(s).**
- ❑ **Roll tape to verify signal at TAPE IN Fader Bank.**
- ❑ **If any track reads excessively hot or cold on the D8B meter bridge, adjust the Digital Trim for a reading around -15 with no peaks (OL).**

Pressing DIGITAL TRIM activates the channel V-Pots as digital input trim adjustments.




Digital clipping could occur if a signal going into the D8B is too hot. Noise could occur if the signal is too low. Even though the D8B has plenty of headroom and very little noise, it's still a good idea to verify optimum levels.



- ❑ **With channel faders off, set the Master Fader at Unity.**

- ❑ **Select Master L/R in the Control Room section and adjust the speaker level to a moderately conservative level (about 9:00).**

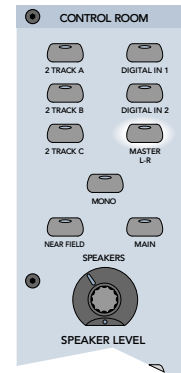


- ❑ **It's often recommended that you monitor from the output of the mixdown recorder.**

If the outputs from the mixdown recorder are patched into the D8B 2-track or Digital inputs, simply select the mixdown recorder in the Control Room Section (Digital 1, Digital 2, 2 Tracks A–C).

- ❑ **Adjust the channel faders, dynamics, pan, effects, and EQ for an excellent mix.**
- ❑ **Record the mix and enjoy the mind-boggling capabilities of the Mackie Digital 8•Bus.**

## Sample Mixdown Setup

This sample mixdown setup helps provide ideas for how your mixdown setup might look. Each setup is unique in many ways, yet predictable in many ways.

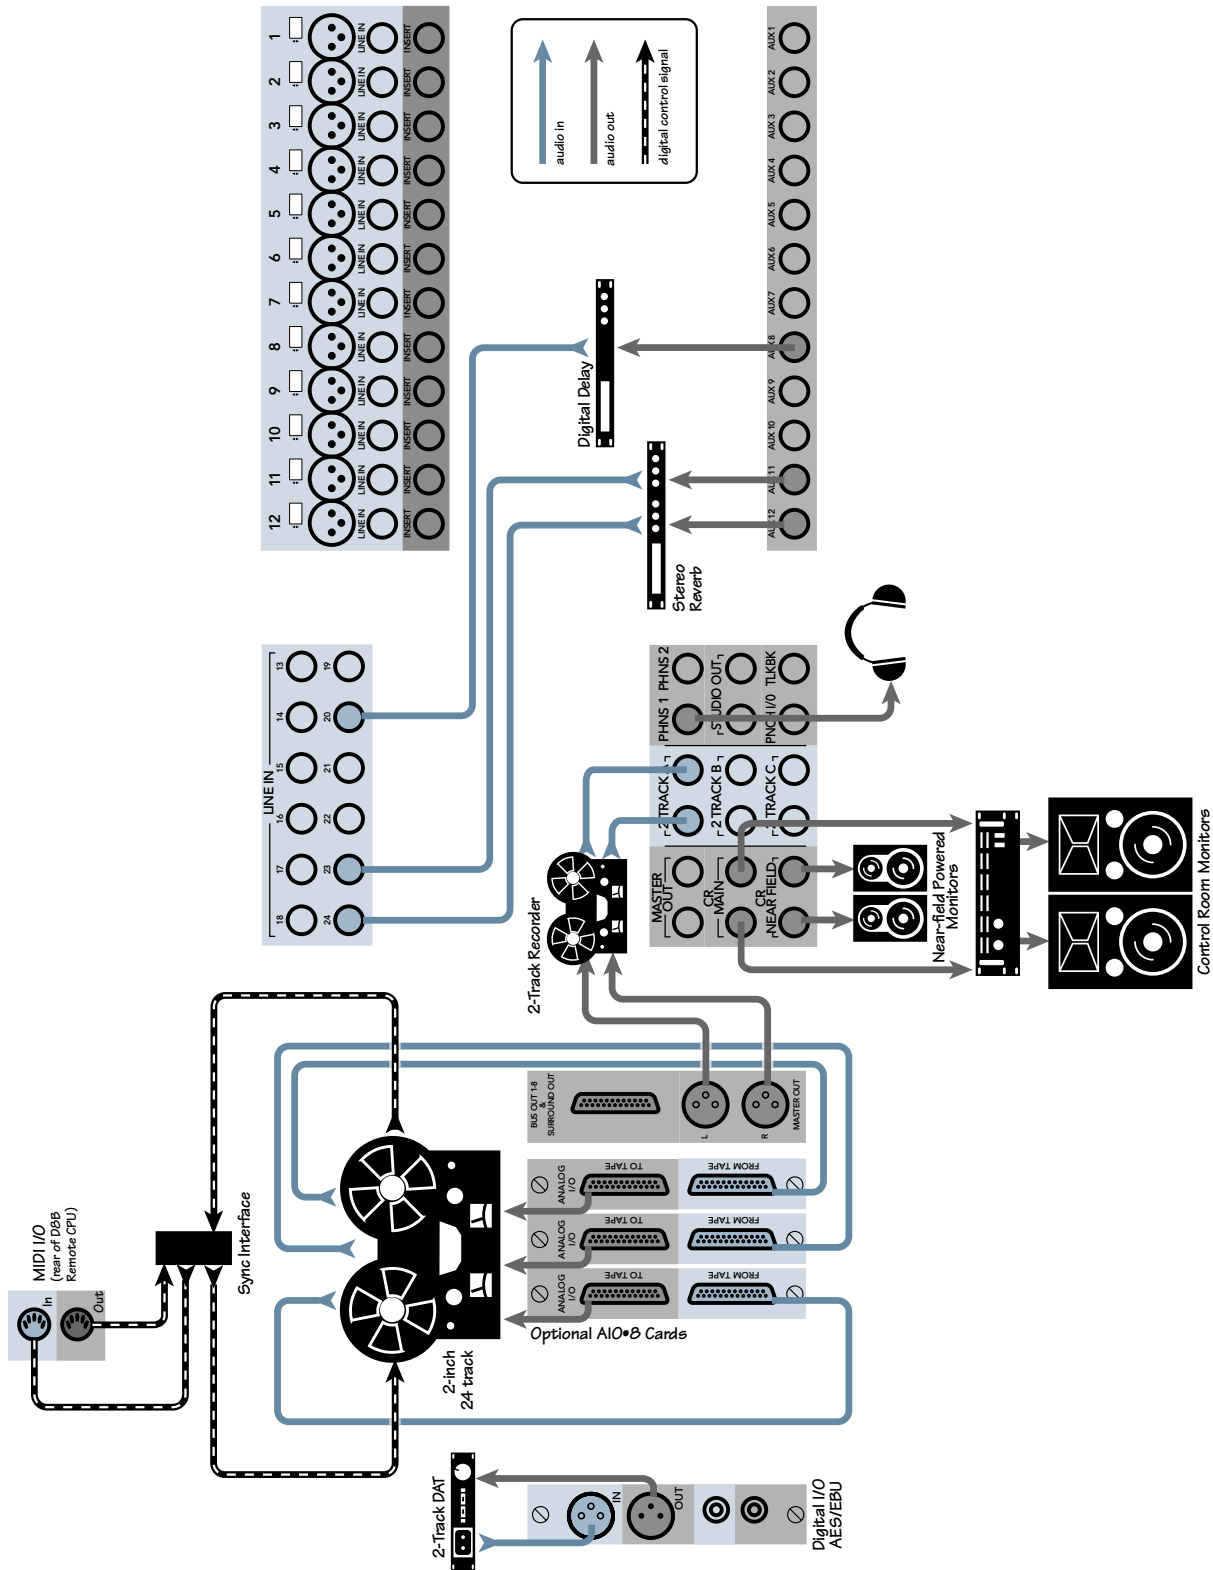

Digital 8-Bus Analog Recording/Mixdown Hookup Example

# Effects/Plug-ins

## MFX/UFX



Before we look at more setup examples, lets cover some quick tips on efficient use of the Digital 8•Bus plug-ins. Follow these easy steps to use the Digital 8•Bus internal plug-ins.

**Note:** These steps assume that the default input and output selections are made for the plug-ins (Input = corresponding Aux Send; Output = corresponding FX Return). Alterate Input sources and Destinations can be selected if desired.

Plugins	Windows	Ctrl+P
P 1 - VocalStudio		Alt+1
P 2		Alt+2
P 3		Alt+3
P 4		Alt+4
P 5 - MDW Mono EQ		Alt+5
P 6 - MDW Mono EQ		Alt+6
P 7 - MDW Mono EQ		Alt+7
P 8 - MDW Mono EQ		Alt+8
P 9 - TC Level I		Alt+9
P 10		Alt+0
P 11 - Drawmer Dyn		Alt+Shift+1
P 12 - Drawmer Dyn		Alt+Shift+2
P 13 - DelayFactor		Alt+Shift+3
P 14		Alt+Shift+4
P 15 - Antares Autotune		Alt+Shift+5
P 16 - Saturated Fat		Alt+Shift+6

1. Open the Plugin Configuration window (click Plugins in the upper menu bar and select Plugins, or Ctrl+P) and select the Input Source, Mode (Stereo/ Mono), Plugin, and Destination that suits your needs for each available slot.



2. Click the red 1/4" connector on the lower menu bar to reveal the plug-in selector buttons.

 
3. Select the plug-in you want to adjust by clicking on its button.

4. Plug-ins are organized in the order of the aux buses they correspond to.

**Note:** In the plug-in windows, clicking directly on the Effects patch name displays a large pop-up menu of Factory or User patch names, which points to available patches in your working directory's Presets folder. Always save your custom presets to the User Presets folder. Presets saved to the Factory Presets folder could be written over by future plug-in updates. It is still possible to use the up/down arrows to scroll through the patch names.



5. Click on the AUX button in the V-Pot Select Section that corresponds to the plug-in you want to use.



6. Use the channel V-Pots to set individual channel send to the selected aux bus.

 
---

**Note:** Alternately, you can click and drag on the horizontal bar in the auxes section at the top of the channel strip to adjust the aux send level.

---



7. Click and drag on the Master V-Pot to adjust the overall aux send level to the selected effect. You can click on the SOLO button in the Master V-Pot Section to monitor the aux send signal.



---

**Note:** The default setting for each Aux Master level is 0.0 dB. This typically provides sufficient send level and doesn't usually require adjustment.

---

8. Click on the EFFECTS button to select Fader Bank 3. Click and drag, or physically move, the FX return fader(s) corresponding to the selected effect, to control the amount of processed signal returning to the left and right bus.



---

**Note:** Currently the D8B OS doesn't store effects or any DSP module names. If you create some effects that you really like, we suggest that you name them and store them to disk. For ease of retrieval and organization, create a dedicated effects folder and keep all your working effects patches there.

---

Don't forget to use the EQ portion of the effects module during patch creation. It certainly can enhance the sound of any given patch.

### Setting Up Plug-ins

- Press Ctrl+P on the keyboard (or click Plugins in the upper menu bar and select Plugins) to open the Plugins Configuration window.
- Adjust aux send levels from any applicable bank channels.
- For MFX Plug-ins, each card utilizes two separate mono sends, which are monitored as two separate stereo returns from the MFX plug-in.
- UFX Plug-ins reside in groups of four on each card (2 stereo, 4 mono, or 1 stereo and 2 mono).
- Select the EFFECTS bank to adjust effects return levels at the appropriate faders.
- Pan effects returns left and right in pairs.
- Listen to playback.
- When tracking, it's best to monitor the tape returns.

---

**Note:** See the Plug-ins Manuals for specifics on individual plug-in functionality.

---

## Dynamics and EQ Applications

Dynamics and equalization are typically applied in one of three ways:

### 1. Processing Dynamics and EQ Before Tape

- Select Fader Bank 1 (MIC/LINE).
- Double-click SELECT on the desired channel to open the on-screen Fat Channel.
- Set compression, EQ, or gate.

Since Fader Bank 1 (MIC/LINE) feeds the multitrack inputs, any changes made from that bank are printed to tape.

### 2. Processing Dynamics and EQ After Tape

- Choose Fader Bank 2 (TAPE IN).
- Double-click SELECT button on the desired channel to open the on-screen Fat Channel.
- Adjust compression, EQ, or gate.

Since TAPE IN Bank receives its feed from the multitrack, Fat Channel changes made here don't affect what is printed to tape.

### 3. Analog inserts

- Using an insert cable, connect the channel send to the input of an external EQ or dynamics processor.
- Connect the insert cable return side to the external device output.

All channel level adjustments past the insert are dependent on the external device control settings, since the entire channel signal passes through the device.

Dynamic and EQ control should occur only once in any given signal path. Avoid subjecting any signal path to multiple stages of dynamics or EQ processing. As a rule, fewer circuits almost always result in more pristine and accurate audio—even though the D8B signal path is incredibly accurate and transparent.

Many engineers prefer to save all EQ for mixdown, so as to include the least audio manipulation for a more pure sound. Many recordists rough the sound in when recording, using whatever EQ and dynamics they feel the sound needs, then they perfect the audio during mixdown. Many excellent recordings have been the result of these techniques and more. Experiment, and let your ears determine what works best for you.




## MIDI and the D8B


### MIDI Basics

Your Digital 8•Bus works very well when incorporated in a MIDI network, utilizing a computer referenced to time code.

Be sure to connect the D8B MIDI jacks to your MIDI interface. Within your computer-based MIDI sequencer, set the MIDI channel connected to the D8B to transmit MIDI Time Code (MTC). This is necessary to run automation from a Digital Audio Workstation (DAW).

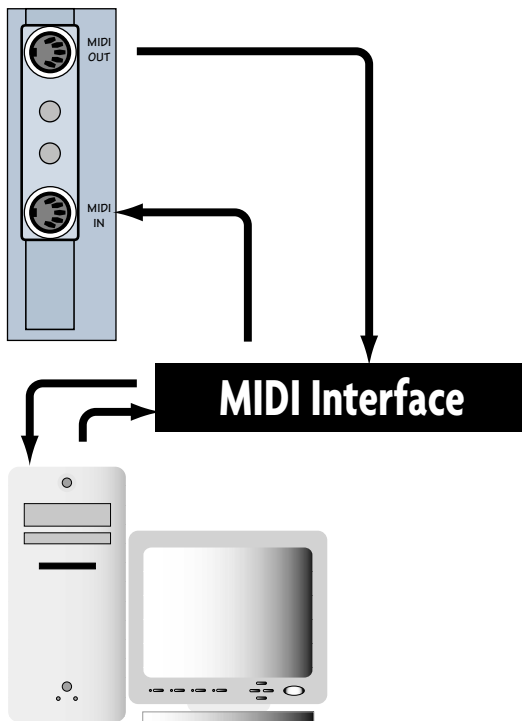

When you don't include a computer in your setup, you need a device like the Alesis BRC to transmit MTC to the D8B for time reference when performing dynamic and snapshot automation.

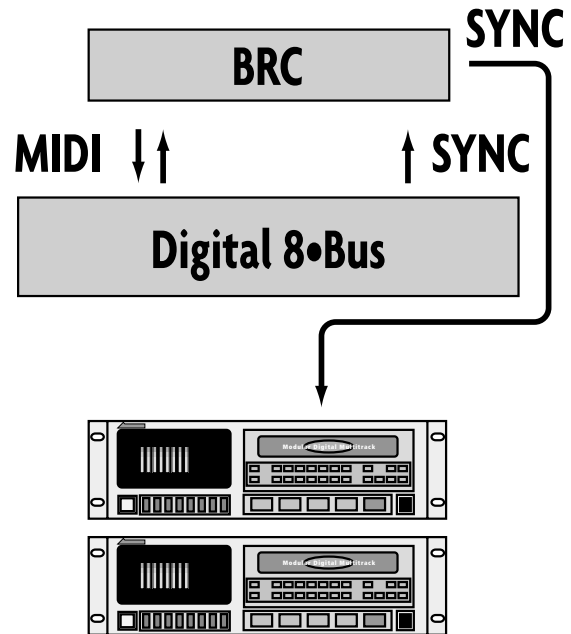

The Digital 8•Bus provides control over some key MIDI parameters. These parameters affect your system's ease of use and efficiency, and should be verified:

- **MMC DEVICE ID:** Some 8-track digital recorders require that you define the device ID numbers used for each recorder in the MIDI Machine Controller. Typically, tracks 1–8 are device 0, tracks 9–16 are device 1, and tracks 17–24 are device 2, so these are the default settings.
- **ONE BUTTON PUNCH:** You can also select whether to press the PLAY and RECORD buttons to enter record mode, or just press the RECORD button (One Button Punch).

---

**Note:** We recommend leaving One Button Punch off to provide an extra measure of safety in case you inadvertently press the RECORD button in the Transport Section.

---

- **MTC OFFSET:** MIDI File Offset can be used to indicate the starting time deviation of a Standard MIDI File (SMF), referenced to absolute time code.
- **TEMPO MAP:** If you use a sequencer in your recording process, you can create a standard MIDI file from the song(s) you've recorded. Copy the tempo map from the SMF to the Digital 8•Bus and "synchronize" the D8B display to the Bars:Beats:Ticks of the sequenced program. SMFs are loaded from the floppy disk drive.


## MIDI Snapshots

Once you've developed several snapshots for a mix, they can be recorded into a sequencer for consistent playback.

This feature is set in the Mix Options window, under Setup in the lower menu bar. When enabled:

1) Incoming MIDI program changes (received on any MIDI channel) can recall Snapshots numbered 0–127 on the console.

2) The D8B sends MIDI Program changes on MIDI channel 1 when snapshots are recalled on the console, either via the dynamic automation snapshot track or by manually recalling a snapshot from either the snapshot window or via the front panel.

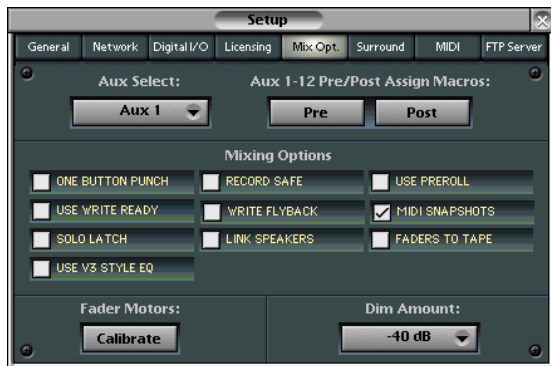

3) Place the sequencer in record on the D8B MIDI channel and cable. While the mix plays, select snapshots at the appropriate time. Each snapshot change is stored as data in the sequence and therefore can be shifted, cut, copied, pasted, etc.

See “The Snapshot Window” on page 69 for information on how to set the program change MIDI channel.

## Word Clock and the D8B — The Kitchen Sync

In order for all digital components to function together in unity, they must all move together, sample-by-sample, through the digital data stream.

Word clock is an incredibly important part of digital recording! The concept is simple: If multiple devices are synchronized together via word clock, they progress together through the digital data stream, one sample at a time. This is called sample-accurate sync.

Each system works in reference to one master device. Forty-eight thousand times a second (or whatever the common sample rate is) digital slaves keep track of the word clock status of the master device; they only output the next sample when the master device outputs the next sample.

This type of system provides very accurate synchronization. Incorporating a time reference, like MTC, along with sample accurate sync enables time stamping of data changes, like start-stop time, snapshot placements, real-time automation data, etc. Hence, ultimately flexible and way cool automation capabilities of virtually every control on the Digital 8•Bus! Yahoo!

The optional Clock I/O card for your Digital 8•Bus provides a means to send and receive digital word clock.

**This card is necessary:**

- When digitally combining the Digital 8•Bus with a computer-based DAW, MDMs, video recorders, etc.
- When the D8B must send or receive word clock other than through ADAT lightpipe or AES/EBU connections.

Sync data can transmit directly through ADAT Lightpipe and AES/EBU connections. However, a complete sync system needs two main ingredients:


- Word clock, sample-accurate sync. This is provided through the Digital 8•Bus optical or AES/EBU connections, and through the optional Clock I/O card.
- Time reference to stamp automation data for accurate playback. This is typically provided through MIDI Time Code (MTC).

## Proper Sync Connection



Every digital system needs a master sync source. The D8B prefers to be the master source but will function as a master or slave. Follow these simple steps to help assure a successful digital setup:

- Determine which piece of gear is the master. The master must be able to generate proper word clock that can be read by all other digital equipment.
- Set all digital equipment to the exact same word clock rate—typically 44.1 or 48kHz.
- Connect the word clock output from the master device to the word clock input of the slave devices. Each digital device connected to the digital audio chain must receive a common word clock source, either directly or from a slave.
- It is common procedure to chain word clock through digital devices. The D8B can provide master word clock to a central word clock hub, then the hub can send to multiple digital slaves (DAWs, MDMs, digital effects, etc.).
- Set every slave device to respond to external word clock.
- Draw a digital word clock flow chart for your system. This will help you verify a logical connection scheme. One piece of equipment connected incorrectly can mess up your entire system. Rats!

The following illustration shows a common sync setup, using the Digital 8•Bus as the master word clock source and a hub to distribute to other digitally connected devices.

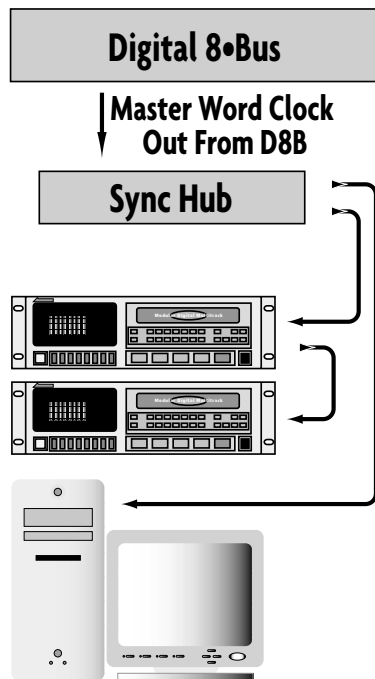

Here are two more sample setups that include the D8B and other digital devices which depend on accurate and solid word sync.

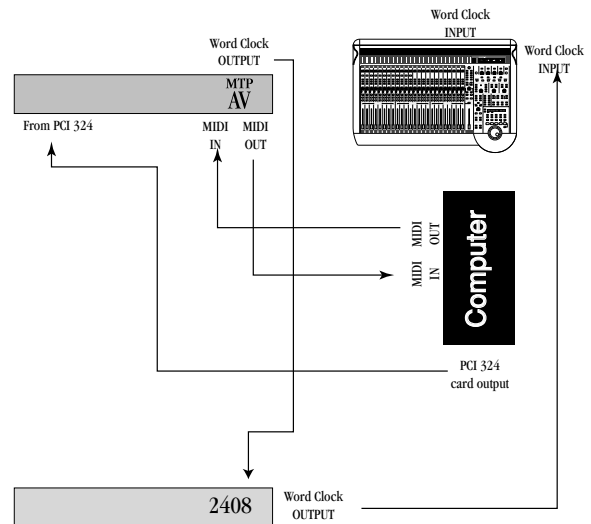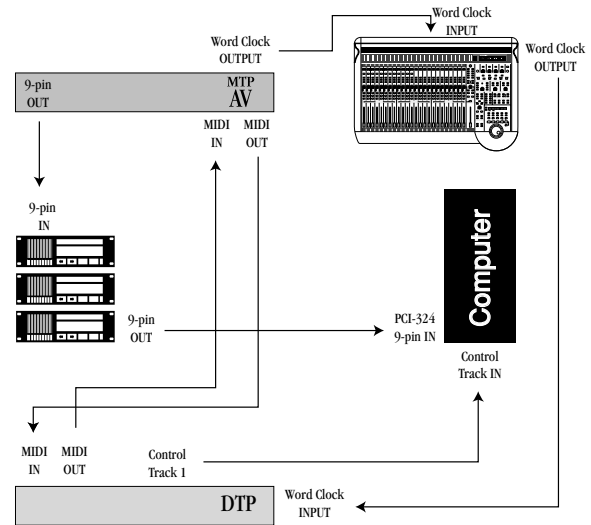


Use expensive, properly impedance-matched cabling! It's worth it!

**Note:** When using the D8B as the master sync source, always power it up before other digitally connected gear. You'll have a much better day.

## Verifying Word Clock Sync Between Devices and the Digital 8•Bus

- When the D8B is set to “Internal” in the Apogee Clock pop-up window, it generates word clock as a master device. All other devices must be connected as slaves.
- If the D8B is slaved properly to a master word clock source, “Locked.” is displayed in the Setup>Digital I/O window next to the Apogee Clock pop-up window and an asterisk (\*) flashes in the right-most portion of the control surface VFD.

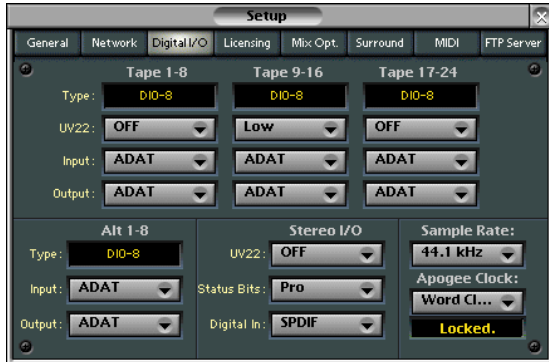

- If the D8B is improperly connected as a slave to the digital network, “Lock Error.” is displayed in the Setup>Digital I/O window next to the Apogee Clock pop-up window and a question mark (?) flashes in the right-most portion of the control surface VFD.



## You probably have a bad word clock sync connection if:

- You hear audio but it cuts in and out at regular intervals.
- There is no audio signal at the input of the D8B even though everything seems to be connected properly.
- All meters are full on and you hear a very ugly grating, grinding, static sound.
- When the record/playback device transport is engaged, you see a question mark flashing in the right-most portion of the control surface VFD.

## Troubleshooting Word Clock Problems

- Troubleshoot through the system from the master through the slaves. Connect the first two devices and verify their functionality. Once they're up and running, add the next device, and so on. This is the most efficient manner to check out a system.
- Verify connection, integrity, and quality of all sync cables.
- Verify a consistent sample rate setting on all connected sync devices (all set to the same sample rate—44.1, 48k, etc.)
- Verify that the master sync source word clock output is connected to the word clock input of the slave, and that additional slaves also receive word clock. Slaves can either receive word clock directly from the master device or daisy-chained through connected slaves. Patch word clock out of a connected slave into the word clock input of any other slave.
- Verify that the master device word clock status is set to INTERNAL.
- Verify that all slave devices are set to follow EXTERNAL word clock.
- If the system doesn't seem to work correctly, you might have an intermittent or broken sync cable. Always use high-quality 75Ω BNC word clock cables.

## Dither - To UV22 or Not to UV22: That Is the Question

Digital audio's weakness is its ability to accurately reproduce extremely low-level signals. As the amplitude decreases, there are fewer and fewer bits available to accurately represent the audio wave.

In an analog system the audio simply sinks into the noise floor. Even when covered by noise, the waveform is still audibly intact. In a digital system, low level audio simply becomes inaccurate and sounds really bad. A few bits at the bottom of the amplitude range aren't capable of faithfully converting the analog information to digital, let alone reinterpreting the digital data into analog variations in air pressure.

Dither is a low-level noise that combines with your pristine audio at low levels to help keep enough digital bits active to replicate an accurate waveform throughout the conversion process from digital to analog to digital—go figure that it takes noise to make a system work that has no noise.

UV22 is a very good-sounding type of dither that makes a way for more accurate reconstruction of this low-level audio. The frequency of the UV22 dither noise is lower than the conventional process and therefore provides a more transparent reconstruction.

As a practical application, if your music is to be mastered by someone else in a professional mastering facility, you might not need to use the UV22 process—too much dither can accumulate too much noise. If you're seeing the project through to the end you have three primary options:

- **Don't dither.** If your music is always loud—loud, loud, loud—you might not need to worry about dither because dither really only helps audio quality at low levels. However, if there is a fade out in your song, then of course everything isn't always loud and you'll want to take advantage of the UV22 process to feather the fade out with excellent audio clarity.
- **Dither once.** The conventional approach has been to avoid dithering until the final version is mastered (prepared for duplication). In this case, wait until the final mix is printed to the replication master, then use a Normal UV22 setting on the Stereo I/O in the Setup window. Dither only once on Normal setting; dither noise is cumulative so too much dither equates to senseless noise.

If your music contains only a few low-level passages try using the "Low" setting on the Stereo I/O. "Low" equates to a lower level of noise and, though it might not provide as much smoothing of low-level audio, it might be quite sufficient—and less noise just seems like a better choice wherever appropriate.

- **Dither twice.** If your music contains a wide dynamic range, you might not be able to resist the urge to use dither as you record to the multitrack. In this case, plan to use the UV22 process twice: use it once on the multitrack tracks—on the "Low" setting; use it again on the final printing of the master take—on the "Low" setting. If you use the UV22 process twice, using it on Low setting both times will closely equate to the dither noise resulting from using it once in "Normal" position.

# D8B–HDR24/96 Setup

## Hookups

This section shows how the D8B is connected to the Mackie HDR24/96. These examples assume that the rest of your studio equipment (monitors, sound sources, outboard processing, etc.) is already connected.

Before you begin, note how the three eight-channel I/O cards are arranged on the HDR24/96 rear panel: 1-8 is on the left, 9-16 is in the center, and 17-24 is on the right. Labeling cables before you begin will make connecting the HDR24/96 to your D8B easier.

The specific hookups for each D8B and HDR24/96 I/O card are shown below.

### Analog Hookup to HDR24/96 (AIO•8)

**This example describes the analog hookup for the D8B–HDR24/96 combination.**

#### Cables & Hardware

- (3) AIO•8 cards for HDR24/96
- (3) AIO•8 cards for D8B
- (6) DB25 to DB25 analog snakes

#### Hookup

1. Connect three snakes between the HDR24/96 Inputs (bottom connector) and the corresponding D8B Tape Outputs (top connector).

2. Connect three snakes between the HDR24/96 Outputs (top connector) and the corresponding D8B Tape Inputs (bottom connector).


### HDR24/96 Settings

1. Set the **Sample Clock** to **Internal**.
2. Set the **Sample Rate** and **Bit Depth** according to your preference. It is not necessary to set the D8B and HDR24/96 to the same **Sample Rate** since, with analog connections, the sample clocks on the two units are not synchronized.

### Console Settings

1. Set the D8B **Sample Rate** to **44.1kHz** or **48kHz**, and set the **Apogee Clock** to **Internal** (in the Digital I/O Setup window).

This example describes the hookup for the D8B console equipped for analog I/O.

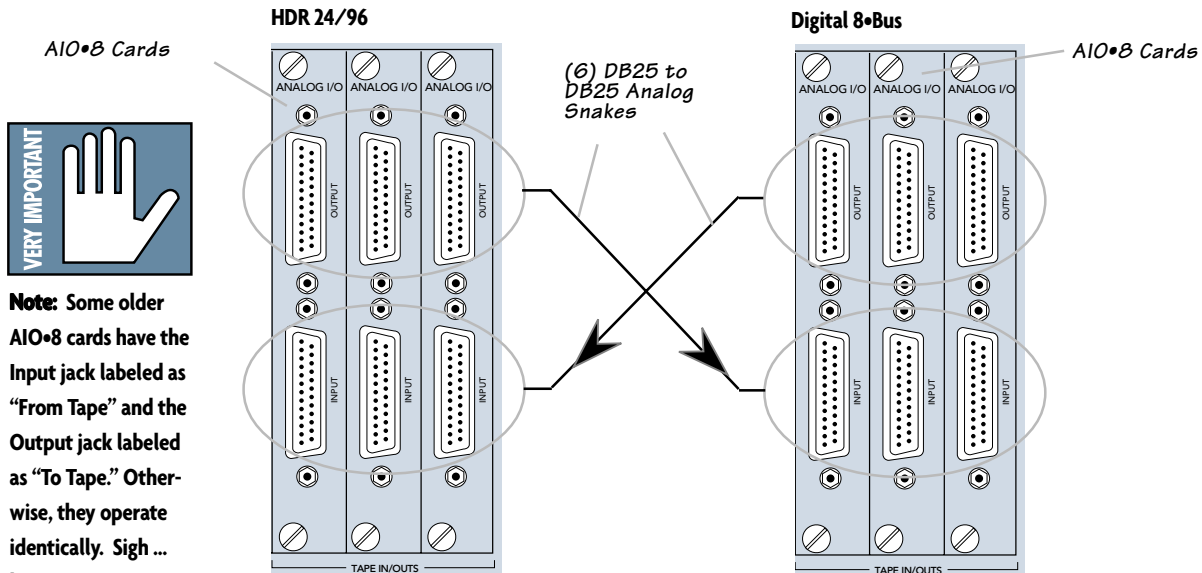

**VERY IMPORTANT**

**Note:** Some older AIO•8 cards have the Input jack labeled as “From Tape” and the Output jack labeled as “To Tape.” Otherwise, they operate identically. Sigh ... long story.

## TDIF Hookup to HDR24/96 (DIO•8)

### Cables & Hardware

- (3) DIO•8 cards for HDR24/96
- (3) DIO•8 cards for D8B
- (1) Clock I/O card for D8B
- (3) TDIF cables
- (1) 75 Ω BNC word clock cable

### Hookup


1. Connect the three TDIF cables between the corresponding TDIF jacks on the HDR24/96 and D8B.
2. When TDIF is used, the D8B must have a Clock I/O card installed. To make the D8B the clock master, connect its Word Clock Out (not

DIO•8 Sync out) to the HDR24/96 Word Clock In. To make the HDR24/96 the clock master, connect its Word Clock Out to the D8B Word Clock In.

### HDR24/96 Settings

1. Set the Tape Input format for each DIO•8 card to **TDIF**, and the Tape Output format to **TDIF**.
2. If the HDR24/96 is the clock master, set the **Sample Clock** to **Internal**; if it is a clock slave, set it to **Word Clock** and depress the 75 Ω termination switch on the Sync card.
3. Set the **Sample Rate** to 44.1kHz or 48kHz according to your preference.

## TDIF Hookup with DIO•8

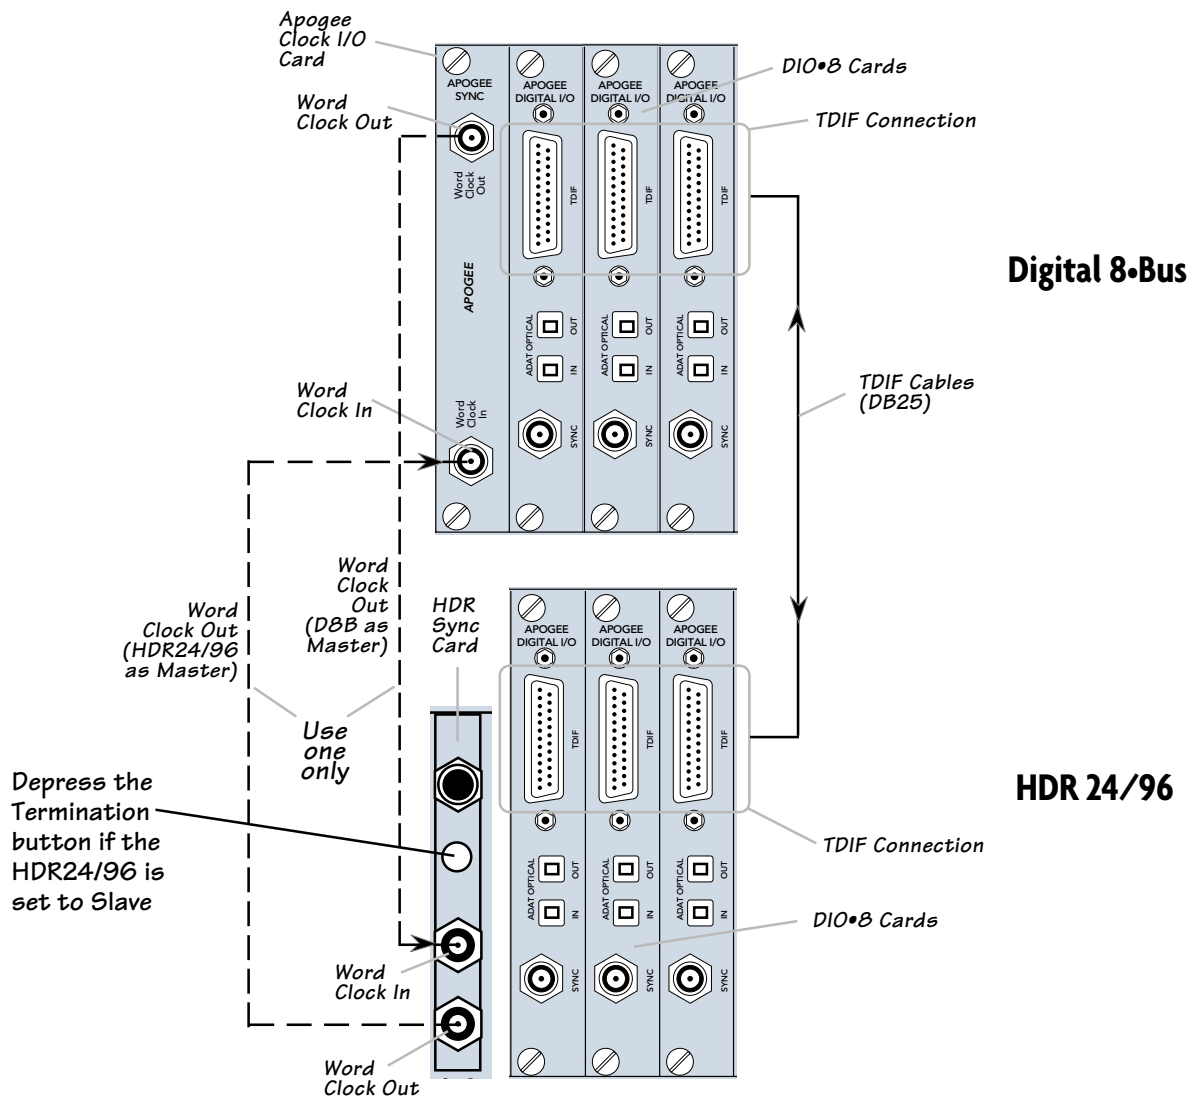

## Console Settings

1. Set the Tape Input and Tape Output format for each DIO•8 card to TDIF.
2. If the D8B is the clock master, set the **Sample Rate** to either 44.1kHz or 48kHz, and set the **Apogee Clock** to **Internal** (in the Digital I/O Setup window). If it is a clock slave, set the **Apogee Clock** to **Word Clock**. Set the **Sample Rate** to match the **Sample Rate** selected on the HDR24/96.

## ADAT Optical Hookup to HDR24/96 (DIO•8 or OPT•8)

### Cables & Hardware

- (3) DIO•8 or OPT•8 cards for HDR24/96
- (3) DIO•8 or OPT•8 cards for D8B
- (1) Clock I/O card for D8B
- (6) ADAT Optical cables
- (1) 75Ω BNC word clock cable

### Hookup

1. Connect three ADAT Optical cables from the HDR24/96 Optical Outputs to the Optical Inputs on the corresponding D8B I/O cards.
2. Connect three ADAT Optical cables from the HDR24/96 Optical Inputs to the Optical Outputs on the corresponding D8B I/O cards.
3. When ADAT Optical is used, the D8B must have a Clock I/O card installed. To make the D8B the clock master, connect its Word Clock Out to the HDR24/96 Word Clock In. To make the HDR24/96 the clock master, connect its Word Clock Out to the D8B Word Clock In.

### HDR24/96 Settings


1. If you have DIO•8 cards installed, set the Tape Input and Tape Output format for each card to ADAT. OPT•8 cards need no configuration.
2. If the HDR24/96 is the clock master, set the **Sample Clock** to **Internal**. If the HDR24/96 is a clock slave, set the **Sample Clock** to **Word Clock** and depress the 75Ω termination button on the Sync card.
3. Set the **Sample Rate** to 44.1kHz or 48kHz according to your preference.



## Console Settings

1. If you have DIO•8 cards installed, set the Tape Input and Tape Output format for each card to **ADAT**. OPT•8 cards need no configuration.
2. If the D8B is the clock master, set the **Sample Rate** to either 44.1kHz or 48kHz, and set the **Apogee Clock** to **Internal** (in the Digital I/O Setup window). If it is a clock slave, then set the **Apogee Clock** to **Word Clock**. Set the Sample Rate to match the **Sample Rate** selected on the HDR24/96.

## ADAT Optical Hookup with OPT•8

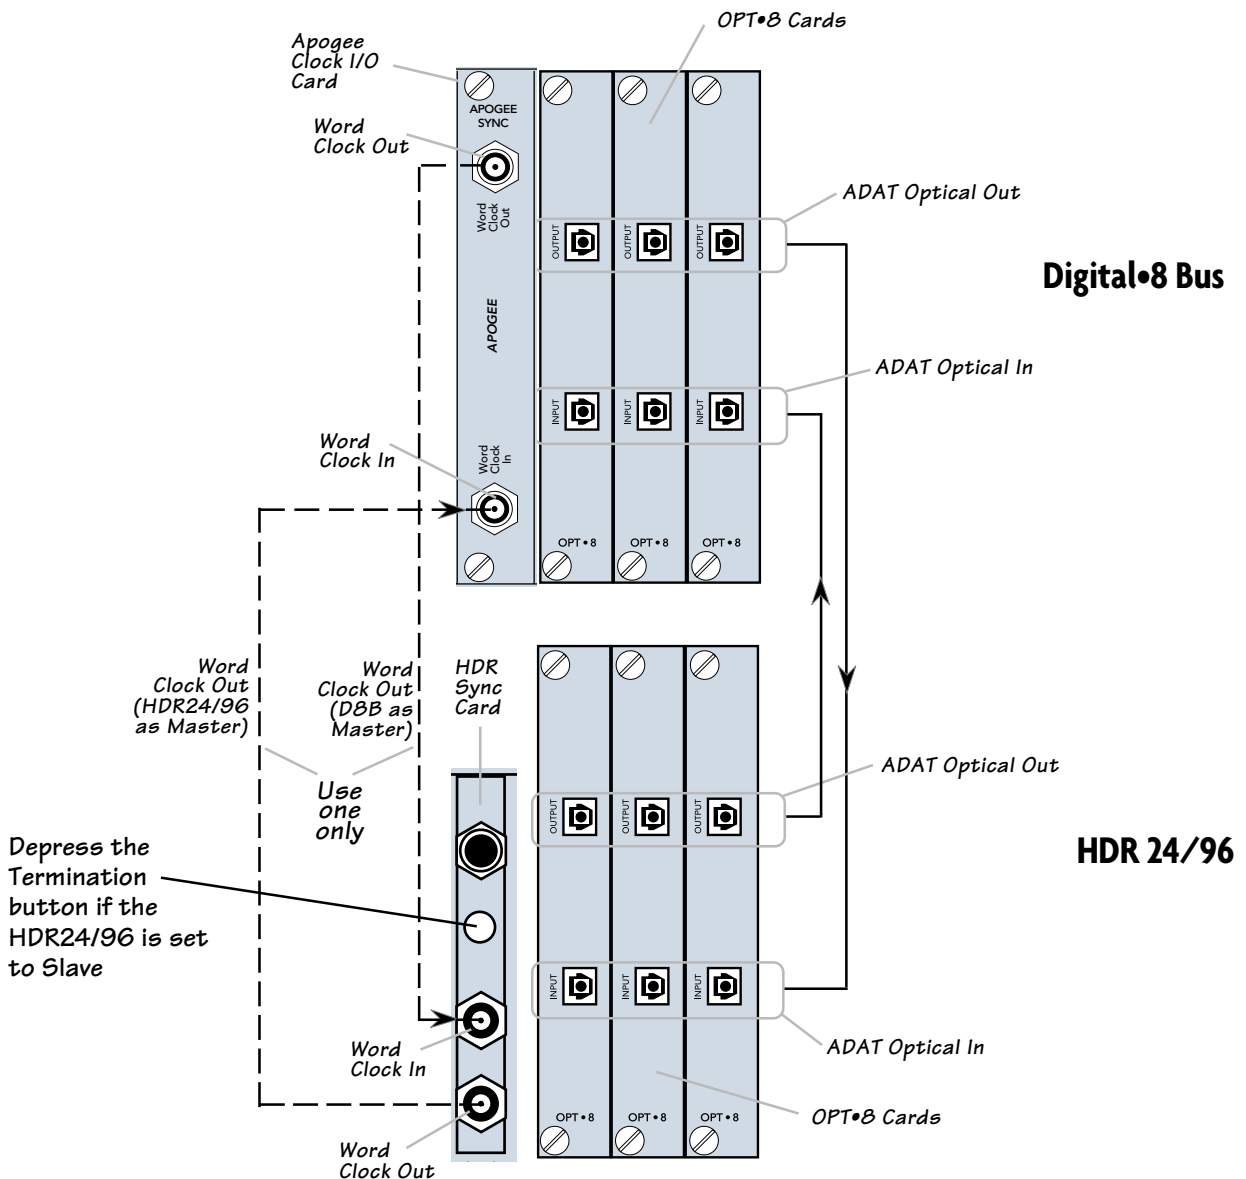

## AES/EBU Hookup to HDR24/96 (PDI•8)

### Cables & Hardware

- (3) PDI•8 cards for HDR24/96
- (3) PDI•8 cards for D8B
- (1) Clock I/O card for D8B
- (3) DB25 to DB25 AES/EBU snakes
- (1) 75Ω BNC word clock cable

### Hookup

1. Connect the three AES/EBU cables between the corresponding AES/EBU connectors on the HDR24/96 and D8B.
2. When AES/EBU is used, the D8B must have a Clock I/O card installed. To make the D8B the clock master, connect its Word Clock Out to the HDR24/96 Word Clock In. To make the HDR24/96 the master, connect its Word Clock Out to the D8B Word Clock In.


### HDR24/96 Settings

1. If the HDR24/96 is the clock master, set the **Sample Clock** to **Internal**; if it is a clock slave, set the **Sample Clock** to **Word Clock** and depress the 75Ω termination switch on the Sync card.
2. Set the **Sample Rate** to 44.1kHz or 48kHz according to your preference.

### Console Settings

1. If the D8B is the clock master, set the **Sample Rate** to either 44.1kHz or 48kHz, and set the **Apogee Clock** to **Internal** (in the Digital I/O Setup window). If it is a clock slave, then set the **Apogee Clock** to **Word Clock**. Set the **Sample Rate** to match the **Sample Rate** selected on the HDR24/96.

## AES/EBU Hookup with PDI•8

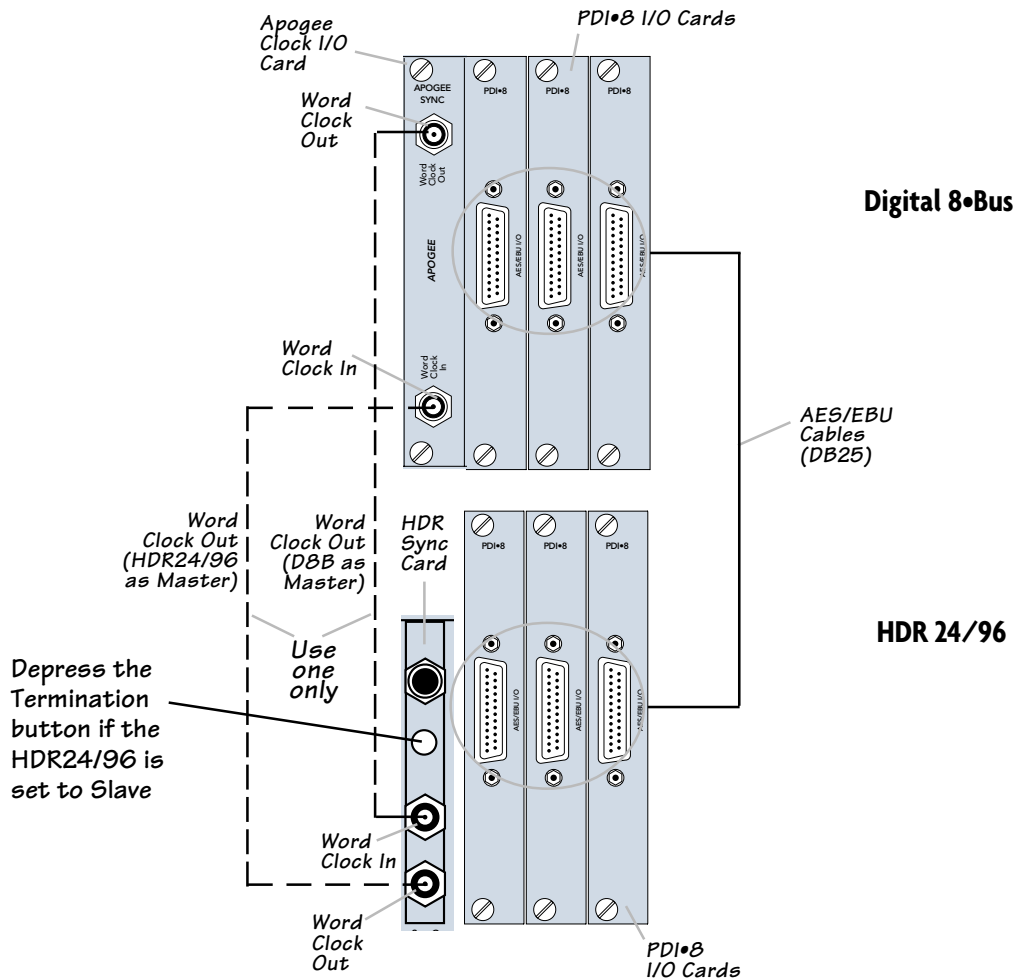



OK, so we fibbed a little. You can use PDI•8 cards in the D8B without a Clock I/O card installed, but doing so requires that you enable sample rate conversion on both the D8B and the HDR24/96 in lieu of word clock synchronization. Sample rate conversion results in a 4-bit loss in sample resolution that may degrade the quality of the sound slightly. On the positive side, you don't need a Clock I/O card!

## Using the Digital 8•Bus with ADATs

This is a simple setup. It works well and is easy to configure. However, it has some limitations. Without a MTC sync source there's no way for the Digital 8•Bus to time-reference snapshot or dynamic automation. As long as automation isn't a consideration, this setup is clean and efficient.

### Cabling and Hookup

1. Connect a fiber optic cable between the ADAT's lightpipe output and the D8B's lightpipe input. Likewise, connect the D8B's lightpipe output to the ADAT's lightpipe input. (A DIO•8 or OPT•8 lightpipe card must be installed in the D8B to gain access to the ADAT digital tape inputs and outputs.)
2. When using multiple ADATs, connect SYNC OUT from the master ADAT to SYNC IN of the first slave, then from SYNC OUT of the first slave to SYNC IN of the second slave, and so on.

### Settings

#### D8B



1. Open the Setup window.
2. Click on "Digital I/O" to open the Digital I/O dialog box.
3. Click on each Tape Input and Output box and select ADAT for each DIO•8 card installed.



4. Set "Samplerate" to match the sample rate of the formatted ADAT tapes (typically 48kHz or 44.1kHz).

#### ADATs

1. Select DIGITAL IN on the ADAT front panel.

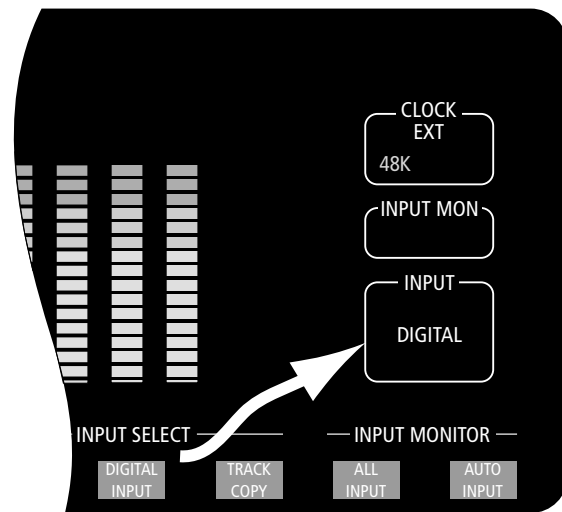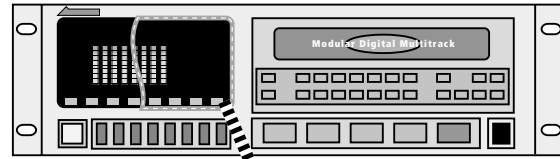

**Note:** When powering up, turn the Digital 8•Bus on first, then turn the ADATs on.

## Connecting the Digital 8•Bus to a BRC and ADATs

The inclusion of a BRC controller or, for that matter, any other sync controller box with word clock and MTC, vastly increases the capabilities of the Digital 8•Bus. With centralized controls, common sync reference, and MIDI Time Code communication established, the digital system works together as one unit. Automation is achieved, referenced to MTC, and digital devices work together, sample-by-sample to make the most of your recordings. (See Figure on next page.)

### Cabling and Hookup

1. Connect a fiber optic (lightpipe) cable between the ADAT's ADAT's DIGITAL IN and the DIO•8 card's ADAT OPTICAL OUT. Likewise, connect the DIO•8 card's ADAT OPTICAL IN to the ADAT's DIGITAL OUT.
2. Connect a BNC cable from the Clock I/O card's WORD CLOCK OUT connector to the 48 kHz IN connector on the BRC.

---

**Note:** It is necessary to terminate this connection with a 50 ohm termination at the BRC end of the cable. You will need a BNC "T" connector (Radio Shack part number 278-112; male-female-female configuration) and a 50 ohm BNC terminator (Radio Shack part number 278-270). Connect the "T" connector to the 48 kHz IN jack on the BRC. Then connect the BNC cable from the DIO•8 card to one side of the "T" and connect the 50 ohm terminator to the other side of the "T."

---

3. Connect the 9-pin D-sub sync cables between the BRC (REMOTE OUT TO ADAT) and the first ADAT's SYNC IN connector. Then connect the sync cables in a daisy-chain fashion between the remaining ADATs.
4. Connect MIDI cables between the MIDI OUT connector on the Digital 8•Bus' Remote CPU and the MIDI IN connector on the BRC, and between the MIDI IN connector on the Digital 8•Bus' Remote CPU and the MIDI OUT connector on the BRC.

### Settings

Graphics in the previous section will help you locate these controls.

#### D8B

1. Click the "Setup" button in the bottom menu bar of the SVGA monitor to open the General Setup window.
2. Click the "Digital I/O" icon on the top of the window to open the Digital I/O dialog box.
3. Click each Tape Input and Output box and select ADAT for each DIO•8 card installed.
4. Set the "Samplerate" to 48 kHz.

#### ADATs


1. On the front panel of the ADAT, select DIGITAL IN.

#### BRC

1. Set the External Sync parameters to the following:
  - a) Press the EDIT button.
  - b) Set the Clock Source to "48KHz Input."
  - c) Set the Locate Reference to "Internal."
  - d) Press the EDIT button to exit the "Edit External Sync" page.
  - e) Make sure the EXT SYNC button is still lit.
2. Press the EDIT button and the GEN SYNC button twice to bring up the MIDI page. Set the parameter to MTC. Press the EDIT button to exit out of the "Edit Generate Sync" page. Leave the GENERATE SYNC button lit.

#### Notes:

1. You *must* turn on the Digital 8•Bus first, then turn on the ADATs.
2. Make sure the DIGITAL I/O button on the BRC is *not* lit.
3. Under the MIDI/UTIL button on the BRC, make sure #1 MIDI Echo is off and #8 Output Rew/FF is off. This is so the faders don't run at high speed when shuttling around on your ADATs.

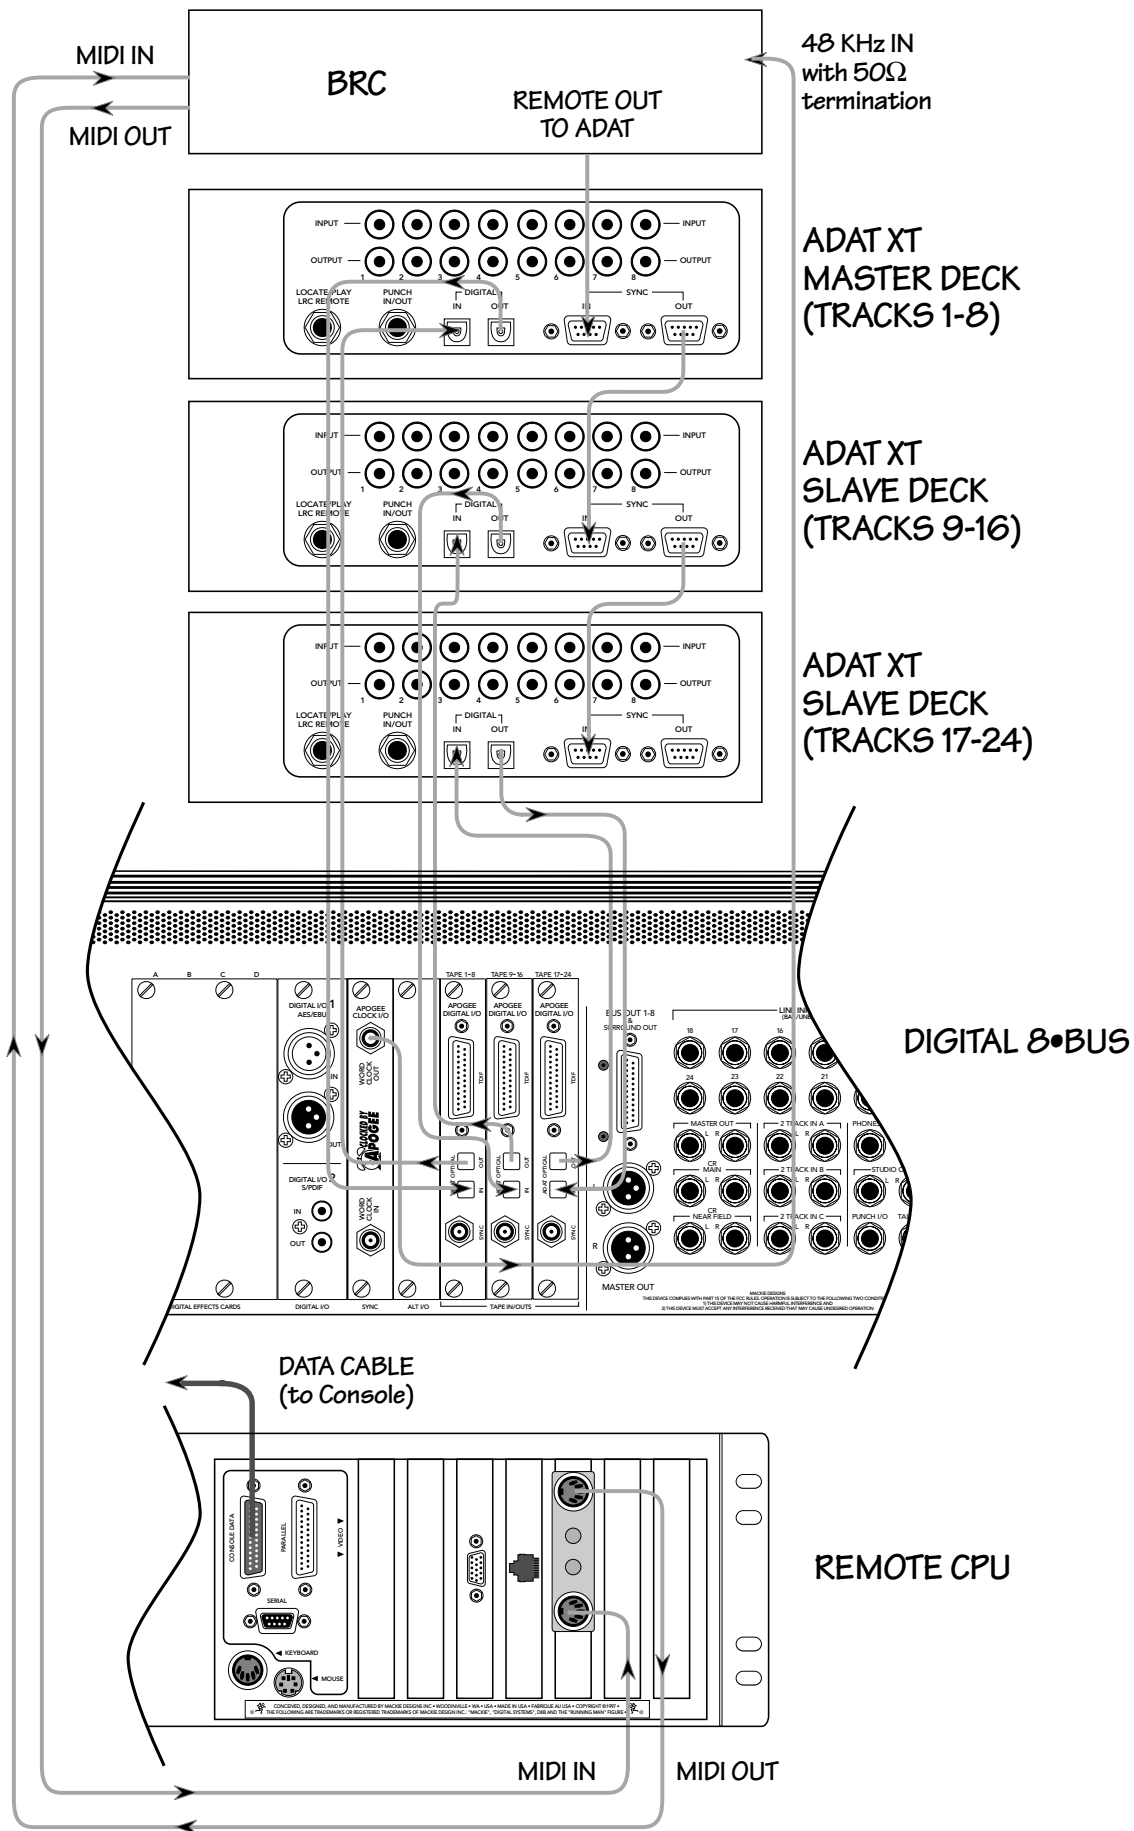

Connecting Alesis ADATs and BRC to the Digital 8•Bus

# Connecting the Digital 8•Bus to ADATs Using an External Sync Box


## Cabling and Hookup

1. Connect a fiber optic (lightpipe) cable between the ADAT's DIGITAL IN and the DIO•8 card's ADAT OPTICAL OUT. Likewise, connect the DIO•8 cards' OPTICAL IN to the ADAT's DIGITAL OUT.
2. Connect the 9-pin D-sub sync cables between the Sync Box (SYNC OUT) and the first ADAT's SYNC IN connector. Then connect the sync cables in a daisy-chain fashion between the remaining ADATs. Connect the SYNC OUT on the last ADAT to the SYNC IN on the Sync Box to complete the loop.
3. Connect MIDI cables between the MIDI OUT connector on the Digital 8•Bus' Remote CPU and the MIDI IN connector on the Sync Box, and between the MIDI IN connector on the Digital 8•Bus' Remote CPU and the MIDI OUT connector on the Sync Box.

## Settings

### D8B

1. Open the Setup window by pressing Ctrl+1 or clicking Setup in the bottom menu bar on-screen.

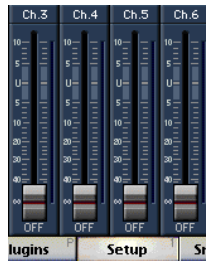



2. Click "Digital I/O" to open the Digital I/O dialog box.
3. Click each Tape Input and Output box and select ADAT for each DIO•8 card installed.



4. Set the "Samplerate" to match the sample rate of the formatted ADAT tapes (typically 48 kHz or 44.1 kHz).


### ADATs

1. Select DIGITAL IN on the ADAT front panel.

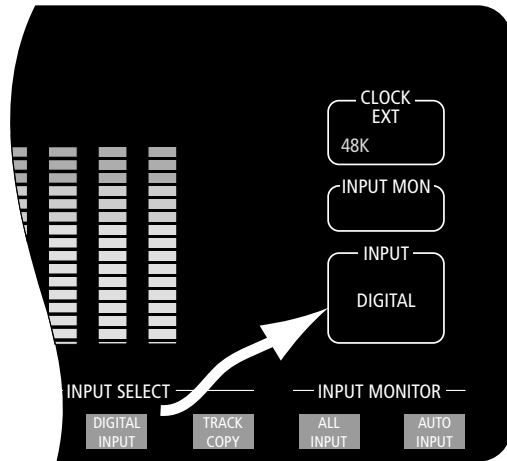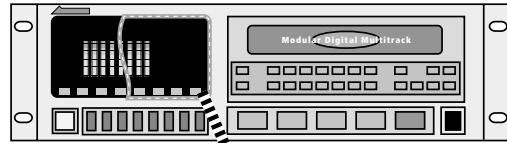

### Notes:

- When powering up, turn the Digital 8•Bus on first, then turn the ADATs on.

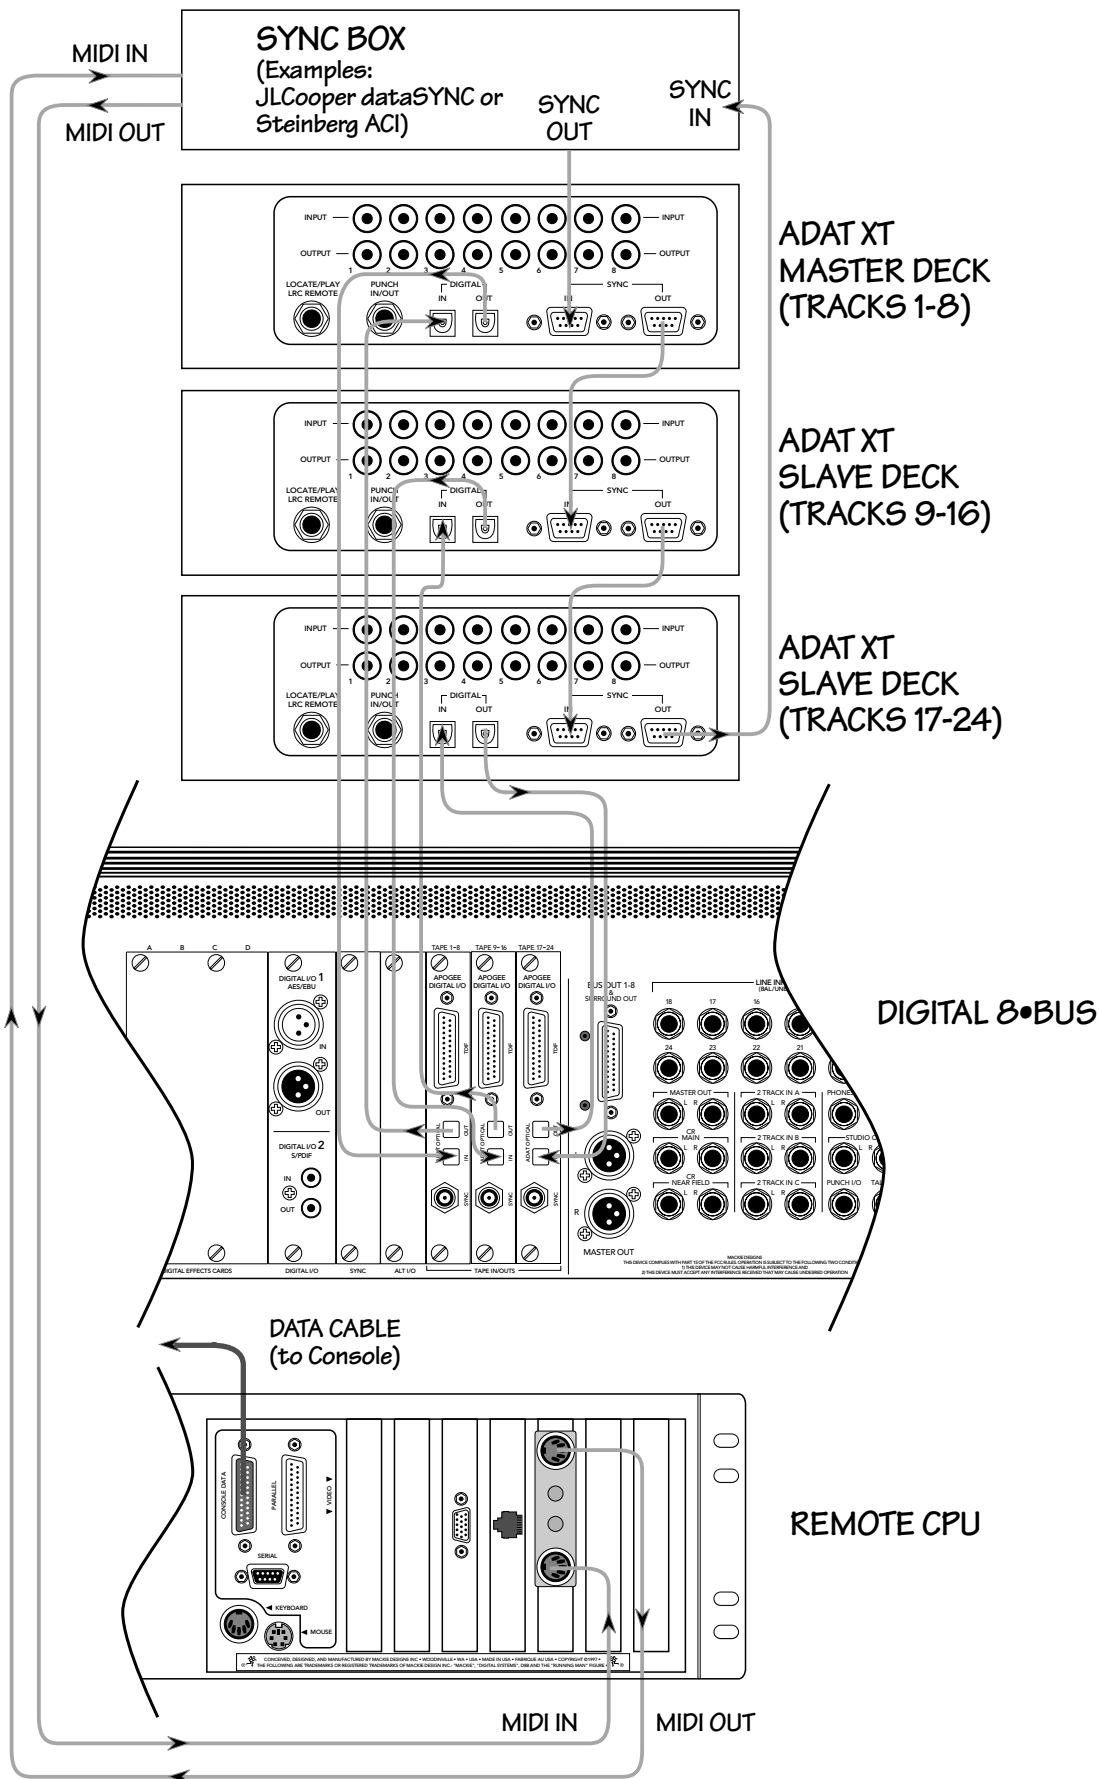

Connecting Alesis ADATs to the Digital 8-Bus Using an External Sync Box

# Connecting the D8B to TASCAM MDMs

## Cabling and Hookup

1. Connect the digital cables between the TASCAM tape decks and the DIO•8 cards in the Digital 8•Bus.

**Note:** You must use the special dubbing cables provided by TASCAM, part number PW-88D (1 meter) or PW-88DL (5 meters). These cables are reverse wired. Do not use a standard DB25 computer cable, which is wired straight through pin-to-pin.

2. Connect the sync cables (TASCAM part number PW-88S) between the master deck and the slaves in a daisy-chain fashion. Make sure the last deck has a Termination Plug connected to its SYNC OUT connector.

### For the DA-38:

An MMC-38 MIDI Machine Control interface must be used prior to the SYNC IN connector on the master deck to implement MMC transport commands and track arming for up to three DA-38 machines.

### For the DA-88:

You must have an SY-88 card installed in each DA-88 to implement MMC transport commands and track arming for up to three DA-88 machines. The SY-88 cards also provide SMPTE chase lock operation. Alternately, an MMC-38 MIDI Machine Control interface may be used prior to the SYNC IN connector on the master deck to implement MMC transport commands and track arming for up to three DA-88 machines.

3. Connect a BNC cable from the first DIO•8 (Tape 1–8) card's SYNC connector to the WORD SYNC IN connector on the master deck.
4. Connect MIDI cables between the MIDI OUT connector on the Digital 8•Bus Remote CPU and the MIDI IN connector on the MMC-38 (or SY-88 on the master deck), and between the MIDI IN connector on the Digital 8•Bus Remote CPU and the MIDI OUT connector on the MMC-38 (or SY-88).

## Settings

### MMC-38

1. Set SW2 DIP switches 6 and 7 to the up position. All other switches should be in the down position.

### SY-88

1. DIP switches on the SY-88 are set internally. The DIP switches labeled S2 assign the device ID numbers (see the TASCAM SY-88 Owner's Manual for ID setup information).

### TASCAM DA-38/DA-88

1. On the front panel of the TASCAM, select WORD CLOCK as the clock source.
2. Also on the front panel, turn on the DIGITAL IN.

3. Set the Machine ID on each recorder, with the first deck (master) having the lowest number and the last deck having the highest number. DA-88s start with ID #0 and DA-38s start with ID #1.

	DA-88	DA-38
Deck 1	0	1
Deck 2	1	2
Deck 3	2	3

**Note:** If using a DA-88 as the master and a DA-38 as a slave, assign the DA-88 ID #0, and the DA-38 ID #2.

## D8B

1. Click the "Setup" button in the bottom menu bar of the SVGA monitor to open the General Setup window.
2. Click the "Digital I/O" icon on the top of the window to open the Digital I/O dialog box.
3. Click each Tape Input and Output box and select TDIF for each DIO•8 card installed.
4. Select the appropriate sample rate in the Digital I/O Setup window.




### For DA-38s with the MMC-38:

- a. Click the "MIDI" button at the top of the Setup window.
- b. Set all Device IDs to 1 (all D8B Device IDs must be set to 1 in order to arm tracks from the console).


### For DA-88s with the SY-88s:

- a. Click the "MIDI" button at the top of the Setup window.
- b. Set all Device IDs to one digit less than the DIP switch settings (S2) on the SY-88 cards for their respective machines. For example:

	SY-88	D8B
Deck 1	1	0
Deck 2	2	1
Deck 3	3	2

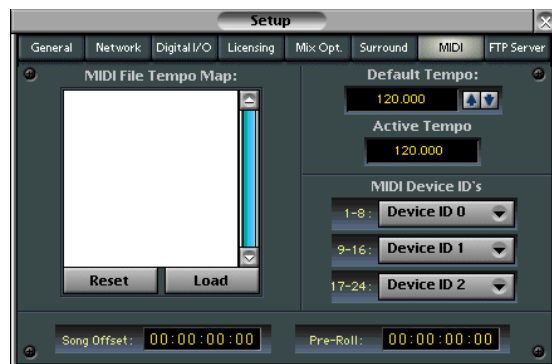



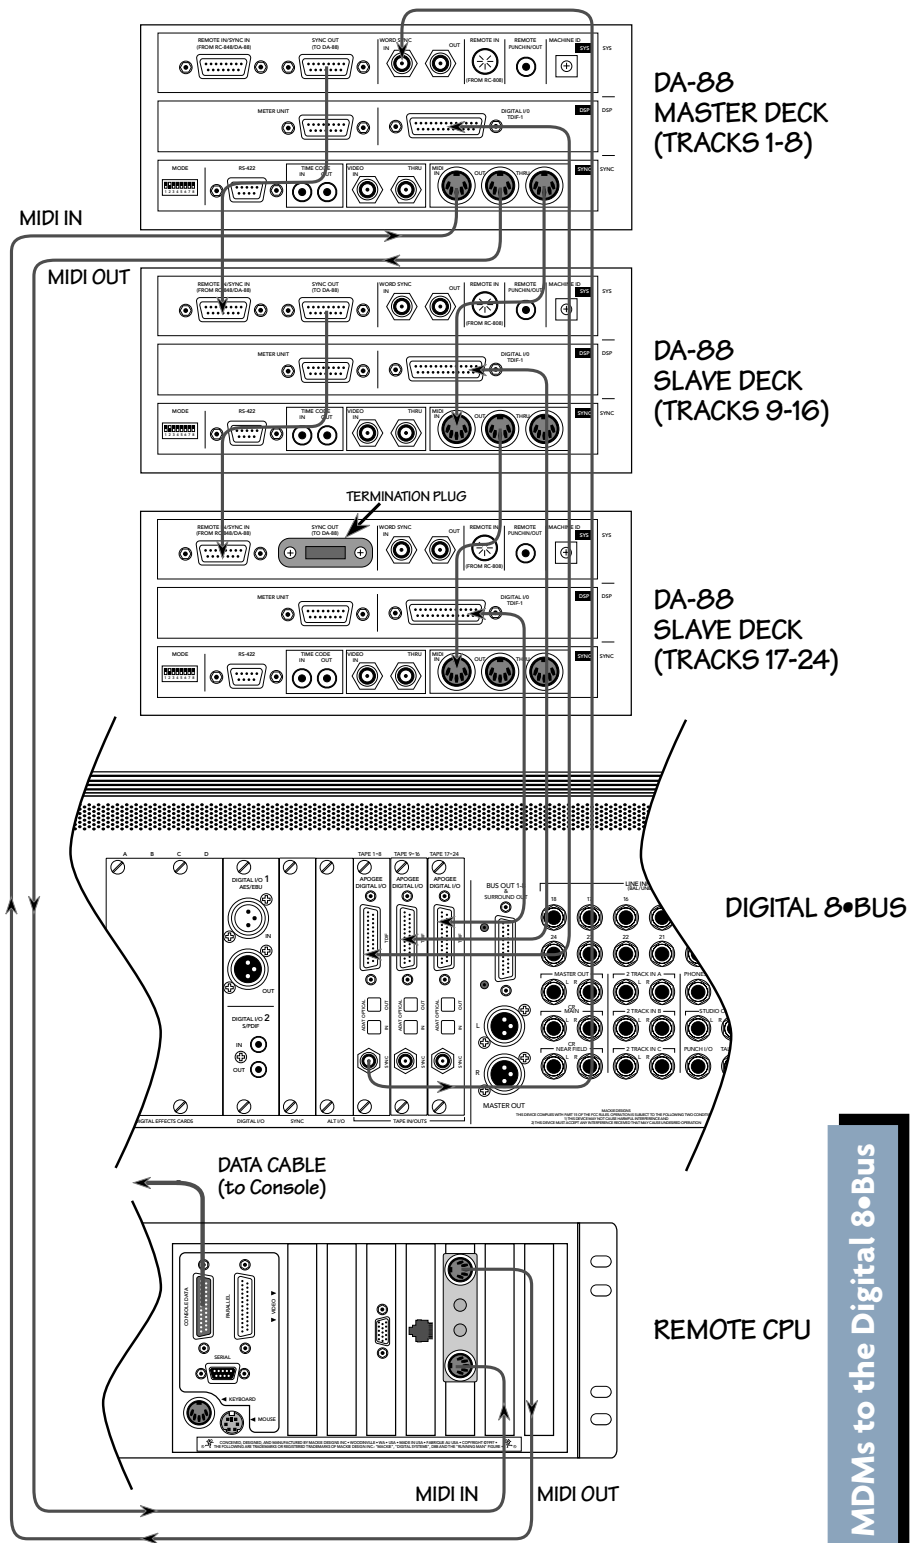

**Other Notes**

1. You *must* turn on the Digital 8•Bus first, then turn on the TASCAM recorders.
2. Make sure the MODE DIP switches on the SY-88 have the 2nd DIP switch in the up position and all the rest of the switches down. This selects the MIDI input.
3. The MMC-38 should have firm-ware version 1.05. The SY-88 should have firm-ware version 4.01. The DA-88 should have firm-ware version 4.01.

To determine the firm-ware version:

**MMC-38:** Internally marked on EPROM.

**DA-88:** Hold down the STOP/PLAY/REC buttons while powering up the DA-88 to display the DA-88 ROM version.

**SY-88:** Hold down the PLAY/REC/FF buttons while powering up the DA-88 to display the SY-88 ROM version.

4. If using any of the newer 24-bit DTRS machines, you should have version 2.1 EPROMs installed in the DIO•8 cards (DIO•8 cards shipped after 7/2000 have version 2.1 EPROMs installed). If the label on the socketed IC (located on the bottom left corner of the DIO•8 card, near the edge connector) has anything but "v2.1" printed on it, you should get the free upgrade by contacting our parts department at 800-258-6883.

Connecting TASCAM MDMs to the Digital 8•Bus

## Digital Audio Workstation Setup

Connecting the Digital 8•Bus to a Digital Audio Workstation (Digital Performer, Studio Vision Pro, Cakewalk Pro, etc.) shares considerations with the ADAT and TASCAM hookups. Word clock synchronization must be addressed; the master and slaves must be established; the clock rate must be consistent throughout; and the audio path into the console must be intelligently configured.

**Note:** A Pro Tools system works best when referenced to Superclock sync source, or when connected to a PDI•8 card through AES/EBU with SRC engaged.

Let's consider a common computer-based setup utilizing:

- A combination digital audio/MIDI software package
- A MIDI interface
- A digital audio interface with lightpipe audio connections

### Cabling and Hookup

1. Connect the Digital 8•Bus lightpipe output, from the DIO•8 or OPT•8 card, to the digital audio interface lightpipe input. Likewise, connect the lightpipe output from the digital audio interface to the D8Bs lightpipe input.
2. Connect the digital audio interface to the computer per the manufacturer's specifications.

### Settings

#### D8B


1. Open the Setup window.
2. Click "Digital I/O" to open the Digital I/O dialog box.
3. Click each Tape Input and Output box and select the appropriate setting for each card installed.




4. Set the Digital 8•Bus "Samplerate" to match the computer's sample rate (typically 48kHz or 44.1kHz). Selecting "Internal" in the Apogee Clock pull-down establishes the D8B as the master. Everything else in the digital chain must be capable of slaving to the Digital 8•Bus.

#### DAW

1. Set the digital audio interface to follow ADAT optical at the interface input (from the D8B lightpipe output).
2. Connect the DAW's MIDI/digital audio interface to the Digital 8•Bus inputs and outputs.

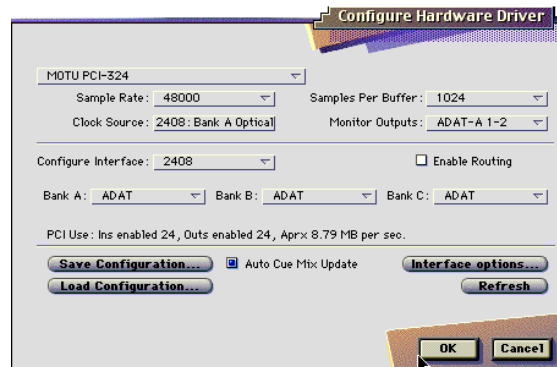

**Note:** Be sure to turn on the D8B before any of the other digital components. In addition, if your setup uses TDIF connections, refer to the previous setup scenario for TASCAM-specific settings.

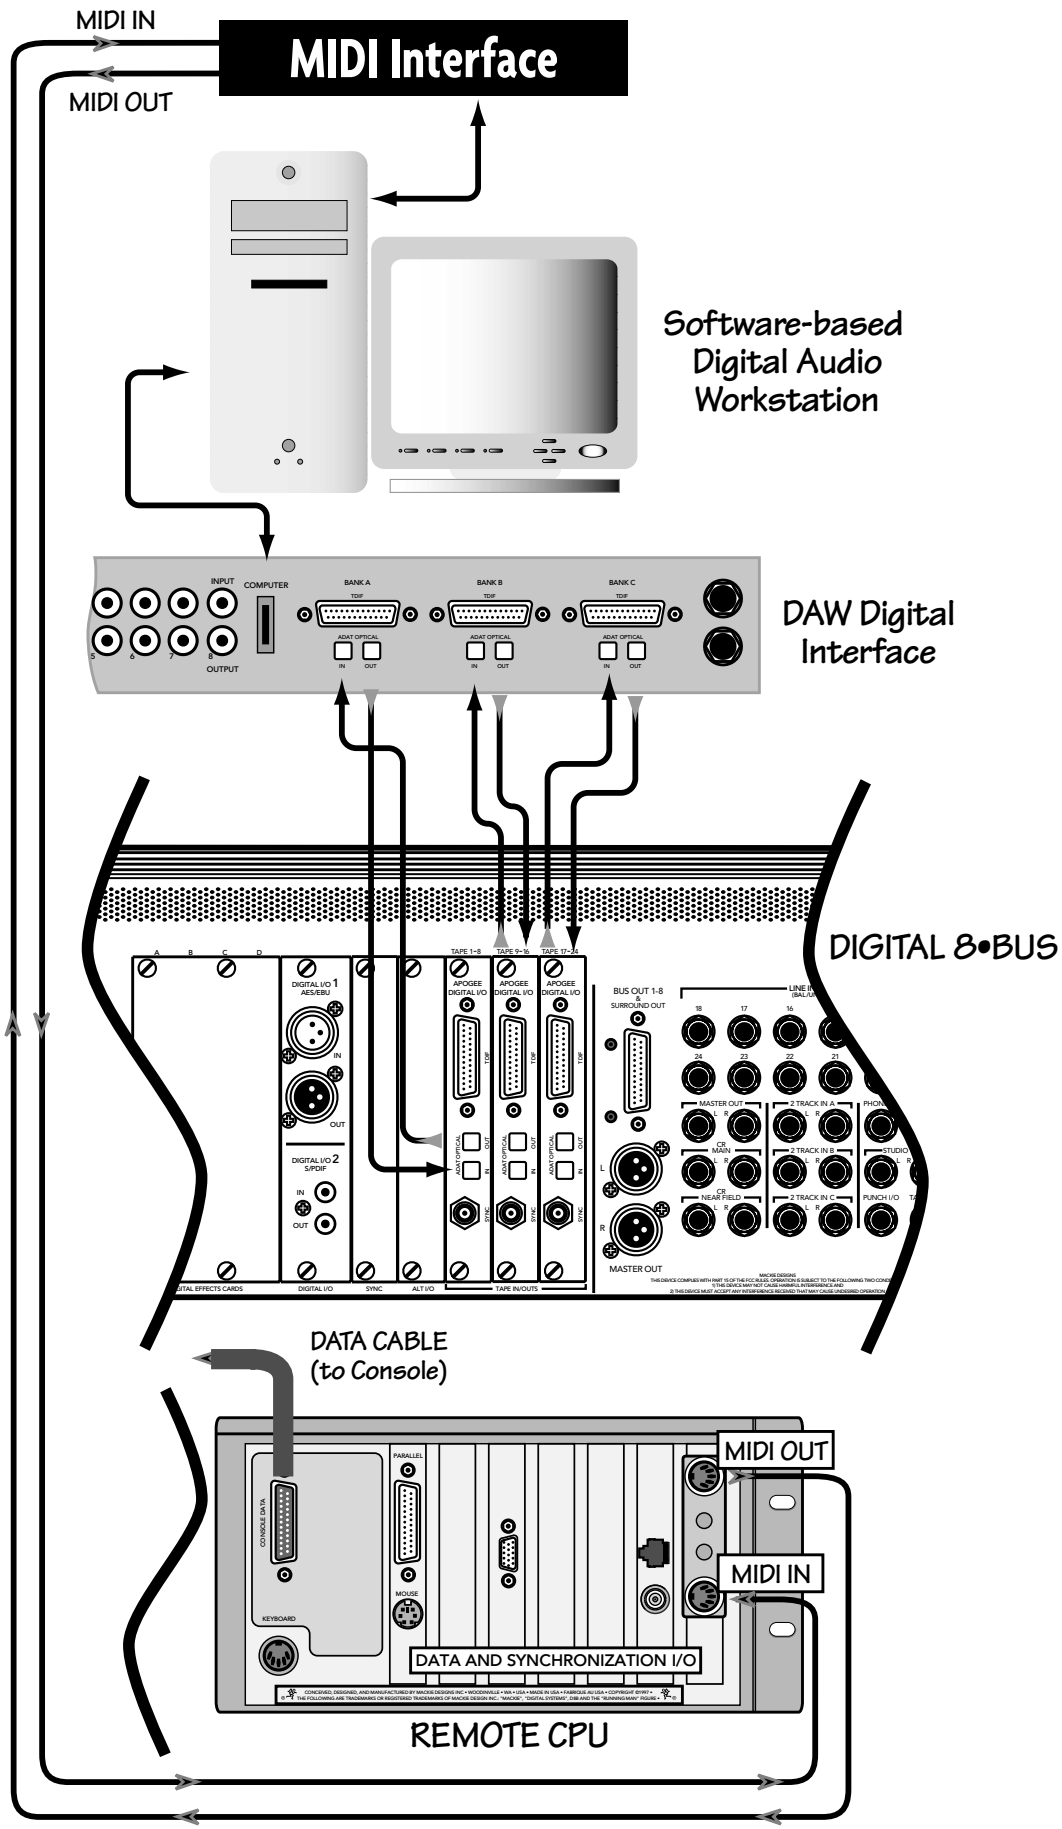

Connecting the Digital 8•Bus to a Digital Audio Workstation

## Live Sound/Live Recording Setup

In a live sound/recording application the console fader banks are chained together to form one large console. With the addition of up to 24 more mic preamplifiers, the tape inputs can be used to receive signal from any mic-level or line-level source.

The setups for live concert recording and live sound are similar. Each involves mixing everything as you go—moving faders, or setting and selecting snapshots. Whereas the live concert mix sends the final audio to the monitors and house sound system, the live recording mix sends the final audio to the 2-track recorder and the headphones.

Follow this simple procedure to set up for a live session.

- Power amps off**
- Console power on**
- Select a starting snapshot**
- Turn Master Fader down**
- Connect all mics and instruments**
- Setup sample clock**
- Power amps on**
- Select Mic/Line fader bank**
- Press Mic button on channels using microphone inputs**
- Set Pre-Fader auxes in Setup Window for monitor use**
- Test each instrument and mic to verify level at console input meter**
- Adjust input trim for a reading around 15 on the meter**
- Press L/R in the ASSIGNMENT section to confirm Assign lights on for all desired channels. Or, look on-screen to verify all channels have L/R button highlighted in Bus Assign section**

---

**Live Application Tip #1:** Buses 1–8 don't sum to L/R Mix internally. Therefore, to utilize buses as masters, route the bus (sub) out the Alt I/O then back into any channel or Alt I/O input. Or, simply use the virtual groups as level and mute masters.

---


- Set Master Fader to Unity position**
- Turn channel faders up to hear instrument or mic.**
- Once the appropriate level is achieved, press the channel mute button.**

- Set up a quick mix using level, pan, EQ, dynamics, effects**
- Adjust mix to the cue (headphone) buses.**
- Store and label snapshot(s)**

---

**Live Application Tip #2:** Don't forget the Snapshot filters. If you find a parameter setting that you want to keep throughout the performance (EQ, plugin, compressor, etc.), simply filter that parameter out of your saved set of snapshots. All your changes will still happen on cue as you scroll through snapshots, but your updated parameters will remain constant.

---

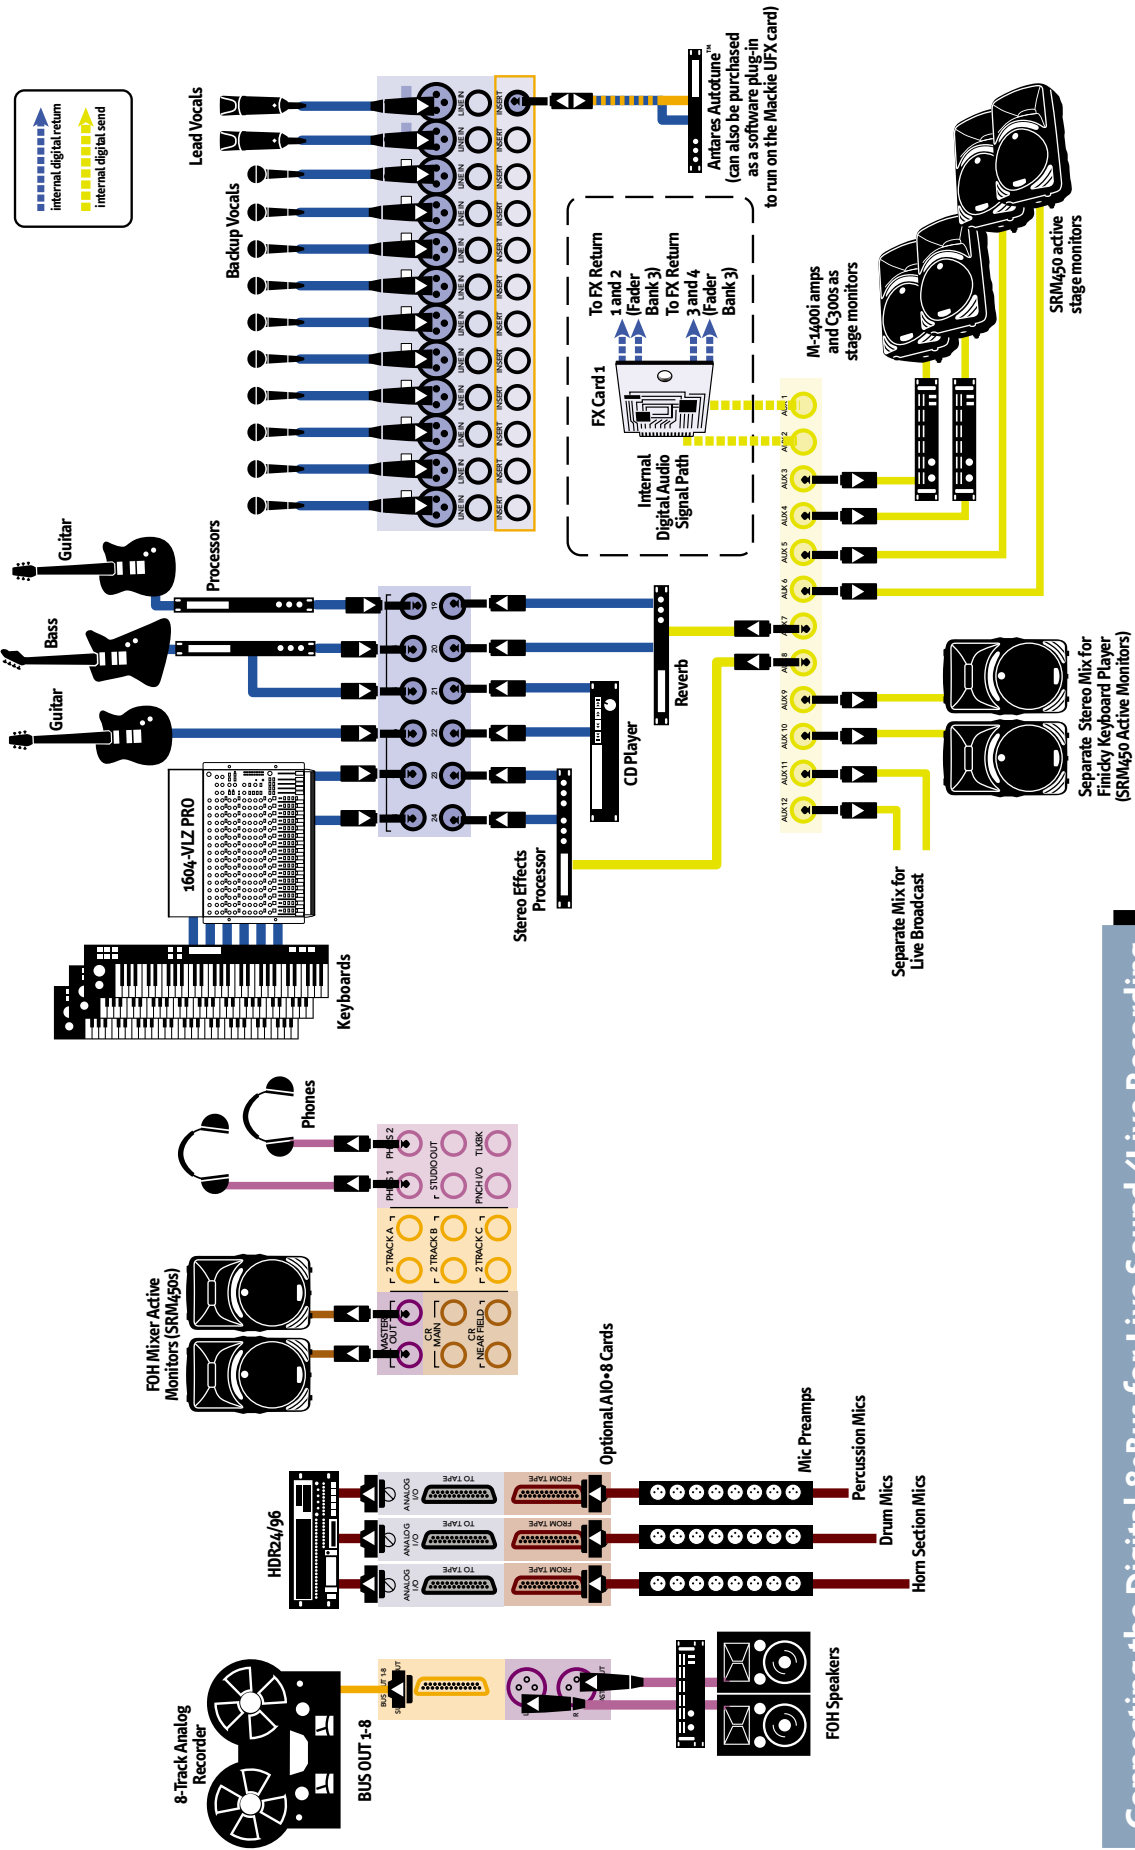

**Connecting the Digital 8•Bus for Live Sound/Live Recording**

## Post-Production Setup

The Digital 8•Bus is an amazing tool, no matter what the setup. However, the more complex the setup, the more amazing the D8B becomes. Post-production provides potential for any tracks, effects, snapshots, automation moves, and general madness mayhem.

Most post-production facilities use house sync to lock all video equipment together. The same piece of gear that generates house sync can provide the D8B and all connected audio gear with the necessary word clock to get everything functioning properly together.

In order for the D8B to follow external word clock, an Apogee Clock I/O card is required. With the Clock I/O card installed, the available sample clock options increase. The D8B will slave to most any clock source from 32kHz to 48kHz.

This is also the type of setup that might be found in a home studio that incorporates a central sync generator.

## Bouncing/Summing Using Bus Outs

You may find that you need to free up some more tracks to get everything to fit. You can do a submix and combine several tracks into one (or two) using the BUS 1–8 Submasters.

Maybe you have six separate tracks for the kick drum, snare drum, cymbals left, cymbals right, tom 1, and tom 2. You can free up five extra tracks by bouncing these down to one track, or free up four extra tracks if you want to bounce them down to a stereo pair of tracks.

The following steps show an example of how to bounce tracks 1–6 down to tracks 7 and 8 by using Bus 1 and 2. By using Buses 1 and 2, whatever pan positioning you've set up is retained.

1. Select Fader Bank 2 by clicking the TAPE button next to the Master Fader.




2. Turn off the L-R assignments for channels 25–30 (tracks 1–6 returns). Turn off the L-R assignments for any other channels you don't want to monitor while bouncing down.

3. Click and hold on the “1” button at the top of channel 1. Sweep across to channel 6 to assign channels 1–6 to Bus 1.
4. Click and hold on the “2” button at the top of channel 6. Sweep across to channel 1 to assign channels 1–6 to Bus 2.



5. Click the MASTERS button next to the Master Fader to select Fader Bank 4.
6. Click and hold on the OUT box at the top of BUS 1 (channel 89). Drag down to “Tape Out 7” to assign Bus 1 to the multitrack record device track number 7.

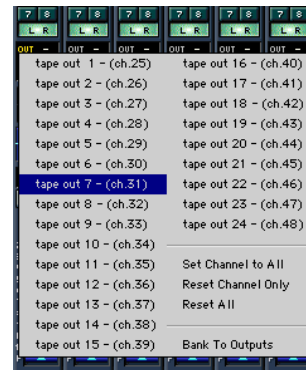

7. Click and hold on the OUT box at the top of BUS 2 (channel 90). Drag down to “Tape Out 8” to assign Bus 2 to the multitrack record device track number 8.
8. On the recording device, select record ready on the tracks 7 and 8.
9. Play the song while recording tracks onto the multitrack.
10. With the original 6 channels muted, monitor the bounced track on the D8B TAPE IN bank (channels 31 and 32).

## Using Basic Automation

### What Type of Data Can Be Automated

Virtually all of the D8B channel parameters are available for automation. However, there are a few exceptions—some obvious and some not so obvious. All D8B channel parameters can be automated except:

- Analog Trims on channels 1–12
- Tape Output selection
- Pre and Post insert selections
- Plug-in Configuration selections—even though plug-in parameters can be automated
- Channel reconfigurations

### Two Types of Automation

Automation moves are divided into two basic types: **snapshot and dynamic**. Snapshot automation makes it possible to instantly reset all automated console settings to a predetermined fixed (static) position with a single command (snapshot recall). Dynamic automation allows you to record and play back any parameter changes, like fader positions or mute toggles, in real time while locked into time code.

The Digital 8•Bus is powered by Mackie's Real Time OS™ automation software. Upon initial power-up, the console Automation Section is bypassed.

#### Snapshot Automation

As described in Chapters 2 and 3 of this manual, snapshots are simple and painless to store on the D8B.

Snapshot automation refers to simply scrolling through various snapshots at the appropriate time and place. (Recalling snapshots in the proper order and position can be accomplished through connection to a MIDI sequencer, or by placing snapshot events in the Event Automation Track.)

Your MIDI sequencer sees a snapshot selection as a simple patch change, which can be recorded as part of the same sequence that might contain all or a portion of your music.

- Set the sequencer to receive and record MIDI patch change data from the D8B MIDI channel and cable.
- Select "MIDI Snapshots" in the Setup>Mix Options window.
- Run the sequence with the D8B receiving MTC from the sequencer.
- Place the sequencer in record mode on the D8B channel as you scroll through snapshots. Each of these snapshot changes record into the sequence.
- Play the sequence back with the D8B receiving MIDI playback at its MIDI input.
- Snapshots will playback in the same time and order that you selected them.

- To fine-tune snapshot placement, open the sequence track and adjust the time position in the MIDI sequence.

#### Dynamic Automation

Dynamic automation is a function of the D8B automation system. The power and flexibility offered by the D8B is awesome. This one tool can revolutionize the way you do music.

Each new automation pass helps mold and shape the music into a brilliant work of art. Dynamic automation involves real-time crafting of the mix with the assistance of a computer processor.

#### Where Do I Start?

Automation is somewhat intimidating at first. Fortunately, it doesn't need to be. The power, flexibility, and ease of use provided by the Mackie designers makes the D8B painless and intuitive.

If you've used other automation systems, you have a definite advantage. The concepts involved, as they apply to the D8B, are similar to most automation systems. The advantage the D8B offers over most other automation systems is its mind-boggling ability to automate virtually every parameter on the console.

The following is a step-by-step, streamlined procedure to help get you automating. To clarify terminology and basic layout, refer to Chapter 2 of this manual.

#### Automation In Bypass

- Begin by setting up a basic mix with automation off. Select BYPASS in the Automation section of the control surface in the Options/Automation window, or in the on-screen Locator window.

#### Clear Automation

- To avoid errant data, select all channels and clear all types of automation data.
- Select Mic/Line bank, then Select All (Control+A).
- Select Fader bank, then Select All (Control+A).
- Select Effects bank, then Select All (Control+A).
- Select Masters bank, then Select All (Control+A).
- Choose Clear Automation... from the Edit Menu. Check all types of data, then OK.

#### Save Session As...

- Name your Mixes in a manner that is easy to reference consecutive revisions: For example, "BigBadBob Mix 1," or "BigBadBob rev 1.0."
- Using "rev 1.x," "rev 2.x," etc. provides an easy way to indicate major conceptual changes (1.0, 2.0, 3.0, etc.) from minor refinements (1.0, 1.1, 1.2, etc.)

#### Setup Rough Mix

- Build the basic sound of the mix. Include fundamental EQ, Pan, Surround, Dynamics, Groups, etc.
- Save frequently, or set the D8B for SMART SAVES at regular intervals.

## Save Snapshot For Safety

As you build the mix, save snapshots as soon as the music begins to reveal itself. Label the snapshots for your own reference. Sometimes these basic mixes, which are derived from your initial “gut” reaction to the music, are the most powerful.

Basic dynamic automation does not require these snapshot saves, but they’re often useful as the mix comes together, even if only as a cross-reference. If you develop a string of snapshots that are very powerful, they can be strung together during automation. However, the procedure we’re outlining here highlights dynamic automation.

## Time Code From Playback Device

### Route MTC

The D8B requires MIDI Time Code (MTC) at the MIDI input to operate automation along with the record/playback device.

- Connect the MIDI output of your computer, sequencers, MIDI interface, or transport control to the MIDI input of the D8B.
- Most sequencers or other record/playback devices that transmit MTC need to be configured to route to a specific MIDI channel, cable, or device. Consult your MTC source operator’s manual to confirm accurate and verifiable routing to the D8B.

### Verify MTC at D8B Transport SMPTE Window

- When your sequencer or other record/playback device is running and MTC is transmitted, the D8B control surface position readout window will scroll MTC. You will see a continuous increase of Hours, Minutes, Seconds, and Frames. If you see this scrolling time code in the D8B POSITION display, it’s almost automation time!
- MTC also displays in the on-screen Locator window.
- If SMPTE VIEW is not selected, the readout will display Bars/Beats/Ticks (BBT). Press the SMPTE VIEW button at the left of the control surface readout to toggle between SMPTE and BBT.

## Set Default Levels...

Once your ducks are in a row, you’re ready to begin the automation process! The Set Default Levels...” command determines the starting point for the entire mix. Fader levels can be written from the beginning of time code (00:00:00:00) to the end (23:59:59:30).

If you don’t set default levels to your preference, levels will jump to any previously selected automation settings as soon as MTC begins. This can be very frustrating, but if you’ve religiously saved snapshots of your mix status, you won’t be far from repair.

- Determine that your mix is solid enough that you’d like to have all parameters written as defaults. Don’t get too freaked out about this—

you’ll be tweaking the mix to perfection anyway.

- Verify that all channels are selected by choosing each of the four fader banks and confirming that all SELECT buttons are highlighted.
- Select Set Default Levels... from the Edit Menu.
- Respond “Yes” to complete the task.
- If you need to recall your static mix at any point, you can save or update snapshots at any time.

### Exit Bypass Mode

Once the default levels have been set, it’s time to exit BYPASS mode. From this point on, any parameter change can be written into automation.

### Select Parameters

Choose the parameters you’d like to record as automation data on the first pass. This is typically a great time to ride basic fader, mute, and pan settings. However, there is no problem with selecting Faders, Mutes, Pan, and ALL so no matter what moves you make, they can be recorded and recalled by the automation processor.

### Any Combination of Faders, Mutes, and Pans on First Pass

- Choose automation parameters by selecting them in the control surface AUTOMATION section, in the on-screen locator window, or the Options/Automation menu.
- The D8B shows no favoritism to any or all parameter writing during automation. You’ll discover the process that works best for you.

---

**Note:** Faders, Mutes, and Pan all apply individually to the one parameter they name. ALL applies to all automation parameters other than Faders, Mutes, and Pan.

**Safety Net:** You can undo any automation record pass or series of record passes using the History List. You can also redo your undo. Or undo your redo. Or undo your hairdo.

---

## Auto Touch Mode

Auto Touch mode offers great flexibility and ease of use. When AUTO TOUCH is selected, automation data is recorded instantaneously for any parameter as soon as you change its setting.

Select AUTO TOUCH by highlighting the control surface AUTO TOUCH button, clicking AUTO TOUCH in the on-screen Locator window, or selecting Auto Touch in the Options/Automation menu.

You’ll know you’ve succeeded in writing automation data when you see the yellow light illuminate the control surface WRITE button or the on-screen channel WRITE icon.

### Start playback device

- Verify MTC in the Locator position readout.
- Verify selection of desired automation parameters—for now select FADERS, MUTES, PAN, and ALL.



### Move a channel fader

- As soon as the fader moves, the WRITE button illuminates, indicating automation data is being recorded.

### Exit Record and Rewind to Beginning of Track

- Stop playback or press the WRITE button on the active channels to exit automation record mode. Rewind playback/Record device to the beginning of the automation pass.

### Start Playback from Beginning of Track

- If you've followed these directions thoroughly you'll see the fader move that you recorded playback automatically.
- Welcome to the wonderful world of D8B automation!

### Repeat this Action for More Parameters

- Be sure you've selected the desired parameter before attempting the automation pass.
- Each time you perform a new automation pass, new data combines with the old in a seamless manner. Continue building the mix until everything is just right.

---

**Note:** Auto Touch mode does not require any channel selection for automation to record! Simply move virtually any parameter on any channel to activate the record status for that channel on that automation parameter.

---

## Write Ready Mode

It's possible to build an entire mix using Auto Touch mode. It is easy to use, easy to build on, and it offers incredible creative flexibility. However, there are instances where Write Ready mode provides the perfect mode for a particular task.

Write Ready Mode is very useful when several channels must be placed into automation record mode at the same time.

### Toggle the AUTO TOUCH button off

#### Activate the Desired Automation Parameters

- Engage FADERS, MUTES, PAN, and/or ALL in the same manner as previously described.

#### Select Write Ready Mode

- This option is located in the Setup>Mix Options window as "Use Write Ready" and in the Options/Automation Menu as "Write Ready Mode."
- In this mode, the Transport RECORD button is necessary for completing an automation pass.

#### Press WRITE on All Desired Automation Channels

- The yellow light or icon blinks, indicating record-ready status.

#### Start the Playback Device

- Even when the playback device starts, the automation system remains in ready status (yellow lights blinking) until the RECORD button is pressed in the control surface Transport section or the on-screen Locator window.

### Press the D8B Record Button

- Press the RECORD button on the control surface in the transport control section or in the on-screen Locator window.
- Once record status has been achieved, the blinking yellow lights remain solid until the transport stops or the WRITE button is pressed.
- For the write-ready channels, fader, mute, and pan automation data is written as soon as record is pressed.
- For all other parameters (other than fader, mute, and pan), even though RECORD is pressed, automation data isn't actually recorded until a parameter change is made.

---

**Note:** Operation characteristics of the Transport RECORD button are determined by the settings in the Setup>Mix Options window. Select "One Button Punch" to enable record status by simply pressing the RECORD button alone. If "One Button Punch" is not selected you must hold PLAY while pressing RECORD to enter record mode. Press Play or Stop to punch out of record.

---

### Exit Record and Rewind to Beginning of Track

#### Start Playback from Beginning of Track

#### Repeat this Action for More Parameters

#### Write Punch-in Mode

This mode functions in a very similar fashion to Write Ready mode. However, in this mode the Transport RECORD button is not needed.

#### Exit AUTO TOUCH Mode

#### Deselect Write Ready Mode

- This option is available in the Setup>Mix Options Menu and in the Setup>Mix Options window

#### Start Playback Device, then Press the Write

#### Button(s) on the Desired Channels

- In this mode, pressing the channel WRITE buttons immediately places the channels into automation record mode.
- Pressing an active WRITE button (yellow light solidly on) immediately punches out of automation record mode for that channel.

#### Adjust Automation Parameters on the WRITE-

#### Enabled Channels

- It's always important to verify the correct selection of intended automation parameters.

### Exit Record and Rewind to Beginning of Track

#### Start Playback from Beginning of Track

#### Repeat this Action for More Parameters

## Trim Levels

This mode is perfect for updating sections of a mix. If you've worked and toiled over a track throughout a mix, adjusting the levels frequently, try TRIM mode. This valuable mode simply adds or subtracts the same amount from a previously adjusted automation track. For example, when used for faders, all moves are maintained but the overall volume changes.

## Automation Procedural Checklists

### Press TRIM LEVELS

- Press TRIM LEVELS in the control surface Automation section, on-screen Locator window, or in the Options>Automation menu. Notice that the faders all snap to unity position.

### Choose Automation Mode

Even though TRIM LEVELS is selected and the faders all move to unity position, the fader automation data is still retained, and is indicated in the meter bars next to the faders (unless Show Meters In Trim Mode is selected under Options/Meters).

### Use Channel Faders to Boost or Cut Previously

#### Automated Channel Data

- The faders automatically set at unity so they can be easily used to boost or cut the previously adjusted track content.
- This is an excellent mode to globally adjust channel levels.
- Simply raise or lower the fader level to boost or cut the sum of your previous adjustments for the selected channel.

### Auto Touch, Write Punch-in, and Write Ready

#### Modes Function in TRIM mode, also

#### Automate EQ, Dynamics, and Effects

Automation of EQ, dynamics, and effects is simple.

- Select automation mode (ALL).
- Start the playback/record device.
- Activate automation record command.
- Make changes.

In order for these parameters to record, ALL must be selected in the control surface AUTOMATION section, on-screen Locator window, or in the Options/Automation window.

#### Editing Automation

Once automation has been recorded on the D8B, it can be edited in the Mix Editor. However, you may want to rerecord a section of automation for one or more channels or parameters. The D8Bs automation engine allows several methods to rerecord automation. The following table describes these methods and the differences between each.

Punching Automation			
Auto Touch	Channel Punch Run	Channel Write Button	Action
off	off	off	No Automation is recorded
off	off	ON	All parameters Punch In according to automation filter settings
off	ON	off	No Automation is recorded
off	ON	ON	All parameters Punch In according to automation filter settings
ON	off	off	Punch only the parameter that moves according to automation filter settings
ON	off	ON	Punch Faders, Mutes, and Pans, according to automation filter settings; everything else punches as Auto Touch (if automation filter ALL is enabled)
ON	ON	off	Punch only the parameter that moves according to automation filter settings but no automation is recalled during playback (punch run)
ON	ON	ON	Punch Faders, Mutes, and Pans, according to automation filter settings; everything else punches as Auto Touch (if automation filter ALL is enabled) but no automation is recalled during playback (punch run)

### Automation Start-up Procedure

- Automation In Bypass
- Clear Automation
- Save Session As...
- Set Up Rough Mix
- Save Snapshot For Safety
- Route Time Code (MTC) From Playback Device to D8B MIDI Input
- Verify MTC at D8B Transport SMPTE Window
- Set Default Levels...
- Exit Bypass Mode
- Select Parameters
- Any Combination of Faders, Mutes, Pans, and All

### Auto Touch Summary Checklist

- Enter Auto Touch Mode
- Start Playback Device
- Move a Channel Fader
- Exit Record and Rewind to Beginning of Track
- Start Playback from Beginning of Track
- Repeat this Action for More Parameters

### Write Ready Summary Checklist

- Exit the AUTO TOUCH and/or TRIM LEVELS Mode
- Activate the Desired Automation Parameters
- Select Write Ready mode in Options>Automation
- Press WRITE on All Desired Automation Channels
- Start the Playback Device
- Press the D8B Record Button
- Adjust faders, mutes, or any selected parameters on the WRITE enabled channels
- Exit Record and Rewind to Beginning of Track
- Start Playback from Beginning of Track
- Repeat this Action for more channels and Parameters

### Write Punch-in Summary Checklist

- Exit AUTO TOUCH and/or TRIM LEVELS Mode
- Exit Write Ready mode in the Options>Automation Menu
- Start Playback/Record Device and Verify MTC
- Press the Write Button(s) on the Desired Channels
- Adjust Automation Parameters on the WRITE-Enabled Channels
- Exit Record and Rewind to Beginning of Track
- Start Playback from Beginning of Track
- Repeat this Action for More Parameters

### Trim Levels Summary Checklist

- Press TRIM LEVELS
- Choose Automation Mode (All Modes Function as Expected)
- Start Playback/Record Device and Verify MTC
- Use Channel Faders to Boost or Cut Previously Automated Channel Data
- Exit Record and Rewind to Beginning of Track
- Start Playback from Beginning of Track
- Repeat this Action for More Parameters
- Exit Trim Levels to Return Faders to Normal Mode

# Appendices

# Appendix A

## Service

### Warranty Service

Details concerning Warranty Service are spelled out on the Warranty Card included with your console (if the card is missing, let us know and we'll rush one to you).

If you think your console has a problem, please do everything you can to confirm it before calling for service, including reading through the Troubleshooting section of this owner's manual. Doing so might save you from deprivation of your console and the associated suffering.

Of all Mackie products returned for service (which is hardly any at all), roughly 50% are coded "CND" — Could Not Duplicate, which usually means the problem lay somewhere else in the system.

### Repair

Service for the U.S. versions of our digital consoles is available only from our factory, located in sunny Woodinville, Washington. (Service for products living outside the United States can be obtained through local dealers or distributors.) If your console needs service, follow these instructions:

1. Review the troubleshooting suggestions in your owner's manual (see next section). Please.
2. Call Tech Support at 1-800-258-6883, 7am to 5pm PST, to explain the problem and request an RA (Return Authorization) number. Have your Digital 8•Bus (or Remote CPU) serial number(s) ready. You must have an RA number before you can obtain service at the factory.
3. Set aside the power cord, owner's manual, or anything else that you'll ever want to see again. We are responsible only for the return of the product being repaired.

4. Pack the product in its original package, including the foam end caps and the upper tray. This is **VERY IMPORTANT**. When you call for the RA number, please let Tech Support know if you need new packaging. Mackie is not responsible for any damage that occurs due to non-factory packaging.
5. Include a legible note stating your name, shipping address (no P.O. boxes), daytime phone number, RA number, and a detailed description of the problem, including how we can duplicate it.
6. Write the RA number in **BIG PRINT** on top of the box. It must appear on the outside of the box.
7. Ship the product to us. We suggest insurance for all forms of cartage. Ship to this address (unless told differently by your friendly Tech Support person):

Mackie Designs  
SERVICE DEPT.  
16220 Wood-Red Rd. NE  
Woodinville, WA 98072

8. We'll try to fix the product in three to five business days. Ask Tech Support for current turnaround times when you call for your RA number. We normally send everything back prepaid using three-day shipping. However, if you rush your product to us by next-day air, we'll treat it in kind by shipping it back the same way in which it was received. This paragraph does not necessarily apply to non-warranty service.

### Need Help?

You can reach a technical support representative  
Monday through Friday  
from 7 am to 5 pm PST at:

1-800-258-6883

After hours, visit [www.mackie.com](http://www.mackie.com) and click **Support**,  
or email us at: [techmail@mackie.com](mailto:techmail@mackie.com).

# Troubleshooting Guide

## Three Things to Keep in Mind

As you become familiar with the Digital 8•Bus, you'll find it helpful to keep these three questions in mind at all times:

1. *What Fader Bank is selected?*
2. *What channel is selected?*
3. *What is the V-Pot assignment?*

In 90% of the cases, if something isn't working as you expect it should, it's because one of these three settings isn't where you intend it to be.

### No power!

- Our favorite question: Is it plugged in? Make sure the power cord is securely seated in the IEC socket and plugged all the way into the AC outlet.
- Our next favorite question: Is the POWER switch on? If not, try turning it on.
- Is the Fat Channel Display working? If not, make sure the AC outlet is live (check with a tester or lamp). If so, refer to "No Sound" below.
- Make sure the DC power cable is securely connected at the rear panel of the console.

### No Sound!

- Is the signal source working correctly, and properly connected to an input on the console?
- Is the TRIM control (channels 1–12) or the Digital Trim control (channels 1–48) turned all the way down?
- Is the MIC/LINE switch set to the correct position?
- Is the channel fader control turned up?
- Has the channel been assigned to an output bus in the Bus Assignment Section?
- Is the master level control for the selected output bus turned all the way down?
- Try soloing a channel and listen to the Control Room Outputs, or use headphones connected to the Phones Out (with Control Room selected in the Phones/Cue Mix Section). Make sure the Solo Level is turned up in the Studio/Solo Section, and the Control Room Level is turned up in the Control Room Section.

### Bad Sound

- Is the input connector plugged completely into the jack?
- Is it loud and distorted? Turn down the output level on the console.
- Are any of the meters hitting the "OL" mark? Try turning down the TRIM control (channels 1–12) or the Digital Trim control (channels 1–48). Or try turning down the signal source volume control.
- Solo the signal source and listen to it in the Control Room Output, or with headphones in the Phones output. Select PFL SOLO in the Studio/Solo Section. Make sure the SOLO LEVEL control is turned up in the Studio/Solo Section, and the Control Room LEVEL control is turned up in the Control Room Section. If the signal sounds bad with PFL SOLO selected, the problem lies somewhere before the channel fader, with the source itself or the input settings on the console. If the signal sounds okay, the problem lies somewhere after the channel fader, with the output settings or the amplifier/speaker combination after the console.

### Noise/Hum

- Check the signal cable between the console and the power amplifier. Make sure all connections are secure.
- Make sure signal cables are not routed near AC cables, power transformers (wall warts), or other EMI sources.
- Is there a light dimmer or other triac-based (SCR) device on the same AC circuit as the console? Use an AC line filter or plug the console (along with all other audio equipment) into a different AC circuit.
- If you're connecting an unbalanced source to the balanced input using an XLR or TRS connector, try disconnecting the unbalanced ground from pin 1 (XLR) or sleeve (TRS).

# Appendix B

## IVL Vocal Studio

## The Interface

### About the IVL Vocal Studio

The IVL Vocal Studio is a truly unique tool that offers natural sounding harmonies, wild vocal effects, and vocal utilities. You will hear that Vocal Studio can help you to quickly create killer vocal tracks. In order to get you excited—and for your general information—here is what's packed into IVL Vocal Studio:

- Formant-Preserving Pitch Shifting
- Intelligent Vocal Harmony (with four operating modes)
- Pitch Corrector
- Vocal Special Effects
- Integral Reverb Effect

### Technologies Used

**Formant-Preserving Pitch Shifting:** No chipmunks or Darth Vader here! With IVL's patented formant-preserving pitch shifting algorithm, the Vocal Studio uses precise analyzation techniques on the input voice to naturally shift it higher or lower.

**Pitch recognition:** IVL does more than just take a note and shift its pitch. The pitch shifting algorithm detects the exact pitch of the note in order to provide the most natural shifted sound.

**Intelligent Harmony:** The Vocal Studio has musical knowledge. It took lessons from some amazing musicians. By using different control modes, you can choose how much of this intelligence the Vocal Studio will use when creating your harmonies. By selecting the key and scale that the vocal passage is in, and with IVL Vocal Studio's pitch recognition, an intelligent harmony can be created with 1 to 4 voices.

**Voice Muting:** These buttons allow you to mute individual voices. When Voice Muting is ON, the audio signal passes through Vocal Studio's processing. When MUTE is selected, the audio signal is muted for that voice. The small number to the left of each button corresponds to the Harmony Ensemble voice that it affects.

---

**Note:** The Digital 8•Bus ships with one MFX (Mackie Effects) card installed. You can load it with either the Mackie Effects plug-in or the IVL Vocal Studio plug-in. The IVL Vocal Studio software will run in demonstration mode, where it times out after about 10 minutes of use. You must then download the plug-in to the card once again to activate it for another 10 minute session.

To authorize the IVL software plug-in, simply purchase and install a second MFX card into your Digital 8•Bus. Then you can download the Mackie Effects plug-in to one card, and the IVL Vocal Studio plug-in to the other card and use them both for as long as you like.



### Menu

Click this button to save and load your own presets, save changes made to an existing preset, rename a preset, copy current settings to the clipboard, and paste settings from the clipboard to any other Vocal Studio preset.

### On/Off

This button turns the IVL Vocal Studio on or off.

### Processing Mode

Use this button to select either Harmony or Pitch Correct mode.

**Harmony:** This button puts the IVL Vocal Studio into harmony mode, allowing 4 voices of harmony or doubled voices to be added to a mix.

**Pitch Correct:** This button puts the IVL Vocal Studio into pitch correct mode, allowing a vocal line to be nudged to the note your ear wants to hear.

### Output Mode



**Stereo:** This button selects two independent mono in/stereo out effects blocks. One effects block is used for pitch shifting, harmony, and doubling. The second effects block, assigned to a second aux send, is used for reverb. The input to the reverb effects block comes from a mix of its assigned aux send and

the output of the harmony effects block. Each effects block then returns its processed signal to an individual stereo return.



**Quad:** Selects mono in/quad out. Input from one auxiliary send is routed to the harmony processor. Four harmony voices are given discrete outputs to two stereo returns.

### Control Mode




**Manual:** Any notes played on a MIDI keyboard become the harmony parts. These parts will stay on the note assigned by the keyboard even when your voice shifts to a new pitch. Using pitch bend and/or a modulation wheel, realistic expression is introduced.

**SmartChord:** Chords played from a MIDI keyboard are interpreted by the Vocal Studio to create natural harmony parts that move in tandem with your voice.

**SmartKey:** Enter the key and scale once, at the beginning of a song, and the Vocal Studio automatically creates natural harmonies in real time. This mode produces the most common type of harmony in popular music.

**Pitch Shift:** Use this button to set a chromatic interval between the lead vocal and pitch-shifted voices to create true parallel melody lines. This is useful more for special effects than harmonies because our ear is tuned to the "moving third" interval that parallel (chromatic) harmonies don't provide.

### Edit—Harmony Ensemble

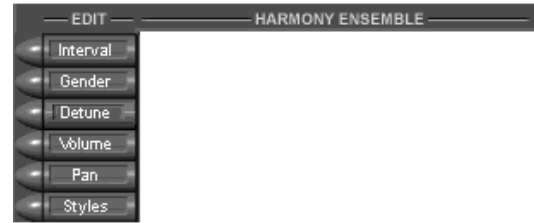

**Interval:** In SmartChord, SmartKey and Pitch Shift control modes, "Interval" determines how much higher or lower the harmony note is than the lead note. In SmartChord and Smart Key modes, the intervals are intelligent; that is, they will sharpen or flatten automatically to make the harmonies sound musically correct.

For Pitch Shift, the interval chosen is always in parallel with the lead, regardless of the key and scale.

**Gender:** The gender of each harmony voice can be changed to create mixed vocal ensembles without needing to see that special doctor in Sweden.

**Detune:** Who sings a perfect third? No one, really. "Detune" adjusts a harmony note's pitch to be slightly above or below the exact note it is creating.

**Volume:** Controls the level for each harmony voice.

**Pan:** Controls the stereo placement of each harmony voice.

**Styles:** Styles are preset modifiers you can use to add realism to the harmony voices.

**Timing:** This allows you to control the entries of the harmony parts, from 10 millisecond to random delays.


**Scoop:** This controls how a harmony part slides into each note. Do they bend up to it? How much do they bend?

**Vibrato:** This controls the amount of vibrato in your harmony parts.

**Envelope:** This control is used with the "Manual" control mode. When in "Manual" control mode, a MIDI keyboard is used to trigger harmony notes. The "Envelope" control adjusts the attack and release timing of the harmony MIDI notes. This can add bite or smooth out the manual harmony sound.

**Key/Scale:** When the SmartKey control mode is used, the key and type of scale of the song must be selected for the intelligent harmony to choose musically correct harmonies.

## Pitch Correct Mode

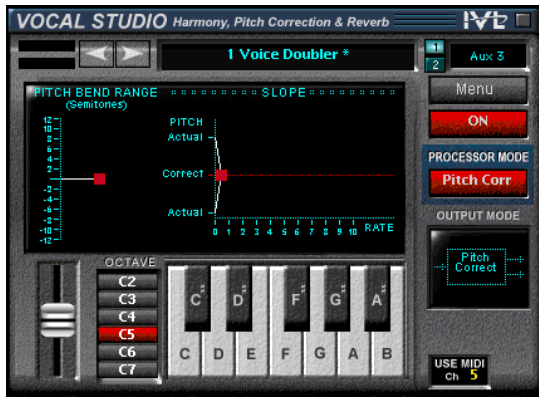

**Pitch Bender:** Use the bender to manually raise or lower the pitch of the shifted voices. This works just like a spring-loaded keyboard pitch bender.

**Pitch Bend Range:** The range parameter lets you set the maximum amount of pitch bend that can be applied to the vocal.

**Pitch Controller:** Use the keyboard to force the vocal to an exact pitch.

**Keyboard Octave Select:** Selects the octave that the keyboard represents.

**Slope:** Use this lovely window to set the transition rate between the original vocal sound and the pitch-corrected sound.

## Operation–Harmony

Harmony mode is used to create everything from harmonies to doubled voices. To make sure you are in Harmony mode, make sure it is selected.

### The Editing Parameters

The editing parameters are the tools that allow you to put some spice into your harmonies or doubled voices. Some of the editing parameters are used in all control modes, and others are specific to one control mode.

Parameter	Manual	SmartChord	SmartKey	PitchShift
Interval		yes	yes	yes
Gender	yes	yes	yes	yes
Detune	yes	yes	yes	yes
Volume	yes	yes	yes	yes
Pan	yes	yes	yes	yes
Styles	yes	yes	yes	yes
Envelope	yes			
Key/Scale			yes	

## Interval



Using the interval sliders, you can adjust the interval of each of the four harmony voices. Basically, “Interval” controls the voicing of the harmonies relative to your lead note. When in the SmartChord and SmartKey control modes, the interval settings are divided into seven coarse steps. Each step directs the voice in a different way. The following table describes the individual intervals in musical and nonmusical terms. Note that, although the descriptions for the SmartChord and SmartKey intervals are similar, SmartChord intervals follow the lead voice “loosely” and SmartKey intervals follow the lead voice’s every pitch movement.

Step	SmartChord non-musical description	SmartChord musical description	SmartKey non-musical description	SmartKey musical description
Bass	lowest	root of chord, octave down	lowest	octave below lead
Baritone	low	3rd of chord, in the octave down	low	3rd of chord, in the octave below
Tenor	just underneath lead	5th of chord, in the octave below	just underneath the lead	5th of chord, in the octave below
Unison	same as lead	unison	the same note as the lead	unison
Alto	just above lead	3rd of chord	just above the lead	intelligent 3rd
Mezzo	high	5th of chord	high	5th above lead
Soprano	highest	an octave above the root	highest	octave above lead

When using the Pitch Shift control mode, Interval works in a different, but simple way. Pitch Shift interval is set from –24 to +24 for each voice. Each digit corresponds to one semitone above or below the lead pitch. For example, –24 would be two octaves below the lead, +12 would be an octave above the lead. The intervals for Pitch Shift are represented with numbers as they are not “intelligent” intervals. Pitch Shift intervals are always a parallel distance away from the lead note no matter what the key and scale of the music.



## Gender



Using these sliders, you can adjust the gender of each of the four harmony voices. So, what is this gender thing?

gender (jen'der) m. **1.** The condition or quality of being of the male or female sex.

In IVL Vocal Studio, “Gender” will give your harmony voices distinct character. When the gender amount is set at 0 (in the middle) there is no gender effect applied to the harmony voice. As you lower the gender amount, more male qualities are introduced into the voice. As you raise the gender amount, more female qualities are introduced into the voice. This is the control that gets you that deep bottom end you have been undoubtedly waiting for.

## Detune



The detune sliders can be adjusted independently for each harmony voice. Detune is like a fine-tune adjustment on a keyboard. The detune amount ranges from -50 cents to +50 cents (50 cents is equal to 1 semitone). There is also a “normal” or “random” button located in the top-right corner of the detune window. When “normal” is selected, the detune amounts are fixed at their settings. With “random” selected, the detune amounts are randomly generated from 0 detune to the setting for each harmony voice. Detune is very useful for two different applications:

1. **Harmonies:** Detuning each harmony voice can create natural-sounding harmonies. In real life nobody sings perfectly in tune, so why should the IVL Vocal Studio have to?
2. **Doubling:** Detuning unison harmony voices can create the fattest of phat vocal sounds without singing a vocal line four times.

## Volume




These sliders provide individual level control over your voices. If you are in QUAD output mode, VOLUME edit will not be available; volume will be controlled via the four assigned aux return faders. If you are using the Vocal Studio in Stereo output mode you will want to mix your voices using the Vocal Studio volume controls.

## Pan



Now the sliders are going the other way! The pan controls are used to place your harmony voices in a stereo field. Just as with the volume controls, you will want to set your pan controls differently depending on which output mode you are using. When in QUAD output mode, PAN is not available to edit. Instead, you control the pan on their dedicated aux returns.

## Styles

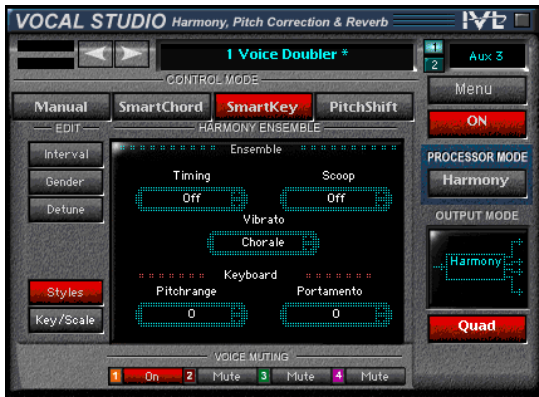

In “Styles,” you can create that extra amount of personality and realism for your harmony voices. Each style is controlled by a spin dial. Spin the dial up or down to change the parameter; all of the Style parameters are adjusted globally for each harmony voice.

**Timing** adjusts the entrances of the harmony voices. With “Timing” turned off, the harmony voices enter at the same time as the lead voice. Each timing parameter delays the harmony voices from the lead vocal. Just like tuning, no group of singers sings the notes at exactly the same time. The timing presets have been created using individual delays for each voice. Additionally, some time delay presets use randomization. Randomization randomly creates delay time for each voice from 0 delay to the delay time specified. The timing presets are listed below.

Number	Name	Delay	Randomization
0	Off	none	
1	Tight Mix	between 5 and 12ms	none
2	Medium Mix	between 10 and 32ms	none
3	Loose Mix	between 20 and 36ms	none
4	5ms + Rand.	Max. Delay of 5ms	per voice
5	10ms +Rand.	Max. Delay of 10ms	per voice
6	20ms +Rand.	Max. Delay of 20ms	per voice
7	30ms +Rand.	Max. Delay of 30ms	per voice
8	40ms +Rand.	Max. Delay of 40ms	per voice
9	50ms +Rand.	Max. Delay of 50ms	per voice
10	80ms +Rand.	Max. Delay of 80ms	per voice

**Scoop** adjusts how a voice attacks a note. Even professional singers never hit a note right on pitch. They hit their note slightly lower than the pitch they are aiming for and then “scoop” up to the correct note. The scoop presets are created using the amount of scoop (how far below the note) and how long it takes for the harmony voice to scoop to the actual note.

Number	Name	Description
0	Off	no scooping
1	The Pros#1	low amount, fast rate scooping
2	The Pros#2	high amount, medium-fast rate scooping
3	Semi Pro#1	low amount, medium-slow rate scooping
4	Semi Pro#2	high amount, slow rate scooping
5	Swoopy	low amount, very slow rate scooping

**Vibrato** adds another level of human quality to the harmony voices. The majority of singers use some amount of vibrato. Basically, Vibrato is like the modulation wheel on a keyboard, which modulates a harmony voice’s pitch by a small amount. The Vibrato presets are based on the amount of modulation, the rate of the modulation, and when the modulation starts.

Number	Name	Description
0	off	no vibrato
1	Light	low depth, medium rate with onset delay
2	Medium	medium depth, medium rate with onset delay
3	Heavy	high depth, medium rate with onset delay
4	Light & Fast	low depth, fast rate with onset delay
5	Med & Fast	medium depth, fast rate with onset delay
6	Heavy & Fast	heavy depth, fast rate with onset delay
7	Light & Slow	low depth, slow rate with onset delay
8	Med & Slow	medium depth, slow rate with onset delay
9	Heavy & Slow	high depth, slow rate with onset delay
10	Chorale	low depth, very slow rate with no onset delay

**Portamento** is used to limit the hard stepping between moving harmony notes. Portamento can add realism to the movement of harmonies. With Portamento, each harmony note slides into the next at a selected rate. The rates are selected with the Portamento spin dial from 0 (fastest) to 10 (slowest).

**PitchBend Range** sets the pitch bend range that can be applied to the harmony voices using a MIDI device. The pitch bend range can be set from 0 to 12 semitones.

**Key/Scale** is an edit mode used only in “SmartKey” mode. The use of Key/Scale is described farther on under the “SmartKey” section.

**Envelope** is used only in the “Manual” control mode. The use of “Envelope” is described in the “Manual” section on page E-6.

## The Harmony Control Modes

Harmony Control Modes determine the way in which harmonies are created. IVL Vocal Studio has four control modes. Each of these modes is tailored toward a different application. They can be categorized by two items:

1. Requires MIDI input: Using the D8B’s MIDI input, a keyboard or sequencer sends note information to the IVL Vocal Studio to create harmonies.
2. Intelligent Harmonies: IVL Vocal Studio uses intelligence to help create natural harmonies.

Action	Manual	Smart Chord	Smart Key	Pitch Shift
Requires MIDI Input	yes	yes	no	no
Use intelligent harmonies	no	yes	yes	no


## Manual

Because you can choose exactly which harmony notes you want, Manual mode is excellent for creating unusual harmony treatments. Where the SmartKey and SmartChord control modes follow the ascending and descending direction of your voice, Manual mode allows you to play a descending harmony line over an ascending melody line, for example. You can combine this aspect with the ability to play dense chord voicings with lots of sixths, sevenths, and ninth color notes to create harmony parts that are truly unique.

When using Manual or SmartChord modes (the keyboard control modes), you can save time by using a MIDI sequencer to play any or all of the instrumental parts in your composition. As there are often pad chords on a synth or piano track, these can also be used to trigger harmonies.

When you choose Manual mode in this situation, the harmony parts won't follow the melody lines you sing; they'll stay on the notes played on the instrument track. Because you'll probably want to add notes here and there to your control track, it's often a good idea to copy the instrument track to another open track in your sequencer and use the copy as your starting point.

In manual mode there is an editing parameter called "Envelope." You can use "Envelope" to shape the entrances and exits of harmony notes triggered through MIDI.

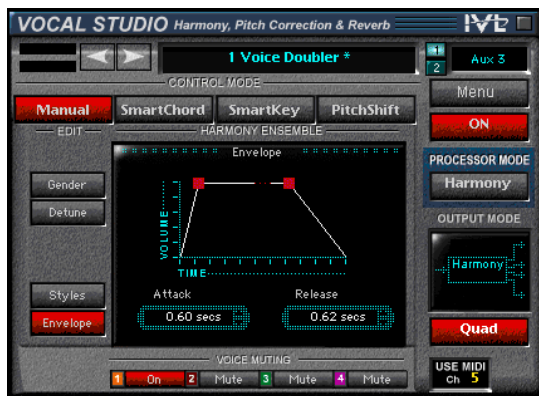

The graph in the Envelope window represents volume against time. Adjusting the Attack time with the spin dial will vary the slope on the leading edge of the graph. A shallow slope will fade-in the harmony notes after Vocal Studio is triggered through MIDI. Adjusting the release time will vary the slope on the trailing edge of the graph. A shallow slope will fade the harmony notes out after the MIDI trigger is released. Steep slopes will make instantaneous attacks and releases.

## SmartChord

SmartChord uses the intelligent harmonies of the Vocal Studio in conjunction with a MIDI keyboard hooked up to the D8B. On the keyboard, you would play the chords of a song in real time with the lead vocal. IVL Vocal Studio recognizes the chords and creates correct harmonies. SmartChord mode will follow the melody of your voice while staying musically related to the chords on the MIDI control track.

To get harmonies in SmartChord mode you first need to select intervals for one to four of the harmony voices. You can select the intervals from the "Interval" edit window. See the previous section on Intervals.

SmartChord mode, on the other hand, will follow the melody of your voice while staying musically related to the chords on the MIDI control track.

## SmartKey

With the right combination of input vocal melody and underlying chord structure, the SmartKey mode can produce harmonies that sound unbelievably real. When you have a song that has a simple chord structure like those found in country and blues, you can dial up SmartKey mode and be on your way to a killer harmony line in mere moments.

The "key" to making SmartKey work properly is to set the key and scale correctly. While it sounds like you'd need some music theory background to do this, don't despair—if you can lean over and tell a fellow musician what key you're going to play the next song in, you can set up SmartKey mode effectively.

Let's break it down into the two components of key and scale. Determining the key is easy; it's often the first chord in a song. However, some songs are in a different key than the first chord (such as "Sweet Home Alabama," which is in G but starts with a D chord). Scale can be either major or minor, and depends on the notes that make up the scale.



To select Key and Scale, you want to be in the Key/Scale Edit mode, shown above. Once in this editing window, Key is selected by clicking on a note on the piano. Select the scale using the spin dial above the piano keys.

### The Difference

**SmartKey** harmony usually requires you to enter the one key that works for a whole song. SmartKey harmonies will sound correct in many songs but not all, and this is why you have a choice between it and SmartChord. SmartKey harmonies are also more active in harmony motion.

**SmartChord** harmony requires you to input a different chord change for every chord in a song. They can be applied to almost any song you can play. This is the only practical difference between the two harmony types.

### Pitch Shift

This mode doesn't have the "smarts" that the other control modes do, so you're best to stay away from harmonies and use this for special effects and doubling (unless you actually want your harmonies to sound like Gregorian chants). You can produce some interesting spoken-word effects by muting your input voice and pitch-shifting a single effect voice down a few tones or even an octave. Combine this with a little male gender and you can get pretty close to a newscast voiceover. Subtle pitch shifts are better, though, for changing male to female and vice versa.

Pitch Shift mode is also handy for unison or octave-doubling effects. Turn on all four voices and place the interval settings in the middle. If you add detuning and a bit of scoop style, this will thicken up your vocal as if you had quadruple-tracked your voice. You can also take one or two of the effect voices and put them in octave positions for interesting effects, too.

### Reverb

When any of the harmony modes are being used, you can also add a reverb harmony effect. However, to engage the reverb harmony effect you must be in Stereo Output mode. This sends your harmonies to one set of stereo returns on your D8B, and your reverb to another set of stereo returns. Reverb can be very useful in placing your harmonies deeper in your mix.

## Operation—Pitch Correction Mode

To make sure you are in Pitch Correction mode select "Pitch Correct" from the Vocal Studio screen.

### What is Pitch Corrector Mode?

Everyone mixing vocals has experienced out-of-tune vocal tracks. Typically, there hasn't been much at your finger tips to fix those nasty notes. Some lucky folks have been able to invest thousands of dollars in computer editing suites to do pitch correction. IVL Vocal Studio gives a simple yet effective pitch corrector to doctor your vocal tracks with your D8B. Vocal Studio's pitch corrector is operated manually. Therefore, you have control over pitch fixing at all times. Generally, the less you correct the note, the more natural the result. However, the pitch corrector can force a vocal note anywhere.

### What are the Controls?


The Pitch Corrector screen is separated into four control areas:




**Pitch Bender** is used to bend out-of-tune vocal notes to the desired pitch. The pitch bender works just as a spring-loaded pitch bender would work on a keyboard. Use the mouse to drag the pitch bender up to raise the pitch. Drag the pitch bender down to lower the pitch. When you release your mouse button, the pitch bender will spring back to the center position, where the pitch will be unaffected. You can also use an external pitch bender from a MIDI keyboard with the same results.



**Pitch Bend Range** sets a maximum amount the pitch can be corrected using the Pitch Bender. The pitch bend range is set by grabbing the red circle (located in the Pitch Bend Range window) with your mouse. When the range is set to maximum, the pitch can be corrected by  $\pm 12$  semitones (1 octave) with the Pitch Bender. When the pitch bend range is set to its minimum the pitch can be corrected by  $\pm 50$  cents (1 semitone). Set the range for the maximum amount of pitch correction needed. If the vocal track travels a full semitone out of tune, set the range to 1 or 2 semitones.

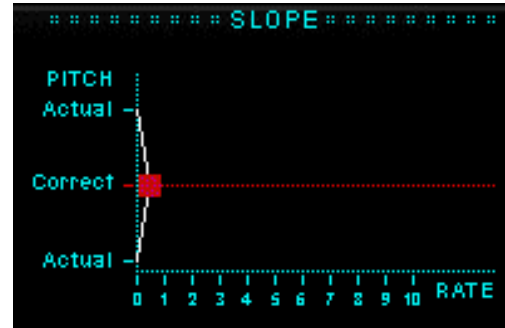

**Slope** controls the switching rate between the pitch corrected sound and the original sound when using the Vocal Studio's keyboard control graphic. Use the red circle in the Slope window to adjust the slope. When the Slope is pulled all the way to the left, the switch between original and pitch-corrected sound is instantaneous. The more you pull the slope to the right, the more gradual the fade between original and pitch-corrected sound becomes. This parameter can be set to make pitch correction more natural.

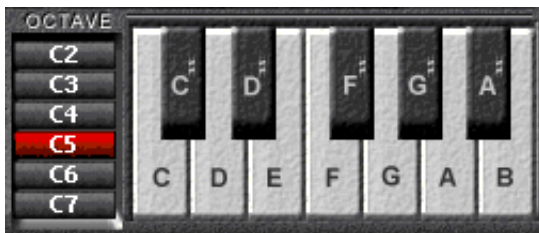

**Pitch Controller** is used to force the vocal line to an exact pitch. Use the Octave buttons to set the octave you want the vocal line to be forced. Once you have set the octave, trigger the note you want using the Pitch Controller keyboard. As long as you are holding/triggering the note with the mouse or MIDI keyboard, the vocal line will sing the corrected pitch indefinitely. Only when you release the note will the vocal line return to the original pitch. An external MIDI keyboard can also be used to give immediate access to multiple octaves.

# Appendix C

## Plug-in Configuration and Routing

### Configuring the Plug-in

After installing your UFX or MFX card, all you need to do is assign a plug-in to the card.

#### Assigning the Plug-in to a UFX or MFX card



1. Click the **Plugins** menu and select **Plugins**, (or use the keyboard shortcut Ctrl+P).



2. In the **Plugin Configuration** window, locate the card slot that contains the UFX or MFX card to which you wish to assign a plug-in.
3. In the **MODE** column, click the **MONO/STEREO** toggle button and set it to mono or stereo (depending on the plug-in and the card).



4. In the **Plugin Select** column, select a plug-in from the pull-down menu. It should look something like this:



**Note:** A plug-in can also be loaded from the Setup section on the console.

#### Assigning an Input Source to the Plug-in

- Click the plug-in's **INPUT** button to select an input source. In the following example, we have chosen the Aux 4 Bus as the input to the plug-in installed in slot 6.



- When a plug-in is fed from an aux bus, its output appears on the FX Return channels by default (faders in the EFFECTS bank). The return channel is determined by the slot number and whether the effect output is mono or stereo. For example, a reverb with a mono input and stereo output that is installed in Slot 5 has its outputs on FX 5 and FX 6.

**Note:** The default state for all FX channels is MUTE. You won't hear the effect until you unmute its FX return channel(s).


- A plug-in can also receive its input from a channel pre- or post-DSP insert, the main stereo left and right bus, or Bus 1-8. When a plug-in is inserted in this manner, its output is routed directly back into the channel.
- In addition, **Plugin Chain** can be selected as an Input Source, which allows you to daisy-chain two or more plug-ins in series.
- To combine two or more plug-ins:
  1. Assign the Destination (output) for the first plug-in to its default FX Return.
  2. Assign the Input Source for the second plug-in to the FX Return that the first plug-in is routed to (Input Source/Plugin Chain/FX 1-16).

#### Assigning a Destination for the Plug-in

- Click the plug-in's **Destination** button to select where the plug-in's output should be routed. It can be routed to the FX Returns, a channel pre- or post-DSP insert, the main stereo left and right bus, or Bus 1-8.

## Deactivating the Plug-in

1. Select **none** from the associated plug-in drop-down assignment menu.

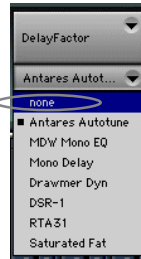


2. Click **OK** in the Alert dialog box.



**Warning:** Deactivating a plug-in erases all automation data for the plug-in.

## Saving, Loading, and Resetting a Preset

 
Plug-in settings can be saved and recalled from the hard drive. You can save and load files to either Memory A or Memory B.




### To Save a Preset:



1. Click and hold the **Menu** button.
2. Select **Save User Preset** to overwrite the file currently opened.
3. Select **Save User Preset As** to save to a new file name. The Save Preset File As dialog box appears.

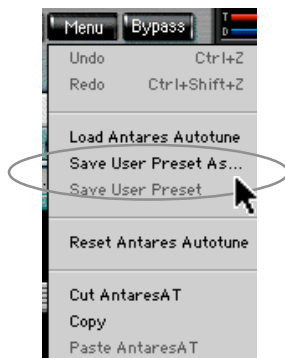

4. A default name for the preset is automatically displayed, such as Preset#1. If you want to rename it, simply type in the name you want, using up to 20 characters.

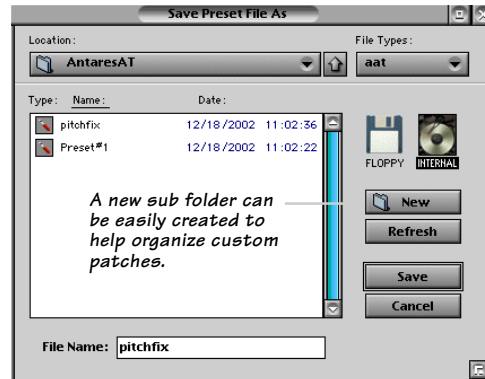

5. Select **INTERNAL** (default hard drive) or **FLOPPY**.
6. Click Save to complete the operation.


### To Load a Preset:




1. Click **Mem A** or **Mem B** to choose the memory location from which to load the file.



2. Click and hold the **Menu** button.

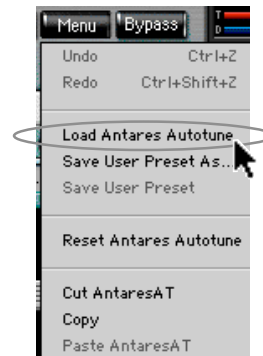

3. Select **Load (Plug-in)** to open a file. The Load Preset File dialog box appears.

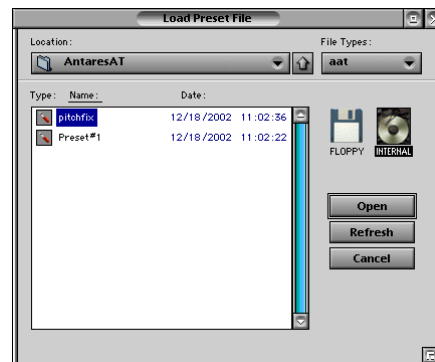

4. Click **INTERNAL** if the file is on the internal drive, or click **FLOPPY** if the file is on a floppy disk.
5. Select the preset you want to load.
6. Click **Open** to load the selected preset.




Click in the Preset Display to load from the pull-down menu or scroll through presets using the Up/Down buttons.

#### To Reset the Plug-in:

Reset will reload the default patch.

1. Click and hold the **Menu** button.
2. Select **Reset (Plug-in)**.

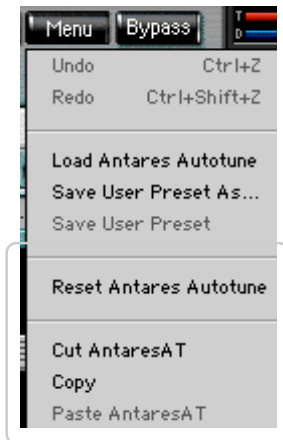

#### To Cut Plug-in Settings:

1. Click and hold the **Menu** button.
2. Select **Cut (Plug-in)**.

The current settings are temporarily stored in the clipboard memory in case you want to paste them to a new preset. The plug-in also reverts to its default state (it is reset).

#### To Copy Plug-in Settings:

1. Click and hold the **Menu** button.
2. Select **Copy**.

The current settings are temporarily stored in the clipboard memory in case you want to paste them to a new patch.

#### To Paste Plug-in Settings:

1. Click and hold the **Menu** button.
2. Select **Paste (Plug-in)**.


The current settings are replaced with the settings in the clipboard memory. Settings can be pasted into MEM A or MEM B.

## Automation and Snapshot Control

### Dynamic Real Time


#### To write automation on a loaded plug-in:

1. Engage **AUTO TOUCH**.

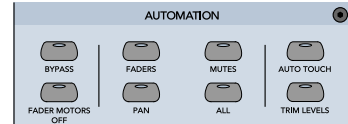

2. Engage **ALL**, disengage **BYPASS**, and send timecode to the console –the **POSITION** readout will change to show time code is being received.
3. Move a parameter or recall a patch (user or factory preset).

Subsequent edits to any recorded automation moves may be performed in the Mix Editor. Enable the channel view by clicking on the Channel View button, then choose the plug-in you wish to view from the page drop-down menu. This displays a list of available channel and plug-in parameters.

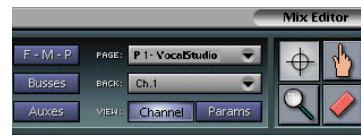

**Note:** Parameters can be controlled from either the GUI plug-in graphic parameters (using a mouse to modify the parameters) or via the VFD V-Pots and **SELECT** buttons (with the plug-in parameters called up on the VFD readout).

### Event Based

#### To automate the loading of a plug-in preset:

- Use the Event Automation Track, available under the Windows Menu as 'Event Track', to load plug-in user (previously stored) or factory preset patches at a specific time during automation playback.




**General Note:** Plug-in settings are recalled as part of a console Snapshot, but may also be recalled as Presets (patches). If you are recalling snapshots and presets, be aware that one may override the other.



# FX Routing

## The Plug-in Configuration Window

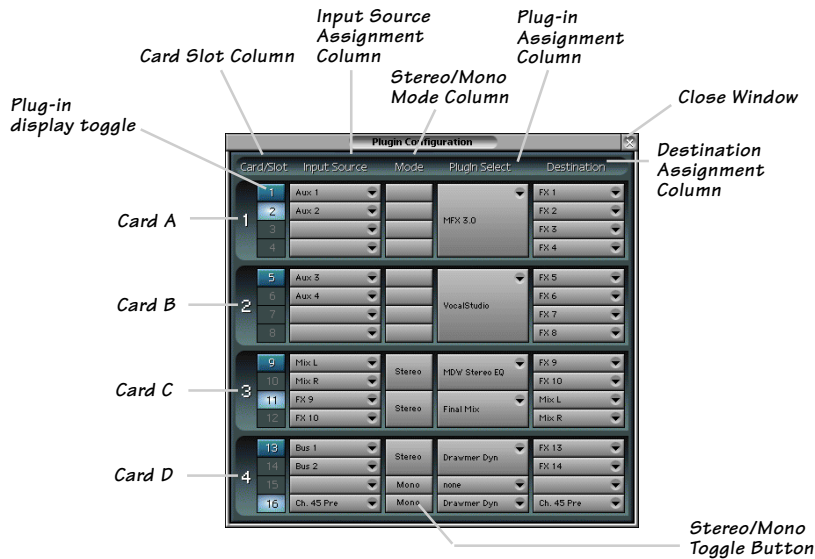


### Inserting a Plug-in into a Channel

A pre- or post-DSP channel insert can also be used as the input source for a plug-in. When a channel insert point is selected, the plug-in output returns to the channel by default. The FX return path is disconnected, although the plug-in output is still displayed on the FX return channel meter.


A plug-in channel insert assignment can be made from the Plug-in Configuration window, or from a pull-down menu from the mixer screen.



Plug-in Configuration Window

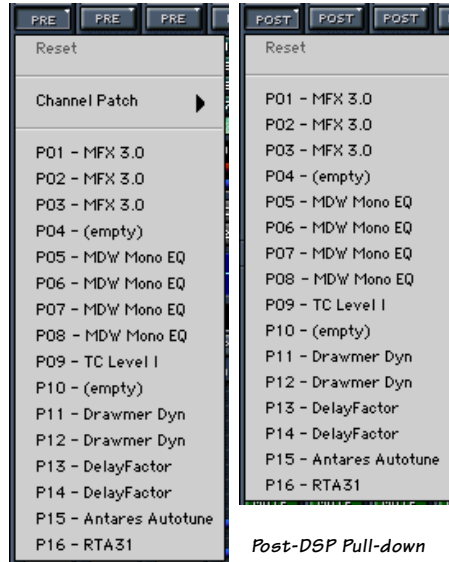

Pre-DSP Pull-down

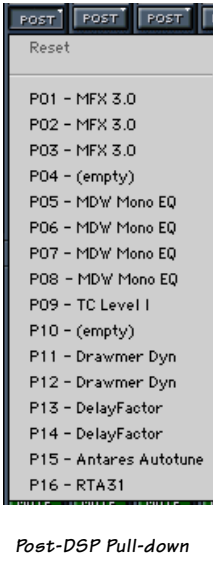

Post-DSP Pull-down

This assignment can also be made from the control surface and VFD by holding the desired channel's SELECT button for two seconds, then paging over to Plug Pre or Plug Post, selecting the input source, then selecting the desired plug-in slot from the follow-on menu.

### Using an Aux Send with a Plug-in

- Click the associated **INPUT SOURCE** button and select an Aux input source. In the example below, we have chosen the Aux 4 Bus.



### Send the Input Signal to the Aux Bus

- Send a signal to a D8B mixer input channel (MIC/LINE or TAPE IN).
- Assign the input channel V-Pot/GUI Control Pot to an aux send. We have chosen AUX 4 according to the example above.



- Use the AUX 4 control to adjust the input level to the plug-in.



GUI Control Pot Assigned to AUX 4



**Remember to select an aux send before using the V-pot or GUI Control Pot on the mixer input channel (MIC/LINE or TAPE IN).**

You will see the plug-in's input meter become active as you raise the mixer input channel's aux send.

Set the plug-in input/output signal levels as you would with any effect, so the meter reaches its upper-most range every so often (always trust your ears first). This can be accomplished from the console or GUI.

### Pre-Fader and Post-Fader Auxiliary Sends

Normally, effect sends are post-fader, so the signal sent to the effect follows the program level in the mix. Occasionally you may wish to feed an effect from a pre-fader source so that the signal level from the aux control is independent of the channel fader position. Aux sends are selectable pre- or post-fader globally (all Aux 1's for instance) from the Mix Options screen in the Setup window, or individually on a channel-by-channel basis either from the channel strip or the Fat Channel.

In the channel strip, Alt-click the Aux Send level indicator to toggle between pre- and post-fader operation. Post-fader is indicated by a red bar, pre-fader is indicated by a yellow bar.



In the Fat Channel, clicking on the PRE buttons below the Aux knobs toggles between pre- and post-fader operation. Yellow indicates pre-fader, otherwise the aux is post-fader.



## The FX Return Channel

- Switch the D8B Bank Select to **EFFECTS** (49-72) and bring up faders one and two (channels 49 and 50). You will also see meter activity associated with these channels.

**EFFECTS**

 


FX Channels 1&2  
(channels 49&50)

Plugins	Windows	HUI Mod	Ctrl+P
P 1- MFX 3.0			Alt+1
P 2- MFX 3.0			Alt+2
P 3			Alt+3
P 4			Alt+4
P 5- VocalStudio			Alt+5
P 6			Alt+6
P 7			Alt+7
P 8			Alt+8
P 9- MDW Stereo EQ			Alt+9
P10			Alt+0
P11- Final Mix			Alt+Shift+1
P12			Alt+Shift+2
P13- Drawmer Dyn			Alt+Shift+3
P14			Alt+Shift+4
P15			Alt+Shift+5
P16- Drawmer Dyn			Alt+Shift+6



The Plug button toggles between Windows menu buttons and FX buttons (lower left on the D8B mixer screen).



Plugins button opens the Patch Configuration window (or Ctrl+P on the keyboard).



Here the MFX plug-in is selected for display.

## Using the Mackie Effects (MFX)

The Digital 8•Bus comes with one MFX card installed to provide two stereo effects. Three additional MFX cards can be installed for a total of up to eight mono-in, stereo-out internal effects available simultaneously.

The console ships with the Mackie FX (MFX) plug-in installed. This plug-in provides five useful effects that can be globally selected and used with the aux sends and FX returns.

Each effect has a 3-Band Parametric EQ which filters the signal prior to the actual effect.

### 3-Band Parametric EQ

Click the EQ button in the lower right corner of the Mackie Effects window to turn the EQ on and off. This provides a low-shelving filter with a corner frequency at 100 Hz, a mid-band fully parametric EQ, and a high-shelving filter with a corner frequency at 10 kHz.

Click the EDIT button to change the EQ parameters.

**Low Shelf Gain:** This adjusts the boost and cut below 100 Hz. This is calibrated in decibels (dB), with a range from -12 dB to +12 dB.

**High Shelf Gain:** This adjusts the boost and cut above 10kHz. This is calibrated in decibels (dB), with a range from -12 dB to +12 dB.

**Mid Gain:** This adjusts the boost and cut at the mid-frequency setting. This is calibrated in decibels (dB), with a range from -12 dB to +12 dB.

**Mid Frequency:** This adjusts the center frequency of the parametric EQ. This is calibrated in Hertz (Hz), with a range from 100 Hz to 10 kHz.

**Mid Q:** This adjusts the bandwidth of the frequencies affected by the parametric EQ. It is a unit-less measure, with a range from 0.1 to 10. A low Q setting provides a very tight bandwidth (less than an octave), and a high Q setting provides a very wide bandwidth (covering several octaves).

### Effects Type

Click on the TYPE control to select the type of effect you want to use.

#### Reverb

This uses a room reverberation algorithm that provides the following controls:

**Size:** This adjusts the time between reflections to simulate different room sizes. It is calibrated in meters (m), with a range from 3.0 m (small) to 40.0 m (large).

**Decay:** This adjusts the amount of time that reflections continue to propagate. A “live” room will have a longer decay time than a “dead” room. It is calibrated in seconds (s), with a range from 0.9 seconds to 2.0 seconds.

**PreDelay:** This adjusts the amount of delay between the dry audio signal and the start of the

wet reverberant signal. Adjusting this control can provide better separation and definition to the dry signal. It is calibrated in milliseconds (ms), with a range from 0 ms to 299 ms (0.3 seconds).

**Diffusion:** This controls the increase in echo density over time in the reverberant signal. The higher the diffusion setting, the higher the echo density. This is a unit-less measure, with a range from 0 to 10.

**Damping:** This control causes the higher frequencies to roll off faster than the low frequencies. The higher the damping setting, the faster the high frequencies roll off. This is a unit-less measure, with a range from 0 to 10.

**Rolloff:** This adjusts the cutoff frequency for rolling off the entire reverberant signal. This is different from the damping control which rolls off only the higher frequencies over time. It is calibrated in Hertz (Hz), with a range from 500 Hz to 20 kHz. It also has a Flat position, which bypasses the control.

#### Mono Delay

The mono delay effect provides an adjustable delay, which is returned to the left and right stereo effect return. It also provides an adjustable feedback path for a multiple echo effect. The mono delay has the following controls:

**Delay:** This adjusts the amount of time between the original signal and the delayed signal. It is calibrated in milliseconds (ms), with a range from 0 ms to 1599 ms (1.6 seconds).

**Feedback:** This adjusts the amount of signal that is fed back to the input of the delay. It is calibrated in percent, with a range from 0% to 99%.

**Rolloff:** This adjusts the cutoff frequency for rolling off the feedback signal. It is calibrated in Hertz (Hz), with a range from 500 Hz to 20 kHz. It also has a Flat position, which bypasses the control.

#### Stereo Delay

The stereo delay effect provides independently adjustable delays which are returned to the left and right stereo effect return. It also provides an adjustable feedback path for a multiple echo effect. The stereo delay has the following controls:

**Left and Right Delay:** This adjusts the amount of time between the original signal and the delayed signal. It is calibrated in milliseconds (ms), with a range from 0 ms to 799 ms (0.8 seconds). Notice that the stereo delay effect has precisely one-half the amount of delay available per channel as the mono delay.

**Left and Right Feedback:** This adjusts the amount of signal that is fed back to the input of the delay. It is calibrated in percent, with a range from 0% to 99%.

**Rolloff:** This adjusts the cutoff frequency for rolling off the feedback signal. It is calibrated in Hertz (Hz), with a range from 500Hz to 20kHz. It also has a Flat position, which bypasses the control.

### Ping Pong

This effect is the same as stereo delay, with the exception that the left feedback is directed to the right delay input, and the right feedback is directed to the left delay input. In this way, the delayed signal (echo) bounces back and forth between the left and right channels.

### Chorus

The chorus effect generates a mono or stereo simulated chorus of voices. It has the following controls:

*Depth:* This adjusts the depth of the chorus modulation for all the voices. It is calibrated in milliseconds (ms), with a range from 0 ms to 10.0 ms.

*Delay:* This adjusts the amount of time between the original signal and all the generated chorus voices. It is calibrated in milliseconds (ms), with a range from 0 ms to 100 ms.

*Thicken:* This defines the number of delay taps used to generate the chorus effect, and how they are distributed across the left and right channels.

There are four settings:

- 0 = one mono voice
- 1 = one stereo voice
- 2 = two stereo voices
- 3 = three stereo voices

*Speed:* This controls the rate of the chorus modulation, and applies to all voices. It is calibrated in Hertz (Hz), with a range from 0.05 Hz to 5.00 Hz.

*Waveform:* This defines the waveform that is used for modulating the voices. There are three settings, including sine, triangle, and random. The random setting applies random sine/triangle waveforms to each voice independently.

The Digital 8•Bus also comes with a library of effects settings (patches) stored on the hard drive that can be readily selected. Click in the preset title box at the bottom of the Mackie Effects window to select from the list of Factory Presets in the dropdown box. You can also create and save your own effects (click the MENU button and select "Save User Preset As...").

Check our website for additional plug-in effects as they become available.

## Appendix D: Shortcuts

<b>Feature</b>	<b>Surface</b>	<b>Keyboard</b>	<b>Mouse (click or pull down)</b>
New Session	[New]	Ctrl+N	File > New Session
Open Session	[Load]	Ctrl+O	File > File Manager
Save Session	[Save Session]	Ctrl+S	File > Save Session
Save Session As	[Save Session As]		File > Save Session As
Save As Template			File > Save As Template
Toggle Desktop		Ctrl+D	File > Desktop (or Click Desktop in bottom menu bar)
Shutdown		Ctrl+Q	File > Shutdown
Preferences	[General]	Ctrl+I	Setup
Undo	[Undo]	Ctrl+Z	Edit > Undo (channels or moves)
Redo		Ctrl+Shift+Z	Edit > Redo (channels or move)
Cut Channels	[Cut]	Ctrl+X	Edit > Cut Channels
Copy Channels	[Copy]	Ctrl+C	Edit > Copy Channel(s)
Paste Channels	[Paste]	Ctrl+V	Edit > Paste Channels
Delete Events		DEL	Edit > Delete Events
Set Default Levels			Edit > Set Default Levels
Modify Levels		Alt+M	Edit > Modify Levels
Insert Time			Edit > Insert Time
Delete Time			Edit > Delete Time
Insert Global Time			Edit > Insert Global Time
Delete Global Time			Edit > Delete Global Time
Clear Automation			Edit > Clear Automation
Clear Edit History			Edit > Clear Edit History
Select All	[Double-click Shift]	Ctrl+A	Edit > Select All
Select Fader Bank		Alt+A	Channel > Select Fader Bank
Select All Faders		Alt+Shift+A	Channel > Select All Faders
Channel Notes		Ctrl+Shift+T	Channel > Channel Notes
Channel List		Ctrl+B	Channel > Channel List
Time Code Counter	[set time, #'s, enter]	[tab], #'s, [enter]	click on counter, #'s, [enter]
Sort by column title in ...window		[tab] highlight column, [enter]	click on title in window

### Window views: [Ctrl] + [number or letter] both opens and closes these windows:

<b>Feature</b>	<b>Surface</b>	<b>Keyboard</b>	<b>Mouse (click or pull down)</b>
View Help	HELP	Alt+H	Windows > Help
View Setup	Ctrl+1	Ctrl+1	Windows > Setup
View Snapshots	Ctrl+2	Ctrl+2	Windows > Snapshot
View Surround	Ctrl+3	Ctrl+3	Windows > Surround
View Locator	Ctrl+4	Ctrl+4	Windows > Locator
View Mix Editor	Ctrl+5	Ctrl+5	Windows > Mix Editor
View Fat Channel	Ctrl+6	Ctrl+6	Windows > Fat Channel
View Panning	Ctrl+7	Ctrl+7	Windows > Panning
View Faders	Ctrl+8	Ctrl+8	Windows > Faders
View Event Track	Ctrl+9	Ctrl+9	Windows > Event Track
View Track Sheet		Ctrl+T	Windows > Track Sheet
View History List		Ctrl+H	Windows > History List
View MIDI Map		Ctrl+-	Windows > MIDI Map
View Ch 1–24	[Mic/Line]	F1	[Mic/Line]
View Ch 25–48	[Tape]	F2	[Tape]
View Ch 49–64	[Effects]	F3	[Effects]
View Masters	[Masters]	F4	[Master]
View HUI Layer	[Shift+Masters]	F5	[HUI]
Enable HUI Mode		Shift+F5	Options > HUI Mode
Close Window		Ctrl+W (or ESC)	File > Close Window
Close All		Ctrl+\	Window > Close All
View Plugin Configuration		Ctrl+P	[Plugins] in bottom menu bar (or Plugins > Plugins)
View Plug-in Windows (slots 1–9)		Alt+1 through Alt+9	
View Plug-in Windows (slots 10–16)		Alt+Shift+0 through Alt+Shift+6	

## Functions on SELECT(ed) Channel

Example: Select channels 1–5 and type the letter [M] and these channels will mute. To unmute these same selected channels, type either a comma [, ] or hold down the shift key and type the letter [M].

<b>Feature</b>	<b>Surface</b>	<b>Keyboard</b>	<b>Mouse (click or pull down)</b>
Channel List		Ctrl+B	Channel > Channel List
Open Channel			Channel > Open Channel
Save Channel As			Channel > Save Channel As
Track Selection	[Select]	L/R arrow	Click on Channel [Select]
Multiple Track Selection	[Shift]+[Select]	[Shift]+L/R arrow	[Shift] Swipe across channel [Select]s or Right mouse button/swipe across channel [Select]s
Move Channel Selection		L/R arrows	
Single Event Selection			Left-click
Multiple Event Selection		[Shift]	[Shift-click]
Unselect All Faders	Double-press any [Select]	Left or right arrow	Double-click on any [Select]
Group	[Group][Select]	Ctrl+G	Channel > Group
Ungroup	[Group][Select]		Channel > Ungroup
Faders to Unity		Ctrl+]	Channel > Faders to Unity
Faders to Off		Ctrl+[	Channel > Faders to Off
Nudge Selected Faders		Alt+up/down arrows	
Channel Link	Hold adjacent [Select]s	Ctrl+L	Channel > Channel Link
Unlink	Hold adjacent [Select]s	Ctrl+U	Channel > Unlink
Adjust Channel Delay			Channel > Adjust Channel Delay
Reset Channel Delay			Channel > Reset Channel Delay
Reset Selected Channels			Channel > Reset Selected Channels
Reset Channel Layout			Channel > Reset Channel Layout
Write toggle	[Write]	[W] (enable) [E] or [Shift] [W] (disable)	[Write]
Solo toggle	[Solo]	[S] (enable) [D] or [Shift] [S] (disable)	[Solo]
Solo Isolate toggle	Alt+[Solo]		Channel > Channel List (or Alt+click on Solo)
Mute toggle	[Mute]	[M] (enable) [, ] or [Shift] [M] (disable)	[Mute]

## Transport Functions

<b>Feature</b>	<b>Surface</b>	<b>Keyboard</b>	<b>Mouse (click or pull down)</b>
Play/Stop	[Play][Stop]	[Space]	[PLAY][STOP] in Locator window
Play	[Play]	[Space]	[PLAY][STOP] in Locator window
Play from Selection		Ctrl+Space	Edit > Play From Selection
Set Selection Start		[	
Set Selection End		]	
Stop	[Stop]	[Space]	[PLAY][STOP]
Record Mode	[Record]		[RECORD]
Location 00-99	in locate mode: 00-99 numeric entry, followed by [Enter]		Locator window, double-click line
Store Locate	[Store] in locate mode: 00-99 numeric entry, followed by [Enter]		Locator window, click [New]
Next/Previous Cue	Ctrl+Enter/Alt+Enter	+/-	Double-click Cue
New Cue		Ctrl+M	[New]
Return to Zero (RTZ)	empty locate, [enter]		
Rewind	[<<]	Shift+<	[REW]
Fast Forward	[>>]	Shift+>	[FFWD]

## ODDS 'N' ENDS

<b>Feature</b>	<b>Surface</b>	<b>Keyboard</b>	<b>Mouse (click or pull down)</b>
Channel strip name		Click on name field, enter [text], [tab] (right) or [shift] [tab] (left)	
Equal aux/trim levels	(see clipboard ops)	(See clipboard ops)	Click bar, right mouse button, swipe either direction
Bus assigns	[Bus #], swipe [Assign]s		Click bus, any mouse button, swipe either direction
DSP function On/off toggles (Phase, EQ, Gate, Compressor)			Click button, any mouse button, swipe either direction
Bypass Automation	Bypass Automation		Bypass Automation in Locator window
Motor Faders off	Motor Faders off button		
Toggle checkbox / edit field			Mouse Click
<b>Mix Editor Shortcuts</b>			
Highlight from Selection		Click and drag over area	Use Highlighter (I-Beam) tool
Scroll Mix Editor		Alt+arrow(s)	
Zoom Mix Editor		Ctrl+arrow(s)	
Dive Zoom Mix Editor		Z	
Drag Mix Editor Screen		D	
Meters to Pre Fader		F6	Options > Meters > Meter Type > Pre Fader
Meters to Post Fader		F7	Options > Meters > Meter Type > Post Fader
Meters to Post Mute/Fader		F8	Options > Meters > Meter Type > Post Mute/Fader
Clear Over Loads		F10	Options > Meters > Clear Over Loads (or click on Overload indicator)



# Appendix E

## MIDI Implementation Guide

Product: Mackie Digital 8•Bus  
MIDI Implementation Chart

Date: 4/03  
Version: 5.1

Function		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	00, MIDI Off (note 1) 00-0F	00, MIDI off (note 1) 00-0F	See 1) under notes 2) per channel strip
Mode	Default Messages Altered	Poly	Poly	Exception: program changes are Omni
Note Number	True voice	00-0F	00-0F	Reassignable – applies to mute & pan messaging
Velocity	Note ON Note OFF	Mute on = 40 Mute off = 01	Mute on = 40 Mute off = 01	Mute only
Aftertouch	Keys Channel	00-7F	00-7F	Pan control: range 127L to 127R
Pitch Bend		X	X	
Control Change		00-7F	00-7F	Fader level Tx & Rx, assignable per D8B channel strip via the Channel List
Program Change	True number	00-7F	00-7F	Rcv: Omni
System Exclusive		note 3)	X	See note 3)
System Common	Song Pos Song Sel Tune Req	X X X	X X X	
System Real-time	Clock Commands	X X	MTC X	
Aux Messages	Local On/Off All Notes Off Active Sensing System Reset	X X X X	X X X X	
Notes		1) System real time always active, MIDI On/Off defaults to OFF and MIDI channel 00. 2) Either Tx or Rx. 3) MMC open loop commands: STOP, PLAY, FF, REW, TRACK REC/RDY, SHUTTLE, STEP. 4) All values listed in hexadecimal.		

O: Yes  
X: No

# Appendix F

## HUI Mode

### What's a HUI?

Mackie introduced HUI (Human User Interface) in 1997, one of the industry's first affordable motorized touch-sensitive fader controllers available for Digital Audio Workstations (DAWs).

One of the big drawbacks of any DAW is having to use a mouse and keyboard to perform things you used to do on an analog mixer. Clicking on a visual representation of a fader and trying to drag the mouse smoothly in order to achieve an amazing fade-out is difficult, if not impossible, for many of us. Likewise, turning a "virtual knob" on a computer screen just doesn't cut it for some folks. The HUI allows you to use familiar analog-style faders and knobs to control most of your DAW's parameters.

HUI mode allows the Digital 8•Bus to work with your HUI-supported DAW via the MIDI interface. When HUI mode is active and the HUI layer is on-screen, you will see that the eight

right-most channel faders and the master fader are all that are active. This is because HUI's MIDI mapping only provides for eight active channels at a time, but the Bank and Channel scroll buttons allow you to move back and forth across fader channels on the DAW mixing window. The Channel buttons scroll one channel at a time, and the Bank buttons scroll eight channels at a time.

Click the question mark button (?) in the upper right corner of the screen, and a map of the control section of the D8B appears on the left side of the screen, with numerical references over many of the buttons and a list of the HUI control functions provided by each button. At the end of this appendix, we have provided a chart showing how each of these buttons controls specific functions for several of the most popular DAWs supporting the HUI.

The screenshot displays the 'D8B/HUI BUTTON REMAPPING' interface. On the left, a list of 56 numbered functions is provided, such as '1 Aux Mute', '2 Shift (tip)', '3 Send A', '4 Send B', '5 Send C', '6 Send D', '7 Send E', '8 Rec Ready All', '9 Bank Left', '10 Bank Right', '11 Channel Left', '12 Channel Right', '13 Pan', '14 Hold Shift and press Masters to go to the HUI Layer', '15 Assign', '16 Compare', '17 Bypass', '18 Insert', '19 Window Transport', '20 Window ALT', '21 Window Edit', '22 Window Status', '23 Window Mix', '24 Window Mem Loc', '25 Auto Enable Send', '26 Auto Enable PlugIn', '27 Auto Enable Send Mute', '28 Auto Mode Read', '29 Auto Mode Latch', '30 Auto Mode Write', '31 Shift/Add', '32 Save', '33 Auto Mode Off', '34 Auto Enable Fader', '35 Auto Enable Mute', '36 Auto Mode Touch', '37 Auto Enable Pan', '38 Auto Mode Trim', '39 Equals (=)', '40 F9/Escape', '41 D8B key pad', '42 Enter', '43 Loop', '44 In ALT = Out', '45 Decimal (.)', '46 Rewind ALT = RTZ', '47 Fast Forward ALT = End', '48 Stop', '49 Play', '50 Record', '51 Jog/Shuttle Select', '52 Jog Wheel', '53 Cut', '54 Copy', '55 Paste', '56 Undo'.



The central control panel includes sections for 'CONTROL ROOM', 'ASSIGNMENT', 'POSITION', 'RANGE', 'CLIPBOARD', 'MASTER LIB', and 'SHORTCUTS'. The right side features a channel strip with 'KYBD SHORTCUTS', 'WINDOW', 'STATUS MIX', 'PLUGIN', 'AUTO ENABLE', 'FRAGR MUTE', and 'AUTO MODE' controls. A 'HUMAN USER INTERFACE EMULATION' section is visible in the top right corner.

At the bottom, a navigation bar contains tabs for: Plugins, Setup, Snapshots, Surround, Locator, MixEditor, Fat Channel, Panning, Faders, Track Sheet, Desktop, and Close All.


## Connections

You will need a MIDI interface with an available input and output port connected to your DAW. Connect the D8B's MIDI output to the MIDI input on the interface and connect the MIDI output on the interface to the MIDI input on the D8B. Mac users will need to set up a device for their D8B under OMS (if you are using Pro Tools or Nuendo) or Free MIDI (if you are using Digital Performer).

Mac users launch OMS Setup (or Free MIDI Setup). Create a new device called HUI. Use the default settings and make sure you tell it the correct input and output ports that you are using. Save your setup and exit.

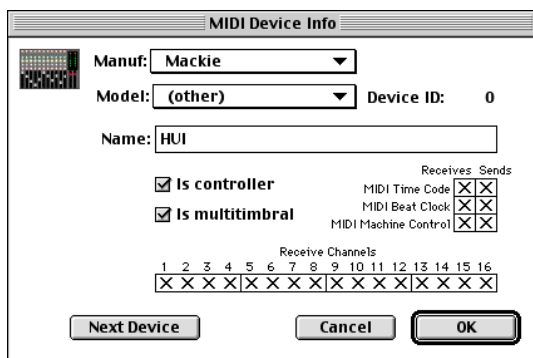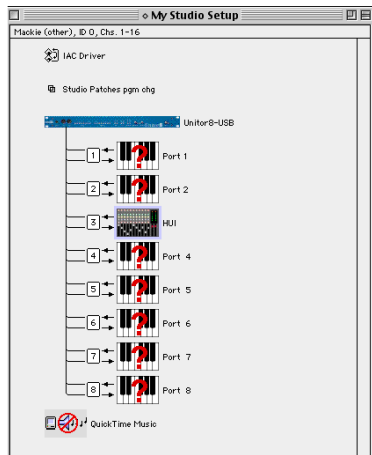

On the D8B, choose HUI Mode from the Options menu.

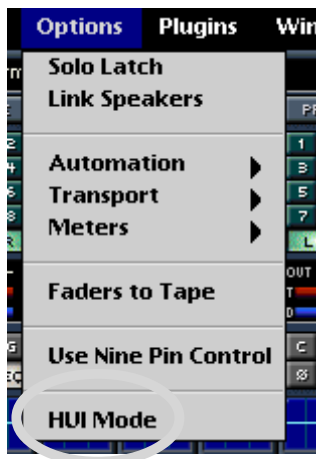

You will see a HUI button appear next to the master fader. Click it or use the control surface shortcut SHIFT+MASTER (keyboard shortcut is F5). The board and GUI will change to the HUI layer. All the faders will be at unity and the V-Pots and Time Code read out will be blank. You must now launch your DAW and set it up to use a HUI.

**Pro Tools:** Go to **Setups > Peripherals**. Choose the **MIDI Controllers** tab. For the first available Type, choose HUI. Select the MIDI port you have connected to the D8B for both the **Receive From** and **Send To**. Click **OK**.

**DP3.1:** Go to **Basics > Control Surface Setup**. Set the Driver to HUI. Under MIDI, select the first channel. Click **OK**.

**Nuendo:** Go to **Devices > Device Setup**. Click the **Add/Remove** tab and choose **Mackie HUI**. Click the **Add** button and then click the **Setup** tab. Now choose **Mackie HUI** from the Devices list. Select the MIDI channel you have connected to the D8B for both the Input and Output. Click **OK**.

The D8B's HUI layer faders should jump to the position of the first eight faders in the currently open session. If they don't, repeat the above instructions.

For the D8B's internal automation to function, you must also set up your DAW to send MIDI Time Code (MTC) to the D8B. This is done as follows:

**Pro Tools:** Go to **Windows > Show Session Setup**. On the left side of the window you will see a check box and pull-down menu for **Send MTC to Port**. Check this box and choose the MIDI port you have connected to the D8B.

**DP3.1:** Go to **Basics > Transmit Sync...** Check the **Send MTC** check box and choose the MIDI port you have connected to the D8B.

**Nuendo:** Go to **Transport > Sync Setup...** Under **Send MIDI Timecode**, check the MIDI port you have connected to the D8B.

Now if you press Play, the blue time code read out (top right corner of the D8B GUI) should display the incoming time code. If, during playback, it stays at all zeros, then the D8B is not receiving code properly and you should repeat the above instructions.


Your D8B is now connected correctly.

## Operation

The real HUI (and thus the HUI layer) only has eight faders. To control more than eight faders in a DAW, we put bank buttons on the HUI to shift eight faders at a time to the right or left. This allows you access to all your faders in the DAW. Since the D8B doesn't have bank left or right buttons (or many others that are on the HUI), we remapped the buttons on the D8B HUI layer to perform different functions when in HUI Mode.

These are indicated on-screen by clicking the question mark button in the upper right corner.

Let's look a little closer at the HUI layer in sections:

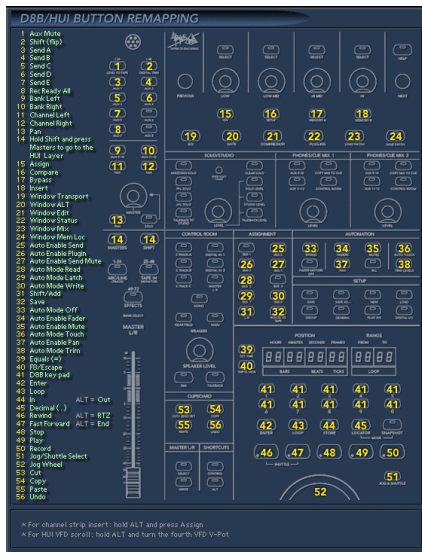

The left side of the screen provides a map of the control section of the D8B, with numerical references over many of the buttons and a list of the HUI functions provided by each button. For example, button number 12 (Aux 11-12 from the picture) is HUI bank right. So press this to access the next eight faders in your DAW to the right. The on-screen mixer changes and so does the HUI Layer.

First we have the eight HUI faders. These and their associated buttons are self-explanatory. But the Write button can be confusing, so pay attention when we get to that in the following paragraphs. There will be a quiz at the end (just kidding!).

When you go back to Bank 1-4 on the D8B, some of these buttons revert back to their normal operation. Aux 11-12 is an example. But other buttons, like the D8B transport, will retain their HUI Control Mapping no matter what bank you are on, as long as HUI mode is enabled. Controls that behave like this are called Global HUI Controls. The HUI Layer Control Mapping chart tells you which controls are Global and which are not. Remember Global controls always function as described when HUI mode is on, while non-Global controls only have the described function when the HUI layer is visible.



The D8B's Aux section (buttons 1-13) near the top of the board has similar functionality in HUI layer. These buttons appear above the master fader on the HUI layer GUI. Aux1-Aux5 switch the HUI Layer V-Pots from the pan function to control-

ling the first five auxes in your DAW. It also controls the functionality of the VSel button in conjunction with the Aux Mute button (1) (this switches between Pre/Post or Mute/Unmute for the Aux sends). It also has the Bank Left and Right buttons to shift your view eight faders at a time and the Channel Left and Right buttons to shift your view one fader at a time.

Buttons labeled 14 (Masters and Shift) are used to access the HUI layer.



Plug-in and Window functions are mapped to the buttons in the D8B Fat Channel section below the V-Pots (buttons 15-24).



Next we have the Automation section and the D8B Assignment section (buttons 25-38). These are mapped to the Automation Enable controls and the Automation Mode controls from the HUI. These buttons appear on the HUI layer GUI to the left of the faders. Auto Enable controls what DAW functions are written in Automation. This is similar to how the D8B's automation works. These are on/off switches. For example, press Fader to write fader automation. The Auto Mode buttons are used in conjunction with the HUI Layer's channel Write buttons to control what automation mode the corresponding DAW channel is in. For example, to put a channel into Touch mode, press and hold the Touch button on the D8B, and press a channel's Write button. You will see in the DAW, the channel will now be in Touch mode. The other Auto Mode buttons work in a similar fashion. Note that not all DAWs support the same automation modes or parameters.



Finally, we have the Transport and Master Locator section (buttons 39-52). These are Global controls, which again means they will operate in HUI mode regardless of the bank that is selected. The transport works as expected. In some DAWs, the jog wheel operates differently depending on what screen you have up. Generally, press it once to jog, press it again to shuttle. Press it a third time to go back to normal transport. The rest of the buttons allow you to do things like enter a time into your DAW locator. You can also drop in Punch In/Out points on the fly with the Store button. Press Store for an In point and press Alt+Store for the Out. Some of the other buttons allow you to enter different modes of DAW playback in DP3 and allow you to recall locate points in Pro Tools. The time display on the D8B should match that on the Main Locator in your DAW. If you are viewing SMPTE, for example, the D8B should display SMPTE as well. Please refer to your DAW's controller or HUI implementation manual for details on how this is mapped.

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping

### For Pro Tools

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
 Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
 Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Pro Tools Function
	Fader 17-24	Fader 1-8	N		Move corresponding PT channel Fader
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding PT channel Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding PT channel
	Solo 17-24	Solo 1-8	N		Solo corresponding PT channel
	Select 17-24	Select 1-8	N		Select corresponding PT channel
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding PT channel
	Assign 17-24	VSel 1-8	N		Toggle Pre/Post of corresponding PT channel Send for selected Send A-E. If Level To Tape (HUI Aux Mute) is lit, then it will toggle the mute status of the corresponding PT channel send for the selected Send A-E.
	Alt+Assign 17-24	Insert 1-8	N		Select corresponding PT channel for Insert Editing in VFD
	Write 17-24	Auto 1-8	N		Use in conjunction with Auto Mode values to set automation mode for corresponding PT channel
1	Level to Tape	Aux Mute	N		When lit, assign (V-Sel) toggles the mute status of the selected Send. When not lit, V-Sel will toggle the selected Send Pre/Post.
2	Digital Trim	Shift (flip)	N		Puts HUI layer into shift Mode. Faders now adjust selected Aux Level, V-Pots adjust Aux Pan if available.
3	Aux 1	Send A	N		Enables control of PT Send A by HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of PT Send B by HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of PT Send C by HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of PT Send D by HUI layer V-Pots
7	Aux 5	Send E	N		Enables control of PT Send E by HUI layer V-Pots
8	Aux 7	Rec Ready All	N		Enables all Rec Ready buttons in PT mixer
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of PT Pan on HUI layer V-Pots
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Plug-in/Insert settings for selected Insert Channel. There are two main views: Plug-in Edit View and Insert Assign view.
	D8B VFD V-Pots		N		Changes the assigned Plug-in, chooses a Plug-in Preset, or adjusts a plug-in parameter listed in bottom line of VFD.
	Alt+Right D8B VFD V-Pot	Scroll	N		Scroll to next/previous page of plug-in parameters in Plug-in Edit View. Scroll to inserts 1-4/5 in Insert Assign View.
	D8B VFD Select Buttons		N		Toggle Plug-in Parameter listed in top line of VFD in Plug-in Edit view
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		Enters Insert Assign Mode. When lit, turn a VFD V-Pot to change insert's assigned Plug-in. Press the corresponding VFD Select button to choose.
16	Setup	Compare	N		Toggles the Plug-In Compare button for Active Plug-in
17	Memory A	Bypass	N		Toggles the Bypass button for Active Plug-in
18	Memory B	Insert	N		Toggles between Plug-in Edit view and Insert Assign View
19	EQ	Window Transport	N		Opens/Closes PT Transport Window
20	Gate	Window ALT	N		Opens/Closes selected PT plug-in window
21	Compressor	Window Edit	N		Shows PT Edit Window
22	Plug-ins	Window Status	N		Opens/Closes PT Session Setup Window
23	Load Patch	Window Mix	N		Shows PT Mix Window
24	Save Patch	Window Mem Loc	N		Opens/Closes PT Memory Locate Window
25	Assign Bus 2	Auto Enable Send	N		Auto Arms Send Level in PT Auto Enable Window
26	Assign Bus 3	Auto Enable Plug-in	N		Auto Arms Plug-In in PT Auto Enable Window
27	Assign Bus 4	Auto Enable Send Mute	N		Auto Arms Send Mute in PT Auto Enable Window
28	Assign Bus 5	Auto Mode Read	N		Hold and press a channel Write (HUI Auto) button to put the PT channel into Auto Read Mode
29	Assign Bus 7	Auto Mode Latch	N		Hold and press a channel Write (HUI Auto) button to put the PT channel into Auto Latch Mode
30	Assign Bus 8	Auto Mode Write	N		Hold and press a channel Write (HUI Auto) button to put the PT channel into Auto Write Mode
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		Press twice to save the open PT session
33	Automation Bypass	Auto Mode Off	N		Hold and press a channel Write (HUI Auto) button to turn off PT automation on the channel
34	Automation Faders	Auto Enable Fader	N		Auto Arms Volume in PT Auto Enable Window

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Pro Tools

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Pro Tools Function
35	Automation Mutes	Auto Enable Mute	N		Auto Arms Mute in PT Auto Enable Window
36	Automation Auto Touch	Auto Mode Touch	N		Hold and press a channel Write (HUI Auto) button to put the PT channel into Auto Touch Mode
37	Automation Pan	Auto Enable Pan	N		Auto Arms Pan and Send Pan in PT Auto Enable Window
38	Automation Trim Levels	Auto Mode Trim	N		Hold and press a channel Write (HUI Auto) button to put the PT channel into Auto Trim Mode
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	When PT Numeric Keypad mode is Classic, press to set focus on PT main time window. Then press D8B number pad to enter in new time from right to left. Press to make PT locate to time entered.
40	SMPTE View	F8/Esc	Y	Won't work with snapshot button pressed	Cancel open dialog windows
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed.	
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	OK any on-screen dialogs. Open Create New Memory Location dialog.
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggle PT loop playback
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	Create an In point in the edit window. Can be used during playback.
	Alt + Store	Out	Y		Create an out point in the edit window. Can be used during playback.
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	When PT Numeric Keypad mode is Classic, can be used to recall PT locate points by typing the locate point on the D8B keypad and then pressing Locator (.)
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Rewind PT transport. Return PT locator to beginning of Session.
	Alt + Rewind	RTZ			
47	Fast Fwd	Fast Forward	Y		Fast Forward PT Transport Advance PT Transport to end of session
	Alt + Fast Fwd	End			
48	Stop	Stop	Y		Stop PT playback
49	Play	Play	Y		Start PT playback
50	Record	Record	Y		Press Record and play to start PT recording. If Quick Punch is enabled in PT, press Record to punch in during playback.
51	Jog & Shuttle	Jog/Shuttle Select	Y		Press once to go into jog, press again to go into shuttle, and press again to go back to normal.
52	Jog Wheel	Jog Wheel	Y		Turn wheel to either Jog or Shuttle
53	Cut/Zero Set	Cut	N		Cut selection/region
54	Copy	Copy	N		Copy selection/region
55	Paste	Paste	N		Paste contents of clipboard
56	Undo	Undo	N		Undoes last command in PT

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

- 1 Aux Mute
- 2 Shift (Flip)
- 3 Send A
- 4 Send B
- 5 Send C
- 6 Send D
- 7 Send E
- 8 Rec/Ready All
- 9 Bank Left
- 10 Bank Right
- 11 Channel Left
- 12 Channel Right
- 13 Pan
- 14 Hold Shift and press Masters to go to the HUI Layer
- 15 Assign
- 16 Compare
- 17 Bypass
- 18 Insert
- 19 Window Transport
- 20 Window/ALT
- 21 Window/Edit
- 22 Window/Status
- 23 Window/Mix
- 24 Window/Mem Loc
- 25 Auto Enable Send
- 26 Auto Enable PlugIn
- 27 Auto Enable Send Mute
- 28 Auto Mode Read
- 29 Auto Mode Latch
- 30 Auto Mode Write
- 31 Shift/Adv
- 32 Save
- 33 Auto Mode Off
- 34 Auto Enable Padler
- 35 Auto Enable Mute
- 36 Auto Mode Touch
- 37 Auto Enable Pan
- 38 Auto Mode Trim
- 39 Equals (=)
- 40 F8/Esc
- 41 D8B key pad
- 42 Enter
- 43 Loop
- 44 In ALT = Out
- 45 Decimal (.)
- 46 Rewind ALT = RTZ
- 47 Fast Forward ALT = End
- 48 Stop
- 49 Play
- 50 Record
- 51 Jog/Shuttle Select
- 52 Jog Wheel
- 53 Cut
- 54 Copy
- 55 Paste
- 56 Undo

\* For channel strip insert: hold ALT and press Assign  
 \* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping

### For Nuendo

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
 Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
 Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Nuendo Function
	Fader 17-24	Fader 1-8	N		Move corresponding Nuendo channel Fader
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding Nuendo channel Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding Nuendo channel
	Solo 17-24	Solo 1-8	N		Solo corresponding Nuendo channel
	Select 17-24	Select 1-8	N		Select corresponding Nuendo channel (allows editing of channel parameters in HUI Layer VFD)
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding Nuendo channel
	Assign 17-24	VSel 1-8	N		Toggle Mute Status of the corresponding Nuendo channel send for the selected Send 1-5
	Alt+Assign 17-24	Insert 1-8	N		N/A
	Write 17-24	Auto 1-8	N		Toggles both Auto Read and Auto Write On and Off for corresponding Nuendo channel
1	Level to Tape	Aux Mute	N		N/A
2	Digital Trim	Shift (flip)	N		N/A
3	Aux 1	Send A	N		Enables control of VST channel settings Send 1 by HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of VST channel settings Send 2 by HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of VST channel settings Send 3 by HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of VST channel settings Send 4 by HUI layer V-Pots
7	Aux 5	Send E	N		Enables control of VST channel settings Send 5 by HUI layer V-Pots.
8	Aux 7	Rec Ready All	N		N/A
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of VST channel settings Pan on HUI layer V-Pots.
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Nuendo VST channel settings EQ for selected channel
	D8B VFD V-Pots		N		Adjusts EQ Parameter listed above in VFD screen
	Alt+Right D8B VFD V-Pot	Scroll	N		Scroll through four Nuendo EQ Bands
	D8B VFD Select Buttons		N		Toggle Nuendo EQ setting listed above in VFD
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		N/A
16	Setup	Compare	N		N/A
17	Memory A	Bypass	N		N/A
18	Memory B	Insert	N		N/A
19	EQ	Window Transport	N		Opens/Closes Nuendo Transport Window
20	Gate	Window ALT	N		N/A
21	Compressor	Window Edit	N		Open/Closes Nuendo VST Channel Settings Window
22	Plug-ins	Window Status	N		N/A
23	Load Patch	Window Mix	N		Open/Closes Nuendo VST Mixer Window
24	Save Patch	Window Mem Loc	N		Bring To Front Nuendo Marker Window
25	Assign Bus 2	Auto Enable Send	N		N/A
26	Assign Bus 3	Auto Enable Plug-in	N		N/A
27	Assign Bus 4	Auto Enable Send Mute	N		N/A
28	Assign Bus 5	Auto Mode Read	N		N/A
29	Assign Bus 7	Auto Mode Latch	N		N/A
30	Assign Bus 8	Auto Mode Write	N		N/A
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		Save Nuendo Session.
33	Automation Bypass	Auto Mode Off	N		N/A
34	Automation Faders	Auto Enable Fader	N		N/A



# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Nuendo

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Nuendo Function
35	Automation Mutes	Auto Enable Mute	N		N/A
36	Automation Auto Touch	Auto Mode Touch	N		N/A
37	Automation Pan	Auto Enable Pan	N		N/A
38	Automation Trim Levels	Auto Mode Trim	N		N/A
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	N/A
40	SMPTE View	F8/Esc	Y	Won't work with snapshot button pressed	N/A
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed	Type Nuendo Locate point number on Keypad. Press enter to store the number as a new locate point. Press Locator to recall the numbered located point.
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	Press to set L Locator to current position
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggle Nuendo Loop Playback
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	N/A
	Alt + Store	Out	Y		N/A
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	Type Nuendo Locate point number on Keypad. Press Locator to recall the numbered located point.
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Rewind Nuendo transport
	Alt + Rewind	RTZ			Return Nuendo locator to beginning of Session
47	Fast Fwd	Fast Forward	Y		Fast Forward Nuendo Transport
	Alt + Fast Fwd	End			N/A
48	Stop	Stop	Y		Stop Nuendo playback
49	Play	Play	Y		Start Nuendo playback
50	Record	Record	Y		Start Recording in Nuendo. Press during playback to punch into record; press again to punch out.
51	Jog & Shuttle	Jog/Shuttle Select	Y		N/A
52	Jog Wheel	Jog Wheel	Y		Control playback cursor position with wheel. Rewind or Fast Forward
53	Cut/Zero Set	Cut	N		Cut selection/event/part
54	Copy	Copy	N		Copy selection/event/part
55	Paste	Paste	N		Paste contents of clipboard
56	Undo	Undo	N		Press to undo previous command in Nuendo edit history (supports multiple undos)

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

- Aux Mute
- Shift (Flip)
- Send A
- Send B
- Send C
- Send D
- Send E
- Rec Ready All
- Bank Left
- Bank Right
- Channel Left
- Channel Right
- F8
- Hold Shift and press Masters to go to the HUI Layer
- Assign
- Compare
- Bypan
- Insert
- Window Transport
- Window ALT
- Window Edit
- Window Status
- Window Misc
- Window Mem Loc
- Auto Enable Send
- Auto Enable Pad
- Auto Enable PlugIn
- Auto Enable Send Mute
- Auto Mode Read
- Auto Mode Latch
- Auto Mode Write
- Shift/Adv
- Save
- Auto Mode Off
- Auto Enable Pad
- Auto Enable Mute
- Auto Enable Pan
- Auto Mode Trim
- Equals (=)
- F8/Esc
- D8B key pad
- Enter
- Loop
- In ALT = Out
- Decimal (.) ALT = RTZ
- Rewind ALT = RTZ
- Fast Forward ALT = End
- Stop
- Play
- Record
- Jog/Shuttle Select
- Jog Wheel
- Cut
- Copy
- Paste
- Undo

\* For channel strip insert: hold ALT and press Assign  
\* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping

### For Cubase SX

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
 Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
 Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Cubase SX Function
	Fader 17-24	Fader 1-8	N		Move corresponding Cubase SX channel Fader
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding Cubase SX channel Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding Cubase SX channel
	Solo 17-24	Solo 1-8	N		Solo corresponding Cubase SX channel
	Select 17-24	Select 1-8	N		Select corresponding Cubase SX channel (allows editing of channel parameters in HUI Layer VFD)
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding Cubase SX channel
	Assign 17-24	VSel 1-8	N		Toggle Mute Status of the corresponding Cubase SX channel send for the selected Send 1-5
	Alt+Assign 17-24	Insert 1-8	N		N/A
	Write 17-24	Auto 1-8	N		Toggles both Auto Read and Auto Write On and Off for corresponding Cubase SX channel
1	Level to Tape	Aux Mute	N		N/A
2	Digital Trim	Shift (flip)	N		N/A
3	Aux 1	Send A	N		Enables control of VST channel settings Send 1 by HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of VST channel settings Send 2 by HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of VST channel settings Send 3 by HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of VST channel settings Send 4 by HUI layer V-Pots
7	Aux 5	Send E	N		Enables control of VST channel settings Send 5 by HUI layer V-Pots
8	Aux 7	Rec Ready All	N		N/A
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of VST channel settings Pan on HUI layer V-Pots
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Cubase SX VST channel settings EQ for selected channel
	D8B VFD V-Pots		N		Adjusts EQ Parameter listed above in VFD screen
	Alt+Right D8B VFD V-Pot	Scroll	N		Scroll through four Cubase SX EQ Bands
	D8B VFD Select Buttons		N		Toggle Cubase SX EQ setting listed above in VFD
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		N/A
16	Setup	Compare	N		N/A
17	Memory A	Bypass	N		N/A
18	Memory B	Insert	N		N/A
19	EQ	Window Transport	N		Opens/Closes Cubase SX Transport Window
20	Gate	Window ALT	N		N/A
21	Compressor	Window Edit	N		N/A
22	Plug-ins	Window Status	N		N/A
23	Load Patch	Window Mix	N		N/A
24	Save Patch	Window Mem Loc	N		Bring To Front Cubase SX Marker Window
25	Assign Bus 2	Auto Enable Send	N		N/A
26	Assign Bus 3	Auto Enable Plug-in	N		N/A
27	Assign Bus 4	Auto Enable Send Mute	N		N/A
28	Assign Bus 5	Auto Mode Read	N		N/A
29	Assign Bus 7	Auto Mode Latch	N		N/A
30	Assign Bus 8	Auto Mode Write	N		N/A
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		Save Cubase SX Session
33	Automation Bypass	Auto Mode Off	N		N/A
34	Automation Faders	Auto Enable Fader	N		N/A

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Cubase SX

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Cubase SX Function
35	Automation Mutes	Auto Enable Mute	N		N/A
36	Automation Auto Touch	Auto Mode Touch	N		N/A
37	Automation Pan	Auto Enable Pan	N		N/A
38	Automation Trim Levels	Auto Mode Trim	N		N/A
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	N/A
40	SMPTE View	F8/Esc	Y	Won't work with snapshot button pressed	N/A
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed	Type Cubase SX Locate point number on Keypad. Press enter to store the number as a new locate point. Press Locator to recall the numbered located point.
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	Press to set L Locator to current position.
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggle Cubase SX Loop Playback
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	N/A
	Alt + Store	Out	Y		N/A
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	Type Cubase SX Locate point number on Keypad. Press Locator to recall the numbered located point.
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Rewind Cubase SX transport
	Alt + Rewind	RTZ			Return Cubase SX locator to beginning of Session
47	Fast Fwd	Fast Forward	Y		Fast Forward Cubase SX Transport
	Alt + Fast Fwd	End			N/A
48	Stop	Stop	Y		Stop Cubase SX playback
49	Play	Play	Y		Start Cubase SX playback
50	Record	Record	Y		Start Recording in Cubase SX. Press during playback to punch into record; press again to punch out.
51	Jog & Shuttle	Jog/Shuttle Select	Y		N/A
52	Jog Wheel	Jog Wheel	Y		Control playback cursor position with wheel. Rewind or Fast Forward.
53	Cut/Zero Set	Cut	N		Cut selection/event/part
54	Copy	Copy	N		Copy selection/event part
55	Paste	Paste	N		Paste contents of clipboard
56	Undo	Undo	N		Press to undo previous command in Cubase SX edit history (supports multiple undos)

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

- 1 Aux Mute
- 2 Shift (Flip)
- 3 Send A
- 4 Send B
- 5 Send C
- 6 Send D
- 7 Send E
- 8 Rec/Ready All
- 9 Bank Left
- 10 Bank Right
- 11 Channel Left
- 12 Channel Right
- 13 Pan
- 14 Hold Shift and press: Masters to go to the HUI Layer
- 15 Assign
- 16 Compare
- 17 Bypass
- 18 Insert
- 19 Window Transport
- 20 Window ALT
- 21 Window Edit
- 22 Window Status
- 23 Window Mics
- 24 Window Mem Loc
- 25 Auto Enable Send
- 26 Auto Enable PlugIn
- 27 Auto Enable Send Mute
- 28 Auto Mode Read
- 29 Auto Mode Latch
- 30 Auto Mode Write
- 31 Shift/Add
- 32 Save
- 33 Auto Mode Off
- 34 Auto Enable Fader
- 35 Auto Enable Mute
- 36 Auto Mode Pan
- 37 Auto Enable Pan
- 38 Auto Mode Trim
- 39 Equals (=)
- 40 F8/Escape
- 41 D8B key pad
- 42 Enter
- 43 Loop
- 44 In ALT = Out
- 45 Decimal (.)
- 46 Rewind ALT = RTZ
- 47 Fast Forward ALT = End
- 48 Stop
- 49 Play
- 50 Record
- 51 Jog/Shuttle Select
- 52 Jog Wheel
- 53 Cut
- 54 Copy
- 55 Paste
- 56 Undo

\* For channel strip insert: hold ALT and press Assign  
\* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping

### For DP3.1

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
 Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
 Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	DP3.1 Function
	Fader 17-24	Fader 1-8	N		Move corresponding DP3 channel Fader.
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding DP3 channel Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding DP3 channel
	Solo 17-24	Solo 1-8	N		Solo corresponding DP3 channel
	Select 17-24	Select 1-8	N		Select corresponding DP3 channel
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding DP3 channel
	Assign 17-24	VSel 1-8	N		Toggle Pre/Post of corresponding PT channel Send for selected Aux 1-5. If Level To Tape (HUI Aux Mute) is lit, then it will toggle the mute status of the corresponding PT channel send for the selected Aux 1-5.
	Alt+Assign 17-24	Insert 1-8	N		Select corresponding DP3 channel for Insert Editing in VFD
	Write 17-24	Auto 1-8	N		Use in conjunction with Auto Mode values to set automation mode for corresponding DP3 Channel.
1	Level to Tape	Aux Mute	N		When lit, assign (V-Sel) toggles the mute status of the selected Aux. When not lit, V-Sel will toggle the selected Aux Pre/Post.
2	Digital Trim	Shift (flip)	N		N/A
3	Aux 1	Send A	N		Enables control of DP3 Mixing Board Aux 1 by HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of DP3 Mixing Board Aux 2 by HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of DP3 Mixing Board Aux 3 by HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of DP3 Mixing Board Aux 4 by HUI layer V-Pots
7	Aux 5	Send E	N		N/A
8	Aux 7	Rec Ready All	N		N/A
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of VST channel settings Pan on HUI layer V-Pots
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Plug-in/Insert settings for selected Insert Channel. There are two main views: Plug-in Edit View and Insert Assign view.
	D8B VFD V-Pots		N		Changes the assigned Plug-in, chooses a Plug-in Preset, or adjusts a plug-in parameter listed in bottom line of VFD.
	Alt+Right D8B VFD V-Pot	Scroll	N		Scroll to next/previous parameter of plug-in parameters in Plug-in Edit View. Scroll to next/previous insert in Insert Assign View.
	D8B VFD Select Buttons		N		Select Insert Slot for Editing in Insert Assign View. Selected Insert has Arrows pointing to the Slot.
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		Toggles function of VFD V-Pots in Insert Assign view. When not lit, V-Pots select Plug-in for their corresponding slot. When lit, V-Pots select preset for their corresponding plug-in.
16	Setup	Compare	N		N/A
17	Memory A	Bypass	N		Toggles bypass of selected plug-in
18	Memory B	Insert	N		Toggles Plug-in Edit Mode for selected plug-in
19	EQ	Window Transport	N		Bring to front Control Panel Window (Transport)
20	Gate	Window ALT	N		Open Insert Window
21	Compressor	Window Edit	N		Open Sequence Editor Window
22	Plug-ins	Window Status	N		Open Audio Monitor Window
23	Load Patch	Window Mix	N		Open Mixing Board Window
24	Save Patch	Window Mem Loc	N		Open Markers Window
25	Assign Bus 2	Auto Enable Send	N		Toggles Send Level Automation Enable in DP3 Automation Setup window
26	Assign Bus 3	Auto Enable Plug-in	N		Toggles Effect Bypass and Effect Parameter Automation Enables in DP3 Automation Setup window
27	Assign Bus 4	Auto Enable Send Mute	N		Toggles Send Mute Automation Enable in DP3 Automation Setup window
28	Assign Bus 5	Auto Mode Read	N		Hold and Press a channel Write (HUI Auto) button to enable automation playback on the corresponding DP3 channel
29	Assign Bus 7	Auto Mode Latch	N		Hold and Press a channel Write (HUI Auto) button to enable automation playback and recording on the corresponding DP3 channel, and to put the channel into Latch automation mode.
30	Assign Bus 8	Auto Mode Write	N		Hold and press a channel Write (HUI Auto) button to enable automation playback and recording on the corresponding DP3 channel, and to put the channel into Overwrite automation mode.
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		Press twice to save the open DP3 session
33	Automation Bypass	Auto Mode Off	N		Hold and press a channel Write (HUI Auto) button to disable automation playback and recording on the corresponding DP3 channel, and to put the channel into Touch automation mode.
34	Automation Faders	Auto Enable Fader	N		Toggles Audio Volume and MIDI Volume Automation Enables in DP3 Automation Setup window

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For DP3.1

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	DP3.1 Function
35	Automation Mutes	Auto Enable Mute	N		Toggles Audio Track Mute and MIDI Track Mute Automation Enables in DP3 Automation Setup window
36	Automation Auto Touch	Auto Mode Touch	N		Hold and Press a channel Write (HUI Auto) button to enable automation playback and recording on the corresponding DP3 channel, and to put the channel into Touch automation mode.
37	Automation Pan	Auto Enable Pan	N		Toggles Audio Pan and MIDI Pan Automation Enable in DP3 Automation Setup window.
38	Automation Trim Levels	Auto Mode Trim	N		Hold and Press a channel Write (HUI Auto) button to enable automation playback and recording on the corresponding DP3 channel, and to put the channel into Trim Latch automation mode.
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	Toggle Memory Cycle Button
40	SMPT View	F8/Esc	Y	Won't work with snapshot button pressed	Cancel open dialog windows
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed	Corresponds to Mac number pad. See DP3 commands window for command mapping.
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	OK any on-screen dialogs. Play.
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggle Memory Cycle Button
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	Set the Punch-In point to the current cursor position. Can be used during playback.
	Alt + Store	Out	Y		Set the Punch-Out point to the current cursor position. Can be used during playback.
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	Highlight DP3 current locator position. Use D8B keypad to enter in numbers. Press enter to confirm and go to the new locate point.
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Rewind DP3 transport
	Alt + Rewind	RTZ			Return DP3 locator to beginning memory locate point. Press again to return to beginning of timeline.
47	Fast Fwd	Fast Forward	Y		Fast Forward DP3
	Alt + Fast Fwd	End			Advance DP3 Transport to end of session
48	Stop	Stop	Y		Stop DP3 playback
49	Play	Play	Y		Start DP3 playback
50	Record	Record	Y		Start Recording in DP3. Press during playback to punch into record; press again to punch out.
51	Jog & Shuttle	Jog/Shuttle Select	Y		Press once to go into jog, press again to go into shuttle, and press again to go back to normal.
52	Jog Wheel	Jog Wheel	Y		Turn wheel to either Jog or Shuttle. If you are pop editing a soundbite and you enter jog, audio will be heard while you scrub the soundbite. If you are editing a soundbite in the Soundbite Edit window, you can also scrub the audio.
53	Cut/Zero Set	Cut	N		Cut selection/sound bite
54	Copy	Copy	N		Copy selection/sound bite
55	Paste	Paste	N		Paste contents of clipboard
56	Undo	Undo	N		Press to undo previous command. Press again to redo the command (no access to multiple undos).

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

- 1 Aux Mute
- 2 Shift (Flip)
- 3 Send A
- 4 Send B
- 5 Send C
- 6 Send D
- 7 Send E
- 8 Rec/Ready All
- 9 Bank Left
- 10 Bank Right
- 11 Channel Left
- 12 Channel Right
- 13 Pan
- 14 Hold Shift and press: Masters to go to the HUI Layer
- 15 Assign
- 16 Compare
- 17 Bypass
- 18 Insert
- 19 Window Transport
- 20 Window ALT
- 21 Window Edit
- 22 Window Status
- 23 Window Mutes
- 24 Window Mem Loc
- 25 Auto Enable Send
- 26 Auto Enable PlugIn
- 27 Auto Enable Send Mute
- 28 Auto Mode Read
- 29 Auto Mode Latch
- 30 Auto Mode Write
- 31 Shift/Add
- 32 Save
- 33 Auto Mode Off
- 34 Auto Enable Pad
- 35 Auto Enable Mute
- 36 Auto Mode Touch
- 37 Auto Enable Pan
- 38 Auto Mode Trim
- 39 Equals (=)
- 40 F8/Esc
- 41 D8B key pad
- 42 Enter
- 43 Loop
- 44 In
- 45 Decimal (.)
- 46 Rewind
- 47 Fast Forward
- 48 Stop
- 49 Play
- 50 Record
- 51 Jog/Shuttle Select
- 52 Jog Wheel
- 53 Cut
- 54 Copy
- 55 Paste
- 56 Undo

\* For channel strip insert: hold ALT and press Assign  
 \* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping

### For Soundscape

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
 Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
 Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Soundscape Function
	Fader 17-24	Fader 1-8	N		Move corresponding Soundscape channel Output Element Fader
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding Soundscape channel Output Element Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding Soundscape channel Output Element
	Solo 17-24	Solo 1-8	N		Solo corresponding Soundscape channel Output Element
	Select 17-24	Select 1-8	N		N/A
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding Soundscape channel Track Insert (only one track insert can be controlled)
	Assign 17-24	VSel 1-8	N		Toggle Mute Status of corresponding Soundscape channel Send for selected Send A-E. If Level To Tape (HUI Aux Mute) is lit, then it will toggle the mute status of the corresponding Soundscape channel Input Element.
	Alt+Assign 17-24	Insert 1-8	N		Select corresponding Soundscape channel for Effect Editing in VFD
	Write 17-24	Auto 1-8	N		N/A
1	Level to Tape	Aux Mute	N		When lit, channel Assign (VSel) toggles the Mute status of the corresponding channel send. When not lit, channel Assign (VSel) toggles the Mute status of the corresponding channel Input Element.
2	Digital Trim	Shift (flip)	N		When lit, V-Pots control the panning of the selected send or they control the Y Axis panning of a surround panner if Pan is selected
3	Aux 1	Send A	N		Enables control of first Aux send on a channel with HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of second Aux send on a channel with HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of third Aux send on a channel with HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of fourth Aux send on a channel with HUI layer V-Pots
7	Aux 5	Send E	N		Enables control of fifth Aux send on a channel with HUI layer V-Pots
8	Aux 7	Rec Ready All	N		Arm or disarm all available tracks containing track inserts (only the first track insert per column is controlled)
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of VST Channel Settings Pan on HUI layer V-Pots
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Plug-in Parameters and values for the selected Insert Channel
	D8B VFD V-Pots		N		Adjust the plug-in parameter displayed above it in the VFD
	Alt+Right D8B VFD V-Pot	Scroll	N		Shift to next/previous parameter in VFD for the current plug-in
	D8B VFD Select Buttons		N		N/A
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		Toggles the bottom line of the VFD to display the parameter names or the parameter values for editing.
16	Setup	Compare	N		N/A
17	Memory A	Bypass	N		Bypasses the currently selected Plug-in
18	Memory B	Insert	N		N/A
19	EQ	Window Transport	N		N/A
20	Gate	Window ALT	N		N/A
21	Compressor	Window Edit	N		N/A
22	Plug-ins	Window Status	N		N/A
23	Load Patch	Window Mix	N		N/A
24	Save Patch	Window Mem Loc	N		N/A
25	Assign Bus 2	Auto Enable Send	N		N/A
26	Assign Bus 3	Auto Enable Plug-in	N		N/A
27	Assign Bus 4	Auto Enable Send Mute	N		N/A
28	Assign Bus 5	Auto Mode Read	N		N/A
29	Assign Bus 7	Auto Mode Latch	N		N/A
30	Assign Bus 8	Auto Mode Write	N		N/A
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		N/A
33	Automation Bypass	Auto Mode Off	N		N/A
34	Automation Faders	Auto Enable Fader	N		N/A

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Soundscape

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Soundscape Function
35	Automation Mutes	Auto Enable Mute	N		N/A
36	Automation Auto Touch	Auto Mode Touch	N		N/A
37	Automation Pan	Auto Enable Pan	N		N/A
38	Automation Trim Levels	Auto Mode Trim	N		N/A
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	Press to set the current play locator, then type in the new time on the D8B numeric keypad and press Enter to locate to the newly entered time.
40	SMPTE View	F8/Esc	Y	Won't work with snapshot button pressed	N/A
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed	Corresponds to PC numeric keypad
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	N/A
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggle Loop button
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	Toggle Auto Punch In button
	Alt + Store	Out	Y		Toggle Auto Punch Out button
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	N/A
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Rewind
	Alt + Rewind	RTZ			Go to L locator
47	Fast Fwd	Fast Forward	Y		Fast Forward
	Alt + Fast Fwd	End			Go to R locator
48	Stop	Stop	Y		Stop. Press again to return to L Locator. Press again to return to beginning.
49	Play	Play	Y		Play. Also punches out of recording.
50	Record	Record	Y		Start Recording. Press during playback to punch into record; press again to punch out.
51	Jog & Shuttle	Jog/Shuttle Select	Y		N/A
52	Jog Wheel	Jog Wheel	Y		Jog
53	Cut/Zero Set	Cut	N		N/A
54	Copy	Copy	N		N/A
55	Paste	Paste	N		N/A
56	Undo	Undo	N		N/A

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

- 1 Aux Mute
- 2 Shift (Rip)
- 3 Send A
- 4 Send B
- 5 Send C
- 6 Send D
- 7 Send E
- 8 Rec/Ready All
- 9 Bank Left
- 10 Bank Right
- 11 Channel Left
- 12 Channel Right
- 13 Pan
- 14 Hold Shift and press: Masters to go to the HUI Layer
- 15 Assign
- 16 Compare
- 17 Bypass
- 18 Insert
- 19 Window Transport
- 20 Window ALT
- 21 Window Edit
- 22 Window Status
- 23 Window Mute
- 24 Window Mem Loc
- 25 Auto Enable Send
- 26 Auto Enable PlugIn
- 27 Auto Enable Send Mute
- 28 Auto Mode Read
- 29 Auto Mode Latch
- 30 Auto Mode Write
- 31 Shift/Add
- 32 Save
- 33 Auto Mode Off
- 34 Auto Enable Pad/L
- 35 Auto Enable Mute
- 36 Auto Mode Touch
- 37 Auto Enable Pan
- 38 Auto Mode Trim
- 39 Equals (=)
- 40 F8/Escape
- 41 D8B key pad
- 42 Enter
- 43 Loop
- 44 In ALT = Out
- 45 Decimal (.)
- 46 Rewind ALT = RTZ
- 47 Fast Forward ALT = End
- 48 Stop
- 49 Play
- 50 Record
- 51 Jog/Shuttle Select
- 52 Jog Wheel
- 53 Cut
- 54 Copy
- 55 Paste
- 56 Undo

\* For channel strip insert: hold ALT and press Assign  
\* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Logic 6

16220 Woodinville Redmond Rd. NE Woodinville, WA 98072  
Tel: 800-258-6883 Fax: 425-806-6312 e-mail: techmail@mackie.com  
Last Updated: 2/07/03

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Logic 6 Function
	Fader 17-24	Fader 1-8	N		Move corresponding Logic channel Fader
	Channel V-Pot 17-24	Channel V-Pot 1-8	N		Move corresponding Logic channel Pan or Send Level
	Mute 17-24	Mute 1-8	N		Mute corresponding Logic channel
	Solo 17-24	Solo 1-8	N		Solo corresponding Logic channel
	Select 17-24	Select 1-8	N		Select corresponding Logic channel
	Record Ready 17-24	Record Ready 1-8	N		Record Arm corresponding Logic channel
	Assign 17-24	VSel 1-8	N		Toggle Pre/Post of corresponding Logic channel Send for selected Send A-E. If Level To Tape (HUI Aux Mute) is lit, then it will toggle the mute status of the corresponding Logic channel send for the selected Send A-E.
	Alt+Assign 17-24	Insert 1-8	N		Selects track for plug-in selection. If Bypass (#17) is on, then it toggles bypass of currently selected insert slot.
	Write 17-24	Auto 1-8	N		Cycles automation. Use in conjunction with Auto Mode values to set automation mode for corresponding Logic track.
1	Level to Tape	Aux Mute	N		When lit, assign (V-SEL) toggles the mute status of the selected Send. When not lit, V-SEL will toggle the selected Send Pre/Post.
2	Digital Trim	Shift (flip)	N		Puts HUI layer into shift Mode. Faders now adjust selected Aux Level, V-Pots adjust Aux Pan if available.
3	Aux 1	Send A	N		Enables control of Logic Send 1 by HUI layer V-Pots
4	Aux 2	Send B	N		Enables control of Logic Send 2 by HUI layer V-Pots
5	Aux 3	Send C	N		Enables control of Logic Send 3 by HUI layer V-Pots
6	Aux 4	Send D	N		Enables control of Logic Send 4 by HUI layer V-Pots
7	Aux 5	Send E	N		Enables control of Logic Send 5 by HUI layer V-Pots
8	Aux 7	Rec Ready All	N		Disables Record Ready on all tracks
9	Aux 9-10	Bank Left	N		Shifts HUI layer to left by 8 to view previous 8 faders
10	Aux 11-12	Bank Right	N		Shifts HUI layer to right by 8 to view next 8 faders
11	Aux 9-10 Pan	Channel Left	N		Shifts HUI layer to left by 1 to view previous fader
12	Aux 11-12 Pan	Channel Right	N		Shifts HUI layer to right by 1 to view next fader
13	Pan	Pan	N		Enables control of Logic Pan on HUI layer V-Pots
14	Shift		N		N/A
	Shift + Masters	N/A	Y	Go to HUI Layer on D8B	Go to HUI layer on D8B
	D8B VFD Display		N		Displays Plug-in/Insert settings for selected Insert Channel. There are two main views: Plug-in Edit View and Insert Assign view.
	D8B VFD V-Pots		N		Changes the assigned Plug-in, chooses a Plug-in Preset, or adjusts a plug-in parameter listed in bottom line of VFD.
	Alt+Right D8B VFD V-Pot	Scroll	N		Scroll to next/previous page of plug-in parameters in Plug-in Edit View. Scroll to inserts 1-4/5 in Insert Assign View.
	D8B VFD Select Buttons		N		Toggle Plug-in Parameter listed in top line of VFD in Plug-in Edit view
	Previous / Next	N/A	N		Change between normal HUI VFD mode and channel HUI VFD Mode. See note below.
15	On	Assign	N		N/A
16	Setup	Compare	N		Toggles the VFD display between "track name/parameter name" and "parameter name/parameter value" modes
17	Memory A	Bypass	N		Toggles the Bypass button for Active Plug-in
18	Memory B	Insert	N		Toggles between Plug-in Edit view and Insert Assign View
19	EQ	Window Transport	N		Opens/Closes Logic Transport Window
20	Gate	Window ALT	N		Opens/Closes selected Logic Sample Editor Window
21	Compressor	Window Edit	N		Shows Logic Arrange Window
22	Plug-ins	Window Status	N		Opens/Closes Logic Audio Pool Window
23	Load Patch	Window Mix	N		Shows Logic Track Mixer Window
24	Save Patch	Window Mem Loc	N		Opens/Closes Logic Marker List Window
25	Assign Bus 2	Auto Enable Send	N		Toggles automation playback and recording of send level
26	Assign Bus 3	Auto Enable Plug-in	N		Toggles automation playback and recording of plug-in parameters
27	Assign Bus 4	Auto Enable Send Mute	N		N/A
28	Assign Bus 5	Auto Mode Read	N		Hold and press a channel Write (HUI Auto) button to put the Logic channel into Auto Read Mode
29	Assign Bus 7	Auto Mode Latch	N		Hold and press a channel Write (HUI Auto) button to put the Logic channel into Auto Latch Mode
30	Assign Bus 8	Auto Mode Write	N		Hold and press a channel Write (HUI Auto) button to put the Logic channel into Auto Write Mode
31	Assign L-R	Shift/Add	N		Shifts to second function of some buttons. Used to select multiple values of some parameters.
32	Assign Route To Tape	Save	N		Saves the song
33	Automation Bypass	Auto Mode Off	N		Hold and press a channel Write (HUI Auto) button to turn off Logic automation on the channel
34	Automation Faders	Auto Enable Fader	N		Toggles automation playback and recording of volume



# MACKIE®

## D8B v5.1 B445 HUI Layer Control Mapping For Logic 6

D8B Button Number	D8B Button	Mapped HUI Button	Global Mode	General HUI Layer Comments	Logic 6 Function
35	Automation Mutes	Auto Enable Mute	N		Toggles automation playback and recording of mute
36	Automation Auto Touch	Auto Mode Touch	N		Hold and press a channel Write (HUI Auto) button to put the Logic channel into Auto Touch Mode
37	Automation Pan	Auto Enable Pan	N		Toggles automation playback and recording of pan
38	Automation Trim Levels	Auto Mode Trim	N		N/A
39	Set Time	Equals (=)	Y	Won't work with snapshot button pressed	Creates a marker at the current song position
40	SMPTÉ View	F8/Esc	Y	Won't work with snapshot button pressed	Cancel open dialog windows
41	D8B Keypad	HUI/D8B key pad	Y/N	The key pad works with D8B with snapshot button pressed	Corresponds to Mac numeric keyboard. Recalls Markers 1-9.
42	Enter	Enter	Y/N	The Enter key works with D8B with snapshot button pressed	OK any on-screen dialogs. Enters folders on selected tracks.
43	Loop	Loop	Y	Won't work with snapshot button pressed	Toggles cycle mode
44	Store	In	Y	The Store key works with D8B with snapshot button pressed	Sets Drop In locator
	Alt + Store	Out	Y		Sets Drop Out locator
45	Locator	Decimal (.)	Y	Won't work with snapshot button pressed	Enters Go To Marker mode
	Snapshot	N/A	Y	Toggles D8B snapshot recall mode.	Press to enter D8B snapshot mode. Type a snapshot number and press Enter to recall a snapshot. Press Store, type a number, and press Enter to store a snapshot. Exit snapshot mode by pressing Snapshot or Enter.
46	Rewind	Rewind	Y		Shuffles backward
	Alt + Rewind	RTZ			Goes to the left locator
47	Fast Fwd	Fast Forward	Y		Shuffles forward
	Alt + Fast Fwd	End			Goes to the right locator
48	Stop	Stop	Y		Stop Logic playback
49	Play	Play	Y		Start Logic playback
50	Record	Record	Y		Start recording in Logic
51	Jog & Shuttle	Jog/Shuttle Select	Y		Press once to go into jog, press again to go into shuttle, and press again to go back to normal.
52	Jog Wheel	Jog Wheel	Y		Normal: move Song Position Locator by one bar; Scrub: scrub; Shuffle: shuffle.
53	Cut/Zero Set	Cut	N		Cuts the selection
54	Copy	Copy	N		Copies the selection
55	Paste	Paste	N		Paste contents of clipboard
56	Undo	Undo	N		Undoes last command in Logic

### Other HUI Mode/HUI Layer Notes:

**Global Mode:** Global functions are always active when HUI Mode is on, no matter what D8B bank is active. Non-global functions are active only when HUI Mode is On and the D8B is displaying the HUI Layer.

**Normal HUI VFD Mode:** HUI Layer VFD displays the normal HUI VFD screen exactly as a real HUI would. The contents of the VFD depend on the DAW in use and other settings. See notes on the VFD above.

**Channel HUI VFD Mode:** HUI Layer VFD displays eight channel names in bottom line of VFD. First two VFD select buttons mirror the Channel L and Channel R functions. The name of the selected channel/function is displayed in the center of the top VFD line. The Online status is also displayed at the end of this line.

**D8B/HUI BUTTON REMAPPING**

1 Aux Mute  
2 Shift (Flip)  
3 Send A  
4 Send B  
5 Send C  
6 Send D  
7 Send E  
8 Rec Ready All  
9 Bank Left  
10 Bank Right  
11 Channel Left  
12 Channel Right  
13 Fap  
14 Hold Shift and press Masters to go to the HUI Layer  
15 Assign  
16 Compare  
17 Bypass  
18 Insert  
19 Window Transport  
20 Window ALT  
21 Window Edit  
22 Window Status  
23 Window Misc  
24 Window Mem Loc  
25 Auto Enable Send  
26 Auto Enable PlugIn  
27 Auto Enable Send Mute  
28 Auto Mode Read  
29 Auto Mode Latch  
30 Auto Mode Write  
31 Shift/Add  
32 Save  
33 Auto Mode Off  
34 Auto Enable Fader  
35 Auto Enable Mute  
36 Auto Mode Touch  
37 Auto Enable Pan  
38 Auto Mode Trim  
39 Equals (=)  
40 F8/Esc  
41 D8B key pad  
42 Enter  
43 Loop  
44 In  
45 Decimal (.)  
46 Rewind ALT = RTZ  
47 Fast Forward ALT = End  
48 Stop  
49 Play  
50 Record  
51 Jog/Shuttle Select  
52 Jog Wheel  
53 Cut  
54 Copy  
55 Paste  
56 Undo

\* For channel strip insert: hold ALT and press Assign  
\* For HUI VFD scroll: hold ALT and turn the fourth VFD V-Pot

# Appendix G

## Compatible Cables

### Analog and Digital Multitrack Cables

The following companies supply analog and digital multitrack cables for use with the HDR24/96 I/O cards:

#### Horizon Music, Inc.

P.O. Box 1988, Cape Girardeau MO 63702-1988  
Tel: (800) 255-9822; Fax: (800) 455-3460  
<http://www.horizonmusic.com>

##### **AIO•8 Analog Interface Cables**

**HDA8 Series** DB25 to [specify connector]  
Connector options: 8 male XLR, 8 female XLR, or 8 1/4" TRS  
Standard lengths: 5, 10, 15, 20, 25 feet

##### **DIO•8 TDIF Interface Cables**

**TDIF Series** DB25 to DB25  
Standard lengths: 5, 10, 15 feet

##### **PDI•8 AES/EBU Interface Cables**

**HD44 Series** DB25 to [specify connector]  
Connector options: 4 male + 4 female XLR, or DB25  
Standard lengths: 5, 10, 15, 20, 25 feet

#### Hosa Technology, Inc.

6920 Hermosa Circle, Buena Park CA 90620  
Tel: (714) 736-9270; Fax (714) 522-4540  
<http://www.hosatech.com>

##### **AIO•8 Analog Interface Cables**

**DTP Series** DB25 to 8 1/4" TRS  
**DTF Series** DB25 to 8 female XLR's  
**DTM Series** DB25 to 8 male XLR's  
Standard lengths: 3, 4, 5, 7 meters

##### **DIO•8 TDIF Interface Cables**

**DBK Series** DB25 to DB25  
Standard lengths: 3, 15 feet

##### **OPT•8 / DIO•8 ADAT Optical Interface Cables**

**OPT Series** Standard ADAT Optical cables  
**OPM Series** Jacketed ADAT Optical cables w/ metal headshell  
OPT lengths: 2, 3, 6, 10, 13, 17, 30, 50 feet  
OPM lengths: 3, 5, 10, 15, 20, 30, 50 feet

##### **PDI•8 AES/EBU Interface Cables**

**DBK Series** DB25 to 4 male, 4 female XLR's  
Standard length: 8 meters only

## Marshall Electronics

PO Box 2027, Culver City, CA 90231  
Tel: (800) 800-6608; Fax: (310) 391-8926  
<http://www.mars-cam.com>

### **AIO•8 Analog Interface Cables**

<b>DC-DAXM Series</b>	DB25 to 8 male XLR's
<b>DC-DAXF Series</b>	DB25 to 8 female XLR's
<b>DC-DAS Series</b>	DB25 to 8 1/4" TRS
Standard lengths:	3, 5, 10, 15, 20, and 25 feet

### **DIO•8 TDIF Interface Cables**

<b>DCD-88D Series</b>	DB25 to DB25.
Standard lengths:	1, 3, 6, 12, 15, 20, 25, and 33 feet.

### **PDI•8 AES/EBU Interface Cables**

<b>DC-SYX Series</b>	DB25 to 4 male, 4 female XLR's
<b>DC-DUB Series</b>	DB25 to DB25
Standard lengths:	3, 5, 10, 15, 20, 25 feet

## Pro Co Sound, Inc.

135 E. Kalamazoo Ave., Kalamazoo, MI 49007  
Tel: (800) 253-7360; Fax: (616) 388-9681  
<http://www.procosound.com>

### **AIO•8 Analog Interface Cables**

<b>DA-88 XM Series</b>	DB25 to 8 male XLR's
<b>DA-88 XF Series</b>	DB25 to 8 female XLR's
<b>DA-88 BQ Series</b>	DB25 to 8 1/4" TRS connectors
Standard lengths:	5, 10, 15, 20 feet

## Other Cables

In addition to the companies listed above, the following companies supply individual 110Ω AES/EBU and/or 75Ω word clock and video cables:

### **Apogee Electronics Corporation**

3145 Donald Douglas Loop South  
Santa Monica, CA 90405-3210  
Tel: (310) 915-1000; Fax: (310) 391-6262  
<http://www.apogeedigital.com>

### **Canare**

531 5th Street, Unit A, San Fernando, CA 91340  
Tel: (818) 365-2446; Fax: (818) 365-0479  
<http://www.canare.com>

### **Whirlwind**

99 Ling Rd., Rochester, NY 14612  
Tel: (888) 733-4396; Fax: (716) 865-8930  
<http://www.whirlwindusa.com>

# Index

## Symbols

2 Track A, B, and C .....	24, 34
20/20 EQ .....	84
25-pin .....	22, 23
3-Band Parametric EQ .....	158
4-band Parametric .....	84
5.1 .....	75
6.1 .....	75
7.1 (SDDS) .....	75
7.1 (TP) .....	76

## A

A-D Converter .....	12, 17
About .....	65
Active Tempo .....	71
ADAT .....	71, 99, 102, 116, 125, 126, 128
ADAT Optical .....	22, 23, 68, 99, 132
ADAT Optical Hookup to HDR-24/96 .....	122
Adjust Channel Delay... .....	59
Advanced Graphics .....	66
AES/EBU .....	116, 180
AES/EBU (PDI•8) .....	23
AES/EBU Digital I/O .....	23, 35, 68
AES/EBU Hookup (PDI•8) .....	124
AFL .....	27
AFL Solo Button .....	33
After-Fader Listen .....	27
AIO•8 .....	22, 23, 68, 99, 120, 180
All .....	37, 61, 78
Alt Button .....	36
Alt I/O .....	23, 38, 67, 68
Analog and Digital Multitrack Cables .....	152, 180
Analog Hookup to HDR-24 (AIO•8) .....	120
Analog I/O .....	22, 120
Analog Inserts .....	114
Analog Trim .....	12
Antares .....	4
Apogee .....	4, 181
Apogee Digital I/O .....	22
Assign .....	26, 36, 88
Assignment Section .....	10
Authorize .....	68
Auto Arm .....	70
Auto Follow .....	81
Auto Scroll .....	81
Auto Touch .....	37, 61, 138
Automate EQ, Dynamics, and Effects .....	140
Automation In Bypass .....	137
Automation Parameters .....	77
Automation Procedural Checklists .....	140
Automation Section .....	36
ALL .....	37
AUTO TOUCH .....	37
BYPASS .....	36
FADER MOTORS OFF .....	37
FADERS .....	37
MUTES .....	37
PAN .....	37
TRIM LEVELS .....	37
Automation Sub-menu .....	61
All .....	61
Auto Touch .....	61
Bypass .....	61
Faders .....	61
Mutes .....	61
Pan .....	61
Trim Levels .....	61
Write Flyback .....	61
Write Ready Mode .....	61

Aux 1–8 Buttons .....	30
Aux 9–10 and 11–12 .....	30, 34, 48, 106
Aux Buttons 1–8 .....	48
Aux Out Section .....	24
Aux Pans 9-10 and 11-12 .....	45
Aux Select - Pre/Post .....	69
Aux Send Levels .....	44
Aux Sends .....	23, 88
Aux Solo .....	27

## B

Band 4 EQ To Dyn .....	89
Bank Selection .....	12
BBT .....	39, 71, 81, 138
Block Diagram .....	14
BNC Sync .....	22
Bouncing/Summing Using Bus Outs .....	136
British EQ .....	84
British H/P .....	84
Bus 1–8 Buttons .....	36
Bus Assignment Section .....	36
BUS 1–8 .....	36
L-R .....	36
ROUTE TO TAPE .....	36
Bus Assignments .....	10, 47
Bus Out 1–8 .....	23
Bypass .....	36, 61, 77

## C

Cakewalk Pro .....	132
Calibrate .....	70
Canare .....	181
Capture Event Time (Alt+T) .....	91
Card Cage Section .....	22
CATS .....	26
Channel Assign .....	10
Channel Configuration/Planning .....	96
Channel Insert .....	22
Channel Layout Reconfiguration .....	50
Channel Link... (Ctrl+L) .....	58
Channel List (Ctrl+B) .....	56
Channel Link... (Ctrl+L) .....	59
Inverse Pan linking .....	59
Inverse Switch toggling .....	59
Relative offset .....	59
Playback .....	56
Disabled .....	56
Punch-Run .....	56
Run .....	56
Write .....	57
Enabled .....	57
Locked .....	57
Channel Menu .....	56
Adjust Channel Delay... .....	59
Channel Link... (Ctrl+L) .....	58
Channel List (Ctrl+B) .....	56
Channel Notes .....	60
Faders to Off (Ctrl+J) .....	59
Faders to Unity (Ctrl+J) .....	59
Group... (Ctrl+G) .....	58
Open Channel... .....	57
Reset Channel Delay... .....	60
Reset Channel Layout... .....	60
Reset Selected Channels... .....	60
Save Channel As... .....	57
Select All Faders (Alt+Shift+A) .....	60
Select Fader Bank (Alt+A) .....	60
Ungroup .....	58
Unlink (Ctrl+U) .....	59

Channel Name .....	88
Channel Notes .....	60
Channel Select .....	27, 43
Channel Select Display .....	12, 32
Channel Strip Section .....	26
Assign .....	26
Channel Fader .....	27
Channel Meters .....	27
Channel V-Pot .....	26
Fader Bank Select LEDs .....	27
Mic/Line Button .....	26
Mute .....	27
Rec/Rdy .....	26
Select .....	27
Solo .....	27
Trim Level .....	26
Write .....	26
Channel V-Pot .....	26
Channel View .....	80
Channels 1–12 Inputs .....	22
Channels 13–24 Inputs .....	22
Checklist for Basic Operational Functionality .....	102
Chorus .....	159
Clear Automation .....	55, 137
Clear Edit History .....	55
Clear Over Loads .....	62
Clear Solo .....	27, 34
Clipboard Section .....	35
COPY .....	35
CUT/ZERO SET .....	35
PASTE .....	35
UNDO .....	35
Clock I/O Card .....	23, 97, 116, 126
Close All (Ctrl+^) .....	66
Close Window (ESC) .....	51
Colophon .....	189
Commit Events (Alt+M) .....	92
Compatible Cables .....	180
Compressor .....	33, 85
Compressor On/Off .....	45
Connecting a Mouse, Keyboard and SVGA Monitor .....	25
Connecting ADAT (Lightpipe) Multitrack(s) .....	102
Connecting Analog Multitrack(s) .....	102
Connecting TASCAM (TDIF) Multitrack(s) .....	103
Connecting the D8B to TASCAM MDMs .....	130
Connecting the Digital 8•Bus to a BRC and ADATs .....	126
Connecting the Digital 8•Bus to ADATs Using an Ext .....	128
Connections for ADAT .....	99
Console Data .....	25
Console Linking .....	67
Continuous Controller .....	25, 93
Control Button .....	36
Control Room .....	9, 34
Control Room Section .....	34
2 TRACK A, B, and C .....	34
DIGITAL IN 1 .....	35
DIGITAL IN 2 .....	35
DIM .....	35
MAIN .....	35
MASTER L-R .....	35
MONO .....	35
NEAR FIELD .....	35
SPEAKER LEVEL .....	35
TALKBACK .....	35
Copy Button .....	35
Copy Channel(s) (Ctrl+C) .....	54
Copy Mix To Bus .....	55
Copy Mix to Cue .....	34
CR Main .....	6, 24
CR Near Field .....	6, 24
Cue Level .....	48
Cue Pan 1 and 2 .....	48
Cue Points .....	82
Cut Channel (Ctrl+X) .....	54
Cut, Copy, Paste, Rename, Duplicate Files .....	53
Cut/Zero Set Button .....	35

## D

D8B/HDR-24 Setup .....	120
Data .....	25
Date and Time .....	66
DAW .....	132
dbx .....	4
Default Tempo .....	71
Delete Events (Alt+Delete) .....	92
Delete Events (DEL) .....	54
Delete Files (DELETE) .....	53
Delete Global Time .....	55
Delete Time .....	55
Desktop File Menu .....	53
Cut, Copy, Paste, Rename, Duplicate Files .....	53
Delete Files (DELETE) .....	53
Mount/Refresh Drives .....	53
New Folder (Ctrl+N) .....	53
Select All .....	53
Desktop Window (Ctrl+D) .....	52, 66
Desktop File Menu .....	53
Floppy Disk .....	53
Hard Disk .....	52
Device ID .....	71, 115
Digital Audio Workstation Setup .....	132
Digital Clipping .....	110
Digital Effects Card .....	23
Digital Filter .....	57
Digital I/O .....	22, 38, 67
Digital I/O Card .....	23
Digital In 1 .....	35
Digital In 2 .....	35
Digital Performer .....	132, 165
Digital Sync .....	8
Digital Trim .....	31, 46, 48, 89, 110
Dim Amount .....	70
Dim Button .....	35
DIO•8 .....	22, 23, 57, 68, 99, 121, 180
Connections for ADAT .....	99
Connections for DA-88 .....	99
Direct Output .....	22
Disabled .....	56
Display Intensity .....	66
Dither .....	68, 119
Divergence .....	73, 90
DSP .....	7, 23
Duplicate Event .....	91
Dynamic Automation .....	137, 138
Dynamics and EQ Applications .....	114
Dynamics EQ .....	89

## E

Edit Menu .....	53
Clear Automation .....	55
Clear Edit History .....	55
Copy Channel(s) (Ctrl+C) .....	54
Copy Mix To Bus .....	55
Cut Channel (Ctrl+X) .....	54
Delete Events (DEL) .....	54
Delete Global Time .....	55
Delete Time .....	55
Insert Global Time .....	55
Insert Time .....	55
Modify Levels (Alt+M) .....	54
Paste Channels (Ctrl+V) .....	54
Play From Selection (Ctrl+Space) .....	55
Redo (Ctrl+Shift+Z) .....	54
Select All (Ctrl+A) .....	55
Set Default Levels.. .....	54
Undo (Ctrl+Z) .....	54
Edit Playback Filter (Alt+I) .....	72
Editing Automation .....	140
Effects .....	7, 8, 26, 29, 47, 112
Enable Snap .....	81

Enabled	57
Enter Button	39
EQ	33, 45, 84, 158
EQ to Dynamics	33
Erase UFX Memory	94
Eraser Tool	81
ESN (Electronic Serial Number)	68
Ethernet	67
Ethernet Port	26
Event Automation Track (Ctrl+9)	90
Capture Event Time (Alt+T)lt+T	91
Commit Events (Alt+M)	92
Current List Item Arrow	92
Delete Events (Alt+Delete)	92
Duplicate Event	91
Mute Icon	92
New Event (Alt+N)	91
Load Target	91
New Event Type	91
Run Event (Alt+R)	91
Select All (Ctrl+A)	92
Synchronize Events	91
Events Markers	82
External Sample Rates	23

## F

Fader Bank 1	8, 28, 47
Fader Bank 2	8, 28, 47
Fader Bank 3	8, 29, 47
Fader Bank 4	8, 29, 47
Fader Bank 5	47
Fader Bank Select LEDs	27
Fader Bank Selection	8
Fader Banks	7, 26
EFFECTS	29
HUI Layer	29
MASTERS	29
MIC/LINE (TRACK)	28
TAPE IN (MONITOR)	28
Fader Motors Off Button	37
Faders	27, 37, 42, 61, 78, 89
Faders to Off (Ctrl+I)	59
Faders to Tape	30, 48, 62, 70
Faders to Unity (Ctrl+J)	42, 59
Faders Window (Ctrl+B)	90
TAPE Bank on top	90
Fast Fwd Button	40
Fat Channel	7
Fat Channel Display	32
Fat Channel Section	32
COMPRESSOR	33
EQ	33
Fat Channel Display	32
GATE	33
LOAD PATCH	33
MEMORY A and B	33
NEXT	32
ON Button	33
PLUG-INS	33
PREVIOUS	32
SAVE PATCH	33
SETUP	33
V-Pots and SELECT buttons	32
Fat Channel Window (Ctrl+6)	84
Assignment	88
Aux Sends	88
Channel Name	88
Channel Select	88
Compressor	85
Attack	86
MEM A/B	87
MENU	87
ON	87
Output	86
Ratio	86

Release	86
Soft	86
Threshold	86
Digital Trim	89
Dynamics EQ	89
EQ	84
20/20 EQ	84
4-band Parametric	84
British EQ	84
British H/P	84
MEM A/B	85
MENU	85
MORPH	85
Fader	89
Gate	87
Attack	87
Expand	87
MEM A/B	88
MENU	88
MIDI	88
ON	88
Range	87
Ratio	88
Release	87
Threshold	87
Key Input	89
Mute	89
Pan	89
Phase	88
Post-DSP Insert	89
Pre-DSP Insert	89
Route to Tape	88
Solo	89
Write	89
Feedback Loop	47, 63, 69
Fiber Optic	22
Figures	
ADAT Optical Hookup to HDR24/96 (OPT+8)	123
AES/EBU Hookup to HDR24/96 (PDI+8)	124
Analog Hookup to HDR24/96 (AIO+8)	120
Analog Recording/Mixdown Hookup Example	111
Connecting ADAT Lightpipe	102
Connecting TDIF Digital	103
Connecting the Analog Multitrack	102
Connecting the D8B to ADATs Using an External Sync	129
Connecting the Digital 8+Bus for Live Sound/Live R	135
Connecting the Digital 8+Bus to a BRC and ADATs	127
Connecting the Digital 8+Bus to A Digital Audio Wo	133
Connecting the Digital 8+Bus to Tascam MDMS	131
Figure 1-1 Completing the Microphone Signal Path	9
Figure 1-2 Simple Microphone Connection/Basic Live	11
Figure 1-3 Setting Up to Track	11
Figure 1-4 Basic Mixdown Setup	12
Figure 1-5 Signal-Flow Diagram	13
Figure 1-6 D8B Block Diagram	14
Figure 1-7 D8B Gain Structure Diagram	16
Figure 2-1 Aux Sends 1-8 (Default-Mackie Stereo Ef	31
Figure 4-1 Power-up Procedure	96
Figure 4-2 Basic Connection for Multitrack Recordi	97
Installation of FX Cards	100
Installation of I/O Cards	101
Physical Dimensions	18
Quick EQ	45
Quick Select Fat Channel	43
Recording/Tracking Hookup Example	109
Signal Path (INSERTS)	49
TDIF Hookup to HDR24/96 (DIO+8)	121
Using PRE-Insert for Bus Mastering	49
V-Pots	43
File Menu	51
Close Window (ESC)	51
Desktop Window (Ctrl+D)	52
New Session (Ctrl+N)	51
Open Session (Ctrl+O)	51
Save Session (Ctrl+S)	51
Save Session As...	51
Shutdown (Ctrl+Q)	53

Floppy Disk .....	19, 38, 51, 52, 53, 57, 115, 154
Flyback .....	61, 69, 73, 74
Formant-Preserving Pitch Shifting .....	144
Free MIDI .....	165
From Tape .....	22
FTP .....	26
FTP Server .....	72

## G

Gain Structure Diagram .....	16
Gate .....	33, 87
Gate On/Off .....	45
Gateway .....	71
General .....	66
General Button .....	38
Group Button .....	38
Group... (Ctrl+G) .....	58
GUI .....	42

## H

Hand Tool .....	80
Hard Disk .....	52
Hard Drive .....	38, 51, 52, 57
HDR24/96 .....	120
Highlighter Tool .....	80
History List Window (Ctrl+Y) .....	92
Hooking Stuff Up .....	4
Horizon Music, Inc. ....	180
Hosa Technology, Inc. ....	180
Hot Keys .....	66
HR824 .....	96
HUI Layer .....	29
HUI Layer Control Mapping .....	168
Cubase SX .....	172
DP3 .....	174
Nuendo .....	170
Pro Tools .....	168
Soundscape .....	176
HUI Mode .....	62, 164

## I

I/O Cards .....	22, 99
Include Automation .....	55
Insert .....	22, 23, 48, 49, 68, 89, 108, 114, 137, 155
Insert Global Time .....	55
Insert New Cue .....	82
Insert New Event .....	82
Insert Time .....	55
Installation and Connection of Optional I/O and E .....	99
Installation of FX Cards .....	100
Installation of I/O Cards .....	101
Intelligent Harmony .....	144
Internal Sample Rates .....	23
Inverse Pan Linking .....	59
Inverse Switch Toggling .....	59
IP Address .....	71
IVL Vocal Studio .....	144
Control Mode .....	145
Manual .....	145, 149
Pitch Shift .....	145, 150
Reverb .....	150
SmartChord .....	145, 149
SmartKey .....	145, 149
Edit-Harmony Ensemble .....	145
Detune .....	145, 147
Envelope .....	145
Gender .....	145, 147
Interval .....	145, 146
Key/Scale .....	145, 148
Pan .....	145, 147
PitchBend Range .....	148
Portamento .....	148
Scoop .....	145, 148

Styles .....	145, 148
Timing .....	145, 148
Vibrato .....	145, 148
Volume .....	145, 147
Formant-Preserving Pitch Shifting:.....	144
Intelligent Harmony .....	144
Menu .....	144
On/Off .....	144
Operation-Harmony .....	146
Output Mode .....	144
Quad .....	145
Stereo .....	144
Pitch Correct Mode .....	146
Keyboard Octave Select .....	146
Pitch Bend Range .....	146, 151
Pitch Bender .....	146, 150
Pitch Controller .....	146, 151
Slope .....	146, 151
Pitch Recognition .....	144
Processing Mode .....	144
Harmony .....	144
Pitch Correct .....	144
Voice Muting .....	144

## J

Jog & Shuttle Button .....	40
----------------------------	----

## K

Key Input .....	89
Keyboard .....	6, 25

## L

L-R Button .....	36
L.F.E. ....	90
L/R Output Assignments .....	47
Label Fader .....	42
LCRS .....	74
Level to Tape .....	30, 46, 48, 62, 106
Licensing .....	68
Line .....	47
Line Input .....	22
Link Speakers .....	60, 70
Listening environment .....	96
Live Setup .....	11
Live Sound/Live Recording Setup .....	134
Load Button .....	38
Load Patch Button .....	33
Load Target .....	91
Locate .....	39
Locator Button .....	39
Locator Window (Ctrl+4) .....	77
Automation Parameters .....	77
ALL .....	78
BYPASS .....	77
FADER .....	78
MUTE .....	78
PAN .....	78
TOUCH .....	78
TRIM .....	78
LOCATOR Parameters .....	78
Delete Cue .....	78
New Cue .....	78
Renumber .....	78
Store Cue .....	78
Mix Options .....	78
Record Safe .....	78
Single Button Record .....	78
Solo Latch .....	78
Use PreRoll .....	78
Use Write Ready .....	78
Write Flyback .....	78
Numeric Transport Position Indicator .....	77
Transport Controls .....	77

Lock Error .....	118
Lock Snapshot .....	72
Locked .....	57, 118
Loop Button .....	39
Low Freq Effect .....	90
Low Frequency Effect .....	73

## M

Macintosh .....	19
Mackie Effects .....	23, 158
Mackie Real Time OS .....	7, 36
About .....	65
Magnify Tool .....	81
Main Button .....	35
Marshall Electronics .....	181
Massenburg .....	4
Master Fader .....	47
Master Fader/Bank Select Section .....	28
EFFECTS .....	29
Master L/R Fader .....	29
MASTERS .....	29
MIC/LINE (TRACK) .....	28
SHIFT .....	29
TAPE IN (MONITOR) .....	28
Master Input/Output Section .....	23
Master Insert L/R .....	48
Master L–R Button .....	9, 35
Master L–R/Shortcuts Section .....	36
ALT .....	36
CONTROL .....	36
SELECT .....	36
WRITE .....	36
Master L/R Fader .....	29
Master Outputs .....	23
Master Pan .....	30
Master Section Description .....	28
Master Solo (Aux) .....	30
Master Strip .....	47
AUX buttons 1–8 .....	48
CUE LEVEL .....	48
CUE PAN 1 and 2 .....	48
DIGITAL TRIM .....	48
Effects .....	47
Line .....	47
Master Fader .....	47
Master INSERT L/R .....	48
MASTER V-Pot .....	48
Masters .....	47
SELECT .....	48
Tape .....	47
TRACKING LEVEL .....	48
WRITE .....	48
Master V-Pot Section .....	29
Masters .....	7, 8, 26, 29, 47
Max .....	55
Memory A and B Buttons .....	33
Meter Reference Point .....	62
Meter Submenu .....	62
Clear Over Loads .....	62
Meter Reference Point .....	62
Meter Type .....	62
Show Meters In Trim Mode .....	62
Show Peak Holds .....	62
Meter Type .....	62
Meters .....	27, 31
MFX .....	23, 24, 64, 112, 158
3-Band Parametric EQ .....	158
Mono Delay .....	158
Reverb .....	158
Stereo Delay .....	158
Chorus .....	159
Ping Pong .....	159
MFX Effects Card .....	99
Mic Input .....	22

Mic/Line .....	7, 8, 26, 28
Mic/Line Button .....	8, 26
Microphone Signal Path .....	9
MIDI .....	25, 39, 71, 93
MIDI and the D8B .....	115
MIDI Basics .....	115
MIDI Channel .....	72
MIDI File Tempo Map .....	71
MIDI Implementation Guide .....	163
MIDI Machine Control .....	44, 77
MIDI Map .....	40
MIDI Map Window (Ctrl + -) .....	93
Creating a Route .....	94
#(number) .....	94
Direction .....	94
MIDI Status .....	94
Mode .....	94
Open MIDI Map .....	94
Parameter .....	94
Route To .....	94
Save MIDI Map As... .....	94
Selection .....	94
MIDI Snapshots .....	69, 116
MIDI Status .....	94
Min .....	55
Mix Editor Window (Ctrl+5) .....	79
Auto Follow .....	81
Auto Scroll .....	81
Channel View .....	80
Commit Event .....	79, 82
Cue Points .....	82
Edit Tools .....	80
Eraser Tool .....	81
Highlighter Tool (Crosshair) .....	80
Magnify Tool .....	81
Pointer Tool (Hand Tool) .....	80
Enable Snap .....	81
Event Markers .....	82
Flip View Icon .....	80
Insert New Cue .....	82
Insert New Event .....	82
Mute All Events .....	82
Nudge Arrows .....	81
Page and Back Pull-downs .....	79
Snap Grid .....	82
Snap To Cues .....	81
Snap To Grid .....	81
Time Code Displays .....	81
Unmute All Events .....	82
Zoom Arrows .....	81
Mix Options .....	69, 78
Mixdown Recorder .....	10
Mixdown Setup .....	12, 110
Mixdown Solo .....	27, 33
MMC .....	25, 40, 44, 77
MMC DEVICE ID .....	115
Modify Levels (Alt+M) .....	54
Monitor Speakers .....	6
Monitoring .....	108
Mono Button .....	35
Mono Delay .....	158
Morph .....	85
Mount/Refresh Drives .....	53
Mouse .....	6, 25
Mouse Speed .....	66
MTC .....	25, 39, 40, 71, 77, 115, 116, 125, 126, 137, 138
MTC OFFSET .....	115
Multi-sync Monitor .....	6
Multitrack Direct Outs .....	46
Multitrack Recording .....	8, 104
Multitrack Tracking Checklist .....	105
Mute .....	27, 42, 89
Mute All Events .....	82
Mute Icon .....	92
Mutes .....	37, 61, 78



## N

Near Field Button .....	35
Network .....	66
Console Linking .....	
Automation .....	67
Aux Strip .....	67
Bus Assign .....	67
Cue Controls .....	67
Fader Banks .....	67
Sample Rate .....	67
Solo Logic .....	67
Speakers .....	67
Network Channel .....	67
New Button .....	38
New Event (Alt+N) .....	91
Load Target .....	91
New Event Type .....	91
New Event Type .....	91
New Folder (Ctrl+N) .....	53, 57
New Session (Ctrl+N) .....	51
New Snapshot (Alt+N) .....	72
Next Arrow .....	32
Node Usage .....	81
Noise Filter .....	51
Note On .....	25, 93
Nudge Arrows .....	81
Nuendo .....	165
Number Buttons 0–9 .....	39

## O

OMS .....	165
On Button .....	33
One Button Punch .....	40, 62, 69, 78, 115
Open Channel... ..	57
Open Session (Ctrl+O) .....	51
Open Snapshot... ..	72
Open Surround... ..	76
OPT+8 .....	23, 57, 68, 99
Options Menu .....	60
Faders to Tape .....	62
HUI Mode .....	62
Link Speakers .....	60
Meter Submenu .....	62
Clear Over Loads .....	62
Meter Reference Point .....	62
Meter Type .....	62
Show Meters In Trim Mode .....	62
Show Peak Holds .....	62
Solo Latch .....	60
Use Nine Pin Control .....	62

## P

Pan .....	37, 61, 78, 89
Pan Ball .....	73, 90
Panning Window (Ctrl+7) .....	89
Divergence .....	90
Low Freq Effect .....	90
Pan Ball .....	90
Speaker Select .....	89
Parametric EQ .....	158
Paste Button .....	35
Paste Channels (Ctrl+V) .....	54
PDI+8 .....	23, 57, 68, 99, 180
PFL .....	27
PFL Solo Button .....	33
Phantom Power .....	8, 22
Phase .....	45, 88
Phones 1 and 2 .....	24
Phones/Cue Mix Section .....	34
Aux 9–10 and 11–12 .....	34
CONTROL ROOM button .....	34
COPY MIX TO CUE .....	34
LEVEL V-Pot .....	34

Ping Pong .....	159
Pitch Correct Mode .....	146
Pitch Recognition .....	144
Play Button .....	40
Play From Selection (Ctrl+Space) .....	55
Playback .....	56
Plug-in Architecture .....	23
Plug-in Windows .....	64, 112
Plug-ins .....	112, 152
Configuring the Plug-in .....	152
FX Routing .....	155
Inserting a Plug-in into a Channel .....	155
To Cut/Copy/Paste Preset Settings .....	154
To Load a Preset .....	153
To Reset the Plug-in .....	154
To Save a Preset .....	153
To write a snapshot on a loaded plug-in .....	154
To write automation on a loaded plug-in .....	154
Using an Aux Send with a Plug-in .....	156
Plug-ins Button .....	33, 38
Plug-ins Selector .....	64
Plugin Configuration Window .....	63, 112, 155
Plugins (Ctrl+P) .....	63
Plugins Menu .....	63
Plugins (Ctrl+P) .....	63
Plugin Configuration Window .....	63
Pointer Tool .....	80
Polyphonic Aftertouch .....	25, 93
Position Display .....	39
Post Insert .....	49
Post-DSP Insert .....	89
Post-Production Setup .....	136
Power-up .....	7
Power-up Procedure .....	96
Powered Monitors .....	6
Pre and Post DSP .....	23
Pre Insert .....	49, 68
Pre-DSP Insert .....	89
Pre-Fader Listen .....	27
Pre-Roll .....	71
Previous Arrow .....	32
Pro Co Sound, Inc. .....	181
Pro Tools .....	132, 165
Program Changes .....	25, 69, 116
Proper Sync Connection .....	117
Punch I/O .....	24
Punch-Run .....	56
Punching Automation .....	140

## Q

Quad .....	74
Quick EQ Box .....	45
Quick Select Fat Channel .....	43

## R

Range Display .....	39
Rear Panel Description .....	22
Rec/Rdy .....	26
Record .....	40, 44
Record Safe .....	44, 62, 69, 78
Redo (Ctrl+Shift+Z) .....	54
Relative Offset .....	59
Remote CPU Description .....	25
Renumber .....	72
Repair .....	142
Reset Channel Delay... ..	60
Reset Channel Layout... ..	60
Reset Selected Channels... ..	60
Reset Template .....	52
Returns .....	23
Reverb .....	158
Rewind Button .....	40
Rotary Dial Encoder .....	40
Rough Mix .....	69, 107, 137

Route to Tape .....	36, 88
Rude Solo Light .....	34
Run .....	56
Run Event (Alt+R) .....	91

## S

S/PDIF Digital I/O .....	23, 35, 68
Sample Rate .....	23
Sample Rate Conversion .....	68
Sample Tracking Setup .....	108
Save As Template .....	51
Save As... Button .....	38
Save Button .....	38
Save Channel As... .....	57
Save Patch Button .....	33
Save Session (Ctrl+S) .....	51
Save Session As... .....	51, 137
Save Snapshot For Safety .....	138
Save Surround As... .....	76
Scribble Strip .....	42
SDDS .....	75
Select .....	48, 88
Select All .....	53
Select All (Ctrl+A) .....	55, 92
Select All Faders (Alt+Shift+A) .....	60
Select Button .....	36
Select Fader Bank (Alt+A) .....	60
Sends .....	23
Sequencer .....	71, 115, 137
Serial+9 .....	62
Service .....	142
Session Setup Section .....	38
DIGITAL I/O .....	38
GENERAL .....	38
GROUP .....	38
LOAD .....	38
NEW .....	38
PLUG-INS .....	38
SAVE .....	38
SAVE AS... .....	38
Set .....	55
Set Default Levels... .....	54, 138
Set Time Button .....	39
Setting Up for a Session .....	96
Setting Up Plug-ins .....	113
Setup Button .....	33, 68
Setup Window (Ctrl+I) .....	66, 97
Digital I/O .....	67
Alt I/O .....	68
Stereo I/O .....	68
Tape Banks .....	68
FTP Server .....	72
Allow FTP Clients .....	71
Apply .....	71
Gateway .....	71
IP Address .....	71
Subnet .....	71
General .....	66
Advanced Graphics .....	66
Date and Time .....	66
Display Intensity .....	66
Mouse Speed .....	66
Smart Save .....	66
Licensing .....	68
Locator-MMC .....	71
MIDI .....	71
Active Tempo .....	71
Default Tempo .....	71
Device ID selection .....	71
MIDI File Tempo Map .....	71
Pre-Roll .....	71
Song Offset .....	71
Mix Options .....	69
Aux Select - Pre/Post .....	69
Calibrate .....	70

Dim Amount .....	70
Faders to Tape .....	70
Link Speakers .....	70
MIDI Snapshots .....	69
One Button Punch .....	69
Record Safe .....	69
Solo Latch .....	70
Use PreRoll .....	69
Use Write Ready .....	69
Write Flyback .....	69
Network .....	
Alt I/O 1-8 .....	67
Console Linking .....	67
Network Channel .....	67
Surround .....	70
Auto Arm .....	70
Clear .....	70
Stereo Mode Setup Options .....	70
Surround Mode .....	70
Shift .....	29
Shortcuts .....	160
Plug-in Windows .....	64
Show Meters In Trim Mode .....	62
Show Peak Holds .....	62
Shutdown (Ctrl+Q) .....	53
Signal Flow .....	12
Signal Routing .....	10
Single Button Record .....	78
Smart Save .....	66
SMPTE .....	39, 54, 55, 77, 78, 81, 130, 138
SMPTE View Button .....	39
Snap .....	81
Snap Grid .....	82
Snap To Cues .....	81
Snap To Grid .....	81
Snapshot Automation .....	137
Snapshot Button .....	40
Snapshot Edit Window .....	72
Snapshot Filters .....	72, 134
Snapshot Window (Ctrl+Z) .....	71
Snapshot Edit Window .....	72
Delete (Alt+Delete) .....	72
Edit Playback Filter (Alt+I) .....	72
Lock Snapshot .....	72
MIDI Channel .....	72
New Snapshot (Alt+N) .....	72
Open Snapshot... .....	72
Renummer .....	72
Save Selection As .....	72
Select All (Ctrl+A) .....	72
Store Snapshot .....	72
Unlock Snapshot .....	72
Snapshot Filter .....	72
Solo .....	27, 30, 42, 89
Solo Isolate .....	27, 43, 57
Solo Latch .....	60, 70, 78
Solo Level Button .....	34
Soloing Multiple Channels .....	27
Song Offset .....	71
Sony 9-Pin .....	62
Sony Dynamic Digital Sound .....	75
Speaker Button .....	10
Speaker Level .....	10
Speaker Select .....	89
Specifications .....	17
Standard MIDI File .....	115
Status Bit Designation .....	68
Status Bits .....	68
Stereo .....	74
Stereo Delay .....	158
Stereo I/O .....	38, 68, 119
Stop Button .....	40
Store Button .....	40
Store Snapshot .....	72
Studio Level Button .....	34
Studio Out L-R .....	24

Studio Vision Pro .....	132
Studio/Solo Section .....	33
AFL SOLO .....	33
CLEAR SOLO .....	34
MIXDOWN SOLO .....	33
PFL SOLO .....	33
RUDE SOLO LIGHT .....	34
SOLO LEVEL .....	34
STUDIO LEVEL .....	34
TALKBACK LEVEL .....	34
TALKBACK TO STUDIO .....	34
Subnet .....	71
Surge Protector .....	6
Surround .....	70
Surround Mode .....	70
Surround Modes .....	74
5.1 .....	75
6.1 .....	75
7.1 (SDDS) .....	75
7.1 (TP) .....	76
LCRS .....	74
Quad .....	74
Stereo .....	74
Surround Out .....	23
Surround Window (Ctrl+3) .....	73
Divergence .....	73
Flyback .....	73
Low Frequency Effect .....	73
MENU .....	76
Copy .....	77
Cut .....	76
Lock Monitor Levels .....	77
Open Surround .....	76
Paste Surround .....	77
Reset .....	76
Save Surround As .....	76
Undo .....	76
Monitor Levels .....	73
Morph .....	73
Morph Time .....	73
Output Assignment .....	73
Pan Ball .....	73
Surround Panner .....	73
SVGA Monitor .....	25
Sync Connection .....	117
Synchronize Events .....	91

## T

T/DIF .....	68, 99
Talkback .....	24, 35
Talkback Level Button .....	34
Talkback Mic .....	31
Talkback to Studio Button .....	34
Tape .....	47
Tape Bank on Top .....	90
Tape I/O .....	38
Tape In .....	7, 8, 26, 28
Tape In/Outs .....	22
Tascam Clock .....	22
TC Electronics .....	4
TDIF .....	22, 103, 130, 132
TDIF Hookup to HDR24/96 (DIO+8) .....	121
Template .....	38, 51–52, 57, 96
TEMPO MAP .....	115
Tempo Map .....	71
Theme Park .....	76
Time Code .....	39, 40, 54, 56, 61, 71, 77, 81, 91, 92, 115, 116, 126, 137
Time Code From Playback Device .....	138
To Tape .....	22
Touch (Auto Touch) .....	78
Track Sheet (Ctrl+T) .....	92
Tracking Level .....	48, 106
Tracking Setup .....	10, 11
Transport Controls .....	40, 77

Transport Section .....	39
ENTER .....	39
LOCATOR .....	39
LOOP .....	39
Number Buttons 0–9 .....	39
POSITION display .....	39
RANGE display .....	39
SET TIME .....	39
SMPTE VIEW .....	39
SNAPSHOT .....	40
STORE .....	40
Transport Controls .....	40
FAST FWD .....	40
JOG & SHUTTLE .....	40
PLAY .....	40
RECORD .....	40
REWIND .....	40
Rotary Dial Encoder .....	40
STOP .....	40
Transport Sub-menu .....	61
One Button Punch .....	62
Record Safe .....	62
Use Pre-Roll .....	62
Trim .....	9, 55, 78
Trim Levels .....	26, 37, 61, 139
Troubleshooting Guide .....	142

## U

UFX .....	23, 24, 64, 112
UFX Effects Card .....	99
Undo (Ctrl+Z) .....	54
Undo Button .....	35
Ungroup .....	58
Unity Gain .....	26, 42, 44, 47, 48, 75, 88, 90
Unlink (Ctrl+U) .....	59
Unlock Procedure .....	68
ESN (Electronic Serial Number) .....	68
Unlock Code .....	68
Unlock Snapshot .....	72
Unmute All Events .....	82
Updating Software .....	19
Upgrade UFX Cards .....	94
UPS .....	6
Use Nine Pin Control .....	62
Use Pre-Roll .....	62, 69
Use PreRoll .....	78
Use Write Ready .....	69, 78
Using Basic Automation .....	137
Using the Digital 8•Bus with ADATs .....	125
Using the Graphic User Interface (GUI) .....	42
UV22 .....	68, 119

## V

V-Pot .....	13, 26, 29, 34, 35, 43, 44, 48
V-Pot Assign Section .....	30
Aux 1–8 Buttons .....	30
Aux 11–12 .....	30
Aux 9–10 .....	30
CHANNEL Select Display .....	32
DIGITAL TRIM .....	31
Level to Tape .....	30
Master Meters .....	31
Talkback Mic .....	31
Vacuum Fluorescent Display .....	7
VFD .....	7, 32
Video Monitor .....	6
Video Port .....	6
Virtual Group .....	38
Voice Muting .....	144

## W

What Type of Data Can Be Automated .....	137
Whirlwind .....	181
Windows .....	19
Windows Menu .....	65
About .....	65
Close All (Ctrl+V) .....	66
Desktop (Ctrl+D) .....	66
Erase UFX Memory... .....	94
Event Automation Track (Ctrl+9) .....	90
Faders (Ctrl+8) .....	90
Fat Channel (Ctrl+6) .....	84
History List (Ctrl+Y) .....	92
Hot Keys .....	66
Locator (Ctrl+4) .....	77
Locator Window (Ctrl+4) Mix Options .....	78
MIDI Map (Ctrl + -) .....	93
Mix Editor (Ctrl+5) .....	79
Panning (Ctrl+7) .....	89
Setup (Ctrl+1) .....	66
Digital I/O .....	67
FTP Server .....	72
General .....	66
Licensing .....	68
Locator-MMC .....	71
MIDI .....	71
Mix Options .....	69
Network .....	66
Surround .....	70
Snapshot (Ctrl+2) .....	71
Surround (Ctrl+3) .....	73
Track Sheet (Ctrl+T) .....	92
Upgrade UFX Cards... .....	94
Word Clock .....	97, 116, 117, 118, 126
Write .....	26, 36, 37, 44, 48, 57, 89
Write Flyback .....	61, 69, 78
Write Ready Mode .....	61, 139

## Z

Zoom Arrows .....	81
-------------------	----

## Colophon

This manual was a collaborative effort, created in part from the original Digital 8•Bus Owner's Manual, with additional text and contributions from Bill Gibson, Brian McCully, Craig Chastain, and Trent Wagner.

Final proofreading and final editing provided by Ben Olswang and Dave Franzwa.

All production work was performed on various Macintosh computers using Adobe® PageMaker® 6.5 and Adobe® Illustrator® 8.0 and 9.0.

ADAT is a trademark of Alesis Corporation. TASCAM is a registered trademark of TEAC Corporation. Apogee and UV22 Super CD Encoding are trademarks of Apogee Electronics. IVL is a trademark of IVL Ltd. Etch-a-Sketch is a registered trademark of the Ohio Art Company.

The following are trademarks or registered trademarks of Mackie Designs Inc.: The Mackie Logo, Mackie Real Time OS, V-Pot, HUI, the "Running Man" figure, and the D8B "Badge" design. All other brand names mentioned are trademarks or registered trademarks of their respective holders, and are hereby acknowledged.

©2003 Mackie Designs Inc.  
All rights reserved.





# DOB V5.1

**Mackie Designs Inc.**  
16220 Wood-Red Road NE  
Woodinville, WA 98072  
[www.mackie.com](http://www.mackie.com)  
U.S. and Canada: 800/898-3211  
Outside the U.S. and Canada: 425/487-4333



**HYBRID**  
DESKTOP PRODUCTION™