

Stereo cd alarm clock radio



29005 OPERATING INSTRUCTIONS

Electrical requirements

Check the voltage on the rating plate of your clock radio corresponds with your house electricity supply which must be A.C. (Alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH A BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO A LIVE SOCKET OUTLET.

Should the fuse in the 13 amp plug require changing a 3 amp BS1362 fuse must be fitted.

Battery back-up facility (unit will work without a battery being fitted)

Your cd alarm clock radio is equipped with a battery back-up facility.

- 1 Remove the battery compartment cover (underneath the unit) by sliding the cover off.
- 2 Insert a battery size 9 volts PP3/6LR61 (Ensure battery is inserted correctly)
- 3 Replace the battery compartment cover.

Should a power interruption occur the clock will continue to run, however, time keeping will not be accurate. The display will be extinguished to conserve battery life but the memory will retain details of the clock time and alarm settings.

If the optional battery is not installed in case of the AC power failure the clock will reset to 12:00 when the power is restored. You will need to reset the clock and alarm.

Battery back-up is designed to operate for a short period only.


If the unit is not to be used for a prolonged period, remove the battery to avoid battery leakage.

In the interests of environmental safety : dispose of batteries safely.

Speakers (speakers are detachable)

Open the speaker wire compartment located underneath the unit and unravel the speaker wire. Detach the speakers and position where required. Wind up excess wire around pegs on the underneath of the unit. Close the speaker wire compartment door.

Illustration

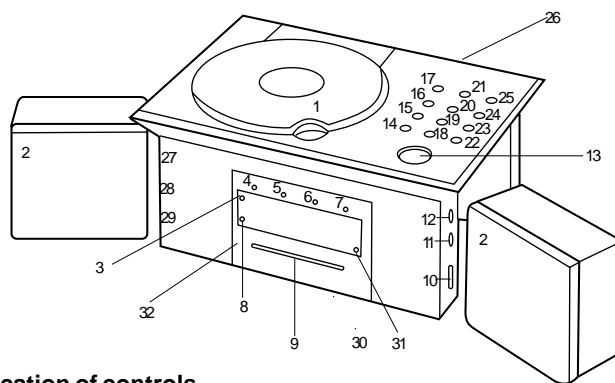

Location of controls

- | | |
|--|---|
| <ol style="list-style-type: none"> 1 Cd open tab 2 Speakers (detachable) 3 Pm indicator 4 Program indicator 5 Random indicator 6 Repeat indicator 7 Power indicator 8 Alarm 1 indicator 9 Dial scale with pointer 10 Tuning control 11 Alarm function selector switch 12 Alarm 1 and 2 selector switch 13 Snooze button 14 Play/pause button ⏮ button: to switch unit on and start playback. To momentarily stop playback 15 Play mode/program button 16 PTS button: to select your favourite cd track for waking up to music 17 Alarm 1 button: to set alarm 1 18 ■ button: to stop cd playback 19 MIN Skip/fast search/selection (⏪ backward): -to skip cd tracks and for minute setting of alarm clock functions and time. (quick selection: press and hold normal selection: press repeatedly) | <ol style="list-style-type: none"> 20 Repeat button: for continuous playback 21 Alarm 2 button: to set alarm 2. 22 Power on/off button: to turn radio, on and alarm on/off 23 HOUR Skip/fast search/selection (⏩ forward): -to skip cd tracks and for fast search within a track -for setting of hour, for time and alarm clock functions quick selection: press and hold normal selection: press repeatedly 24 Sleep button 25 Time button 26 FM wire aerial 27 Function selector switch 28 Volume control 29 Earphone jack 30 Battery compartment 31 Alarm 2 indicator 32 FM stereo indicator |
|--|---|

P.2

Setting the clock time

- 1 While holding down the TIME button, press the **⏮** or **⏩** to set the desired time.
- 2 Release the button to save time setting.

Radio operation

FM wire aerial

To obtain the maximum FM reception fully extend the wire FM aerial (which is located at the rear of the unit) and alter the direction of the wire for best results.

The aerial for the MW waveband is located inside the unit. To obtain the maximum MW reception rotate the clock radio.

- 1 Slide the FUNCTION SELECTOR switch to select MW or FM.
- 2 Press the POWER on/off button.
- 3 Adjust the VOLUME control to a suitable level.
- 4 Slowly adjust the TUNING control to select your desired station. The FM LED indicator will light up when an FM stereo signal is received.
- 5 To switch off the radio, press the POWER on/off button.

To play compact disc

- 1 Press the power on/off button.
- 2 Open the cd door using cd open tab, load a disc in the cd compartment. Push down gently on the door to close.
- 3 Select the cd mode by switching the function selector to **cd**.
- 4 Press the **⏮** play/pause button. The display will show the track number when you begin to play a cd. After a few seconds, the display reverts to the current time.
Note : The same button can be used to momentarily interrupt playback. The track number will flash until the **⏮** button is pressed again.
- 5 Adjust the volume control until the desired level is reached.
- 6 Press the **■** stop button to stop playback.
- 7 To switch off the cd, press the power on/off button.

Other cd functions

⏮ SKIP/FAST REVERSE SEARCH ⏭

- 1 Press **⏭** once to skip to the next track or as many times as required to reach desired track. Press the **⏮** to return to the beginning of the current track or as many times as required to go back to desired track. Press **⏮** or **⏭** and hold for fast search within the current track.

REPEAT button

- 1 Press once to repeat the track. The repeat indicator will flash.
- 2 Press again for the whole cd to be repeated, the repeat indicator will light up.
- 3 Press again to cancel the repeat function. Repeat LED indicator will go out.

RANDOM

- 1 Press P. mode button once for random playback of all cd tracks. If a program has been set press twice. The random LED indicator will light up.
 - 2 Press again to cancel the function.
- Repeat and random modes can be used simultaneously.
When the cd compartment is empty or a cd is incorrectly loaded or damaged the 'no' (no disc) symbol will be displayed.

Setting alarm

The unit allows you to select two different wake-up times that can be used separately or simultaneously (ALARM 1 OR 2 OR ALARM 1 and 2). Before setting the alarm, switch the alarm selector switch to either alarm 1 or alarm 2 or alarm 1 and 2.

ALARM 1: Press and hold the alarm 1 button, and then **⏮** or **⏭** to set the desired wake-up time. Release alarm button to save the setting.

ALARM 2: Press and hold the alarm 2 button and proceed as above.
Set the function selector switch to AUTO, (then set function selector switch to either MW or FM for radio or cd for cd music) BUZZ (for buzzer) or OFF to cancel alarm.

Waking up to the radio

- 1 Follow the instructions given under 'Radio operation' to select the desired radio station.
- 2 Set ALARM function switch to AUTO alarm indicators will light up. Then set function selector switch to either MW or FM.

P.5

Maintenance

Do not expose your cd clock radio to extremes of temperature. The product should be kept in a warm environment free from dust and damp. For external cleaning use only a soft, clean, damp cloth. Use of detergents may damage the finish.

Technical specification

AC Power supply	:	230v ~ 50Hz
Battery back-up	:	9V DC type 6LR61/PP3 (not included)
CD player	:	Frequency response (3dB) 100Hz to 18kHz
Laser	:	$\lambda = 780\text{nm}$ Max power = 5mW
Radio	:	FM 88Mhz - 108Mhz MW 540Khz - 1600Khz
Earphone socket	:	3.5mm

WARNING : This unit uses a laser beam. To prevent an accident occurring the unit should only be opened by a qualified engineer. If the door interlocks become defective the laser may cause invisible radiation. Avoid exposure to the beam.

If there is a scratch, dirt or finger prints on the cd, it may cause tracking errors. Before playing, clean the cd with a clean cloth. Wipe the cd from the centre outwards. After playing, store the disc in its cd case.

For indoor use only.

Warning labels

WARNING: to reduce the risk of electric shock, do not expose this appliance to rain or moisture.



ATTENTION: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer any servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of 'dangerous voltage' inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

To prevent fire or shock hazard do not expose this apparatus to dripping or splashing.

P.7

Waking up to cd music

- 1 Follow steps 1 to 3 of the 'playing cd' procedure.
- 2 To wake up to your favourite cd track, press and release the **PTS** button and then press **⏮** or **⏭** until desired track number is saved. Press the **PTS** button to store. Repeat for up to 20 tracks. Wait until the clock reverts back to the time or press the time button. Press PLAY mode button twice and the program indicator will light up. The **PTS** button can be pressed at any time to check track selection.
- 3 Press the POWER on/off button the power indicator will go out.
- 4 Set the ALARM selector switch to AUTO; the alarm indicators will light up. At the wake time, the unit will playback the whole cd unless the REPEAT mode is selected. The player will remain in operation for about 1 hour. To stop playback, press the POWER on/off button.

Note: PTS button can be used to program 20 different tracks.

Waking up to buzzer

Set alarm selector switch to BUZZER; the alarm indicators will light.

How to cancel the alarm

The alarm is programmed to sound for 1 hour.

- 1 SNOOZE; press this button to temporarily stop the alarm. The alarm will sound again 6 minutes later.
- 2 **POWER on/off**; Press to stop the alarm, the alarm will sound again 24 hours later.
- 3 Switch alarm selector switch to the off position to cancel alarm permanently, indicators will disappear.

Sleep to music

- 1 Select the function selector switch to the desired mode CD/MW/FM.
- 2 Press the sleep button and the display will indicate --, press again for 90, 60, 30 minutes to set the sleep time.
- 3 Note: for the cd to start playing, press the play button.
- 4 Press the POWER on/off button to cancel the music before the end of the programmed duration.

Note: If cd contents are shorter than the selected sleep time, playback will stop at the end of the cd unless the REPEAT mode has been activated.

P.6

Guarantee

Morphy Richards products are manufactured to internationally accepted quality standards. In addition to your statutory rights, Morphy Richards guarantee your product to be free from manufacturing and component defects for a period of TWO YEARS from date of purchase.

If your product proves to be defective within 28 days of purchase, your Morphy Richards dealer from whom the product was purchased will be pleased to replace it free of charge.

Should your product develop a defect within the guarantee period but after the replacement period, please return the product to the following address, together with the proof of purchase, brief details of the symptoms and your own name and address.

After Sales Division
Morphy Richards Limited
Talbot Road
Mexborough
South Yorkshire
S64 8AJ

Your post office will provide a certificate of posting. The product will be repaired and returned to you promptly.

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri) UK 0870 060 2614
Republic of Ireland 1800 409119
Replacement parts 0870 167 6645

Morphy Richards Website: www.morphyrichards.co.uk



446/8001/95 Rev 1

Morphy Richards Ltd, Talbot Road, Mexborough, S64 8AJ

Morphy Richards products are intended for household use only.
Morphy Richards has a policy of continuous improvement in product quality and design.
The company, therefore reserves the right to change the specification of its models at any time.