 


M  
O  
B  
I  
L  
E

***NEXT BASE***<sup>®</sup>

MODEL NO.  
**SDV485-B/BY**  
OPERATING INSTRUCTIONS

E  
N  
T  
R  
T  
A  
I  
N  
M  
E  
N  
T

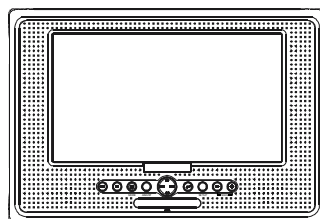

## IMPORTANT SAFETY INSTRUCTIONS ■ ENG 01

DVD DVB-T

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
16. The shock hazard marking and the associated graphical symbol is provided on the bottom panel of the unit.
17. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall be placed on the apparatus.

■ MOBILE ENTERTAINMENT ■

Thank you for purchasing this tablet DVD player. Please read this manual carefully before operating and reserve it for future reference. It will be helpful to you if you encounter any operational problem.

**WARNING:** To reduce the risk of fire or electric shock. Do not expose this appliance to rain or moisture, dripping or splashing and that no objects filled with liquids, Such as vases, Shall be placed on the apparatus. Dangerous high voltages are present inside the enclosure. Do not open the cabinet. Refer servicing to qualified personnel only.

**ATTENTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**LASER:** This Digital Video Disc player employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

 
Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.



To prevent direct exposure to laser beam, do not try to open the enclosure.

Visible and invisible laser radiation will be exposed when open and interlocks defeated.

**DO NOT STARE INTO BEAM**

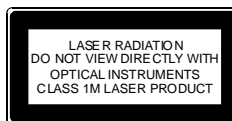LASER	
Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree






<p><b><u>CAUTION:</u></b></p> <p>These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.</p>	
<p><b><u>WARNING:</u></b></p> <p>To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.</p>	
<p><b><u>CAUTION:</u></b></p> <p>Use of controls or adjustments or performance of procedures those specified may result in hazardous radiation exposure.</p>	
<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK. DO NOT OPEN</b></p> <p>To reduce the risk of electric shock, do not remove cover (Or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	
 SA 1965	<p><b>DANGEROUS VOLTAGE</b></p> <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
 SA 1966	<p><b>INSTRUCTION</b></p> <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (Servicing) instruction in the literature accompanying the appliance.</p>

**MACROVISION:** This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision. If not, the use of this technology is only permitted for domestic use and other limited playback uses. Reverse engineering or disassembly is prohibited.

**DOLBY:** Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

**DivX:** This device incorporates copyright protection technology that is protected by DivX, Inc. DivX, DivX Certified and associated logos are trademarks of DivX, Inc. and used under license.

**WEEE**  WEEE statement: Please do not throw electronic devices  into household waste and separate them for correct recycling.

IMPORTANT SAFETY INSTRUCTIONS	IMPORTANT SAFETY INSTRUCTIONS.....1
PRECAUTIONS	PRECAUTIONS.....2
TABLE OF CONTENTS	TABLE OF CONTENTS.....5
CAUTIONS ON USING THIS PLAYER	CAUTIONS ON USING THIS PLAYER.....8
DISCS PLAYABLE	TYPES OF DISCS PLAYABLE ON THIS PLAYER...10
	PLAYABLE FORMATS .....10
PACKAGE CONTENTS	PACKAGE CONTENTS.....11
PARTS AND CONTROLS	FRONT SIDE.....12
	BUTTON DEFINITION.....12
	RIGHT SIDE.....14
	LEFT SIDE.....14
	MAIN UNIT REAR SIDE.....15
	HOW TO STAND.....15
	REMOTE CONTROL.....16
	KEY DESCRIPTION OF REMOTE CONTROL.....17
	NOTES ON USING THE REMOTE CONTROL UNIT.....19
	REPLACING THE BATTERY.....19
AUDIO/ VIDEO CONNECTIONS	CONNECTING THE PLAYER TO A TV SET.....20
	CONNECTING THE ADAPTER TO THE DC IN 12V SOCKET.....21
	USING THE EARPHONE.....21
CONNECTING THE PLAYER TO OTHER DEVICES	CONNECTING TO A DOLBY DIGITAL /MPEG DECODER OR AN AMPLIFIER WITH A BUILT-IN DECODER.....22
	CONNECTING TO A DIGITAL AMPLIFIER THAT IS NOT DOLBY DIGITAL/ MPEG COMPATIBLE.....23
	CONNECTING TO ACTIVE SPEAKER SYSTEMS.....24
	
BASIC OPERATIONS	TURNING ON THE POWER.....25
	TURNING OFF THE POWER.....25
	LOADING.....26
	PLAYBACK.....27
	STOP PLAYBACK.....27
	PAUSE PLAYBACK.....27
	PLAY AT FAST SPEED.....28

	PLAYBACK IN SLOW MOTION.....	28
	A-B/ REPEAT PLAYBACK.....	28
	ZOOM FUNCTION.....	29
	SEARCHING FOR A SPECIFIC SCENE.....	29
	SELECTING SUBTITLE.....	29
	CHANGING THE ANGLE.....	29
	CHANGING THE AUDIO LANGUAGE.....	29
	PROGRAM PLAYBACK.....	30
	USING THE ON-SCREEN DISPLAY.....	31
	PLAYING A MP3 FORMAT DISC AND JPEG CD.....	31
	PLAYING DivX FILES.....	32
	USB AND CARD READING.....	32
SYSTEM SETUP	TV SYSTEM.....	34
	SCREEN SAVER.....	35
	PASSWORD.....	35
	RATING.....	36
	DEFAULT.....	36
LANGUAGE SETUP	OSD LANGUAGE.....	37
	AUDIO LANG.....	37
	SUBTITLE LANG.....	38
	MENU LANG.....	38
DIGITAL SETUP	AUDIO OUT.....	39
	SOUND EFFECT.....	39
	DYNAMIC RANGE.....	40
	DivX VOD.....	40
FIRST TIME INSTALLATION	FIRST TIME INSTALLATION.....	42
SPECIAL KEYS	EPG.....	43
	SCAN.....	43
	AUDIO.....	44



CHANNEL GUIDE	TV CHANNELS.....	45
	RADIO CHANNELS.....	45
	CHANNELS FAVORITE.....	46
	CHANNEL EDIT.....	46
SYSTEM CONFIG	TV SETTING.....	48
	AUDIO SETTING.....	48
	LANGUAGE.....	49
	PARENT CONTROL.....	49
	ANTENNA POWER.....	50
INSTALLATION	AUTO SCAN.....	51
	MANUAL SCAN.....	51
	DEFAULT SETUP.....	52
GAME	BOXMAN.....	53
	BURNING TETRIS.....	53
	HIT RAT.....	54
FM TRANSMITTER INSTRUCTIONS	FM TRANSMITTER.....	55
IR TRANSMITTER	IR TRANSMITTER.....	56
FIT THE DVD PORTABLE PLAYER TO THE HEADREST MOUNT OR VESA WALL MOUNTING BRACKET	FIT THE DVD PORTABLE PLAYER TO THE HEADREST MOUNT OR VESA WALL MOUNTING BRACKET .....	57
MINI-MAGNETIC ANTENNA INSTALLGTION GUIDE	MINI-MAGNETIC ANTENNA INSTALLGTION GUIDE.....	58
OTHERS	SIZE AND PARAMETER.....	59
	TROUBLE SHOOTING.....	60



**CAUTIONS ON USING THIS PLAYER****1. DO NOT MOVE THE PLAYER DURING PLAYBACK**

During playback, the disc spins at high speed. So do not lift or move the player. Doing so may damage the disc.

**2. TRANSPORTING THE PLAYER**

Before transporting the player, be sure to remove the disc and turn off the power, then unplug the power cord.

**3. PLACE OF INSTALLATION**

Select a stable place near the TV or stereo system to which you are going to connect the player.

Do not place the player on top of a TV or color monitor.

Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

**4. DO NOT PLACE OBJECTS ON TOP OF THE PLAYER**

Do not expose this apparatus to rain, moisture, dipping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**5. TURN OFF THE POWER WHEN NOT USING THE PLAYER**

If the player is connected to your TV but not in use, switch the power off. It can avoid interference to your normal TV picture.

Noise problems may also be experienced if used near a radio.

**6. SPECIAL NOTE REGARDING USE OF PLAYER IN VEHICLES**

- We strongly advise against using the player while driving.
- Most countries and states have laws which prohibit or severely restrict the use of the player in vehicles while driving.
- Do not leave the player or the battery pack in places where the temperature is extremely low (About -10°C or lower) or extremely high (About 60°C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

**7. WHEN USING WITH CAR POWER CABLE IN CARS**

Please turn on the engine and then connect the car power cable for using.

**8. CLEANING THE PLAYER**

Normally clean the player with a soft, dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly.

Wipe off the dirt, then wipe off the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the print or coating to peel off.



Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

**9. COPYRIGHTS**

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.

 

 

**TYPES OF DISCS PLAYABLE ON THIS PLAYER**

- The discs listed on the table below can be played on this player without an adapter.
- The marks shown on the table below are indicated on the disc's label, package or jacket.

Types of playable discs and their marks	Diameter/Playable sides	Playback time
DVD-Video disc 	DVD video 12cm/single-sided      1 layer 2 layer 12cm/double-sided      1 layer 2 layer	Playback time (MPEG 2 format) 133 minutes (4.7GB) 242 minutes (8.5GB) 266 minutes (9.4GB) 484 minutes (17GB)
	DVD video 8 cm/single-sided      1 layer 2 layer 8 cm/double-sided      1 layer 2 layer	(MPEG 2 format) 41 minutes 75 minutes 82 minutes 150 minutes
	CD 12 cm/single-sided	74 minutes
	CD 8 cm/single-sided	20 minutes

**Marks indicated on DVDs**

DVD discs or packages include the marks shown below. These marks indicate the type of video or audio signals recorded on the disc and the functions that can be used.

Mark	Meaning
	Indicates the number of audio tracks.
	Indicates the number of angles.
	Indicates the selectable picture aspect ratio.
	Indicates the playable region number.

**PLAYABLE FORMATS**

The unit is able to play most audio/video files such as:



 



 
 



PICTURE: JPEG

AUDIO: MP3, WMA

VIDEO: DAT, VOB, MPEG2, MPEG4 (AVI, DIV )


**PACKAGE CONTENTS**

 After unpacking, first check the contents of your DVD player package as listed below:

Operating manual	Digital TV Antenna (SDV485-BY)	Active antenna (SDV485-B)
		
Earphone	Remote control	Car power cable
		
Backplate	Screw & gasket	AV cable
		
Headrest mount	AC / DC adapter	
		


NOTES: Actual products' appearance might vary slightly from the pictures shown.

FRONT SIDE

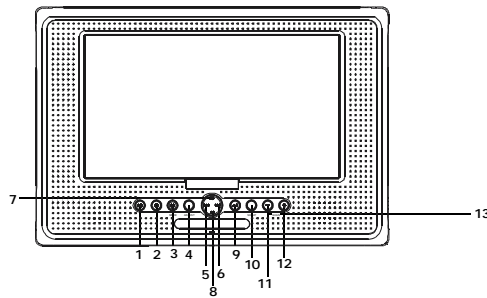

- |           |           |          |
|-----------|-----------|----------|
| 1.        | 6.        | 11. CH-  |
| 2.        | 7.        | 12. CH+  |
| 3. MODE   | 8.        | 13. SCAN |
| 4. ADJUST | 9.        |          |
| 5.        | 10. SETUP |          |

 
BUTTON DEFINITION



1. **Play / Pause button**  
Press it to start / pause the playback. (Invalid in DVB-T state)
2. **Stop button**  
Stop the playback. (Invalid in DVB-T state)
3. **Mode button**  
Press it to pop out the play modes selecting menu: DVD, DVB -T, and AV IN. Press it again to exit.



 The default mode is DVD.  
Turn off the player. If you turn it on again, it will return back to the playing mode before power off.

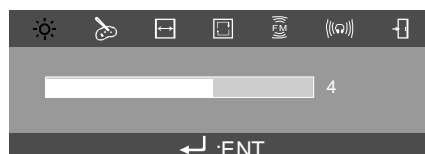**4. Adjust button**

Press it to enter the adjustments of brightness, color, TFT mode and view mode, FM transmitter and IR transmitter. Press it again to exit.  
Keep pressing the button for about 1.5 seconds to turn off the TFT display and press any key to resume display.

**5. Left / Previous button**

Press it to move left at the MENU or SETUP status.  
Press it to locate at the previous track or chapter when playing DVD.

**6. Right / Next button**

Press it to move right at the MENU or SETUP status.  
Press it to locate at the next track or chapter when playing DVD.

**7. Up / Forward button**

Press it to move up at the MENU or SETUP status.  
Press it to forward the playing speed through x2, x4, x8, x20 when playing DVD.

**8. Down / Rev button**

Press it to move down at the MENU or SETUP status.  
Press it to backward the playing speed through x2, x4, x8, x20 when playing DVD.

**9. Enter button**

Press it to confirm your selection.

**10. Setup button**

Press it to bring forth the main setup menu. Press it again to exit.

**11. CH- button**

Press it to channel down. ( Invalid in DVD state)

 
**12. CH+ button**

Press it to channel up. ( Invalid in DVD state)

**13. Scan Function**


Perform program scanning by pressing the CH- and CH+ buttons together simultaneously.  
( Invalid in DVD state)

RIGHT SIDE

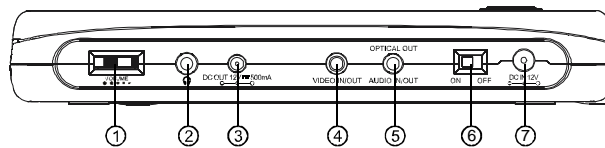

1. **Volume control**  
Use it to adjust the volume of the speaker or the earphone.
2. **Earphone jack**  
For connecting a stereo earphone or an amplifier.
3. **DC OUT(DC 12V 500mA )**  
DC output.  
Note:
  - This DC out port can connect to products from our company only. Otherwise it might cause bad performance.
  - The maximum output current is 500mA.
4. **Video in/out jack**  
Input or output video signals to connected device by setting AV IN/OUT mode value. The included AV cable is connected from here.
5. **Audio in/out and optical output jack**  
Input or output audio signals to connected device by setting AV IN /OUT mode value. Output optical audio signals to connected device. The included AV cable or optical digital cable is connected here.
6. **Power on/off**
7. **DC IN (DC 12V )**  
Connect the included AC/DC adapter here.

 
LEFT SIDE

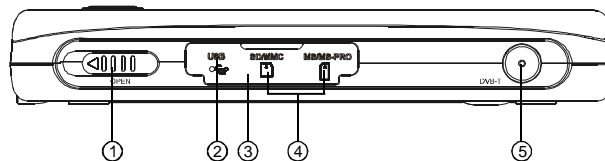

- |  |  |
|--|--|
| <p><b>1. OPEN button</b><br/>Push it to open the cover.</p> <p><b>2. USB port</b><br/>Support USB 1.1 use.</p> | <p><b>3. Slot Protector</b><br/>Open the rubber cover to find the card slot and USB port.</p> <p><b>4. SD/MMC/MS/MS-PRO card slot</b></p> <p><b>5. DVB-T jack</b><br/>DVB-T type aerial input.</p> |
|--|--|




**MAIN UNIT REAR SIDE**

 - 1. Support**  
The unit can stand with this device.

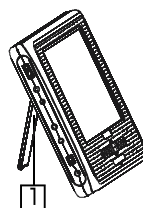


**HOW TO STAND**

   1. Pull out the support.
2. Draw out the support to a proper position.
3. Pull down the button to lock it.

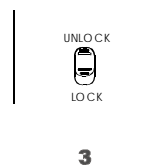



REMOTE CONTROL

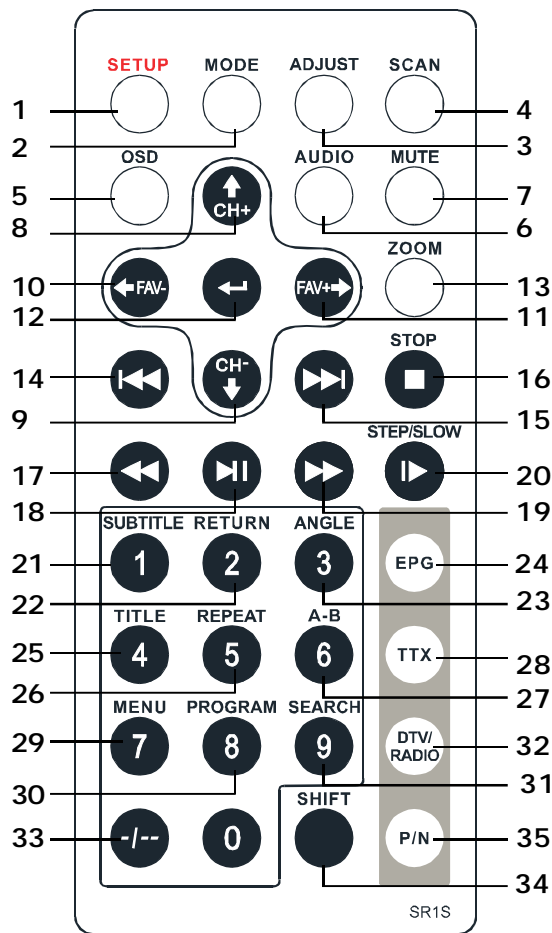 

## KEY DESCRIPTION OF REMOTE CONTROL

- 1 SETUP**  
Press it to bring forth the main setup menu. Press it again to exit.
- 2 MODE**  
Press it to pop out the play modes selecting menu: DVD, DVB -T, and AV IN. Press it again to exit.
- 3 ADJUST**  
Press it to enter the adjustments of brightness, color, TFT mode and view mode, FM transmitter and IR transmitter. Press it again to exit.
- 4 SCAN**  
Perform program scanning. Press it again to exit. ( Invalid in DVD state)
- 5 OSD**  
Press it to display the disc's or the program's information.
- 6 AUDIO**  
Press it to switch the audio language.
- 7 MUTE**  
Audio mute on/ off.
- 8 ↑/CH+**  
Press it to channel up in DVB-T state while move the cursor up in menu state.
- 9 CH-/ ↓**  
Press it to channel down in DVB-T state while move the cursor down in menu state.
- 10 ←/FAV-**  
Move the cursor left in the menu state or switch to previous favorite program in DVB-T state.
- 11 FAV +/→**  
Move the cursor right in the menu state or switch to next favorite program in DVB-T state.
- 12 ↵**  
Enter the selected item.
- 13 ZOOM**  
Zoom the picture on screen.
- 14 ⏮**  
Jump to previous track. (Invalid in DVB-T state )
- 15 ⏭**  
Jump to next track. (Invalid in DVB-T state)
- 16 STOP( ■ )**  
Press this button to stop playback. (Invalid in DVB-T state)
- 17 ⏪**  
Fast backward. (Invalid in DVB-T state)
- 18 ⏩**  
Press this button to play or pause playback. (Invalid in DVB-T state)
- 19 ⏭**  
Fast forward key. (Invalid in DVB-T state)
- 20 STEP/SLOW**  
During playing status, press it to switch to SLOW mode, while switch to STEP mode at pause status. (Invalid in DVB-T state)
- 21 SUBTITLE**  
Press it to switch the DVD'S subtitle language. (Invalid in DVB-T state)
- 22 RETURN**  
Return to the menu in DVD state while return to the previous channel in DVB-T state.

 
- 23 ANGLE**  
Press it to switch angle. (Invalid in DVB-T state)
- 24 EPG**  
Press it to enter the electric program guide. Press it again to exit. (Invalid in DVD state)
- 25 TITLE**  
Press it to display the DVD's title. (Invalid in DVB-T state)
- 26 REPEAT**  
Press this button to repeat playback. (Invalid in DVB-T state)
- 27 A-B**  
Press this button during playback to set two points and play the section between them repeatedly. (Invalid in DVB-T state)
- 28 TTX**  
Press it to show the teletext information. (Invalid in DVD state)
- 29 MENU**  
Press it to display menu information. (Invalid in DVB-T state)
- 30 PROGRAM**  
Program playing order of tracks. (Invalid in DVB-T state)
- 31 SEARCH**  
Locate title/ chapter/ playtime to play. (Invalid in DVB-T state)
- 32 DTV/RADIO**  
Press it to choose TV program or radio program. (Invalid in DVD state)
- 33 -/--**  
Press this button to select channel numbers of one figure or double digits in DVB-T state and it equals to "10+" to select tracks and chapters in DVD state.
- 34 SHIFT**  
Press this button to switch between number and function.
- 35 P/N**  
Press it to output the TV type: PAL and NTSC. (Invalid in DVD state)

**NOTES ON USING THE REMOTE CONTROL UNIT**


- Do not drop or step on the remote control unit or subject it to shocks.
- Note that the remote control unit may not work if there are obstacles between the remote sensor and itself.
- Do not expose the remote sensor to strong light. Doing so may make operation impossible.
- Use the remote control unit within the specified operating range.

**REPLACING THE BATTERY**


- 1** Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.

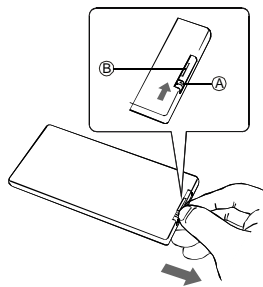

 - 3** Fit the battery holder back to its place.

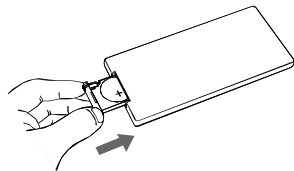

 - 2** Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.




Lithium Battery (CR2025)


**NOTE:**

 - To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (One month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.
- Caution: The battery may present a risk of fire if mistreated. Do not recharge, disassemble, or heat it above 100°C. Replace battery with the same type.
- Dispose of used battery properly, keep away from children and do not dispose of in fire.


CONNECTING THE PLAYER TO A TV SET

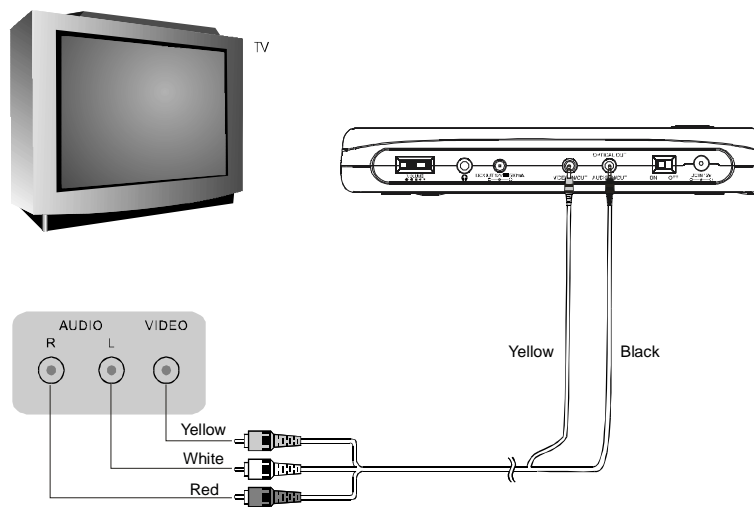

## CONNECTING THE ADAPTER TO THE DC IN 12V SOCKET

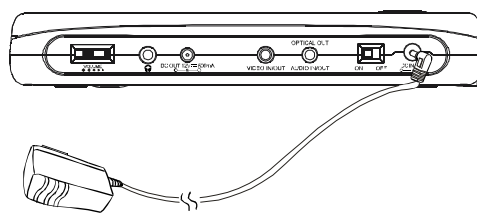 


## USING THE EARPHONE

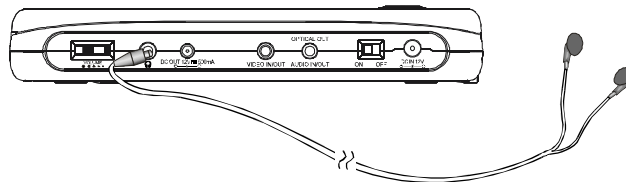 

1. Set the volume control to minimum sound level.
2. Connect the earphone plug to the player's "🎧" jack.
3. Adjust the volume control to the preferred sound level.

### CONNECTING TO A DOLBY DIGITAL / MPEG DECODER OR AN AMPLIFIER WITH A BUILT-IN DECODER

 With this player, you can enjoy powerful Dolby Digital or MPEG sound. Output the digital signals from the player's digital output to a decoder or amplifier with built-in decoder.

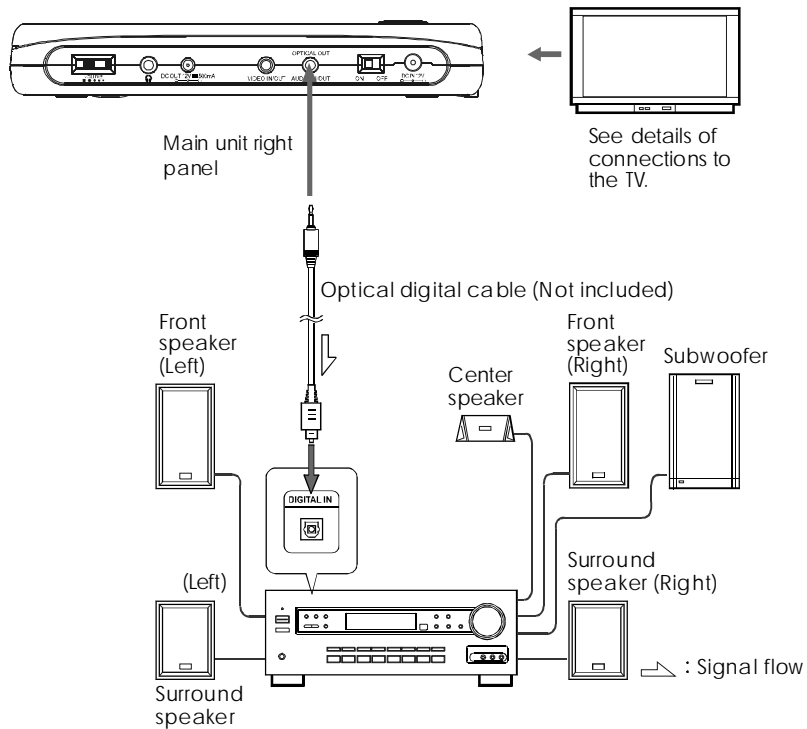


#### Hint:

For a compatible decoder or amplifier, 5 speakers (Front left / right, center and surround left / right) and a subwoofer are required to enjoy Dolby Digital channel sound.

## CONNECTING TO A DIGITAL AMPLIFIER THAT IS NOT DOLBY DIGITAL / MPEG COMPATIBLE

 Output the digital signals from the player's digital output to a digital amplifier that is not Dolby/MPEG compatible. For instructions of audio settings, refer to AUDIO OUT of AUDIO SETUP.

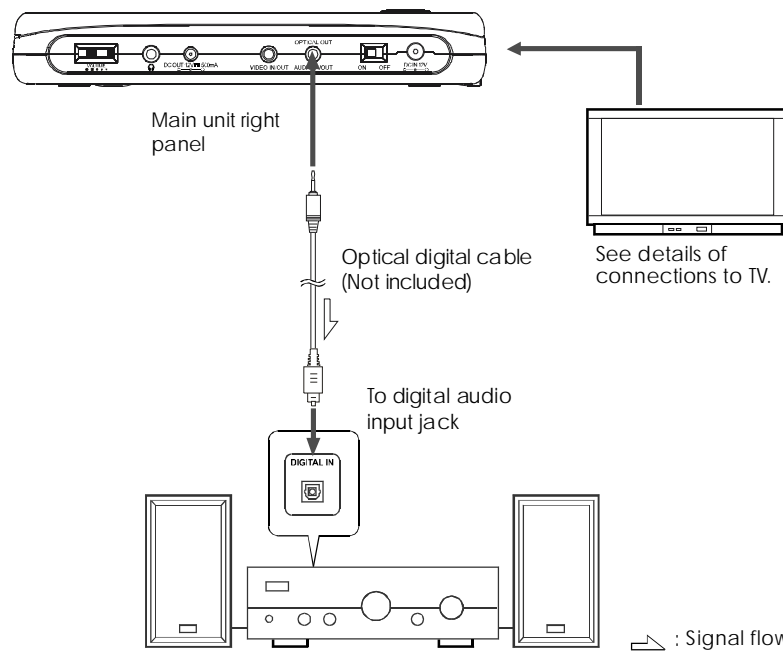
**Notes:**

- Carefully check the player's digital output settings before connecting the player to an amplifier equipped with a digital audio input jack which is not Dolby Digital / MPEG compatible.


**Do not play DVDs when the audio settings are not correct. Or it may cause strong noise and damage your speakers.**



 CONNECTING TO ACTIVE SPEAKER SYSTEMS

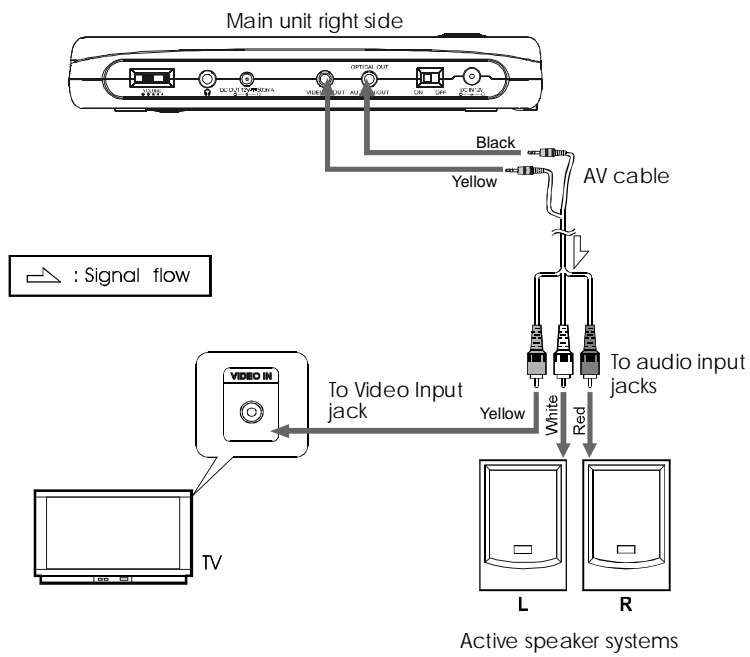


**TURNING ON THE POWER**

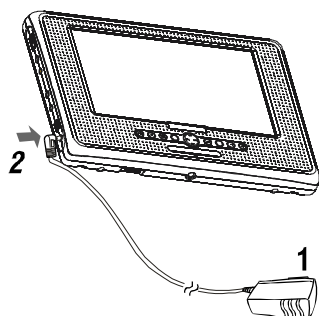 

**1** Connect the AC/DC adapter to a socket.

**2** Connect the DC output plug of the adapter to the DC input jack on the main unit.

 **3** Switch the POWER button to ON position.

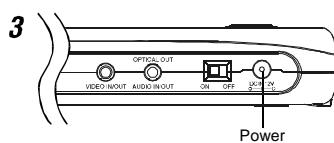

**Hint:**

The included AC/DC adapter is compatible with voltage from 100V to 240 V, you can use it on trips overseas.

Note that you need a converter plug (Available in stores) suited for the region in which you are travelling.

 
**TURNING OFF THE POWER**

**1** When the power is on, switch the power button to OFF position.

**2** Unplug the power cord from the power outlet.


**3** Disconnect the AC/DC adapter from the player's DC input jack.

LOADING

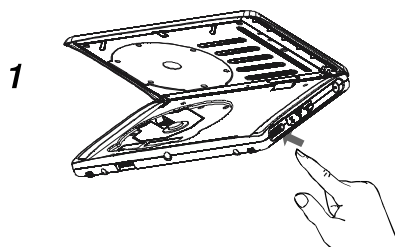

**1** Press the OPEN button to open the cover.

 ---

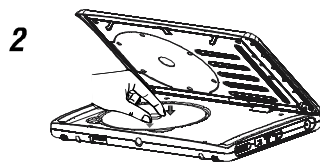

**2** Place in a disc and press it down the disc with your fingers near the center hole.

---

A click is heard.


**Notes:**

 - Set the disc securely. Failure to set it securely could result in damage.
  - Do not use cracked or warped discs. Doing so could result in damage.
  - Place single-sided DVDs or CDs in with the label (Printed) side facing upwards.  
For double-sided DVDs, check each side carefully, then place the disc in securely (Until a click is heard).
  - For CDs or one-sided DVDs, you do not have to worry about touching the label (Printed) side of the disc with your fingers. Since two-sided DVDs have signals recorded on both sides, be careful not to scratch them when removing them from the player.
- 

**3** Close the disc cover.


**PLAYBACK**

1. Turn on the power of the player.
2. Open the disc cover.
3. Insert a disc correctly.
4. Close the cover.
5. The player will load the disc and play automatically. If not, please press the ►|| button.

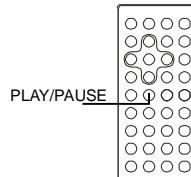


**STOP PLAYBACK**

 1. Press ■ on the remote control while playing.
2. The player remembers the stopping place.
3. To resume playback from the point where it stopped, just press ►|| key.
4. To clear stopping mark, press ■ again at stop status. The player will not play from the stopping place when pressing ►|| next time.

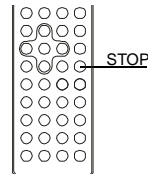


**PAUSE PLAYBACK**

 1. Press ►|| on the main unit board or on the remote control during playback.
2. Press ►|| again to resume normal playback.

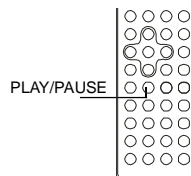


**PLAYING AT FAST SPEED**

 
1. Press ►► or ◀◀ button on the main unit board or on the remote control during playback.
2. The playback speed will be changed each time you press the ►► or ◀◀. The speed will be changed to 2X, 4X, 8X, 20X, 1X each time you press the button.

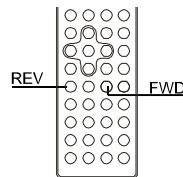**PLAYBACK IN SLOW MOTION**

 
1. Press the ► button on the remote control during playback. The playback speed becomes 1/2, 1/3, 1/4, 1/5, 1/6 or 1/7 of the normal speed each time you press the button.
2. When pressing ► during pause status, the player will show still a picture on the screen. The picture will be changed one frame each time the button is pressed.

**NOTE:**

During fast or slow motion playback, the sound is muted except playing a CD & MP3 disc. To resume normal playback, press ►||.

 
**A-B/REPEAT PLAYBACK**

 1. A-B playback
  - When pressing A-B button on the remote control during playback, the current point would be located on the remote control, and REPEAT A- appears on the screen.
  - Press A-B button again, B point would be located and the player would play from A point to B point repeatedly.
  - Press A-B button again. A-B playback would be cancelled and the player resume normal playback.
2. Repeat a Title, Chapter or Track
  - Press REPEAT button on the remote control during playback.
  - The chapter or the title(for DVD) and the track or entire disc (for CD) will be played repeatedly.
  - The REPEAT mode will be changed each time when the repeat button is pressed.

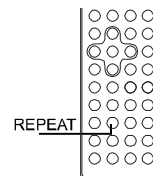


**ZOOM FUNCTION**

 1. Press ZOOM on the remote control during playback. The picture on the screen will be zoomed.
2. The zooming rate changed each time when the ZOOM button is pressed. The sequence is 2X, 3X, 4X, 1/2X, 1/3X, 1/4X, 1X.

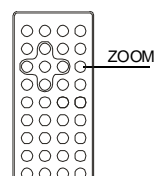


**SEARCHING FOR A SPECIFIC SCENE**

 1. Press the SEARCH button on the remote control.
2. Press the UP, DOWN and ENTER buttons to move to desired section.
3. Input valid number to choose specific time or title, chapter or track.
4. Press ENTER button to play the specific scene.
5. Press SEARCH button to resume normal screen.

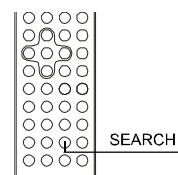


**SELECTING SUBTITLE**

 You can select a preferred subtitle from those included on the DVD video disc by pressing SUBTITLE button on the remote control during playback.

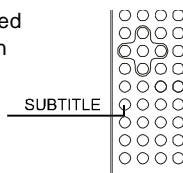


**CHANGING THE ANGLE**

 Press the ANGLE button on the remote control while playing a scene recorded with multiple angles. If your DVD disc is not recorded with multiple angles, pressing ANGLE button will not effect at all.

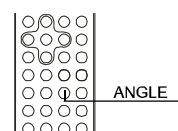

**CHANGING THE AUDIO LANGUAGE**


 
1. Press the AUDIO button on the remote control during playback. You can select different audio languages included on the DVD video disc.
2. For VCD or CD, you can choose channels to play.

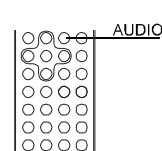

**PROGRAM PLAYBACK**

The program playback function can automatically play titles, chapters, or tracks in accordance with the programmed order.

  1. Insert a disc and then press the PROGRAM button on the remote control.  
At this time, menu appears as below.

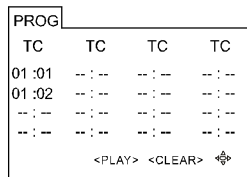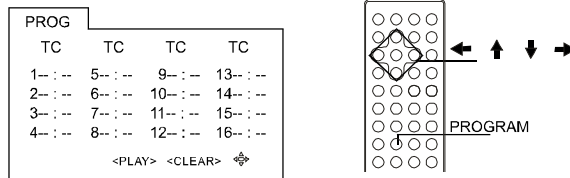


2. Using and the number buttons to select the title and chapter in your preferred order.
3. Using to move the cursor to **PLAY** and press ENTER button. The player starts PROGRAM playback.
4. To exit, press the PROGRAM again.

**NOTES:**

  
- When the DVD video player is turned off or the discs are removed, the programmed items will be removed.
- Referring to the disc, some may not have this function.
- Selecting an in-existent title or chapter, program playback will be canceled automatically.


 


**USING THE ON-SCREEN DISPLAY**

1. This DVD video player allows you to view the operational status and disc's information on screen.
2. Press OSD button on the remote control during playback. The disc's information will be displayed on screen.
3. Press OSD button again, the information will disappear.

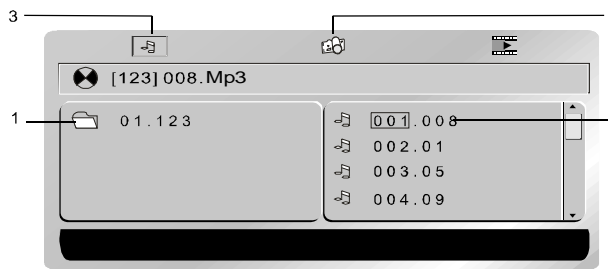

**PLAYING A MP3 FORMAT DISC AND JPEG CD**



1.  **Folder**
2.  **Files**
3.  **MP3 ICON**
4.  **JPEG ICON**

- Use ↑/↓/←/→ to move the cursor to a folder, a file, MP3 ICON or JPEG ICON.
- In order to play MP3 files, move the cursor to MP3 ICON and press ENTER button. In order to play JPEG files, move the cursor to JPEG ICON and press ENTER button.
- Choose the desired file and press ENTER to play.
- Press A-B button to get A-B REPEAT function. Press REPEAT button to switch repeat mode(REP1, REP DIR, REP ALL, REP OFF).  
REP1 means repeating the track; REP DIR means repeating the folder; REP ALL means repeating the whole disc.



**PLAYING DivX FILES**

Your player is an official DivX Certified product that plays DivX.5, DivX.4, DivX.3, and DivX. VOD video content in compliance with DivX Certified technical requirements.

**NOTE:**

 
To guarantee playback of DivX files the audio must be MP3 format. DivX Certified devices can play any interleaved MP3 audio at any bitrate, both CBR and VBR. The audio must be sampled at standard frequencies, such as 32 kHz, 44.1 kHz, and 48 kHz, and must conform to the AVI file specification. Apart from MP3, the audio formats recognised by your player are MPEG layer 1 / 2, AC3, PCM. Formats such as AAC and Ogg Vorbis are not supported by this player.

1. Open the compartment by sliding down the OPEN button.
2. Place the disc with the printed side facing up and close the compartment.
3. A menu appears on the screen. Select a folder using the **↑** and **↓** buttons on the remote control, then press **←** to open the folder's contents.
4. Select a file using the **↑** and **↓** buttons on the remote control.

**NOTE:**

To go back to the folder list, press **←**.

5. Press **▶** to start playback.
6. Press **STOP** to stop playback.

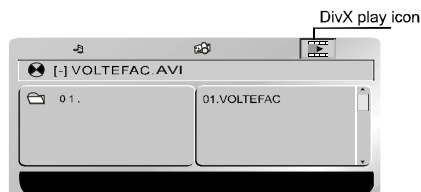**USB AND CARD READING**


1. If there is only one media inside the player after power on or closing the compartment cover, this media will be read directly.
2. If there are two or more media, the following prompt message will appear to help select your choice.
3. If a media is playing prior to another media connecting, the playback will stop to pop out the prompt message.
4. If there are two or more media in STOP state, you have to press "STOP" button twice to bring up the prompt message.



**Note:**

 1. Supply USB 1.1 use.
2. The player may not work properly if using USB connecting cable. Suggested not to use it.
3. Support SD/MS/MS-Pro / MMC cards.

- Insert the cards as the following picture shows:

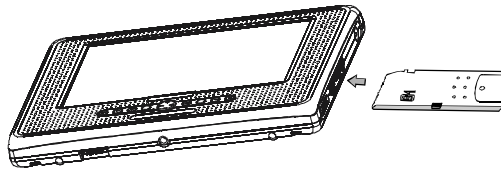


- This product has been tested with most brand name flash media cards. Using poor quality flash cards may affect the readability of the unit.
- This unit can read flash memory card up to 1GB capacity.

The system setup options are illustrated below:

#### **TV SYSTEM**

 If you want to connect the player to a TV, please choose a correct TV system first.

- **AUTO:** Choose this setting if your DVD player is connected to a multi-system TV.
- **NTSC:** Choose this setting if your DVD player is connected to a NTSC TV.
- **PAL:** Choose this setting if your DVD player is connected to a PAL TV.
- The default setting is AUTO.

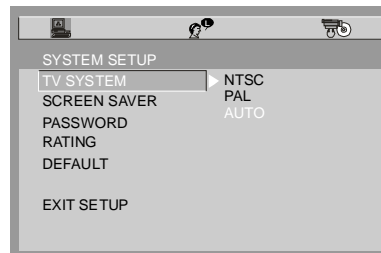


**NOTE:**

Setting with incorrect TV system will result in black and white picture on your TV screen.

**SCREEN SAVER**

Set the screen saver option to ON status. When your DVD player is at STOP or NO DISC status, or there is a frame frozen for a little long time, the screen saver will be displayed. This feature can protect the screen from damage.

 - ON: Choose this setting to activate the screen saver.
- OFF: Choose this setting to cancel the screen saver.
- The default setting is ON.

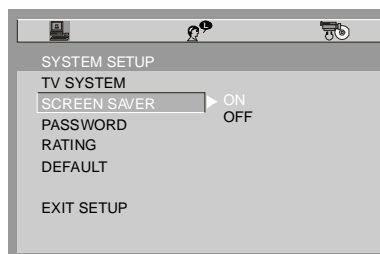
**PASSWORD**

Step1: For first time use: Enter 0000 as password or assign password to unlock.

Step2: Once parental control is unlocked, go to rating menu and assign rating.

Step3: Enter new password of your choose in 4 digit number to lock player rating.

 
If you forget your assigned password, you can use 0000 to unlock the rating again.

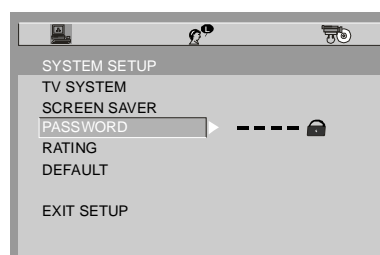

**RATING**

The rating feature works with DVD discs that have been assigned a rating. This helps you to control the types of DVDs that the player can be watched.

 
- There are eight limited rating options: KID SAFE, G, PG, PG13, PG-R, R, NC-17, ADULT.
- The default setting is ADULT.

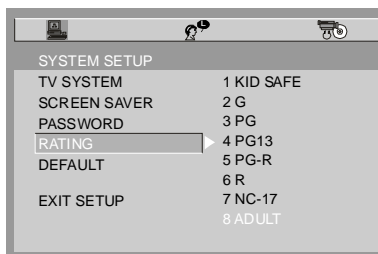**NOTE:**

If the password option is locked, you cannot change the rating.

**DEFAULT**

 
Choose this option to resume factory settings.

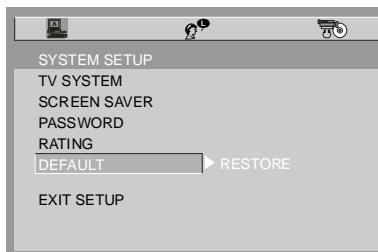

The language setup options are illustrated below:


#### OSD LANGUAGE

 Highlight the OSD LANGUAGE option, and press the arrow buttons to choose the OSD language you prefer. Press ENTER to confirm, and it will display OSD in that language. There are 5 optional OSD languages: English, German, Spanish, French and Italian.

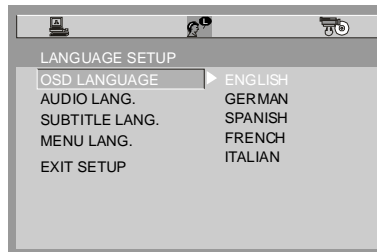


#### AUDIO LANG.

 Highlight the AUDIO LANG. option, and press the arrow buttons to choose the audio language you prefer. Press ENTER to confirm. If the disc you are playing has that language available, it will output audio in that language. There are 8 optional audio languages: Chinese, English, Japanese, French, Spanish, Portuguese, Italian and German.

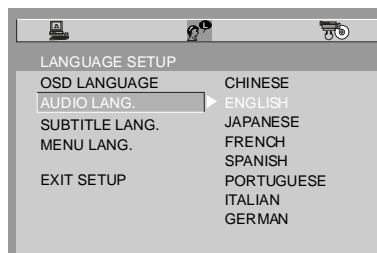


**SUBTITLE LANG.**

 Highlight the **SUBTITLE LANG.** option, and press the arrow buttons to choose the subtitle language you prefer. Press **ENTER** to confirm. If the disc you are playing has that language available, it will display subtitles in that language. There are 7 optional subtitle languages: Chinese, English, Japanese, French, Spanish, Italian and German.

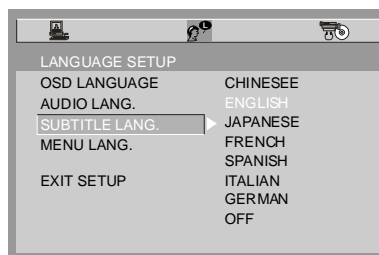**MENU LANG.**

 Highlight the **MENU LANG.** option, and press the arrow buttons to choose the menu language you prefer. Press **ENTER** to confirm. If the disc you are playing has that language available, it will display menu in that language. There are 8 optional menu languages: Chinese, English, Japanese, French, Spanish, Portuguese, German and Italian.

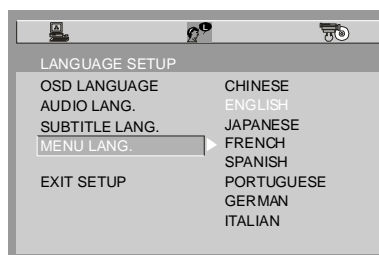**NOTE:**

If your preferred language isn't available, the disc's default language will be played. The default language of your DVD player is English.


The digital setup options are illustrated below:

#### AUDIO OUT

 Highlight the AUDIO OUT option, and press the arrow buttons to choose the audio output mode you prefer. Press ENTER to confirm.


There are 3 optional audio output modes: SPDIF/OFF, SPDIF/RAW and SPDIF/PCM.

- SPDIF/OFF: Choose this setting to output analog signal, and there will be no signal output from optical jack.
- SPDIF/RAW: Choose this setting if your DVD player is connected to a power amplifier with an optical cable. When playing a disc recorded with Dolby Digital and MPEG audio formats, the corresponding digital signals will be outputted from the optical output jack.
- SPDIF/PCM: Choose this setting if your DVD player is connected to a 2-channel digital stereo amplifier. When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signals will be modulated into a 2-channel PCM signal, and it will be outputted from the optical jack.

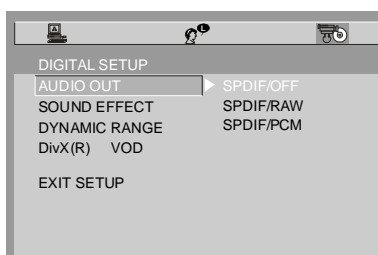

#### SOUND EFFECT

 
There are two sound output effect modes: NORMAL and SURROUND. You can choose SURROUND to enhance the output sound effect.

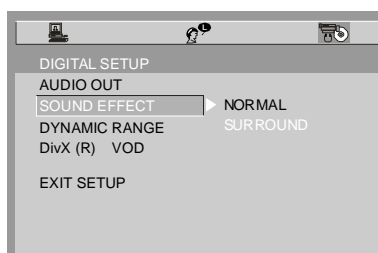



**DYNAMIC RANGE**

 Choose this setting to adjust the line out compressing ratio and get different effects. If adjusting to FULL, the audio signal peak value will be compressed to be the minimum; while adjusting to OFF, to be the maximum.

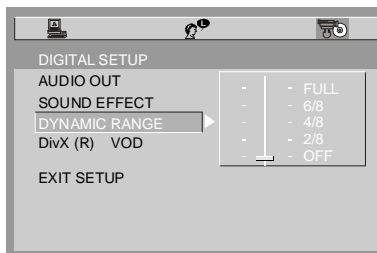
**DivX(R) VOD**

DivX VOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading a VOD you need to input the registration number of your DVD player on the purchase form on the site.

Write down the VOD 8-character registration number so that you can fill in the form on the website you purchase your DivX VOD files from.

Note: If you cannot play a DivX VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different versions or incorrect download parameters. The parameters used when copying to CD-R may be another reason for this.

 Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX VOD files, we recommend that you visit specialist websites such as [www.divx.com/vod](http://www.divx.com/vod).

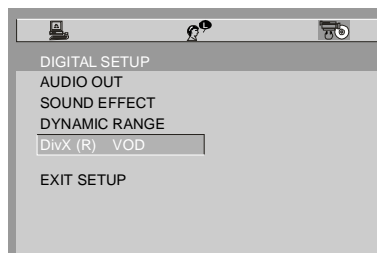

-DIVX[R] VIDEO ON DEMAND-  
YOUR REGISTRATION CODE IS: XXXXXXXX  
TO LEARN MORE VISIT [WWW.DIVX.COM/VOD](http://WWW.DIVX.COM/VOD)  
[DONE]

**NOTE:**

The registration code will be changed each time you use it to download the DivX files. You have to use new code to carry out downloading operation next time.

First, press **MODE** button to enter DVB-T enjoyment .

- For the first time use, the system will pop out a message: First Time Installation.



Choose "Yes" to enter the next OSD display.

■ **Select Country:**

- ▶ England
- ▶ Italy
- ▶ France
- ▶ Spain
- ▶ Holland
- ▶ Australia
- ▶ Norway
- ▶ Sweden
- ▶ Finland
- ▶ Portugal
- ▶ Others
- ▶ China
- ▶ Taiwan
- ▶ Germany

 
 


**OSD Language:**

- ▶ English
- ▶ Deutsch
- ▶ Español
- ▶ Français
- ▶ Italiano

Select the proper region according to the place you are located and the preferred OSD language.

- Then come to the "NEXT" to bring forth the Auto Scan.

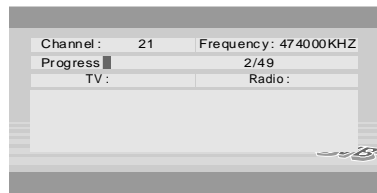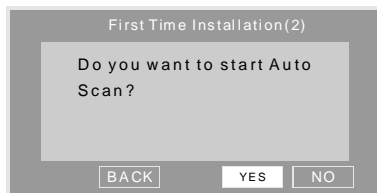


**EPG (ELECTRIC PROGRAM GUIDE)**

A quick program guide that the user can easily move up/down to view the brief description of the selected program.



 
If the current channel is scrambled, the prompt message "scrambled channel." will appear on the screen.

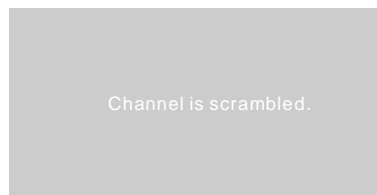

**SCAN**

 Perform quick program scanning.(Found programs will be appended to the program list.)

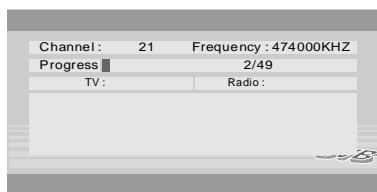


**Country list for selecting:**

England, Italy, France, Spain, Holland, Australia, Norway, Sweden, Finland, Portugal, Others, China, Taiwan, and Germany.  
Just select your preferred scan area and press ENTER to start scan.

**AUDIO**

 Audio channel information displays. And you can also use this button to select the inherent audio languages.

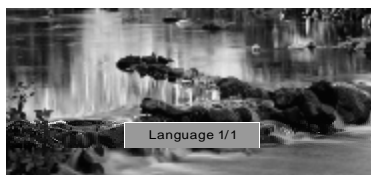


**SYSTEM SETTING**

Press the SETUP key on the remote control to bring up the main menu. There are four classifications: Channel Guide, System Config, Installation and Game.

**TV CHANNELS**

 
Highlight "TV Channels" and press ENTER to snapshot all channels.

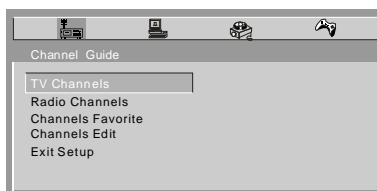

Press SETUP to exit from the current OSD.


**RADIO CHANNELS**

 Select this item to show radio program information.

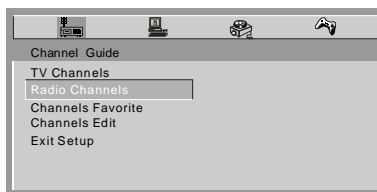

**CHANNELS FAVORITE**

 
This function will help you to classify all the channels to four groups: Favor, Movie, News and Show. After the classification, please exit from the menu. Then you can use Left (Fav-) / Right (Fav+) buttons to choose your favorite groups and UP(CH+)/ Down (CH-) buttons to get each specific channel within the groups.

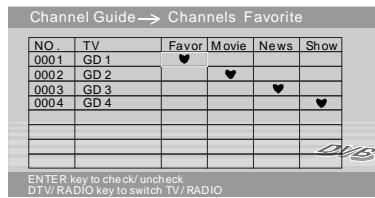

**CHANNELS EDIT**


There are three edit functions with this option.

 **Rename program**

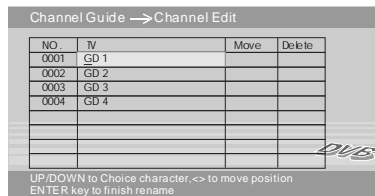


1. Press ENTER key to rename the program.
2. Then use UP/ Down to choose characters and Left / Right to move to the need-to-be-edited position.
3. Press ENTER key again to finish these actions.

**Move program**

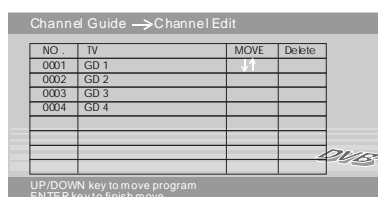 

1. Press ENTER to bring up the Move symbol.
2. Move the channel to a new position with Up/Down buttons.
3. Press ENTER key again to finish these actions.

**Delete program**

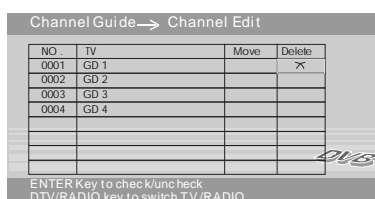 


Highlight the corresponding position of the need-to-be-deleted channel and press ENTER to mark the channel. Then exit. You'll find the channel had been deleted and cannot revamp it if you delete programs in wrong. In this case you need to rescan.



Use ↑ and ↓ buttons to get your actual need.

### TV SETTING

 Select the corresponding TV system. (Auto means the output signal format will be changed automatically according to the received signal.)

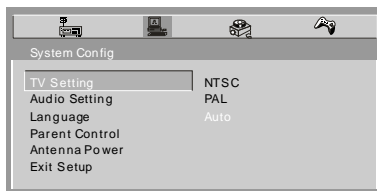


- ▶ NTSC
- ▶ PAL
- ▶ Auto

The default is Auto.

### AUDIO SETTING

 There are three optional audio output modes: SPDIF/OFF, SPDIF/RAW and SPDIF/PCM.

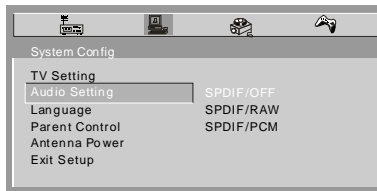

#### **SPDIF/OFF:**

Choose this setting to output analog signal, and there will be no signal output from the optical jack.

#### **SPDIF/RAW:**

Choose this setting to output digital signals if connected to a power amplifier with an optical cable.

 
#### **SPDIF/PCM:**

If connected to a 2-channel digital stereo amplifier, choose this option to output audio signals which will be modulated to a 2-channel PCM signal.

The default is SPDIF/OFF.


**LANGUAGE**

- ▶ English
- ▶ German
- ▶ Spanish
- ▶ French
- ▶ Italian


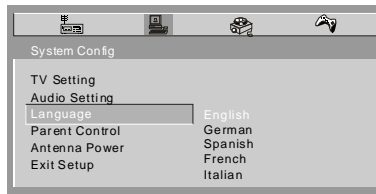


The default is English.

**PARENT CONTROL**

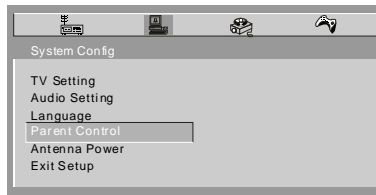 

  
Press ENTER to display the pin-change information. The default pin is 0000.

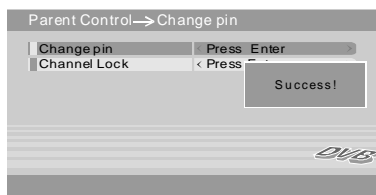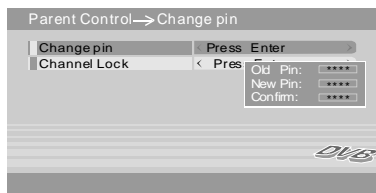

If you want to change the Channel Lock, you will be required to input the password first.



 
After unlocked, a whole channel list will be displayed for your selecting.

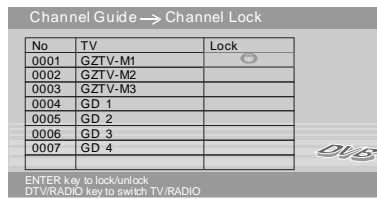

### ANTENNA POWER


Choose "On" to activate the active antenna power. This can help you to get better signal.

 The default is On.

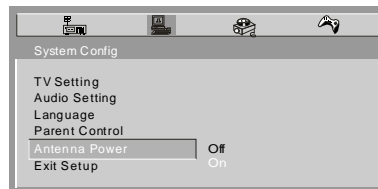

**AUTO SCAN**

 Auto scanning.

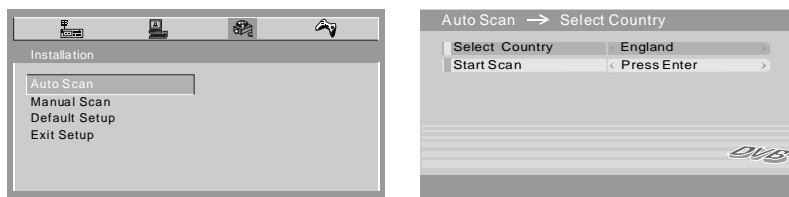


**Note:**  
Press "SCAN" on the remote control to bring up the quick auto scan.

**MANUAL SCAN**

 Perform program scanning. ( Found programs will be appended to the program list.)

**Scan Country**

- ▶ England
- ▶ Italy
- ▶ France
- ▶ Spain
- ▶ Holland
- ▶ Australia
- ▶ Norway
- ▶ Sweden
- ▶ Finland
- ▶ Portugal
- ▶ Others
- ▶ China
- ▶ Taiwan
- ▶ Germany

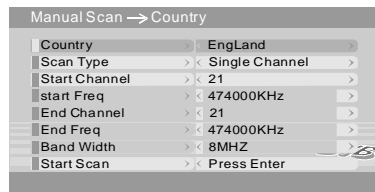


There are 4 optional items:

- Country: Choose the right territory.
- Scan Type: Channel Range and Single Channel.
- Start Channel: Choose the desired start channel which is in accordance with certain frequency.
- END Channel: Choose the desired end channel which is in accordance with certain frequency.

### DEFAULT SETUP

 
Resume the factory settings.

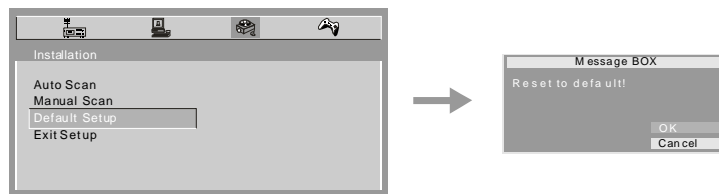

**Note:**


The default settings action will resume all the factory settings, including the deletion of all the saved programs.

 Get to the game function from the main menu. You will find three kinds of games in DTV state.

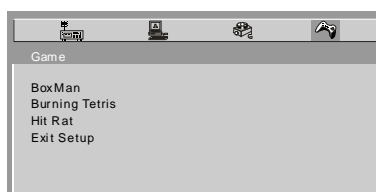

**BOXMAN**

 
Use ↑, ↓, ← and → buttons to control the little man to move the boxes to the appointed place. Only one box can be moved at a time.

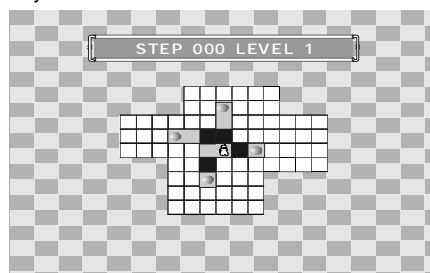

Press the OK key to play the higher level one.

**BURNING TETRIS**

 
1. Use ← and → to move Tetris left and right.
2. Press ↑ to shift the direction of the Tetris.
3. Press ↓ to accelerate the Tetris downwards.

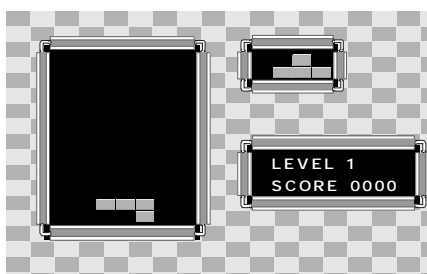

Press the OK key to pause/play the game.


HIT RAT

 Press 1,2,3,4,5,6,7,8,9 to hit the rate according to its corresponding directions of where it appears on the screen.

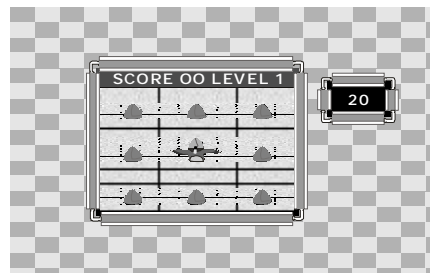

FM TRANSMITTER

 1. Press "ADJUST" button to enter the adjustments of brightness, color, TFT mode, view mode, FM transmitter and IR transmitter.
2. Use the ← / → buttons on the main unit board or ← / → buttons on the remote control to choose FM transmitter, then press ↵ enter button.

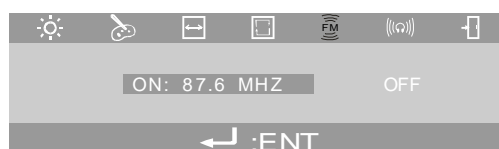


3. Use the ← / → buttons to choose "ON", then press ↵ enter button to enter frequency input mode.
4. There are two frequency input modes: one is to input numbers directly; the other is to increase or decrease frequencies by the direction buttons. By pressing the ← / → buttons to change the place number inputted, while the ← / → buttons to decrease and increase frequency number.
5. The input frequency range is from 87.6-107.9MHZ. The default is OFF.
6. If the input number is out of the range of 87.6-107.9MHZ the frequency will be displayed in cycles from the beginning.
7. Press ENTER button to save the choice after selecting the preferable frequency within the permissible range. Then the player will transmit audio signal according to this frequency. Choose "OFF" to turn off the FM function.
8. Adjust your receiving set (eg. car stereo) to the corresponding frequency to receive the transmitted audio signal from the player.
9. The transmission range will be within approximately 3 meters.



## IR TRANSMITTER

 1. Press "ADJUST" button to enter the adjustments of brightness, color, TFT mode, view mode, FM transmitter and IR transmitter.
2. Use the ← / → buttons on the main unit board or remote control to choose IR transmitter, then press ↵ enter button.

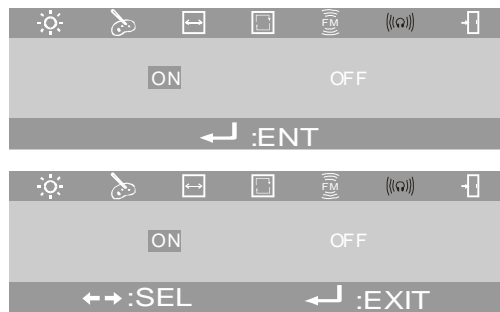

3. Use the ← / → buttons to choose "ON", then press ↵ enter button to confirm. Then the IR transmitter works and the IR lens on the front board lights up.
4. Only the IR headphone produced by the same company (who makes this player) can get the IR signal from the player.
5. The transmission range will be within approximately 5 meters.
6. The default is OFF.

## Fit the Portable DVD Player to the Headrest Mount or VESA Wall Mounting Bracket

■ ENG 57

DVD DVB-T

### 1. The followings show you how to fit the portable DVD player to the headrest mount in the car.

 
1). Take out the headrest mount and fix it on the car chair.



Release the straps




Place the two mounting straps over your headrest with the mount's sponge facing the headrest .

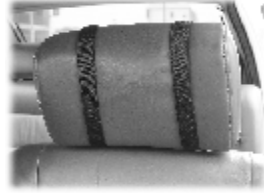


Secure the mount by tightening the straps

 2). Take out the backplate and fit it on the rear side of portable DVD player



 Fit the screws in the four screw holes where the arrow pointed

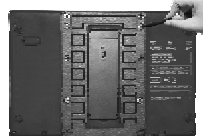

Screw Size: M4\*8

3). Gently slide the portable DVD player down by aligning the backplate groove with the headrest mount until you hear the click sound. Then the installation is finished.



### 2. How to fit portable DVD player to the VESA wall mounting bracket



Gasket Size: 4.3\*9\*0.8mm



Connect the portable DVD player with the VESA wall mounting bracket with the middle four screw holes (there are 4 gaskets for using).

■ MOBILE ENTERTAINMENT ■

Please place the antenna as follows to improve the receiving strength of TV signals.

1. Please position the antenna close to the window when using in-door.



(SDV485-BY)

2. Please position the antenna on the roof when using in-car. (Do not use it when the car is moving)



(SDV485-B)



## SIZE AND PARAMETER

Product name:	TABLET DVD player
Power:	DC12V
Consumption:	<10W
Audio out:	R/L 2ch,OPTICAL
Video out:	Composite
Size:	260X175.6X26.5mm
Weight:	950g

## TROUBLE SHOOTING

Symptoms	Possible causes	Remedies
The disc does not play	Disc is loaded incorrectly.	Load the disc with the label side up, and firmly pressed into the center.
	Disc is dirty or scratched.	Make sure the disc is free from scratches or fingerprints.
	Wrong region disc.	Use the right region disc.
No display	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player or TV.	Setting or connecting correctly with your player or TV.
	The antenna is not connected well.	Connect the antenna well.
	Wrong mode setting.	Set the right mode.
No sound	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player or TV.	Setting or connecting correctly with your player or TV.

Maintenance and clean the unit only as recommended in the operational instructions.

**DAMAGE REQUIRING SERVICE**

Have the unit serviced by a qualified service technician if:

- The unit has been exposed to rain or water.
- The unit does not seem to operate normally.
- The unit exhibits a marked change in performance.

**DO NOT ATTEMPT TO SERVICE THE UNIT BY YOURSELF!**

