

1. UNPACK YOUR NEW FIREBALL™ SEi

- Unpack the FireBall, cables, and accessories (save the box).
- Make note of the serial number (located on the back).

SERIAL NUMBER: _____

2. CONNECT FIREBALL TO YOUR A/V SYSTEM

- Locate the included composite video and analog audio cables.
- Connect FireBall to any available A/V input on your receiver or Telly.

Note: You may use optional s-video or component video cables and optional digital audio cables for the best picture and sound quality

Note: The default video output mode is NTSC. Instructions for changing the video mode to PAL are in the User's Guide.

3. CONNECT FIREBALL TO THE INTERNET

FireBall requires an Internet connection to identify the CDs played and recorded in the front panel drive, for playing Internet Radio stations, and for general system maintenance.

- Connect the included ethernet cable from FireBall's ethernet jack to your ethernet network.

NOTE: You may need to purchase additional network hardware such as a "router". Please contact your Escent dealer for more information.

 
4. POWER UP!

- Plug FireBall into an AC outlet.
- The Standby LED on the front of the FireBall will begin to flash RED during the power on cycle. When the LED turns solid RED, the FireBall is ready for use.
- Press the power button on the front panel or on the remote control.
The LED will turn solid BLUE and video will be displayed on the Telly when the unit is on.

Note: You may have to press the "FB1" button on the remote to configure it to control FireBall. Also be sure the Telly and receiver are turned on and set to the correct FireBall input.

5. QUICK START

- Use the remote control and follow the on-screen instructions.

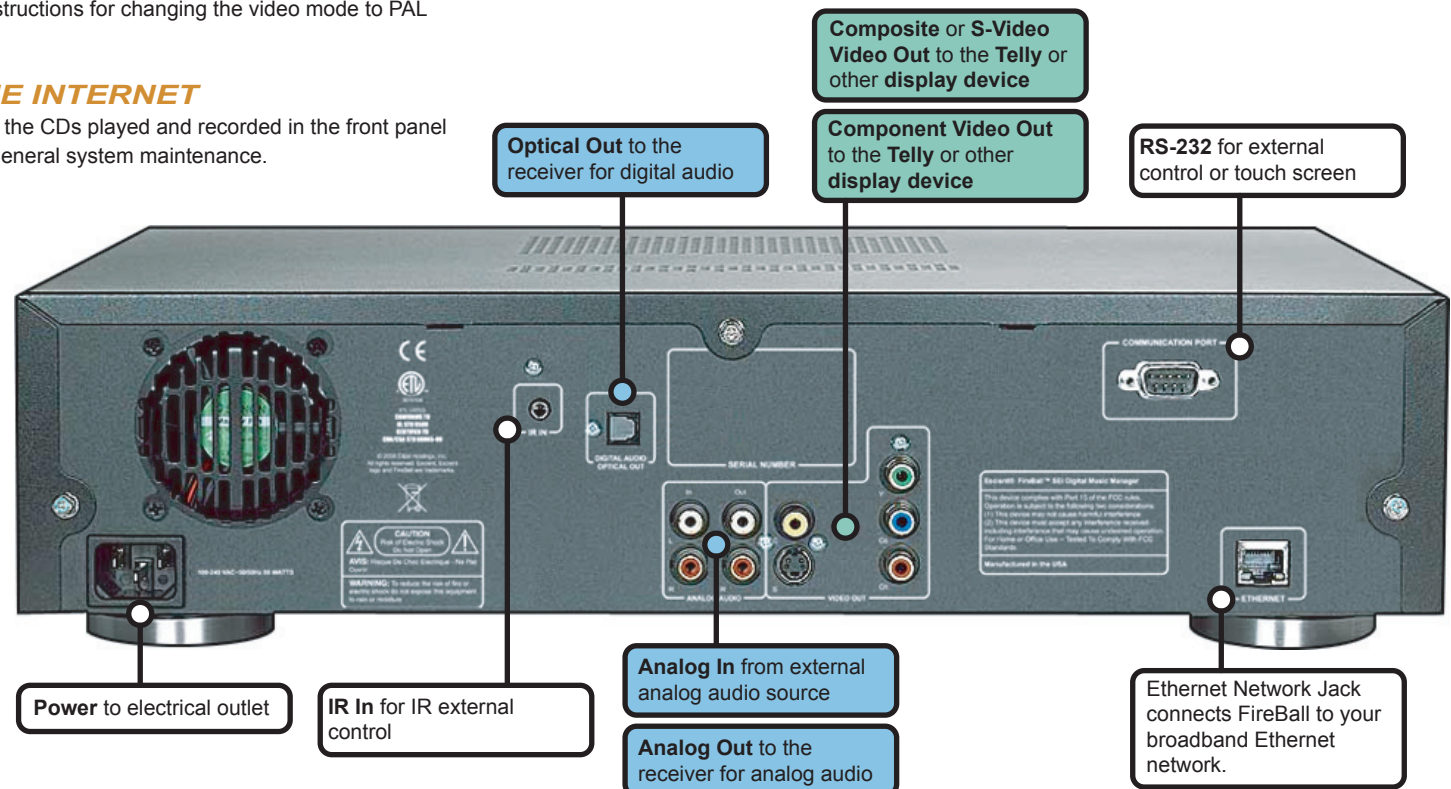

CODE SET
Code Set - used to set the universal IR source buttons. See manual for details.

UNIVERSAL SOURCE SELECT
Telly / Cable / Receiver / DVD - used to configure the remote to control other devices. See manual for details on the universal remote functions.

MODE GUIDE SELECT
iRadio / Music - used to select FireBall modes.

TRANSPORT CONTROLS
Rewind / Play / Forward / Record / Stop / Pause - used to control playback of music. Also used for text entry and for canceling certain operations.

GUIDE
Guide / Player - toggles between Guide and Player screens.

INFO
Info - displays additional music info

VOLUME CONTROL
Volume Up / Volume Down / Mute - Universal remote can be configured to operate volume on Tellys and receivers. See manual for detailed setup steps.

KEY PAD
Alpha / Numeric / Enter - used for entering numbers and text. Also used for searching in the music and radio guides.

CONTROL
Mode - changes music play modes: normal, random, repeat etc. Setup - displays Setup menu.

POWER
Power - used to toggle the current source device on and off.

FIREBALL SELECT
FireBall 1 / FireBall 2 / FireBall 3 / FireBall 4 - use FB1 to control the FireBall. Use other FB buttons if additional FireBall products are installed.

ALL / NONE
Toggle ALL or NONE on Select Guides.

NAVIGATION & SELECT
Up / Down / Left / Right / Select - used to navigate and select on-screen menus and buttons.

VIEW / MENU
View / Menu - toggles through various Guide Views (artist, title, cover).

CONTROL
Options - displays Options menu.

CHANNEL / PAGE CONTROL
Channel/Page Up/Down - used to page up and down in Guide and Player screens.

MACRO FUNCTION
Macro Function - used to directly access various music and radio items and controls.

 
DISC PLAY FUNCTIONS
Previous / Next - skip disc functions.

MUSIC PLAY FUNCTIONS
Repeat / Random - used to cause the system to play the current group/genre in repeat or random playback mode.


MUSIC JUKEBOX
Add-Jukebox / Play-Jukebox - used to add the currently highlighted music track to the Jukebox playlist and to play the Jukebox playlist.

LISTEN TO MUSIC


- Press the Music key on the remote.
- Highlight the Music Title you want to listen to.
- Press Play.
- The music begins to play.
- Enjoy!

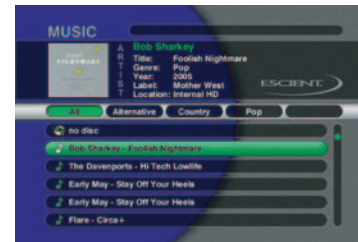

 Music Guide - Browse and manage your Music collection

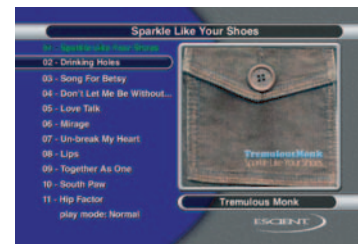

 Music Player - display and control the currently playing music title

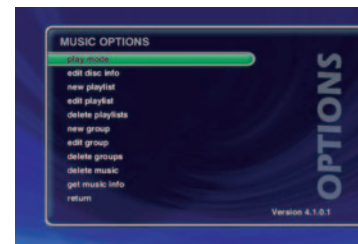

Music Options - allows you to create playlists and groups, edit disc information and access other music features

LISTEN TO INTERNET RADIO

 
- Press the Radio key on the remote.
- Highlight the Station you want to listen to.
- Press Play.
- FireBall will connect and begin to stream (play) the station.



Radio Guide - browse and manage Internet Radio stations



Radio Player - displays the currently playing iRadio station, location, channels and speed (if available)

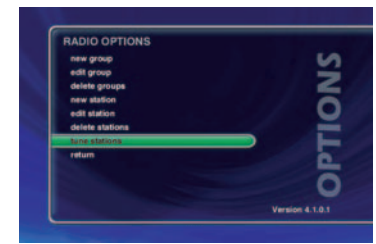

Radio Options - allows you to create custom groups, tune new stations and access other iRadio features