

Active Speaker System

Operating Instructions

Mode d'emploi

Manual de instrucciones

Owner's Record

The model and serial numbers are located on the bottom of the system. Record these numbers in the space provided below.
Refer to them whenever you call upon your Sony dealer regarding this product.

SRS-NWGU50

©2009 Sony Corporation Printed in China

English

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

The dating code and the nameplate are located on the bottom exterior of the system.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet.

Should you notice an abnormality in the system, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery installed to excessive heat such as sunshine, fire or the like.

Note
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For help:

Contact the dealer or an experienced radio/TV technician for help.

On copyrights

- "WALKMAN" and are registered trademarks of Sony Corporation.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, "and" marks are not specified.

Precautions

On safety

- AC power cord must be changed only at the qualified service shop.
- Do not use any other AC power adaptor.



On placement

- Do not place the system in an inclined position.
- Do not place the system in locations that are hot and subject to direct sunlight, dusty, very humid, or extremely cold.
- Use caution when placing the system or AC power adaptor on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.
- If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

Troubleshooting

Should you encounter a problem with your system, find your problem in the troubleshooting checklist below and take the suggested corrective action. If the problem persists, contact your Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained. When bringing the system in for repairs, be sure to bring in the entire system.

This product is a system product, and the entire system is needed to determine the location requiring repair.

There is no sound.

- Check the connections.
- Press VOLUME + on the main unit. If the volume is still low, even after the system's volume is turned up to the maximum level, adjust the volume of the connected portable audio player (when using LINE IN).
- Remove the protective case of the "WALKMAN," and make sure the "WALKMAN" is securely set.
- Make sure the "WALKMAN" is playing music.
- Press MUTING on the remote to set MUTING to OFF.

The remote does not function on the unit or the "WALKMAN."

- Remove any obstacles between the unit and the remote commander.
- Check that the correct function is selected.
- Aim the remote at the main unit's sensor.
- Replace the battery.
- Locate the unit away from fluorescent lights.
- Set the "WALKMAN" on the connector securely.
- Press INPUT to switch the input source to "WALKMAN."

There is severe hum or noise.

- Move the unit away from the source of noise.
- Connect the unit to a different mains spur.

The sound is distorted.

- Press VOLUME - on the main unit to reduce the volume.
- Set the "EQ" setting of the "WALKMAN" to "Off" or "Flat."
- Turn the volume down on the external equipment.

The batteries cannot be inserted (too tight).

- Check the polarity (+/-), and then insert correctly.

The I/ (power/standby) indicator flickers.

- The I/ (power/standby) indicator may flicker when volume is turned up or remote commander signals are received. This is not the malfunction.

No radio reception is available.

- When connecting the speaker to a "WALKMAN" with a built-in radio or to a radio via LINE IN, radio reception may not occur, or sensitivity may be reduced significantly.

- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Caution
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

For help:

Contact the dealer or an experienced radio/TV technician for help.

Specifications

Main unit

Continuous RMS power output (reference):
10 W + 10 W (1 kHz, 10% THD)

Inputs

"WALKMAN" attachments
For compatible "WALKMAN" models, see fig.

LINE IN Stereo mini-jack

Speaker units 57 mm dia.

Dimensions (w/h/d): Approx. 320 × 157 × 202 mm (12 5/8 × 6 1/8 × 8 inch)

Mass Approx. 2.0 kg (4 lb 7 oz)

Supplied accessories

AC power Adaptor (1)

AC power cord (1)

Attachments for "WALKMAN" (2)

Remote commander (1)

Operating Instructions (this sheet) (1)

Checking other components

"WALKMAN"

For details about "WALKMAN" units supported by the speaker, visit:

USA: <http://www.sony.com/walkmansupport/>

Canada: <http://www.sony.ca/ElectronicsSupport/>

Europe: <http://support.sony-europe.com/DNA>

Latin America: <http://www.sony-latin.com/index.crp>

Other Asia pacific area: <http://www.sony-asia.com/support/>

Design and specifications are subject to change without notice.

Troubleshooting

Should you encounter a problem with your system, find your problem in the troubleshooting checklist below and take the suggested corrective action. If the problem persists, contact your Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained. When bringing the system in for repairs, be sure to bring in the entire system.

This product is a system product, and the entire system is needed to determine the location requiring repair.

There is no sound.

- Check the connections.
- Press VOLUME + on the main unit. If the volume is still low, even after the system's volume is turned up to the maximum level, adjust the volume of the connected portable audio player (when using LINE IN).
- Remove the protective case of the "WALKMAN," and make sure the "WALKMAN" is securely set.
- Make sure the "WALKMAN" is playing music.
- Press MUTING on the remote to set MUTING to OFF.

The remote does not function on the unit or the "WALKMAN."

- Remove any obstacles between the unit and the remote commander.
- Check that the correct function is selected.
- Aim the remote at the main unit's sensor.
- Replace the battery.
- Locate the unit away from fluorescent lights.
- Set the "WALKMAN" on the connector securely.
- Press INPUT to switch the input source to "WALKMAN."

There is severe hum or noise.

- Move the unit away from the source of noise.
- Connect the unit to a different mains spur.

The sound is distorted.

- Press VOLUME - on the main unit to reduce the volume.
- Set the "EQ" setting of the "WALKMAN" to "Off" or "Flat."
- Turn the volume down on the external equipment.

The batteries cannot be inserted (too tight).

- Check the polarity (+/-), and then insert correctly.

The I/ (power/standby) indicator flickers.

- The I/ (power/standby) indicator may flicker when volume is turned up or remote commander signals are received. This is not the malfunction.

No radio reception is available.

- When connecting the speaker to a "WALKMAN" with a built-in radio or to a radio via LINE IN, radio reception may not occur, or sensitivity may be reduced significantly.

- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

- 14) Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

For help:







Contact the dealer or an experienced radio/TV technician for help.

For help:

Contact the dealer or an experienced radio/TV technician for help.

For help:

Contact the dealer or an experienced radio/TV technician for help.

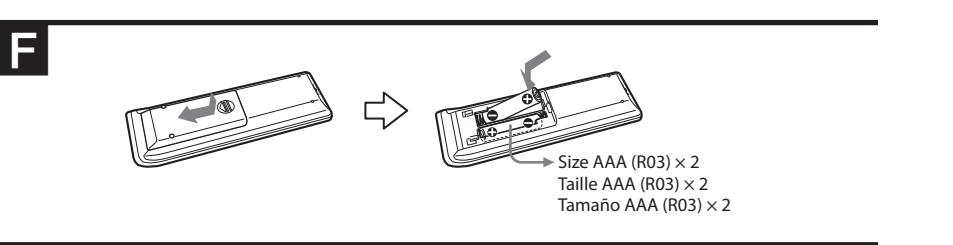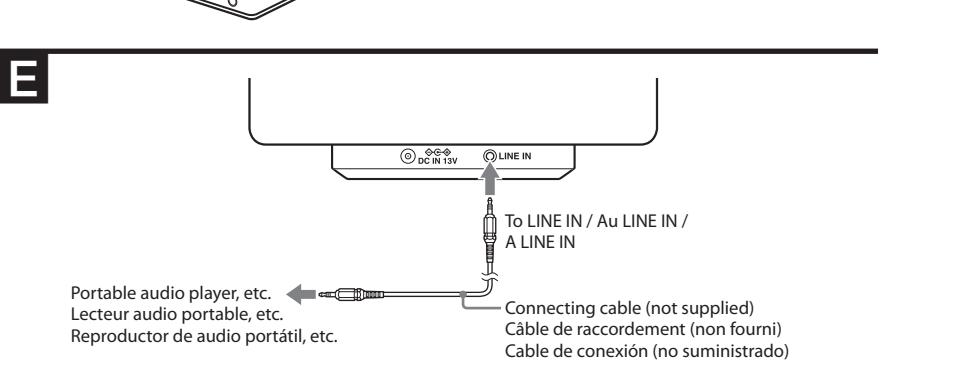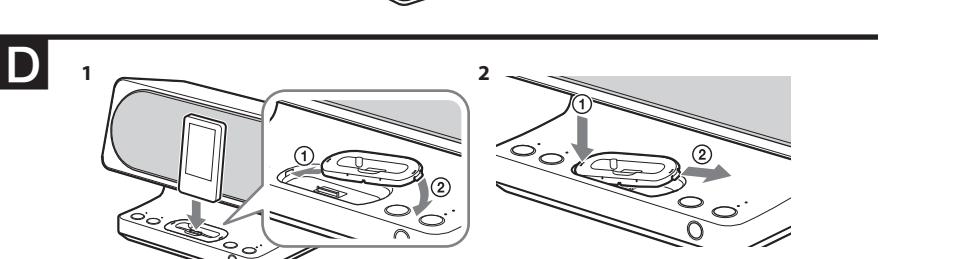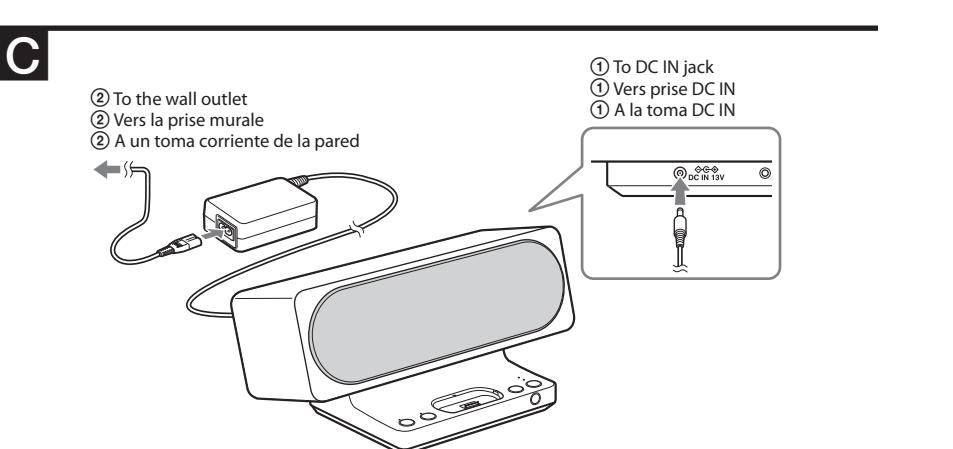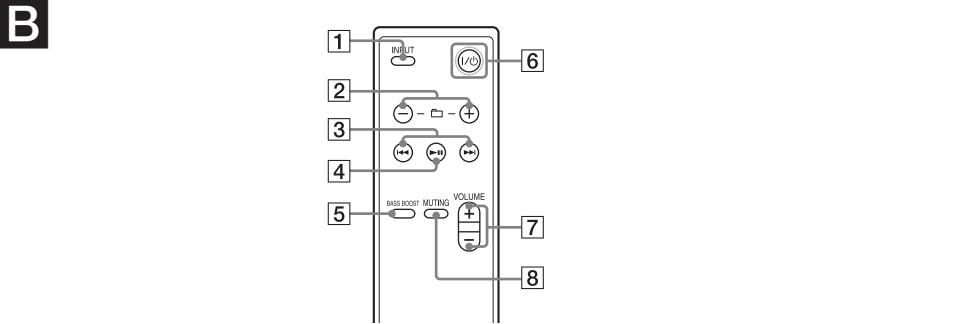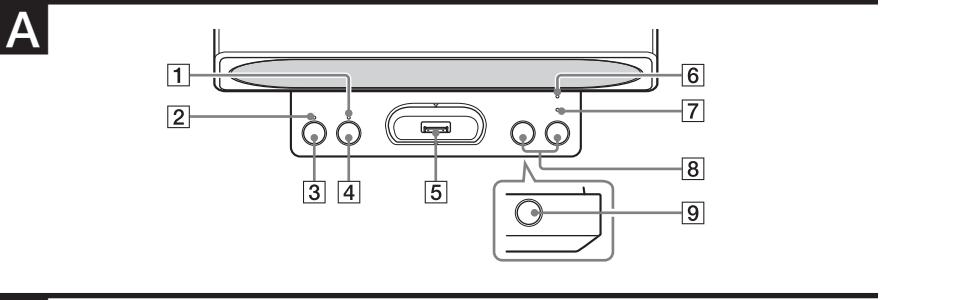

| Attachment/ Pièce jointe/ Conexión | Product name/ Nom du produit/ Nombre del producto | Model name/ Nom du modèle/ Nombre del modelo |
|--|---|--|
| Type A | A Series | NWZ-A820 series |
| | | NWZ-A826/A828/A829/A826K/A828K/A829K* |
| | | NWZ-A810 series |
| | | NWZ-A815/A816/A818* |
| | | NWZ-A800 series |
| | | NWZ-A808/A806/A805* |
| | | NWZ-A720 series |
| | | NWZ-A726/A728/A729* |
| | | NWZ-S730 series |
| | | NWZ-S736F/S738F/S739F* |
| | | NWZ-S630 series |
| | | NWZ-S636F/S638F/S639F/S636FK* |
| | E Series | NWZ-E430 series |
| | | NWZ-E435F/E436F/E438F/E436FK* |
| | | NWZ-X1000 series |
| | Type B | NWZ-X1050/X1060* |
| | | NWZ-S710 series |
| | | NWZ-S715F/S716F/S718F* |
| | | NWZ-S610 series |
| | | NWZ-S615F/S616F/S618F* |
| | | NWZ-S510 series |
| | | NWZ-S515/S516* |



Type A attachment / Fixation de type A / Accesorio de tipo A

* As of October 2009 / en Octubre 2009 / en Octubre 2009

English

Identifying parts

Main unit (See fig. A)

- ① INPUT indicator
- ② I/O (on/standby) indicator
- ③ I/O (on/standby) switch
- ④ INPUT (input change) button
- ⑤ WM-PORT connector (for connecting to "WALKMAN")
- ⑥ BASS BOOST indicator
- ⑦ MUTING indicator
- ⑧ VOLUME +/- buttons
- ⑨ Receptor for the remote commander

Remote commander (See fig. B)

- ① INPUT button
- ② (folder) +/- buttons
- ③ I<I>/> buttons
- ④ >>II button
- ⑤ BASS BOOST button
- ⑥ I/O (on/standby) switch
- ⑦ VOLUME +/- buttons
- ⑧ Receptor for the remote commander

To use the unit as a battery charger

Plug the AC power cord into the mains. And set the "WALKMAN" on the main unit.

Battery charging starts automatically. The charging conditions appear in the "WALKMAN" display.

For details, see the user's guide of your "WALKMAN".

Tips

• "WALKMAN" models are not designed to allow both connections of its headphones and this unit at the same time.

• When connecting the speaker to a "WALKMAN" with a built-in radio or to a radio via LINE IN, radio reception may not occur, or sensitivity may be reduced significantly.

• You can also use the BASS BOOST, I/O, INPUT, VOLUME, and MUTING buttons on the remote commander to operate.

Preparing the remote commander (See fig. F)

Installing the batteries into the remote commander

Insert two size AAA (R03) batteries (not supplied).

When to replace the batteries

In normal use, manganese batteries should last about 6 months. As they expand, the remote commander may not work properly, or operating distance becomes shorter. Replace both batteries with new ones in this case.

Notes

• Do not charge dry batteries.

• If you are not going to use the remote commander for a long time, remove the batteries to avoid any damage caused by leakage and corrosion.

Tips

When the remote commander can no longer operate the system, replace the batteries with new ones.

Listening to the sound

Turn the speaker volume of the unit down to the minimum by pressing VOLUME – to prevent affecting your hearing. Also turn down the volume of the connected audio device.

1 Press I/O.

The I/O indicator lights up.

2 Press INPUT to switch the input source to "WALKMAN."

The INPUT indicator lights off.

3 Select a track and start playback on your "WALKMAN."

Use the remote commander or your "WALKMAN" to play, stop and perform other operations.

When operating the "WALKMAN" while it is on the connector, brace it with your other hand.

4 Press VOLUME +/- to adjust the volume.

Notes

• Set the Bluetooth function to off when using a "WALKMAN" with built-in Bluetooth function.

• Availability of the Dynamic Normaliser, Equalizer, VPT (Virtual Phone Technology surround) or DSEE (Digital Sound Enhancement Engine) depends on the "WALKMAN" you are using. Set these settings to off.

• With the "WALKMAN" connected, pressing >>II on the remote commander may not start playback. In this case, press any button on the "WALKMAN" and remote commander operation becomes available.

Preparation (See fig. C)

1 Connect the AC power adaptor to the DC IN jack of this unit.

2 Connect the AC power cord to the AC power adaptor.

3 Plug the AC power cord into the mains.

Notes

• Do not connect any other AC power adaptor to the unit.

• The system is not designed to be used as a portable device.

Réglage du « WALKMAN » (voir fig. D-1)

1 Choisissez la fixation qui convient à votre modèle de « WALKMAN ». (voir fig. G)

Utilisez la fixation appropriée fournie soit avec le « WALKMAN », soit avec l'appareil.

Il existe deux types de fixations. La forme de la fixation peut varier selon le modèle de « WALKMAN ».

Pour plus de détails, consultez les modèles de « WALKMAN » pris en charge par cet appareil.

2 Insérez l'attache du côté gauche de la fixation (①) dans la fente gauche de l'orifice du connecteur WM-PORT, puis enfoncez-la dans l'appareil (②).

3 Placez le « WALKMAN » dans l'appareil.

Type A attachment / Fixation de type A / Accesorio de tipo A

* As of October 2009 / en Octubre 2009 / en Octubre 2009

Setting the "WALKMAN" (See fig. D-1)

Listening to external equipment (See fig. E)

You can connect portable audio device to the unit. Connect the player to LINE IN using the connecting cable (not supplied).

1 Press I/O.

The I/O indicator lights up.

2 Press INPUT to switch the input source to LINE IN.

The INPUT indicator lights up.

3 Start playback of the portable audio device.

Tips

• "WALKMAN" models are not designed to allow both connections of its headphones and this unit at the same time.

• When connecting the speaker to a "WALKMAN" with a built-in radio or to a radio via LINE IN, radio reception may not occur, or sensitivity may be reduced significantly.

• You can also use the BASS BOOST, I/O, INPUT, VOLUME, and MUTING buttons on the remote commander to operate.

Écoute du son

Baissez le volume du haut-parleur de l'appareil au minimum en appuyant sur VOLUME – afin d'éviter d'endommager votre audition. Baissez aussi le volume de l'appareil audio connecté.

1 Appuyez sur I/O.

Le témoin I/O s'allume.

2 Appuyez sur INPUT pour changer la source d'entrée à « WALKMAN ».

Le témoin INPUT clignote.

3 Sélectionnez une plage, puis lancez la lecture sur votre « WALKMAN ».

Utilisez la télécommande ou le « WALKMAN » pour lire, arrêter et effectuer d'autres actions.

Si vous utilisez le « WALKMAN » pendant qu'il se trouve sur le connecteur, soutenez-le de l'autre main.

4 Appuyez sur VOLUME +/- pour régler le volume.

Remarques

• Désactivez la fonction Bluetooth lorsque vous utilisez un « WALKMAN » doté d'une fonction Bluetooth intégrée.

• La disponibilité des fonctions Dynamic Normaliser, Equalizer, VPT (technologie téléphonique virtuelle ambiophonique) ou DSEE (Digital Sound Enhancement Engine) varie selon le modèle de « WALKMAN » utilisé. Désactivez ces réglages.

• La fonction BASS BOOST est réglée à ON par défaut. Vous pouvez la régler à OFF au moyen de la télécommande.

Control remoto (consulte la fig. B)

1 Botón INPUT

« WALKMAN » ↔ LINE IN.

Altera entre « WALKMAN » y LINE IN.

El indicador INPUT se ilumina.

2 Botones +/- de □ (carpeta)

Busque el principio de la primera pista de cada grupo en el orden seleccionado en el « WALKMAN ».

3 Botones I<I>/>

Manténgalo presionado para retroceder rápido (avance rápido) o presione y suelte para pasar al principio de la pista actual (o siguiente) en el « WALKMAN ».

4 Botón >>II

Presione la touché y suelte para reproducir o poner en pausa en el « WALKMAN ».

5 Botón BASS BOOST

ON ↔ OFF

(Le témoin BASS BOOST s'allume)

6 Interruptor I/O (encendido/espera)

Permit de encender el control remoto.

7 Botones VOLUME +/-

Permit de regular el volumen.

(Pendant le réglage, le témoin I/O clignote.

Lorsque le niveau du volume est au plus bas ou au plus haut, le témoin MUTING clignote.)

8 Touche MUTING

ON ↔ OFF

(Le témoin MUTING s'allume)

9 Receptor para el control remoto

Control remoto (consulte la fig. B)

1 Botón INPUT

« WALKMAN » ↔ LINE IN.

Alta la potencia del altavoz de la unidad al mínimo al presionar VOLUME + para evitar daños a la audición. Además baje el volumen de cada uno de los altavoces para evitar daños a la audición.

2 Presione I/O.

El indicador I/O se ilumina.

3 Presione INPUT para cambiar la fuente de entrada al "WALKMAN".

Se apaga el indicador INPUT.