

DLO | mini fm
for iPod mini

© 2005 DIGITAL LIFESTYLE OUTFITTERS

Digital Lifestyle Outfitters & DLO logo are trademarks of Digital Lifestyle Outfitters.

iPod is a registered trademark of Apple Computer, Inc. All Rights Reserved

Printed in Taiwan

M73000-050812-B




Contents





 
Quick Start	4
Using Your mini fm	6
Tuning	6
Switching Modes	6
Volume Control & Headphone Amp	7
Power Control	8
Tech Specs	9
Service and Support	10
Warranty	11

Quick Start

Thanks for buying the DLO mini fm. We'll get you started in just 3 easy steps. For detailed instructions and features, check out **Using Your mini fm** [pg 6].

1. Plug your **mini fm** into the top of your iPod mini and press the Mode button  to power it up.
2. Plug your headphones into the headphone jack  on top of the **mini fm**.
3. Tune to your desired station by using the **mini fm**'s tuning buttons .

To switch back and forth between FM Radio mode and iPod mode (to listen to the songs on your iPod), just press the Mode button  on the top left side of the **mini fm**. Change your iPod mini's volume by using the **mini fm**'s Volume buttons . Control your iPod mini by using the iPod mini's scroll wheel.

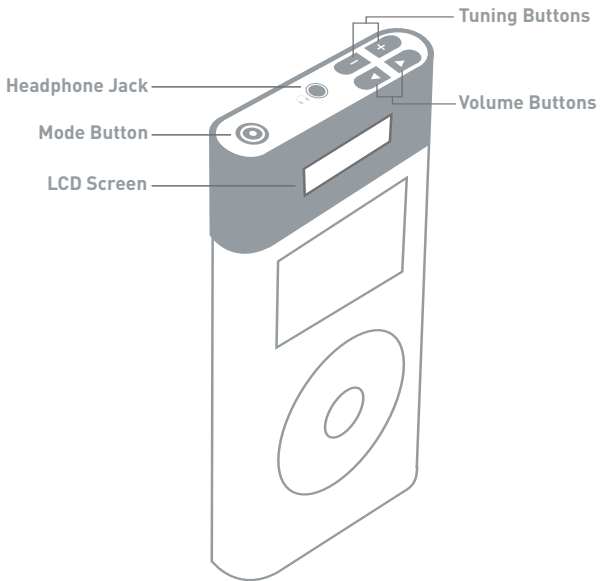

Using Your mini fm

The **mini fm** attaches to the top of your iPod mini and adds an FM Radio. The **mini fm** also boosts your iPod mini's volume with its built-in headphone amplifier. Whether your iPod mini is on or off, it conveniently powers the **mini fm**. Changing to FM radio mode will automatically pause whatever track or playlist is playing on your iPod mini.

Tuning FM Radio Stations

The **mini fm** has two digital tuning buttons located on the top that let you scroll up or down the FM radio spectrum. Hold down the tuning buttons for a moment and the **mini fm** will automatically scan to the next available FM station in your area. You may manually tune to any frequency by briefly pressing the tuning buttons either up or down



NOTE: The **mini fm** actually uses the wire on your headphones or earbuds as an antenna, so you must have them plugged into the headphone jack on top of the unit in order to tune to an FM station.

Switching between FM Radio and iPod mode

The **mini fm** lets you switch back and forth from iPod mini mode to FM Radio mode. When you first plug in or turn on your **mini fm**, its LCD screen will flash "dlo" three times and then show either "iPod", indicating that your **mini fm** is in iPod mode, or an FM frequency like "101.10", indicating that it is in FM Radio mode. To switch modes, you simply press the Mode button on the top left side of the **mini fm**.





Volume Control & Headphone Amplifier Usage

The **mini fm** adds more than just an FM Radio to your iPod mini. The **mini fm** has up **+** and down **-** volume control buttons located on the top. While in FM Radio mode, the volume is only controlled by the **mini fm**'s **+** and **-** buttons. While in iPod mode, the volume can be amplified using both the iPod scroll volume control and the **mini fm** volume buttons.

The Headphone Amplifier built into the **mini fm** actually boosts the volume on your iPod mini giving you greater control over the clarity and level of your music no matter where you are. This extra volume is great for crowded, noisy areas, mowing the lawn, or just giving your iPod mini an extra volume boost for certain songs or artists. To use the volume boosting Headphone Amplifier in the **mini fm**, simply listen to your iPod through the attached mini fm and control the volume with the top based volume controls.

WARNING: Always adjust the volume of your iPod and mini fm to a safe and comfortable level before putting your headphones or earbuds in your ears. The maximum iPod mini volume is increased considerably when you use the **mini fm** volume to amplify the iPod mini. Permanent hearing loss may occur if your headphones or earbuds are used at high volume for a long period of time. If you experience discomfort or ringing in your ears, reduce the volume or discontinue use of your iPod and **mini fm** immediately.

Controlling the Power of your iPod mini with the mini fm

The **mini fm** gives you a handy way to power your iPod mini off and on. To turn your iPod mini off using your **mini fm**, hold down the Mode button on the top left side of the **mini fm** for two seconds. Your iPod mini and **mini fm** will both power off.



To turn both your iPod mini and **mini fm** back on, press the Mode button once again and your iPod mini will return to the exact state it was in when it was turned off. It will even resume playback from the same spot.

FM Frequency range: 87.5~108 MHz

Working Voltage: 1.5V

Standby current: 0.16mA

Power consumption: FM Radio mode -- 67mA, iPod mode -- 65mA

Low power indication: Letters in LCD display flash slowly when voltage is low

Digital volume control

Line out Headphone jack

FM Radio channel scan function

Backlit LCD display - 10 seconds auto off control

Service & Support

For even more information and tips, please visit our website at www.dlo.com and click **Support**.

Warranty



Digital Lifestyle Outfitters Limited Manufacturer's Warranty

What This Warranty Covers. DLO (Digital Lifestyle Outfitters) warrants this product against defects in materials and workmanship. This limited warranty applies only to products manufactured by or for DLO.

What This Warranty Does Not Cover. This warranty does not apply to damage caused by: (a) accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions, or products not manufactured by or for DLO; and (b) aftermarket services (including upgrades and expansions).

How Long This Warranty Lasts. This warranty lasts for a period of ninety (90) days from the date of original retail purchase.

What Digital Lifestyle Outfitters Will Do. If a defect exists, DLO will exchange the product, at its option, with a product that is new or has been manufactured from new or serviceable used parts and that is at least functionally equivalent to the original product. DLO will warrant a replacement product against defects in materials and workmanship for a period of ninety (90) days from the date of replacement.

How To Get Service. In order to be eligible for this warranty, you **MUST** register your purchase at www.dlo.com/register within thirty (30) days of purchasing this product. If you believe that this product is defective in materials or workmanship, please e-mail customerservice@dlo.com with a brief description of the problem, for further instructions.

No Change To Warranty. No DLO reseller, agent or employee is authorized to make any modification, extension, or addition to this warranty.

How State Law Applies. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state, or country.

Restrictions On Implied Warranties. All implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Restrictions On Damages. DLO is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory (including, without limitation, lost profits; downtime; goodwill; damage to or replacement of equipment and property; failure to maintain the confidentiality of data stored on the product; and any costs of recovering, reprogramming or reproducing any program or data stored in or used with products manufactured by or for DLO). Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

W1000-050803-A

Thanks again for your
purchase of the **DLO mini fm.**
Snap on. Tune in. Rock out.

