


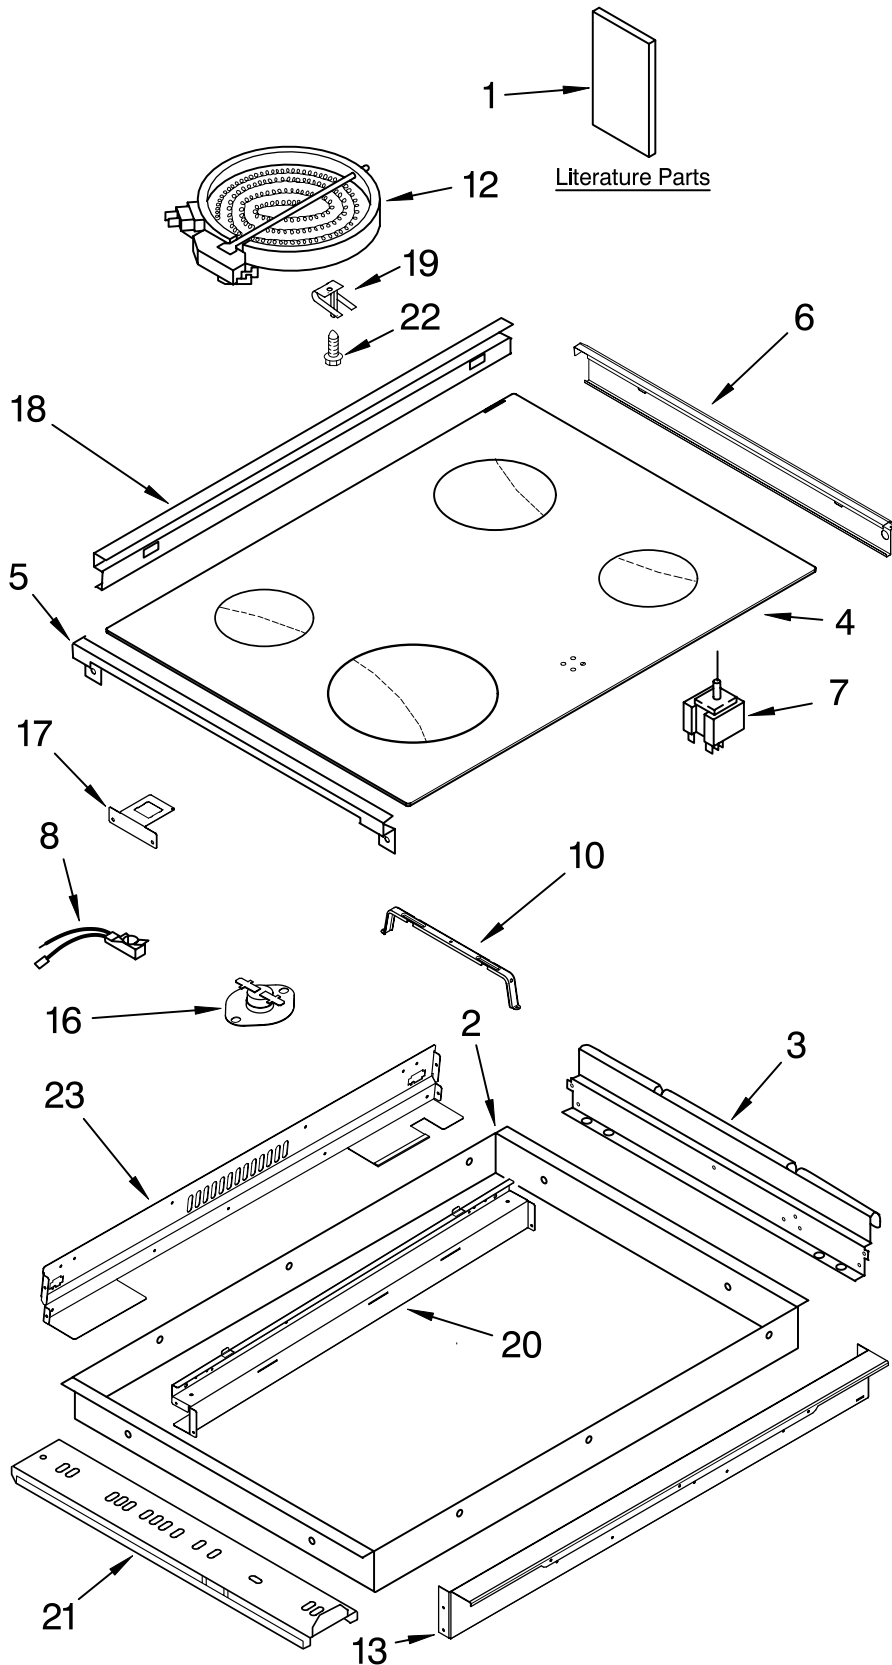

# COOKTOP PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

30" Slide-In  
 ELECTRIC OVEN  
 SELF CLEAN




Illus. No.	Part No.	DESCRIPTION
1	9757446	Literature Parts
	9757454	Installation Instructions
	9757795	Use & Care Guide
	9757680	Tech Sheet
	3191638	Anti-Tip Instruct.
	3192459	Safe Cooking Tips
2	3192459	Burner Box
3	4454023	Bracket, Mounting
	3179776	Screw
4		Cooktop
	9756788BT	Biscuit
	9756788WH	White
	9756788BL	Black
	9756450	Gasket
5	4453764	Clip, Ceran (2)
	3179776	Screw
6		Trim-CkTop, SI
	4453875WH	White LH
	4453875BT	Biscuit LH
	4453875BL	Black LH
	4453875SS	S.Steel LH
	4453870WH	White RH
	4453870BT	Biscuit RH
	4453870BL	Black RH
	4453870SS	S.Steel RH
	3400805	Screw
7		Switch, Infinite
	9750638	LR, RF
	9750639	RR
	9750641	LF
8	8523739	Light, Indicator
10	9756821	Support, Wiring
	4449809	Screw (2)
12		Element, Surface
	8523698	1200W LR,RF
	8523696	1800W RR
	8523692	2500W LF
13	9757800	Bracket, Front Support
	3179776	Screw (4)
16	9751984	Bi-Metal
	3196160	Screw (2)
17	9758799	Bracket, Ind. Lamp
	3196160	Screw (2)
18		Trim, Extension
	4453865WH	White
	4453865BT	Biscuit
	4453865BL	Black
	4453865SS	S.Steel
	3196160	Screw
19	3191791	Spring, Locator
20	9757802	Bracket, Rear Sprt
	3179776	Screw (4)
21	9756813	Rail, Element (2)
	3179776	Screw (4)
22	486754	Screw
23	9759628	Cover, Cktp Rear
	3179776	Screw (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

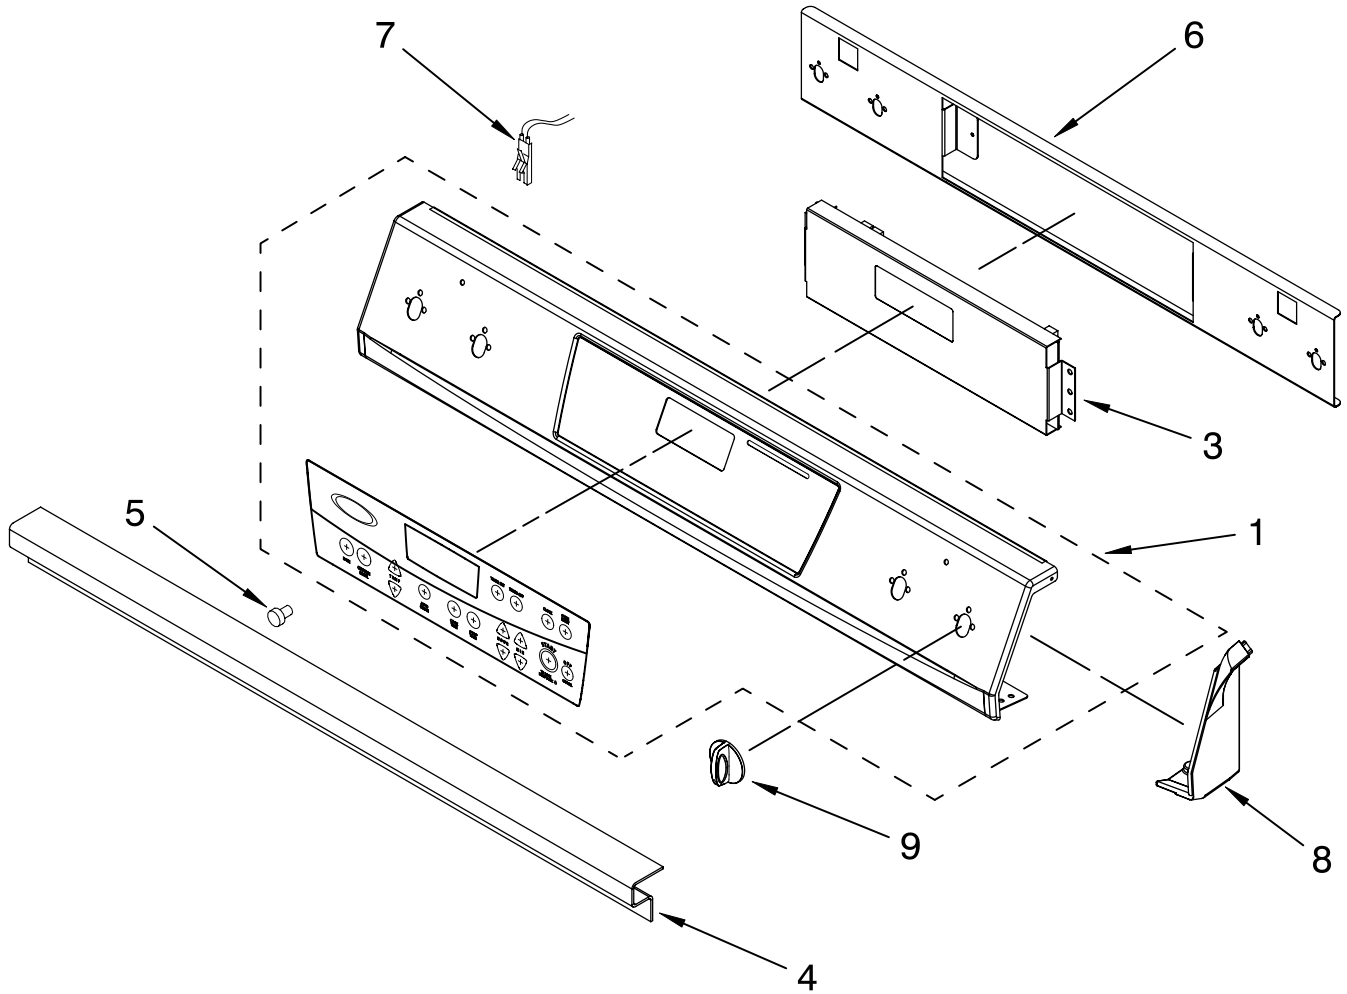

Illus. No.	Part No.	DESCRIPTION
1		Control Panel
	8191145	White
	8191146	Biscuit
	8191147	Black
	8191148	S.Steel
3	9757476	Control, Migration
	9780271	Screw


Illus. No.	Part No.	DESCRIPTION
4	9757119	Bracket, Console
	3179776	Screw (3)
5	3196068	Lens, Ind. (2)
6	9757410	Bracket, Control
	486579	Screw
7	8523265	Housing, Ind. Lt.

Illus. No.	Part No.	DESCRIPTION
8		Endcap
	9756614BT	Biscuit LH
	9756614WH	White LH
	9756614BL	Black LH
	9756611BT	Biscuit RH
	9756611WH	White RH
	9756611BL	Black RH
	3196172	Screw
9		Knob
	9756659BL	Black
	9756659WH	White
	9756659BT	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
(Black) (White) (Biscuit) (S.Steel)

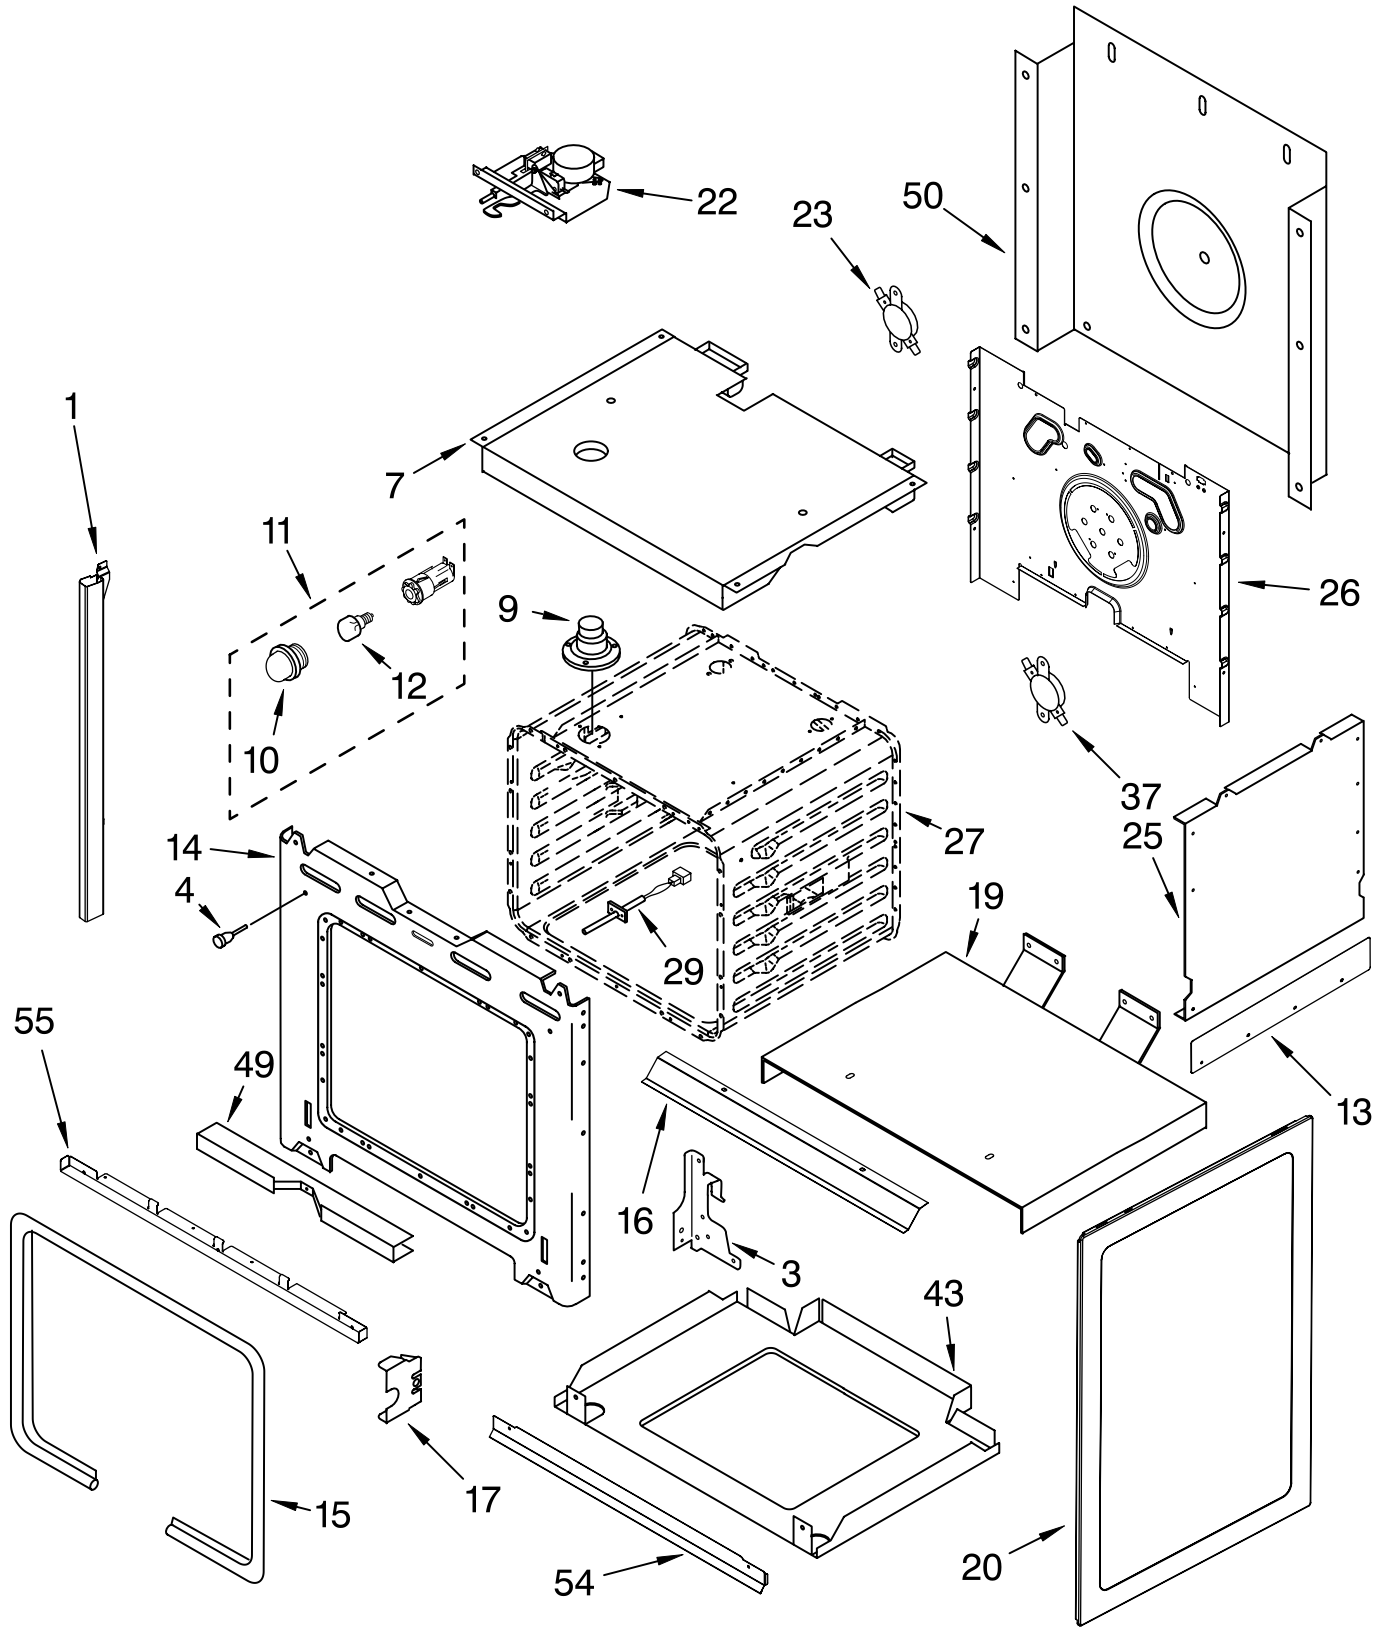

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Side (Right Hand)
	9757735WH	White
	9757735BT	Biscuit
	9757735BL	Black
	9757735SS	S.Steel
		(Left Hand)
	9757734WH	White
	9757734BT	Biscuit
	9757734BL	Black
	9757734SS	S.Steel
	3400832	Screw
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
7	4455865	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
13	9757732	Shield, Heat
	4449743	Screw (4)

Illus. No.	Part No.	DESCRIPTION
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
16	4453951	Deflector, Vent Bottom
17	4452152	Bracket, Mounting
19	4451478	Support, Insulation
	4449809	Screw
20		Body, Side
	9751907PB	Black
	9751907PW	White
	9751907PC	Biscuit
22	8302474	Latch, Motorized
	4449154	Screw
23	341196	Thermostat SPST (205)
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	9756809	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor

Illus. No.	Part No.	DESCRIPTION
37	4451442	Thermostat (TOD) (Temp.) SPST
43	9759713	Base, Chassis
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
54		Vent, Bottom Upper
	9756481WH	White
	9756481BT	Biscuit
	9756481BL	Black
	9756481SS	S.Steel
55		Trim, Btm Vent
	9756485WH	White
	9756485BT	Biscuit
	9756485BL	Black
	9756485SS	S.Steel


**FOLLOWING PARTS  
NOT ILLUSTRATED**

**INSULATION**

- 9756817 Insulation, Wrap
- 9756470 Insulation, Back

# DOOR AND DRAWER PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
(Black) (White) (Biscuit) (S.Steel)

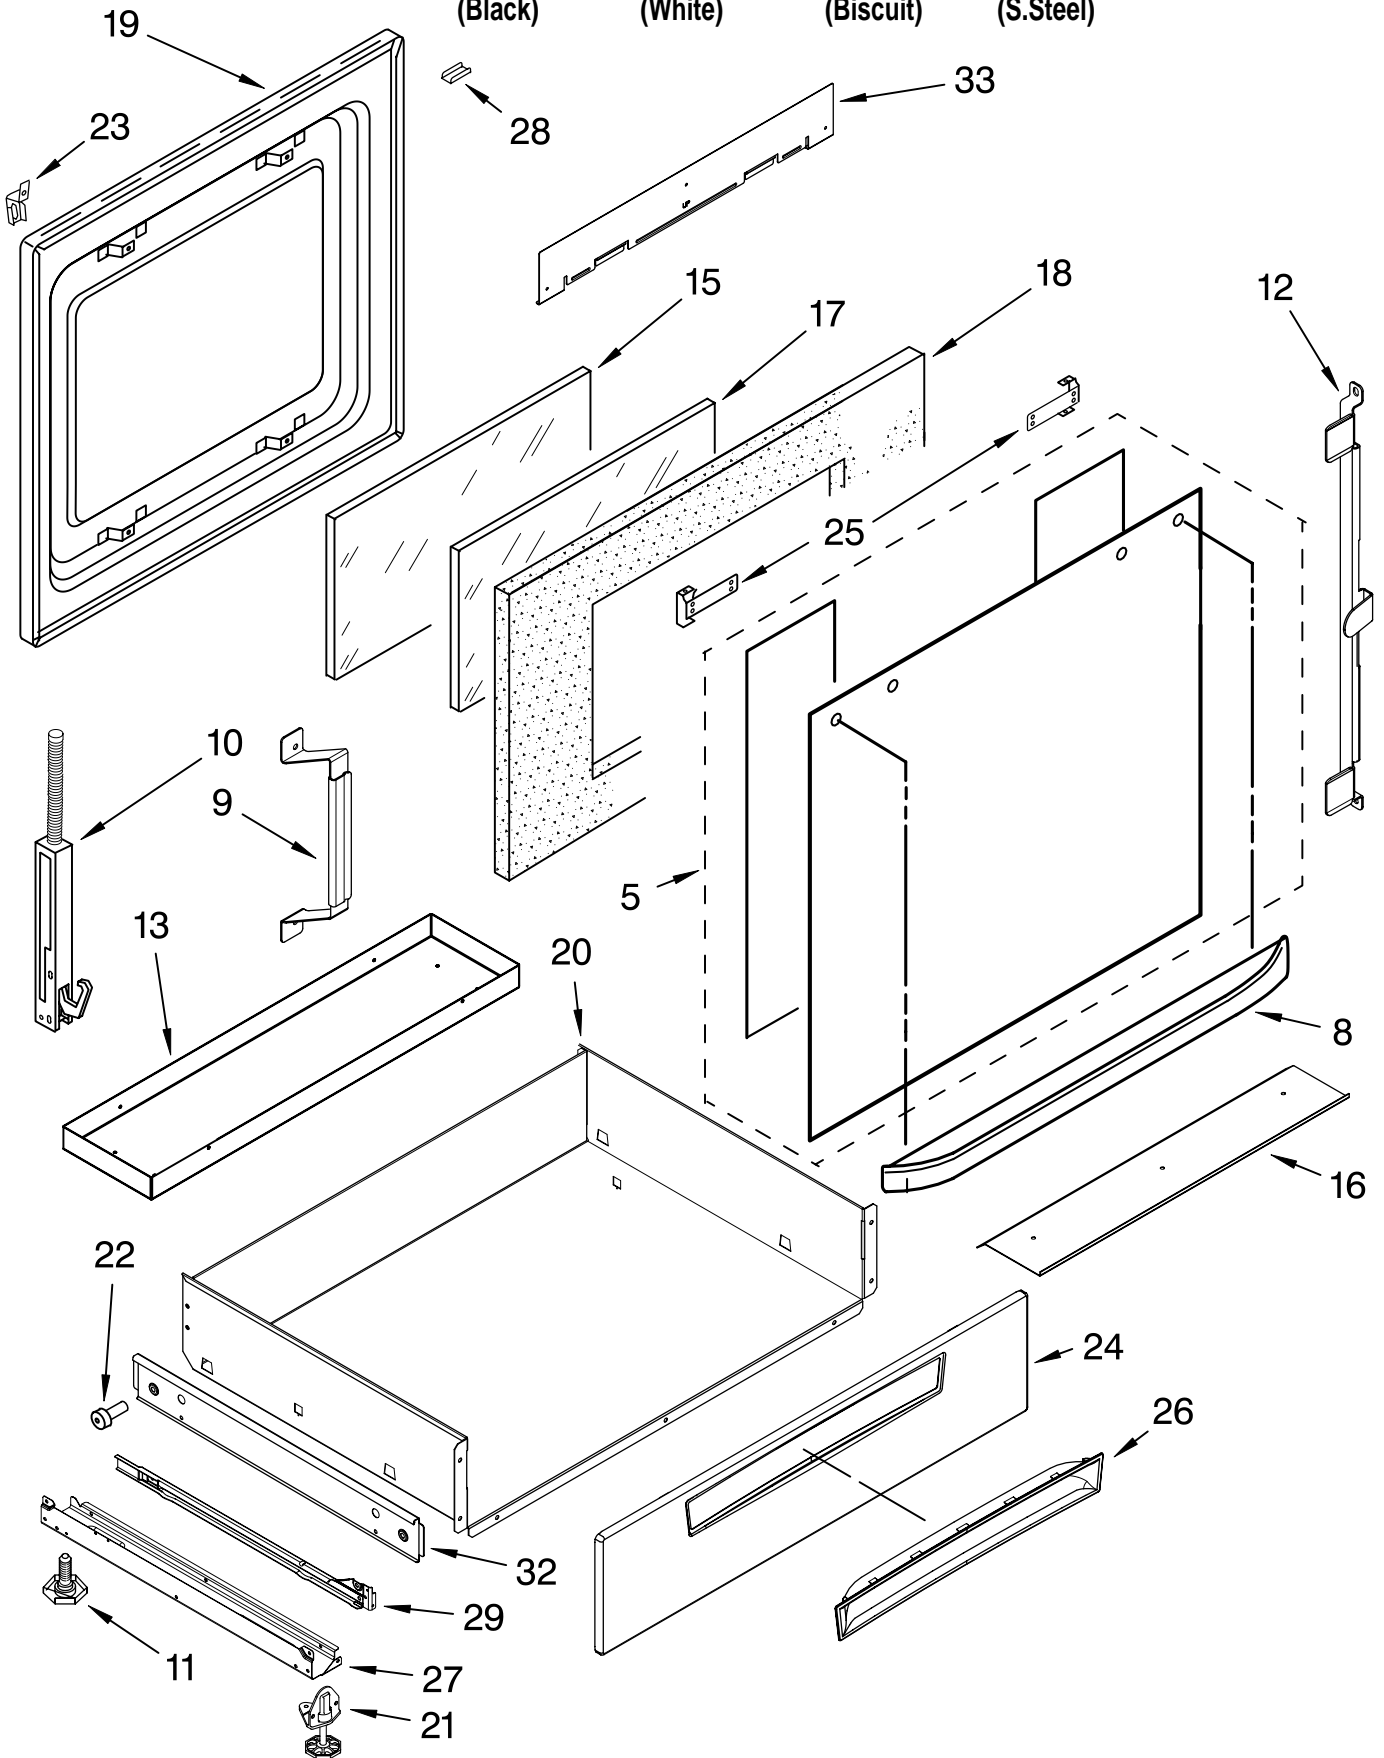

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS


For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
5	9759641	Glass, Door Front Black
	9759639	White
	9759640	Biscuit
	9759642	S.Steel
8	4448854	Handle, Door Black
	4448855	White
	4448856	Biscuit
	8302094	Bracket, Central
9 10	8300571	Hinge, Door White RH
	8300572	White LH
	8300573	Lt.Blue RH
	8300574	Lt.Blue LH
	4449743	Screw
	312701	Foot, Rear
12	8302092	Bracket, Side
13	9757798	Panel, Drawer
15	9757706	Glass, Inner
16	4457114	Shield, Heat Btm
17	4449263	Glass, Inner (2)
18	4451722	Insulation, Door
19	4455618	Liner, Door
20	9757806	Drawer & Roller
21	3196037	Foot, Front
	4449743	Screw
22	422604	Roller, Drawer
23	9759743	Retainer, Door
24		Front, Drawer
	4453921WH	White
	4453921BL	Black
	4453921BT	Biscuit
	4453921SS	S.Steel
25	4450813	Bracket, Handle
	4451040	Screw
26		Handle, Drawer
	9756674WH	White
	9756674BT	Biscuit
27	9756674BL	Black
		Side, Base
	9759953	R.Side
	9759954	L.Side
28	4450863	Retainer, Clip
29		Track, Drawer
	9756837	R.Side
	9756839	L.Side
32	9756673	Guide, Roller
33	9757707	Shield, Heat Top

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

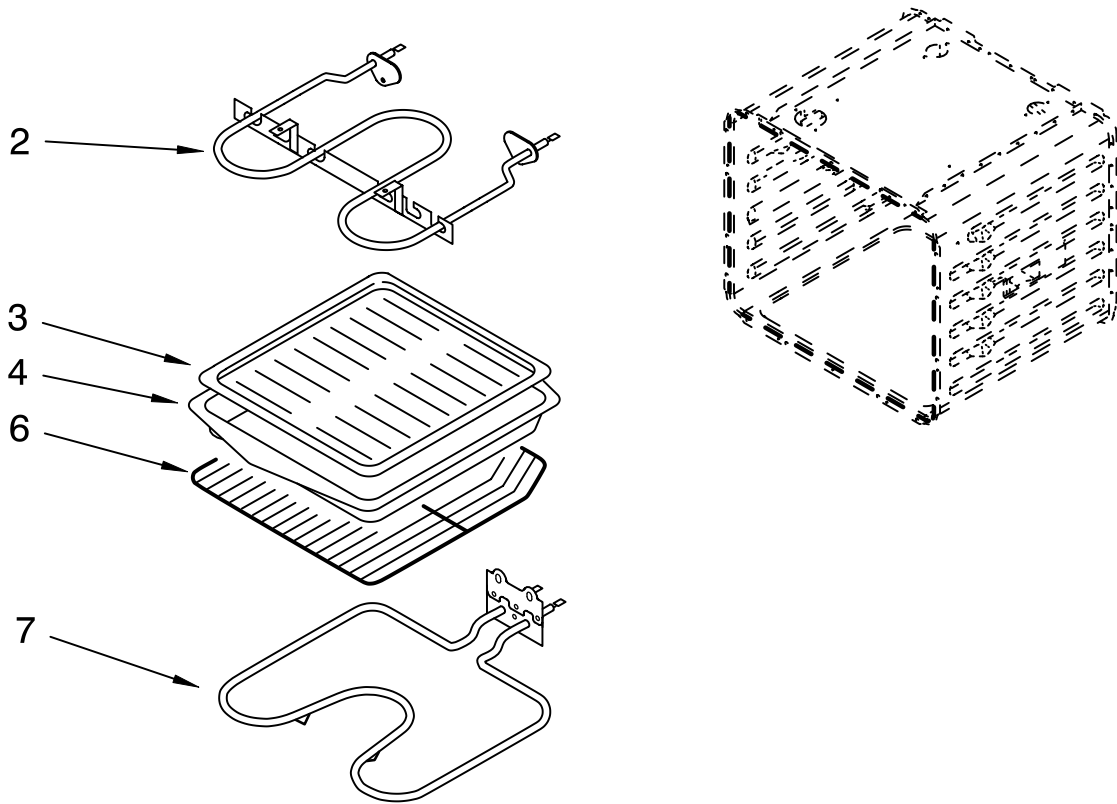


Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	4457277	Grill, Broiler
4	4457276	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

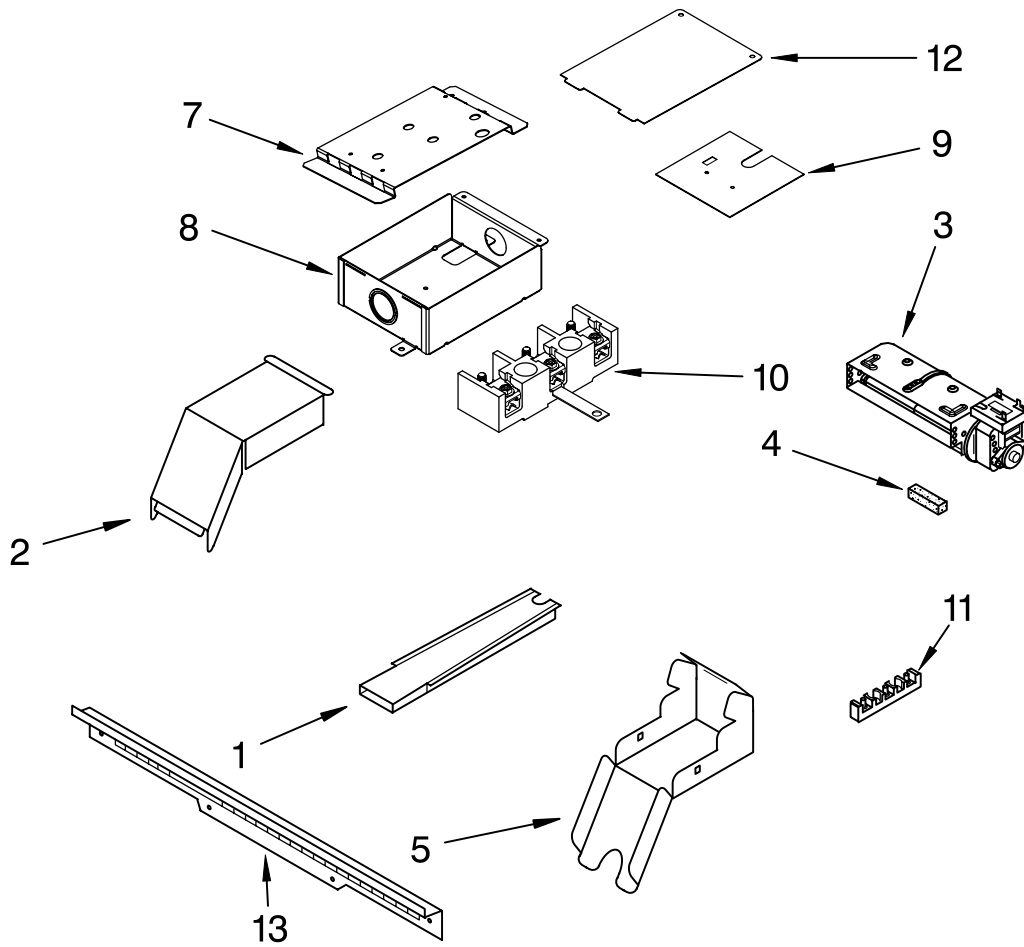

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
	4449040	Screw, 8-18 x 3/8
2	4455178	Elbow, Vent Top
3	8300223	Blower
	4455352	Bracket
	4449809	Screw (4)

Illus. No.	Part No.	DESCRIPTION
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
7	9759716	Bracket, Term.Box
	4449809	Screw (2)
8	9757404	Box, Terminal
	4449809	Screw (3)
9	9759721	Insulator, Term Box

Illus. No.	Part No.	DESCRIPTION
10	9757136	Block, Terminal
11	4449868	Block, Terminal
	3400080	Screw
12	9757405	Cover, Term Box
	3196160	Screw (2)
13	9757118BL	Vent, (Control Panel)
	4450038	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# OPTIONAL PARTS

For Models: GY396LXPB00, GY396LXPQ00, GY396LXPT00, GY396LXPS00  
 (Black) (White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
	261869	Cord Brown
	72032	Black
<b><u>PAINT, SPRAY</u></b>		
	350930	White
	261900	Citrine White
	830864	Black
<b><u>ADHESIVE</u></b>		
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
<b><u>SPLICING WIRES--25FT.</u></b>		
<b><u>LENGTH</u></b>		
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
<b><u>WIRING HARNESS PARTS</u></b>		
	9756668	Harness, Wire (Main)
	9756894	Harness, Wire (Cooktop Power)
	9756893	Harness, Wire (Cooktop Left)
	9757727	Harness, Wire (Cooktop Right)
	9759715	Conduit
	3196173	Screw (Conduit)
	313660	Clip, Ground Wire
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4450800	Screw, Ground
	3192236	Harness, Wire (Infinite Switch)
	4452222	Spacer, Harness
	3400015	Screw, Ground
<b><u>Miscellaneous</u></b>		
	814381	Hinge Pin Kit
	4448950	Screw, Install (4)
	9782676	Anit-Tip Assy Filler,Counter Top
	9757784WH	White
	9757784BL	Black
	9757784BT	Biscuit
	9757784SS	S.Steel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST