


## ELECTRIC GUITAR AMPLIFIER MODEL H6015 INSTRUCTION SHEET



COPYRIGHT © MARCH, 2004 BY GRIZZLY INDUSTRIAL, INC. WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC. #6157 PRINTED IN KOREA

## **MODEL H6015 CONTROLS**

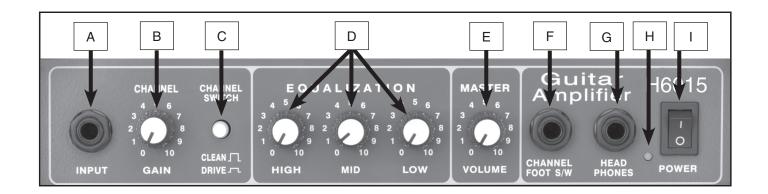

- A. INPUT: Connect your guitar here, using a shielded instrument cable with a 1/4" jack.
- B. CHANNEL GAIN: Adjusts the amount of gain in the Drive Channel.
- C. CHANNEL SWITCH: This switch allows you to select Clean/Drive Channel.
- **D. 3 BAND EQUALIZATION**: The main equalization of the Model H6015 is a classic 3-band passive network. All pass (no band cut) is attained with the controls in the full clockwise position—unlike active controls which exhibit a "flat" setting at the 12 o'clock positions.
- E. MASTER VOLUME: This knob controls the pre-gain volume of the amplifier.
- F. CHANNEL FOOT SWITCH JACK: Connect a one button foot switch here for remote control of the Clean/Drive Channel.
- G. HEADPHONES OUTPUT: For connection to almost any headphone with a 1/4" jack.
- H. POWER LED: The power LED illuminates when the power is ON.
- I. POWER SWITCH: Turns power ON and OFF.

## Caring For Your Amplifier

- DO NOT remove the grounding prong to fit the plug into a two-pronged outlet!
- To keep the amplifier working properly, DO NOT expose it to rain or moisture.
- DO NOT pull or lift the amplifier by the power cord.
- UNPLUG the amplifier before cleaning, and only clean with a damp cloth (no chemicals).

