



OPERATING INSTRUCTIONS FOR RF-63 MOTORIZED ROBO BASKET

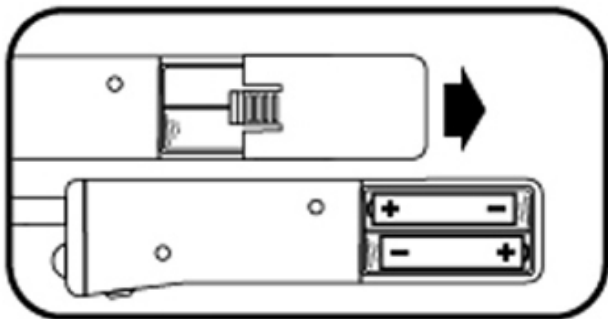

Installing Batteries:

1. Remove battery door cover.
2. Insert 2 "AA" batteries as shown. (Long lasting alkaline batteries are recommended)
3. Replace battery door cover.

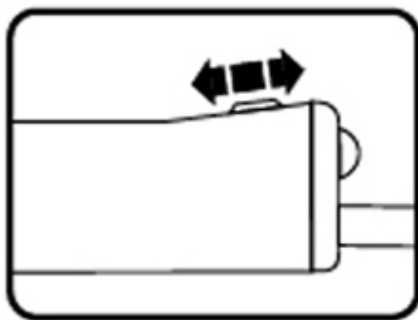


Turning ON/OFF

1. Slide power switch to first location to activate rotation.
2. Slide power switch to farthest location to turn on the light. (To save on battery consumption, do not leave light on during entire cooking time.)

Extending/Retracting:

Pull end of cage out gently until it reaches the full-extended length. Do not apply extra force in pulling as this may damage the internal gearing.

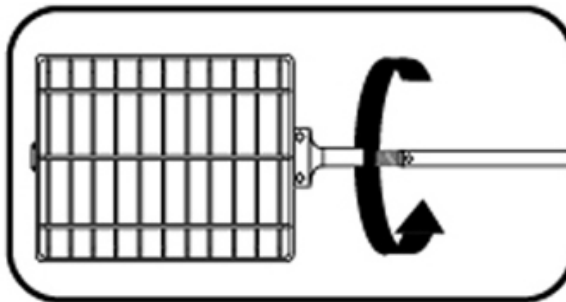

Cleaning:

1. Roasting basket can be removed for easier cleaning.
2. Grip the rod firmly when unscrewing and tightening the fork so as not to damage the gears when turning.

CAUTION: Do not submerge the handle in water or allow staying out in the rain.

Cooking:

Apply cooking oil to the fork or roasting basket to help avoid food from sticking. Make sure food is securely positioned on the fork and that the basket is closed tightly.

MAVERICK LIMITED 90 DAY WARRANTY

Maverick Industries, Inc. warrants this product to be free of defects in parts, materials and workmanship for a period of 90 days, from date of purchase. Should any repairs or servicing be required, contact Maverick Customer Service by mail or phone for instructions on how to pack and ship the product to Maverick's National Service center located as follows:

Maverick Customer Service
94 Mayfield Avenue
Edison, NJ 08837
Telephone: (732) 417-9666
Hours: Weekdays 8:30 am to 4:30 pm

Do not send any parts or product to Maverick without calling and obtaining a Return Authorization Number and instructions.

This warranty is VOID if instructions for use are not followed; for accidental damage; for commercial use; for damage incurred while in transit; or if the product has been tampered with.

Made in China for:
Maverick Industries, Inc.
94 Mayfield Avenue
Edison, NJ 08837

www.maverickhousewares.com

This is not a toy. Should only be used with adult supervision. Recommended for outdoor use. Always use caution when cooking over open flames.

Copyright 2008

0-11502-06300-4
UPC

PATENT PENDING
11/548,289