


# LAVATHERM 55800

Condensation dryer

User information

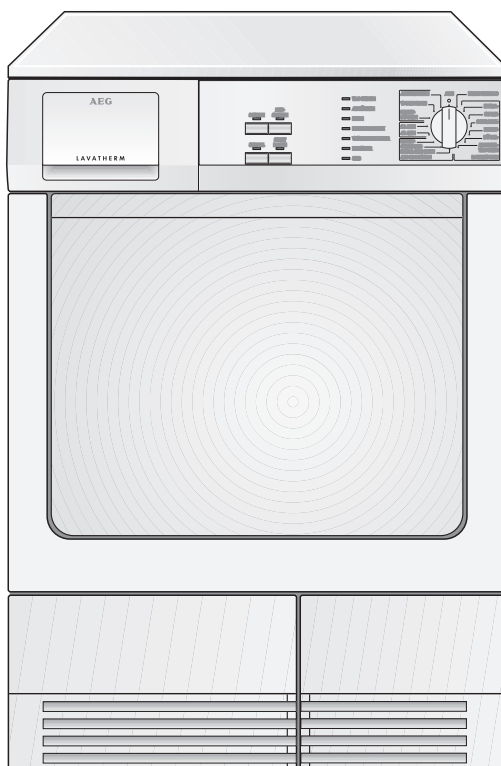

## Dear Customer,

Please read this user information carefully and keep it to refer to later. Please pass the user information on to any future owner of the appliance.

### The following symbols are used in the text:



Safety instructions

**Warning!** Information that affects your personal safety.

**Important!** Information that prevents damage to the appliance.



Useful tips and hints



Environmental information

# Contents

<b>Operating Instructions</b> .....	5
<b>Safety</b> .....	5
<b>Disposal</b> .....	7
<b>Environmental tips</b> .....	7
<b>Description of machine</b> .....	8
<b>Operating screen</b> .....	8
<b>Before the first drying cycle</b> .....	9
<b>Sorting and preparing laundry</b> .....	9
<b>Overview of programmes</b> .....	10
<b>Drying</b> .....	12
Switching machine on / switching light on.....	12
Opening loading door / loading laundry.....	12
Selecting the programme.....	12
Selecting additional functions.....	12
<b>SPECIAL CARE</b> .....	12
<b>AUDIBLE SIGNAL</b> .....	13
<b>SENSITIVE</b> .....	13
Starting the programme.....	13
Changing programme.....	13
Putting in extra items or taking items out before end of programme....	13
Drying cycle complete / removing laundry.....	14
<b>Cleaning and maintenance</b> .....	15
Cleaning fluff filter.....	15
Emptying the condensate tank.....	16
Cleaning heat exchanger.....	17
Cleaning the drum.....	18
Clean operating screen and housing.....	18
<b>What to do if...?</b> .....	19
Troubleshooting by yourself.....	19
Changing bulb for inside light.....	21
<b>Programming options</b> .....	22
<b>Technical data</b> .....	23
<b>Consumption values</b> .....	23

---

<b>Installation and connection instructions</b> .....	24
<b>Installation safety instructions</b> .....	24
<b>Removing transport safety equipment</b> .....	24
<b>Electrical connection</b> .....	25
<b>Changing door stop</b> .....	26
<b>Special accessories</b> .....	28
<b>Warranty conditions</b> .....	29
<b>Service and Spare Parts</b> .....	31

---

# Operating Instructions



## Safety

### Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

### Intended use

- The dryer is intended for drying standard laundry in domestic applications.
- Conversions or modifications to the dryer are not permitted.
- The laundry must not contain flammable solvents (benzene, alcohol, stain remover, etc.) . Risk of fire and/or explosion! Laundry which has come into contact with such substances must be rinsed thoroughly by hand before drying.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place items of laundry in the dryer which contain foam rubber or materials similar to rubber. Risk of fire!
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the dryer with the laundry. Risk of fire and/or explosion!
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The covering bonnet of the bulb for the drum light must be screwed down tightly.

## **Child safety**

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electric machines. Never leave unsupervised children near the dryer.
- Ensure that children and small animals cannot climb into the dryer's drum. Risk of death! Keep the dryer door shut whenever it is not being used.

## **General safety**

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

# Disposal



## Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.



## Old appliance

Please dispose of your old appliance in line with the guidelines for disposal in your area.



**Warning!** Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.

Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.




## Environmental tips


- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
  - always keep the ventilation slots on the base of the dryer unobstructed;
  - use the loading volumes specified in the programme overview;
  - ensure you have good ventilation in the installation room;
  - clean the micro-fine filter and fine strainer after each drying cycle;
  - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY programme.

Revolutions per minute	Pre-draining		Drying cycle	
	Residual dampness in litres	as a %	Required time in minutes	Energy in kWh
800	4.2	70	130	4.3
1200	3.2	53	110	3.3
1400	3.0	50	105	3.1
1800	2.5	42	90	2.6

# Description of machine

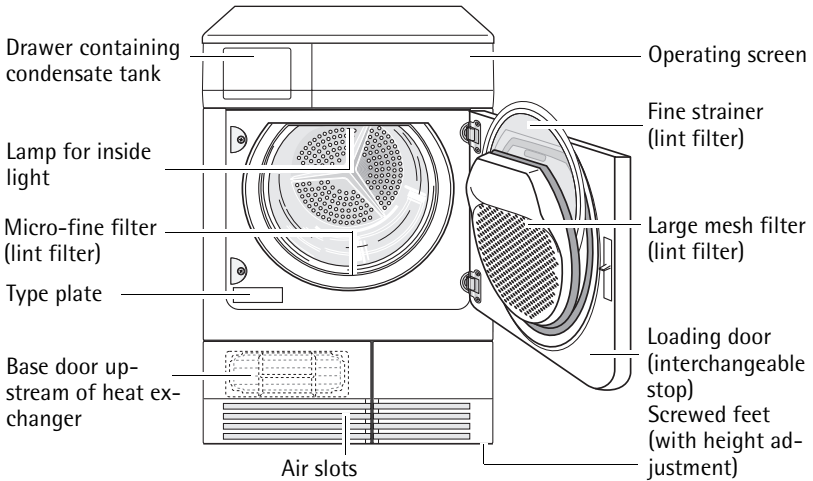

# Operating screen

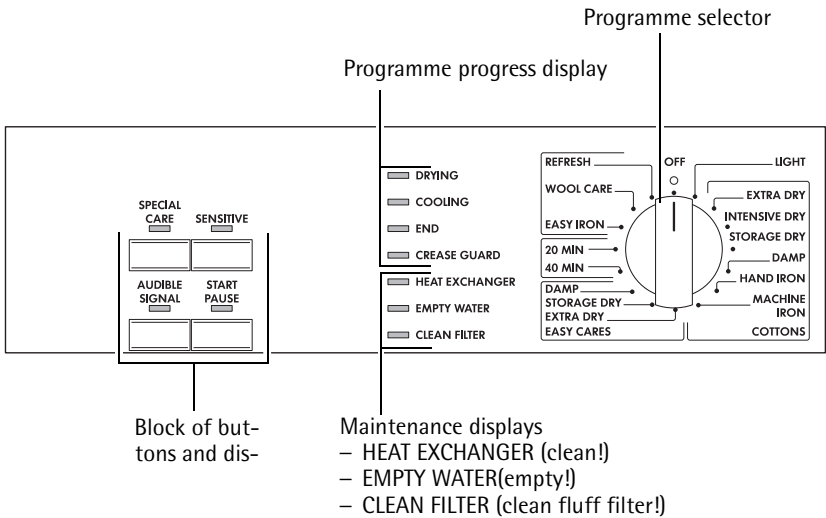







## Before the first drying cycle

In order to remove any residue which may have been produced during production, wipe the dryer drum with a damp cloth or undertake a brief drying cycle (20 MIN) with damp cloths.

## Sorting and preparing laundry

### Sorting laundry

- Sort by fabric type:
  - Cotton/linen for programmes in COTTONS programme group.
  - Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

			
Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (press SPECIAL CARE button!)	Drying in tumble dryer <b>not</b> possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

### Preparing laundry







- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

# Overview of programmes

Programme		max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
			SPECIAL CARE <sup>1)</sup>	AUDIBLE SIGNAL	SENSITIVE <sup>1)</sup>		
COTTONS	EXTRA DRY	6 kg	•	•	•	Drying thick or multi-layered textiles, e.g. terry towelling items, bathing costumes.	
	INTENSIVE DRY	6 kg	•	•	•	Drying thick textiles, e.g. terry towelling items, towels.	
	STORAGE DRY	6 kg	•	•	•	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.	
	DAMP	6 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	
	HAND IRON	6 kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	
	MACHINE IRON	6 kg	•	•	•	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.	
EASY CARES	EXTRA DRY	3 kg	•	•	•	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.	<sup>2)</sup>
	STORAGE DRY	3 kg	•	•	•	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, corsetry.	<sup>2)</sup>
	DAMP	3 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	<sup>2)</sup>

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.

2) Press the SPECIAL CARE button!

Programme	max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
		SPECIAL CARE <sup>1)</sup>	AUDIBLE SIGNAL	SENSITIVE <sup>1)</sup>		
20 MIN 40 MIN	1 kg	•	•	-	For drying individual items of laundry or for small volumes of less than 1 kg.	  <sup>2)</sup> 
EASY IRON	1 kg	•	•	-	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.	  <sup>2)</sup> 
WOOL CARE	1 kg	•	•	-	Special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods. Wool fibres are aligned and the wool becomes soft and snugly. Recommendation: Remove textiles immediately after drying.	
REFRESH	1 kg	•	•	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)	

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.


2) Press the SPECIAL CARE button!

# Drying

## Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the loading door is opened, the drum is illuminated.

## Opening loading door / loading laundry

1. Open loading door:  
Use force to push against the loading door (push point )
2. Load your laundry (do not force it in).




**Caution!** Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

## Selecting the programme


Use the programme selector to set the programme you require. .

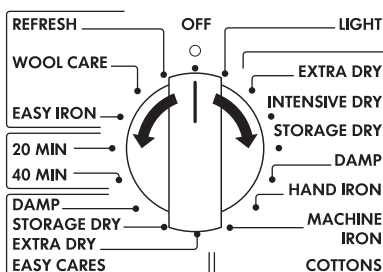


## Selecting additional functions

If required, press the SPECIAL CARE, AUDIBLE SIGNAL or SENSITIVE buttons.

### SPECIAL CARE

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

SPECIAL CARE is only suitable for use with loads of up to 3kg!

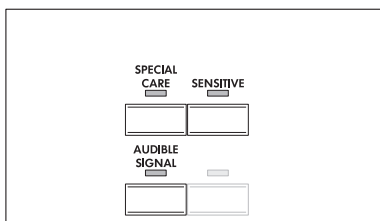

## AUDIBLE SIGNAL

When the drying cycle has finished, an intermittent audible signal will sound.

## SENSITIVE

For gentle drying of frequently-worn textiles. Programme starts on full heat setting, which is then reduced towards the end of the programme to ensure gentle care of laundry.



SPECIAL CARE and SENSITIVE cannot be selected together.

## Starting the programme

Press the START/PAUSE button. The programme is started.  
The programme progress display show drying progress.

## Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.



The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the AUDIBLE SIGNAL button) is pressed, the corresponding indicator flashes several times. The drying programme is not however affected by this (laundry protection).

## Putting in extra items or taking items out before end of programme

1. Open loading door



**Warning!** Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close loading securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

## Drying cycle complete / removing laundry

Once the drying cycle is complete, the END and CREASE GUARD displays light up. If the AUDIBLE SIGNAL button has been pressed, an audible signal sounds intermittently.



The drying cycle is automatically followed by a crease guard phase which lasts around 30 minutes. The drum rotates in intervals during this phase. The laundry thereby remains relaxed and free of creases. The laundry can be removed at any time during the crease guard phase. (The laundry should be taken out towards the end of the crease guard phase at the latest to prevent creases from forming.)

1. Open loading door
2. Before removing the laundry, remove lint from the micro-fine filter. It is best to use a damp hand for this purpose (refer to "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme selector to OFF.  
**Important!** After each drying cycle
  - clean the micro-fine filter and fine strainer,
  - drain the condensate tank(refer to the "Cleaning and maintenance" section).
5. Close loading door.

# Cleaning and maintenance


## Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.




**Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.


1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

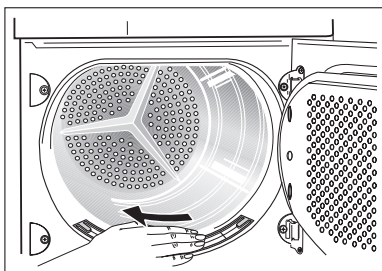

3. Push down unlock button on large mesh filter.  
Large mesh filter jumps up.

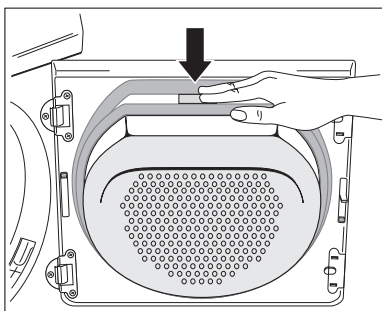

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

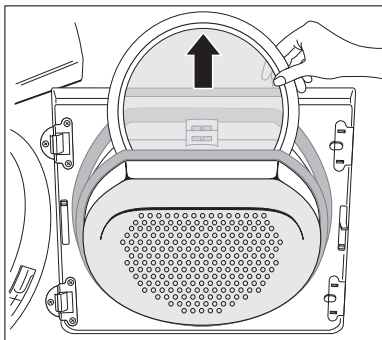


## Clean the entire filter area



The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.


6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.

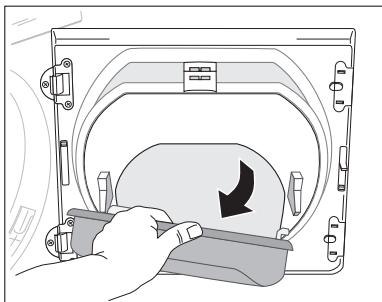

9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.



If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

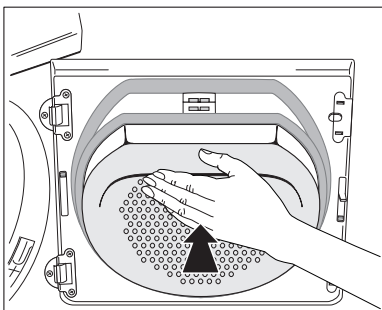

## Emptying the condensate tank

Empty condensate tank after every drying cycle.


If the condensate tank is full, an active programme will break off automatically and the EMPTY WATER display will light up. In order to continue the programme, the condensate tank must first be emptied.




**Warning!** The condensate is not suitable for drinking or for preparing foodstuffs.



1. Pull drawer containing condensate tank out all the way.

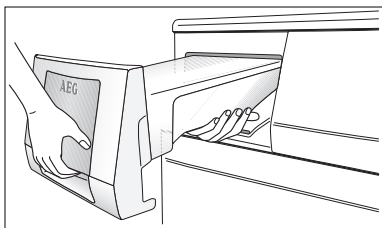

2. Pull out condensate tank's outlet connections and pour condensate out into basin or other suitable container.

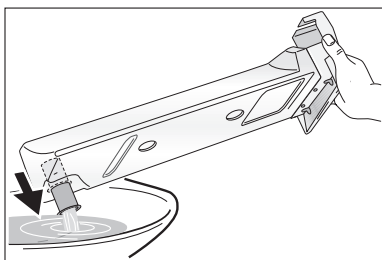

3. Slide outlet connections in and re-fit condensate tank.

If the programme has been interrupted as a result of the condensate tank being full:

Press the START/PAUSE button to continue the drying cycle.



The condensate tank has a volume of approx. 4 litres. This is sufficient for around 6 kg of laundry which has previously been spun at 800 revolutions/minute.



The condensate can be used as distilled water, e.g. for steam ironing. However first filter the condensate (e.g. with a coffee filter) to remove any residue and small pieces of fluff.


## Cleaning heat exchanger

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.




**Caution!** Operating when the heat exchanger is clogged with lint can damage the dryer. This also increases energy consumption.

1. Open loading door
2. Open base door. To do this, press the release button on the bottom of the loading opening and open the door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber.

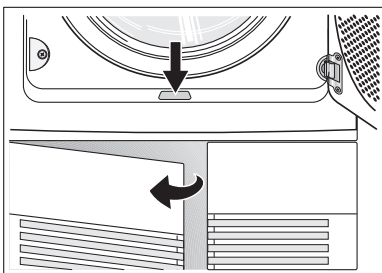

4. Turn both lock washers inwards.

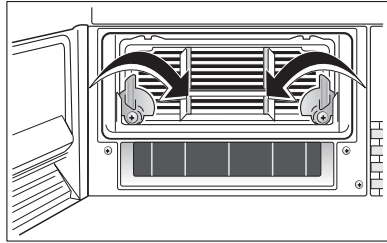

5. Pull heat exchanger out of base by the handle.



**Caution!** Do not use sharp objects to clean. The heat exchanger could develop leaks.


6. Clean heat exchanger.

It is best to use a brush or to rinse thoroughly with a shower head.

7. Replace heat exchanger and lock

into place (turn both lock washers outwards until they snap into place).

8. Close base door.

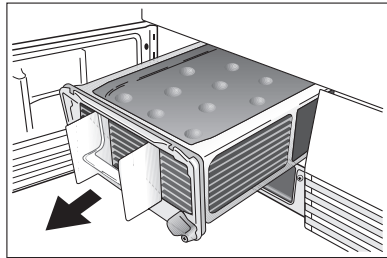

The dryer will not operate if the base door is not closed.



**Caution!** Never operate the dryer without the heat exchanger.

## Cleaning the drum



**Caution!** Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

## Clean operating screen and housing



**Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

# What to do if...?

## Troubleshooting by yourself

If, during operation, the dryer shows an error display (one or more displays flashing on the programme progress display), check first of all whether you can remedy the problem yourself by means of the table below. If you cannot solve the problem: Switch the machine off and on again. Reset programme. Press the START/PAUSE button.

If the error display is still shown, please contact our after-sales service and inform them which displays are flashing.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Base door is open.	Close base door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	Incorrect volume of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
	Conductance of water at installation site differs from standard setting of machine.	Re-programme standard setting for degree of drying (see 'Programming options' section).
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place. Install fine strainer and/or snap large mesh filter into place.	

<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
When pressing a button, the corresponding button flashes several times.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to LIGHT or to any programme.
	Defective lamp.	Replace lamp (see next section).
Programme inactive, EMPTY WATER display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/PAUSE button.
Drying cycle ends shortly after programme starts. END display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY instead of STORAGE DRY).
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle finishes automatically (see "Drying cycle complete").	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	SPECIAL CARE button pressed and load volume too big.	SPECIAL CARE is only suitable for use with loads of up to 3 kg!
	Load volume too big.	Reduce load volume.
	Laundry insufficiently pre-drained.	Laundry must be adequately pre-drained.

## Changing bulb for inside light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the after-sales service, ET-Nr. 112 552 000-5.



**Warning!** Do not use standard bulbs! These develop too much heat and may damage the machine!



**Warning!** Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew covering bonnet from above bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw covering bonnet back down.



**Warning!** For reasons associated with safety, the covering bonnet must be screwed down tightly. If this is not done, the dryer must not be operated.

# Programming options

Objective	Implementation
<p>Permanently program in the audible signal which reminds you that the programme is complete.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the AUDIBLE SIGNAL button and hold down for approx. 5 seconds. A brief signal sounds several times. The AUDIBLE SIGNAL display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.</li> </ol>
<p>Adjust detection of degree of drying: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the SENSITIVE and START/PAUSE buttons at the same time and hold down for approx. 5 seconds. The current setting is displayed on the programme progress display:               <ul style="list-style-type: none"> <li>– END display: Setting for drier laundry</li> <li>– COOLING display: Standard setting</li> <li>– DRYING display: Setting for damper laundry</li> </ul> </li> <li>3. Press the START/PAUSE button until the setting required appears on the programme progress display.</li> <li>4. Turn the programme selector to OFF. The setting is permanently programmed.</li> </ol>
<p>If the EMPTY WATER display is to remain permanently deactivated when using an external condensate drain.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the SPECIAL CARE and AUDIBLE SIGNAL buttons at the same time and hold down for approx. 5 seconds. The EMPTY WATER display flashes briefly. The EMPTY WATER display is permanently deactivated. Settings may be cancelled as under 1 and 2, but the EMPTY WATER display is briefly illuminated (instead of flashing).</li> </ol>

## Technical data

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
  - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
  - 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 40kg
Loading volume (depends on programme) <sup>1)</sup>	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 800 rpm, COTTONS STORAGE DRY programme)	4.3kWh
Scope	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

## Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY <sup>1)</sup>	6	4.3
COTTONS HAND IRON <sup>1)</sup>	6	3.5
EASY CARES STORAGE DRY <sup>2)</sup>	3	1.6

1) pre-drained at 800 rpm

2) pre-drained at 1000 rpm

# Installation and connection instructions



## Installation safety instructions



- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

## Removing transport safety equipment



**Caution!** Before first starting up, all parts of the transport safety equipment must be removed. Keep the transport safety equipment for possible subsequent transport (moving house).

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

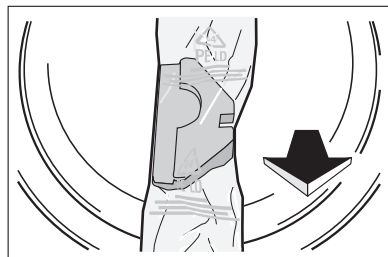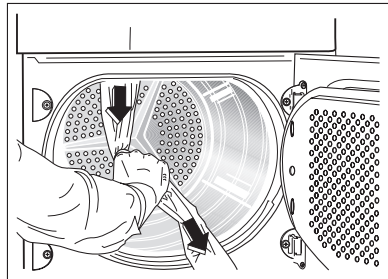



# Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



## **WARNING – THIS APPLIANCE MUST BE EARTHED.**

The manufacturer declines any liability should these safety measures not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.


The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1363) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  $\oplus$  or coloured green and yellow.
- The wire coloured blue must be connected to the terminal "N" or coloured black.
- The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

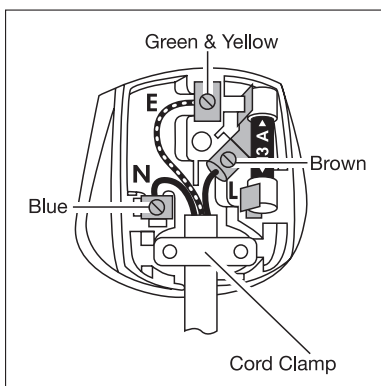

**WARNING!** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

## Permanent Connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

This appliance complies with the requirements laid out in the EEC Directive 76/899.

Voltage 240 V AC: Fuse rating 13 amps

See rating plate for further information.

This appliance meets VDE requirements.

Particular regulations of local electricity authorities must be observed.

This appliance conforms to EEC Directive No. 82/499/EWG on radio interference.



**WARNING!** Repairs to electrical appliances must only be carried out by trained personnel. Improper repairs may lead to serious risks for the user.


## Changing door stop




**Warning!** The door stop may only be changed by a qualified person. If necessary, please contact our after-sales service or your specialist dealer.

**Warning!** Before changing the door stop, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Open loading door
2. Unscrew hinge A from the front of the machine and take off the loading door.
3. Use a thin screwdriver to pry off cover plates B and C.
4. Use an appropriate tool and exert pressure to unfasten locking block D from the snap-on fixture, take out and reinsert on the other side, having rotated the block through 180°.

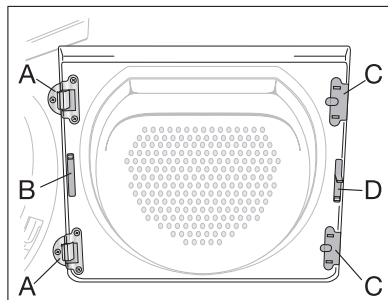

5. Unscrew hinge A from the loading door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.
7. Unscrew cover plates E from the front of the machine, rotate through 180, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
10. Transfer door lock F to the opposite-side and screw down.
11. Fix cover G on to the other side and allow the snap-in button to lock in place.
12. Insert loading door and hinges into recesses on the front of the machine and screw down.

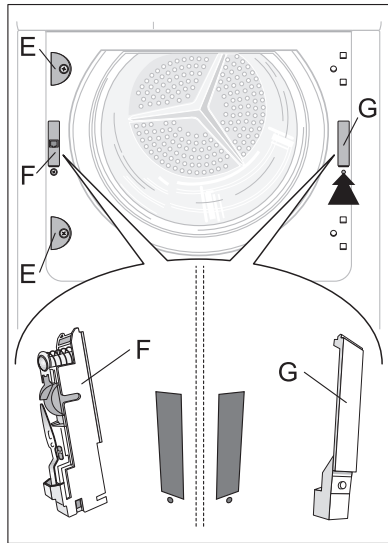

**Note regarding contact protection:** The machine is only secure for operations again once all plastic parts have been inserted.

## Special accessories

The following special accessories are available from your specialist dealer:

### **Intermediate installation kits for stacked washer and dryer:**

These intermediate installation kits can be used to arrange the dryer and an automatic AEG washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.

Two versions can be supplied:

- without stacker plate
- with extractable stacker plate

### **Installation kit for external condensate drain**

Installation kit for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER display.

Max. displacement height: 1 m from the base of the dryer; max. displacement length: 3 m

# Warranty conditions

## Great Britain

### Standard guarantee conditions

We, AEG, undertake that if within 12 months of the date of the purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our discretion repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

### Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of AEG manufacture which are not marketed by AEG.

### European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899



## Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

**www.serviceforce.co.uk**

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:


1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

### Customer Care

For general enquiries concerning your AEG appliance, or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.aeg.co.uk**.

Customer Care Department  
AEG Domestic Appliances  
55-77 High Street  
Slough  
Berkshire, SL1 1DZ  
Tel: 08705 350350 (\*)

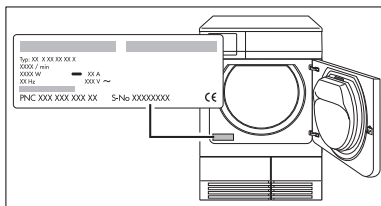

(\*) Calls may be recorded for training purposes

 **From the Electrolux Group. The world's No. 1 choice.**

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*

AEG Hausgeräte GmbH  
Postfach 1036  
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 944 411-01-120504-01

Subject to change without notice