

For Your Convenience

Please Do Not Return the Product to the Store

Please contact Sony directly if you have questions on the use of your television after

reading your Quick Setup Guide and manual.

Contact Sony Customer Support at:

Canada


1-877-899-SONY (7669) 8:00 AM - 6:00 PM (Eastern) 8:00 AM - 5:00 PM (Western)

http://www.sony.com/tvsupport

or to speak with a support representative:

Making Audio/Video Connections


Your new TV includes various types of video inputs and analog audio jacks. Use the outputs / inputs that are available on your components that provide the best audio/video performances:

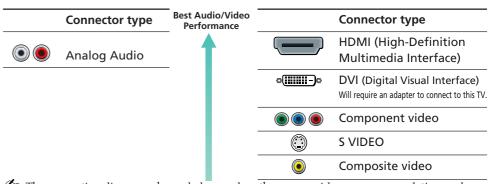

- The connection diagrams shown below and on the reverse side are recommendations only; other possible solutions may exist. Connections that include an AV receiver can often be complex, so check your AV receiver's instruction manual for additional details.
- See the "Cables Required" chart that appears with the diagram to determine which cables you'll need. Depending on the components you plan to connect, you may need to purchase extra cables.

Running Initial Setup

 - **1** Press \bigcirc^{POWER} to turn on the TV. The Initial Setup screen appears.
- Press **♦**/**♦** to highlight the on-screen display language. Then press (+). The message "First please connect cable/ antenna. Do you want to start Auto Program?" appears.
- Press $\ /\$ to highlight "OK" then press (+).
- When Initial Setup is complete, the TV will display the Channel Setup menu.





To run Auto Program again at a later time

Refer to the manual on "Initial Setup" and "Auto Program" sections.

