Car-Pro®

by:

AUTOPAGE ((U))).

MODEL **CPX-RS2**REMOTE ENGINE STARTER
OWNER'S MANUAL

WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of

- 1. Keep the transmitter out of children's reach.
- 2. Do not leave anyone in the vehicle while running on remote control.
- 3. Alert servicing personnel that the vehicle can be started automatically.
- 4. Do not start the vehicle by remote while it's in an enclosed area or garage.
- 5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
- 6. Should the unit malfunction, disconnect the fuse until the problem is corrected.
- 7. The use and operations of this system is the sole responsibility of the operator.
- 8. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

OPERATION:

A. REGULAR TRANSMITTER OPERATION:

Transmitter Button	System Function	Remark
	Lock Doors	Press to lock doors
	Unlock Doors	Press to unlock doors
+	Turn On The Remote Start	Press Twice within 3 seconds
*	Turn Off The Remote Start	Press Once

B. TO REMOTE START THE VEHICLE:

When you want to start your vehicle,

- 1. Press the transmitter * button twice to start the vehicle.
- 2. The parking light will activate to indicate the remote start received the signal.
- 3. It will take approximately 5 seconds for the engine to start.
- 4. Once the engine is running, after couple seconds the parking light will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting.
- 5. The vehicle will run for 5 to 30 minute cycle and automatically shut down.

NOTE: The following safety and security conditions exist with this unit.

The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

- 1. The hood is opened.
- 2. The brake pedal is pressed.
- 3. Move the optional remote start enable toggle switch to OFF position. (If installed)
- 4. The gear selector is in any gear other then "PARK" or "NEUTRAL"

C. TO TURN OFF THE REMOTE START:

When the engine is running (by remote start), if you want to stop it, you can do one of three things:

- 1. Press and release the transmitter * button.
- 2. Move the optional remote start enable toggle switch to OFF position. (If installed)
- 3. Press the brake pedal

The vehicle will shut down and turn off the parking light to indicate engine stopped.

D. TO OPERATE THE VEHICLE WHILE RUNNING ON THE REMOTE START:

To operate the vehicle after you have used the remote start function:

- 1. Insert the ignition key and turn it to "ON" (not the start) position.
- 2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the "ON" position, the engine will shut down.

E. TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the engine running and the climate control on.

- 1.Before turning off the engine, Place the vehicle in "Park"; take your foot off the brake pedal; press the transmitter button twice and the LED indicator will flash 3 times to confirm enter.
- 2. Turn the ignition key to the "OFF" position and remove the key. (The engine will stay running.)
- 3. The engine will run until the pre-programmed time has elapsed or one of the shutdown inputs is received.

F. TIMER START:

This unit can be programmed to start and run the engine every 3 hours. The engine will run for the programmed run time and then shut down.

IMPORTANT: Timer Start should be used only in open areas. You should <u>never</u> start and run the vehicle in on enclosed space as a garage or carport.

3 hours timer start: This feature is design for an extreme cold climate usage. The system will auto start the vehicle every 3 hours, to prevent extremely difficult cold start problems. A MAXIMUM OF SIX CYCLES CAN OCCUR.

ENTER:

- 1. Press the transmitter * button twice to remote start the vehicle. As soon as the vehicle is running and the parking lights have turned on or flashing.
- 2. Immediately depress the and button together at the same time, within 2 seconds
- 3. Quickly press the * button. The parking light will flash (3) times. The horn (if installed) chirps (3) times. The vehicle is now programmed to start every (3) hours.
- 4. Press the brake pedal to stop the vehicle running.

Exit the timer start:

Timer start can be exited manually as follows:

- 1. Make sure the remote start system is not operating the engine.
- 2. Turn the ignition "ON". The parking light will flash (4) times. The horn (if installed) chirps (4) times.
- 1. Press the transmitter * button twice to remote start the vehicle. As soon as the vehicle is running and the parking lights have turned on or flashing.
- 2. Immediately depress the and button together at the same time; then press and hold button for 2 seconds. The parking lights will flash (4) times. The horn (if installed) will chirp (4) times. The vehicle is no longer programmed to start automatically.

G. SHUT-DOWN INPUT FOR REMOTE STARTER:

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

- 1. The hood is opened.
- 2. The brake pedal is pressed.
- 3. Move the optional remote start enable toggle switch to OFF position. (If installed)
- 4. Engine is over-revved. {"Tachometer checking type" only}
- 5. The pre-programmed run time (5 /10 / 20 / 30 minutes) has elapsed.
- 6. Press the transmitter 🕇 button.
- 7. The vehicle refused to start running after {3} unsuccessful attempts.
- 8. If your remote start does not start the vehicle after 3 attempts, please take your vehicle back to your installing dealer for troubleshooting.

H. DISABLING THE REMOTE START SYSTEM: (If installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the (optional) remote start enable toggle switch to the OFF position.

LIMITED LIFETIME WARRANTY PROVISIONS

(U.S. and Continental U.S. Only)

- 1. AutoPage, Inc. WARRANTS that this new unit has been thoroughly inspected and tested at the factory prior to delivery. Your AutoPage equipment is guaranteed for "life" to the original purchaser/user of the equipment under the following conditions: If the product proves defective (according to AutoPage's testing) within the first year, the defective unit may be exchanged or repaired free of charge. "Proof of Purchase" (dated sales receipt) must accompany all warranty returns; otherwise, your return will be rejected and sent back. After one (1) year, the purchaser should ship the unit prepaid to AutoPage with a money order in the amount of \$20.00 to cover shipping and handling charges. Note: The enclosed Warranty Card may be required to receive warranty services.
- 2. This WARRANTY will be considered void if the equipment has been misused, neglected, improperly serviced, altered, dropped or damaged by water, contrary to the AutoPage OPERATIONS MANUAL. Or, if used with accessories not approved by AutoPage, which may have contributed to the defect. See note below regarding product installation.
- 3. The purchaser's remedies under this WARRANTY shall be limited to the repair or replacement of electronic components only. **THE FOLLOWING IS NOT COVERED:** Damages or deterioration to cases, batteries, covers and cabinets; the cost of repairs, replacement and labor of which shall be borne by the purchaser even if occurring during the WARRANTY period.
- 4. Any equipment or parts which are claimed to be defective under this WARRANTY must be sent to the AutoPage Service center with "proof of purchase" at the purchaser's expense prior to such return, a Return Authorization Number should be obtained. AutoPage will return the equipment, charges prepaid. Warranty Service can be provided through the dealer where the equipment is originally purchased.
- 5. Any unexpired WARRANTY shall be applicable to equipment and parts in the possession of the original purchaser only.
- 6. THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
- 7. AutoPage shall not be liable, under the foregoing WARRANTIES or otherwise, for: Any personal injury of any kind to the purchaser, its employees or agents or anyone else whomsoever resulting directly or indirectly from the use or presence of the equipment or parts; Consequential damages of any kind; any inability of the purchaser to use the equipment.

IMPORTANT NOTE: Any damages to the alarm system resulting from an installation performed by anyone other than a professional installation technician authorized by a dealer of Auto Page will void the product's warranty.

This WARRANTY CARD is for your record. However, Auto Page reserves the right to request you to submit this WARRANTY CARD which must have complete information to receive warranty service. Please keep this card in a secured place.

AUTOPAGE WARRANTY SERVICE CARD

Model:	_	
Serial #		
CUSTOMER TO COMPLETE	DEALER TO COMPLETE	
Mr./Mrs./Ms.		
Your Name (Please Print)	Company Name	
Address	Dealer's Address	
City, State, Zip Code	City, State, Zip Code	
Telephone Number	Dealer's Telephone Number	
Year / Make / Model of Vehicle	Date of Installation / Purchase	
	Dealer's Signature	

It is the purchaser's responsibility to keep this card for any future warranty service.

[&]quot;Proof of Purchase" which includes the store name and date of purchase must accompany all warranty returns.

Auto Page, Inc. 960 Knox Unit #B Torrance, CA 90502

310-323-1800