



16'X13' WHITE PINE™ with SCREEN ROOM

Instructions apply to Part Number 9271-163

POLE ASSEMBLY PARTS

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.
- See owners manual for more tips.

Main Tent Poles
Part No. 9271-166



Side Tent Poles
Part No. 9271-167



Screen Room Ridge Pole
Part No. 9271-162



Screen Room Upright Pole
Part No. 9271-168




Rainfly Pole
Part No. 9271-161



Rainfly Part No. 9271-164



1 Layout & Positioning of Tent

- Layout and position tent with screen room facing desired direction. (illus. 1)
- Stake down tent corners. Do not stretch too tight. Angle the stakes slightly toward the tent. (illus. 2) Keep the floor taut.
- Stake down the remainder of the stake loops and unzip doors.
- Assemble main tent poles (black) and side tent poles (gray) by interlocking the shock-corded sections.
- Insert the main tent poles (black) diagonally through the pole sleeves. This will form an "X" in the center of the tent. (illus. 1)
- Insert side tent poles (gray) through the pole sleeves at the ends of the tent. (illus 1)

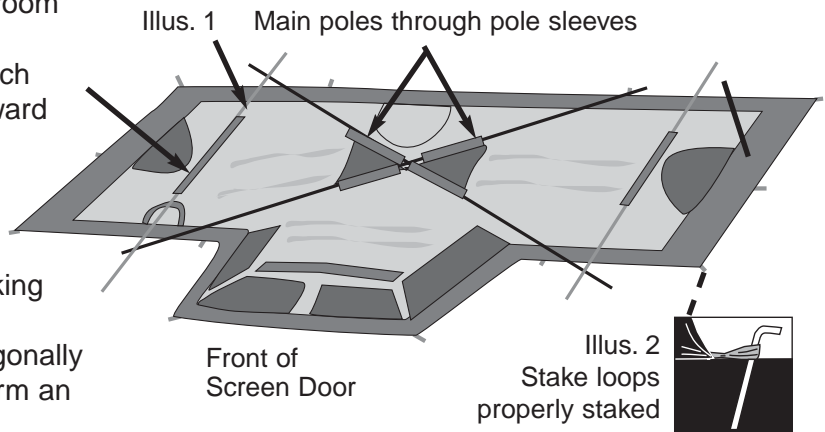

2 Connect Frame to Tent

- Insert one end of main tent pole end onto pin of pin & ring system, nearest the middle of the tent. (illus. 3, 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole. (illus. 3, 4)
- Repeat for second pole.
- Insert one end of side tent pole end onto pin of pin & ring system, at the corner of the tent. (illus. 3)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole.
- Attach frame clips on the tent tent to frame poles. (illus. 3, & 5)

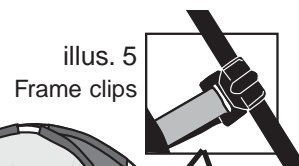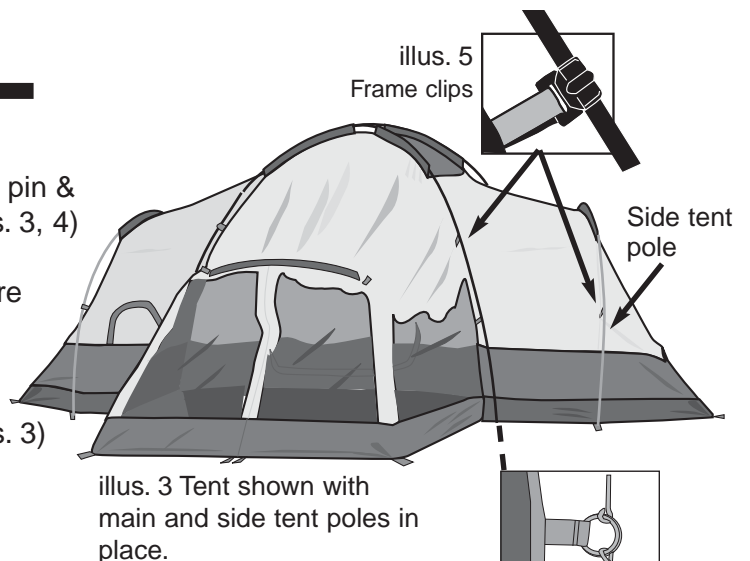


illus. 3 Tent shown with main and side tent poles in place.


illus. 4 Pin & ring system located on the front & rear of tent

3 Raise Screen Room

- Assemble all chain shock-corded Roof Pole. **When assembled will form a continuous arch with both ends pointing down.** (illus. 6)
- Insert square end of upright poles into curved roof poles and raise tent upright. (illus. 7 & 8)
- Angle screen room upright pole back toward tent body and insert pin of pin & ring system into end of pole. (illus. 7)
- Repeat for second pole. (illus. 7)

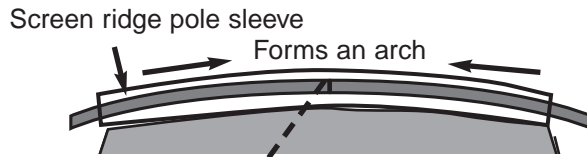

illus. 6 Curved Roof Pole assembly.

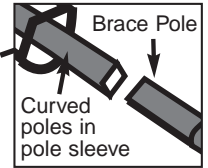

illus. 8 Curved ridge pole attaches to upright pole



illus. 7 Tent shown without rainfly



4 Attach Rainfly

- Assemble rainfly pole by interlocking shock-corded pole.
- Insert rainfly pole into reinforced pockets located at the center edges of the underside of rainfly. (illus. 9 & 10)
- Tie underside of rainfly to the rainfly pole with pole ties. (illus. 9)
- Drape rainfly over tent frame, pole side down. Rainfly pole should point out over screen room and rear window of tent.
- Connect the eight elastic loops with "S" hooks, (found at the rainfly corners) to the eight rings located at the end of the stake loops at the corners of the tent.
- Secure rainfly with frame ties located on underside of rainfly. (illus. 11)
- Stake out tent with four side guylines. (illus. 11)

 illus. 9 Insert Rainfly Pole piece into pocket on underside of Rainfly

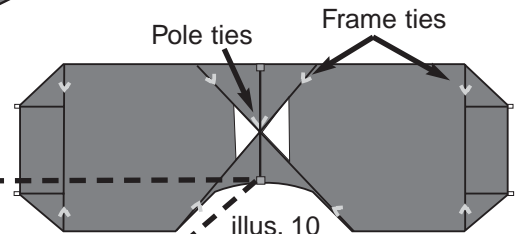

illus. 10 Underside of rainfly shown with pole inserted into pole pockets

Underside frame ties attach to tent poles



illus. 11 Tent shown completed.

Pin inserted into screen room upright pole

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. It is necessary and we recommend seam sealing your tent prior to camping. Seam

sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage nylon material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com