

Spanish ← English **Dictionary**

User's Guide www.franklin.com

To avoid damage caused by leakage of

the battery fluid, replace the battery or

of how much the device has been used

Should a battery leak, the device may

become damaged. Clean the battery

compartment immediately, avoiding

Keep batteries out of reach of small

children. If swallowed, consult a physician

1.3 Understanding the Device

Q ' W2 E2 R4 T2 Y2 U7 [0 0 P2

Attach the cover to the back of the device

with the screws provided. Flip the cover

upward to protect the screen and the

Soft Key functions are represented by the

labels displayed along the bottom of the

screen. To perform a Soft Key function, press

the unlabeled key at the top of the keyboard

that corresponds to the label you want. These

labels change to reflect the different functions

available in the various books and exercises in

For example, in the main menu, the following

Displays the Exercises menu.

Goes to the Databank menu.

Goes to the metric converter.

Please refer to the specific topics in this User's

Guide to learn the function of any available

Turns the product on or off.

Goes to the currency converter.

Displays a help message. When at ar

inflection screen, displays grammar information about the inflection you

Goes to the calculator

BOOKS Displays the Books menu.

GAMES Displays the Games menu.

SETUP Displays the Setup menu.

LEARN Displays the Learning menu.

during that time.

immediately.

1) Screen

2) Soft Keys

4) Power Key

6) Cover

3) Function Keys

5) Navigation Key

Using the Cover

keyboard when not in use.

1.4 Key Guide

Soft Keys

this device.

EXER

DATA

CALC

CONV

CURR

Soft Keys.

Function Keys

Soft Kevs are available:

Organizer Keys

CLOCK Goes to the clock.

contact with your skin.

batteries once every two years regardless

Please read the following safety warnings and precautions before using your device. **Note**: If this device is to be used by young children, this User's Guide should be read to hem by an adult and their use of the device should be monitored. Failure to do so may

1. Getting Started

1.1 Introduction

Congratulations on your purchase of the DBE-1510, Spanish English Dictionary. The DBE-1510 is a terrific resource for finding translations of thousands of words.

You can search for inflected forms of words correct misspellings, learn verb conjugations and find conversational phrases. Study rules of grammar and build your vocabulary using a personal word list, TOEFL® Test* and SAT® Spanish Subject Test† word lists. Look up definitions of English words and enjoy the fun vocabulary building exercises and games. * TOEFL and the Test of English as a Foreign Language are registered trademarks of Educational Testing Servic (ETS). This product is not endorsed or approved by ETS.

on Board, which was not invo production of, and does not endorse, this product 1.2 Installing the Batteries

t SAT is a reaistered trademark of the Colleae Entr

Your product is powered by two CR-2032 lithium batteries. Follow these easy instructions to install or replace them. Please have the new batteries and a small screwdriver at hand before you remove the old ones.

- 1. Turn your product off and turn it over.
- 2. Use the screwdriver to unscrew the batter cover screw.
- 3. Lift off the battery cover. 4. Remove the old batteries.

Note: Use a paper clip, if necessary, to remove the old batteries 5. Install the batteries positive (+) side

facing up.





Important: Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.

6. Replace the battery cover and secure it with the screw.

Warning: If the batteries wear-out completely or if you take more than a few seconds while changing the batteries, any information that was entered in the built-in books may be erased. You should always keep written copies

of your important information. **Battery Precautions**

In the Organizer, the following Soft Keys are available

Non-rechargeable batteries are not to be re-charged. Never recharge batteries that come with the device.

- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be shortcircuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use
- Always remove a weak or dead battery

Goes to the main menu. Goes to the word entry screen in any book that has one. Clears the calculator. In the metric converter and databank, goes to its main menu

Backs up, erases a letter, or turns off the highlight at an entry. Enters a word, selects an item, or

begins a highlight in an entry. Goes to the Organizer: clock, databank, calculator, metric converter and currency converter.

Goes to the main menu

At a word entry screen, types a? to stand for a letter in a word. At a menu, displays a menu item. At a dictionary entry, displays the headword. In games, reveals the word and forfeits the game.

Shifts to type capital letters.

Shifts to allow prev, next, pg up, pg down, and to type a hyphen (-)

Combination Kevs*

At a dictionary entry, pages up or down ▲ or ▼

 At a dictionary entry, displays the previous or next entry

At a menu, goes to the first or last menu item. At an entry, goes to the start or end of the entry.

FN +J Types a hyphen

+M Types an @.

At a word entry screen, types an asterisk to stand for a series of letters in a word. In games, gives a hint

Direction Keys



-6)

Move up (\blacktriangle), down (\blacktriangledown), left **◄**), or right (▶).

at menus and dictionary entries, pages down. At a word entry screen, types a space.

* Hold the first key while pressing the second.

1.5 Message Language

When you turn on this product for the first time, choose the message language. Press A for English or press B for Spanish.



The message language is the language of prompts, help, and other messages. You can change the message language after your initia

1.6 For Your Information

Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move around menus or view more text.

Help is Always at Hand

You can view a help message at any screen by pressing help. Press \blacktriangle or \blacktriangledown to read. To exit help, press back.

About Screen Illustrations

Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your unit is

1.7 Using the Main Menu

Use the main menu to quickly take you to different books and exercises in your device. The main menu contains five tabs: Books. Learning, Exercises, Games and Setup. Use and ◀ to move to another tab. Use ▲ and ▼ to highlight the option you want and press enter to select it. You can also go directly to a tab by pressing the tab's respective Soft Key

Understanding the Menus



The **Books** tab enables you to look up Spanish translations of English words and English translations of Spanish words. You can conjugate English or Spanish words and search for English or Spanish conversational phrases. You can also look up definitions of English



The **Learning** tab enables you to access My Vocabulary List, search for English or Spanish usage examples, and read English or Spanish grammar lessons. You can also access the TOEFL® Test and SAT® Spanish Subject Test



Bee and Flashcards. You can try both exercises using English words saved to My Vocabulary List and those found in the TOEFL® Test word list. You can also try the exercises using Spanish words saved to My Vocabulary List and those found in the SAT® Spanish Subject Test.



The **Games** tab allows you to access the seven games included in your device: Hangman Coniumania, Gender Tutor, Word Train, Guess the Word, Word Auction and Word Blaster. You can also adjust the game settings.



The **Setup** tab allows you to access a demonstration and tutorial of how this device works. You can also adjust the device settings.

2. BOOKS Menu

2.1 Translating Words

 
Your dictionary is fully bilingual. You can use the English-to-Spanish and Spanish-to-English dictionaries to translate words between the languages. Try translating a Spanish word.

- 1. Press menu. 2. Press BOOKS.
- 3. Use ▲ or ▼ to highlight Spanish -> English, then press enter.

To translate English words into Spanish select Enalish -> Spanish.

You can also press **LANG** at the word entry screen to change the entry language from Spanish to English 4. Type a word (e.g., ir).

nter a Spanish word



To erase a letter, press back Note: You do not need to type accents. To type accents, type the letter (e.g., e) and press A repeatedly until the accent you want appears (e.g., é).

To type a capital, hold cap and press a letter key. To type a number, hold **FN** and press **Q** - **P**. To type a hyphen, hold **FN** and press **J**.

5. Press enter to view the English

l: to go <ir a pie: to go on foot, to walk> <ir a caballo: to ride horseback> <ir a casa: to go home> home> 2: to lead, to extend, to stretch <el camino va de Cali a Bogotá: the road goes from Call to
CONJ | LANG | DICT | LIST | GAMES

- Press space or ▼ to scroll. 6. Hold FN and press ▶ or ◀ to view the next or previous definition
- 7. Press clear when done. Press menu to go to the main menu

Understanding Translations Entries may consist of headwords, parts of speech, the translation and/or definitions.

Other forms of the word may follow the

headword. After the translation or definition, you may see a list of usage examples.

Explanation of Genders

Spanish nouns are different than English nouns in that they must either be masculine or feminine. Each definition of a noun indicates which gender it is with m or f.

 
Misspelling Words If you enter a misspelled word, a list of

corrections appears. Highlight the word you want and then press enter to see its entry. **Choosing Multiple Forms**

Some words in the dictionaries have more

than one form (e.g. sí, si). When the word you

are looking up has multiple forms, the different forms appear in a list. Simply highlight the form you want and press enter to see its entry. For example, select panish -> English from the Books menu, then



Highlight the form you want and press enter to see its entry. To go back to the Multipl Forms list, press back.

Accenting Letters

You can look up accented words without typing accents. If there are no Multiple Forms. the dictionary will take you directly to the word. If there are Multiple Forms, you will have to choose the correct word from a Multiple Forms list. See "Choosing Multiple Forms" for more information. Remember, if you want to enter an accent yourself, type the letter and press **A** until the appropriate accent appears.

2.2 Highlighting Words

Another way to look up words in the Spanishto-English and English-to-Spanish dictionaries is by highlighting them in entries or word lists. You can then find their translations or add them to My Vocabulary List.

1. At any text, press enter to start the

nignign.

left ['pler] //

i. jugar (to play with a doll: jugar (on una muñeca) (to play with an idea : darle vueltas a una idea)

fromie, roy: jugar, juguetear
(don't play with your food no imeques con la comida) 3: tocar (to play in a band: tocar cony LANG DICT LIST GAMES

To turn the highlight off, press back. 2. Use the arrow keys to move the highlight to the word you want.

play! ['pler] //
1: jugar <to play with a doll: jugar <to play with a doll: jugar <to play with an idea : darle vueltas a una idea >
2 jugar , jugar , juguetear <don't play with your food : no ineques con la comida > 3: tocar <to play in a band: tocar cony LANG DICT LIST GAMES

To ... Press ... define the word enter add word to

My Vocabulary List 3. Press clear when done. Press menu to go to the main menu.

2.3 Finding Letters in Words

If you are uncertain about how to spell a word, type a question mark (?) in place of each unknown letter. To find prefixes, suffixes, and other parts of words, type an asterisk (*) in a word. Each asterisk stands for a series of letters. **Note**: If you type an asterisk at the beginning of a word, it may take a little while to find the matching words. 1. Go to any word entry screen.

You can access a word entry screen

by selecting English -> Spanish, Spanish-> English, or English Dictionary from the Books menu

2. Type a word with ?s and *s. To type an asterisk, hold down cap and press ?*. 3. Press enter.

4. Press to move the highlight to the

word you want and press enter to view its entry.
5. Press Clear when done.

Conjugations

Press menu to go to the main menu. 2.4 Advanced Verb

Conjugations show inflections, or changes in a word's gender, tense, etc. This device includes extensive inflections of Spanish and English nouns, verbs, modifiers, and other words.

From the Main Menu

- 1. Press menu.
 - 2. Press BOOKS

Conjugations.

3. Use ▲ or ▼ to highlight Spanish

Conjugations, then press enter To conjugate English words select English

> You can also press **LANG** at the word entry screen to change the entry language from Spanish to English

- 4. Type a word (e.g., leer).

5. Press CONJ. If needed, highlight the part of speech of translation you want and press enter. DUERUIEW poekolew yo leo (today) I read (today) yo leeré (tomorrow) I will read (tomorrow) yo lei, yo leia (yesterday) I read, I was reading (yester-

These are the principal forms of the Spanish verb "leer". The English translations are below each Spanish inflection.

6. Press space or ▼ to scroll.

Press ?* to display the root word. 7. Press CONJ or hold FN and press repeatedly to view more inflections.

CONJ LANG DICT LIST GAMES

2. Press BOOKS. If the word is a noun, an adjective, or 3. Use ▲ or ▼ to highlight English Phrases, then press enter. another modifier, then there won't be any other inflections.

8. Press clear when done. Press menu to go to the main menu.

From an Entry

Some words have different parts of speech or multiple translations. You can easily find which part of speech or specific translation you will need to conjugate by first looking up the word in the Spanish-to-English or English-to-Spanish dictionaries and then pressing CONJ. Follow this example.

- 1. Press menu. 2. Press BOOKS
- 3. Use ▲ or ▼ to highlight *Spanish*

Conjugations, then press enter To conjugate English words select English

Conjugations. You can also press LANG at the word entry screen to change the entry language from Spanish to English.

4. Type a word (e.g., conocer).

5. Press enter to look it up. Conocer vot

1: to know, to be acquainted with
<ya lo conocí: I've already met
hm>

2: to meet
3 RECONOCER: to recognize conocerse & conocerse UP to know each other ONJ LANG DICT LIST GAMES

Read the definition to find the verb you

want (e.g., to meet). 6. Press CONJ to conjugate the headword,

Highlight the translation you want (e.g., meet) and press enter. OVERVIEW

yo **conozco** (today) I **meet** (today) I meet (today)
o conoceré (tomorrow)
I will meet (tomorrow)
o conocí, yo conocía (yesterday)
I met. I was meeting (yesterdow)
CONJ LANG DICT LIST GAMES

These are the principal forms of the Spanish verb "conocer". The English translations are below each Spanish inflection

7. Press space or ▼ to scroll.

Press **?*** to display the root word. 8. Press CONJ or hold **FN** and press ► repeatedly to view more inflections. If the word is a noun, an adjective, or another modifier, then there won't be any other inflections.

9. Press clear when done. Press menu to go to the main menu

Getting Grammar Guidance When viewing inflections, you can press help

to go directly to the grammar lesson detailing how to use the inflections you were viewing along with usage examples.

Press 🕒 to view this help mes sage. The preterite in Spanish is used to describe a completed action in the Past:

La guerra estalló.

War broke out.

To return to the inflection screen

CONN LANG DIGT LIST GAMES

Viewing English Inflections If you are unfamiliar with inflections, it may

be helpful to look at some inflected forms of English verbs. Switch the entry language back to English, type write, and press CONJ to see the different forms of the English verb "to

JUERUIEW | write (now/often) |---iba (now/often) yo **escribo** (now/often) I **wrote** (in the past) yo **escribi** (in the past) I have **writ** or **written** (alyo he **escrito** (already/until CONJ LANG DICT LIST GAMES

This will give you a good idea of each inflection

Verb Conjugations

The dictionary conjugates verbs into the following forms: present, imperfect, preterite, future, conditional, present subjunctive, imperfect subjunctive, imperfect subjunctive 2, present perfect, pluperfect, preterite anterior, future perfect, conditional perfect, present perfect subjunctive, pluperfect subjunctive, pluperfect subjunctive 2, imperative, present progressive, and past progressive.

2.5 Translating **Conversational Phrases**

You can find translations of English or Spanish conversational phrases in categories ranging from Emergencies to Business Communication to Time & Dates. Note that the English phrase always appears before the Spanish phrase.

1. Press menu.

To find English translations of Spanish

phrases, select Spanish Phrases.

ommunication

CONJ LANG DICT LIST GAMES

4. Press ▲ or ▼ to highlight the category

CONJ LANG DICT LIST GAMES

<mark>∏? What is your name?</mark> ¿Cómo se llama?

5. Press ▲ or ▼ to highlight the phrase you want to translate and then press enter.

CONJ LANG DICT LIST GAMES

You can look up definitions of English words

6. Press clear or menu when done.

2.6 Using the English

using the English Dictionary.

Enter an English word

3. Use ▲ or ▼ to highlight *English*

4. Type a word (e.g., poignant).

To erase a letter, press back

5. Press enter to view the definition

poignant *ad jective* 1: emotionally painful 2: deeply moving --poignancy *noun*

Press space or ▼ to scroll.

next or previous definition

7. Press clear when done.

6. Hold FN and press ▶ or ◀ to view the

Press menu to go to the main menu.

Understanding Confusables

Confusables are homonyms, homophones and

spelling variants that are easy to confuse, e.g.

rain, reign, rein. If the word you looked up is a

To type a capital, hold cap and press a

letter key. To type a number, hold FN and

press Q - P. To type a hyphen, hold FN

Enter an English word

poignant∢

Dictionary, then press enter.

Dictionary

1. Press menu.

2. Press BOOKS.

Press ▲ or ▼ to highlight a subcategory, if needed, and press enter.

you want and press enter.

Conversational Phrases

Personal Communicatio

elecommunication

Getting Aquainted ¿Cómo está?

Language

2. Press LEARN.

3. My Vocabulary List will be highlighted. Press enter to select it.

English word to add:

CONJ LANG DICT LIST GAMES

- 6. Press enter to add the word. 7. Press clear when done.

Entry Screen

Spanish dictionaries, you can add words to My Vocabulary List directly from the word entry

3. Use ▲ or ▼ to highlight Spanish -> English, then press enter. To add an English word select

You can also press **LANG** at the word entry screen to change the entry language from

English words will be added to My English Vocabulary List; Spanish words will be added to My Spanish Vocabulary List.

word list (e.g., elegante).

My Vocabulary List opanish List: *Empty* Add *elegante* Dolot: Jelete a Word <u>Erase the List</u> CONJ LANG DICT LIST GAMES

6. Press enter to add the word.

Press menu to go to the main menu.

Adding Highlighted Words

press LIST. Add "your word" will be highlighted. Press enter to add the word.

1. Press menu.

2. Press LEARN.

English List (or Spanish List) will be highlighted. Press LANG to switch from the English to the Spanish List, if needed. English List: Empty (or Spanish List: Empty)

4. Press enter to view the list.

5. Highlight a word on the list.

press CONJ to view its inflections.

Vocabulary List 1. Press menu

Highlighting Words

rain: precipitation reign: rule rein: harness

You can highlight words in the English Dictionary just as you would in the English-to-Spanish and Spanish-to-English dictionaries, but you will only be able to look them up within the English Dictionary and you cannot add them to My Vocabulary List.

confusable, the **CONF** Soft Key will be made

available. Press CONF to view the confusables.

3. LEARN Menu

3.1 Using My Vocabulary List

You can save up to 40 words total, in both English and Spanish, in My Vocabulary List for personal study or review. My Vocabulary List is saved between sessions unless your product

Adding Words from the **Learning Menu**

1. Press menu.

4. Press ▲ or ▼ to highlight Add a Word and

5. Type a word.

Adding Words from a Word

In the Spanish-to-English or English-to-

- screens
- 1. Press menu.

2. Press BOOKS.

English -> Spanish

Spanish to English.

4. Type the word you want to add to your

5. Press LIST.

Your selection is included in the menu item

7. Press clear to return to the word entry

You can also add words to My Vocabulary List from definitions and correction lists within the Spanish-to-English and English-to-Spanish dictionaries. First highlight a word and then

Viewing My Vocabulary List

3. My Vocabulary List will be highlighted. Press enter to select it.

will be displayed if either is empty.

6. Press enter to view its translation or

Removing a Word from My

- 2. Press LEARN.
- 3. My Vocabulary List will be highlighted. Press enter to select it.
- 4. Press ▲ or ▼ to highlight Delete a Word and press enter
- 5. Highlight the word you want to delete and press enter to delete that word.

Erasing My Vocabulary List

- 1. Press menu.
- 2. Press LEARN.
- 3. My Vocabulary List will be highlighted. Press enter to select it.
- 4. Press ▲ or ▼ to highlight Erase the List and press enter
- 5. Press Y to erase the list or press N to cancel.

Note: When you erase one list, the other list

3.2 Finding Usage Examples

Your device includes a helpful feature that locates usage examples and their translation.

- 1. Press menu.
- 2. Press LEARN. 3. Press ▲ or ▼ to highlight Spanish Usage Examples, then press enter.

To locate English usage examples select English Usage Examples.



CONJ LANG DICT LIST GAMES 4. Press ▲ or ▼ to scroll through the list of

Spanish keywords. You can also type a letter to go to the first word beginning with that letter. For

example, type **tru** to highlight truco. 5. Press enter to select the highlighted keyword.

A list of all usage examples using that keyword is displayed.



- usage examples. 7. Press enter to select the highlighted example.
- The translation of the usage example is displayed.



the selected usage example.

8. Press clear or menu when done.

3.3 Reading Grammar Lessons

Your device includes an outline of English and Spanish grammar lessons such as parts of speech, phrases, clauses, the correct usage of

From the Learning Menu 1. Press menu

- 2. Press LEARN.
- 3. Press ▲ or ▼ to highlight Spanish

Grammar Lessons, then press enter To review English grammar select English Grammar Lessons.



Each major section is composed of topics

- and sub-topics.
 4. Press ▲ or ▼ to highlight the topic you want to study and then press enter. 5. If necessary, highlight the sub-topic you
- want and press enter. 6. Press space or ▼ to read.

If a topic contains a quiz to help you review the rules described in that topic, the QUIZ Soft Key will be displayed. Press **QUIZ** to begin the guiz. Follow the instructions on the screen to complete the quiz. To exit the quiz, press back.

7. Press FN + ▶ or ◀ to view the next or

8. Press back to return to the list of topics. Press clear or menu when done.

From an Inflection Screen

- 1. Press menu
- 2. Press BOOKS
- 3. Use ▲ or ▼ to highlight *Spanish* Conjugations, then press enter.

To conjugate English words select English

You can also press **LANG** at the word entry screen to change the entry language from

- Spanish to English 4. Type a word to conjugate, and then press
- CONI 5. Press FN + ▶ or ◀ repeatedly to find the

tense you want. Tense you want.

PRETERITE
yo tuve
I had
tú tuviste
you had
el tuvo
he had
ella tuvo
cons Lang Dict List Games

6. Press help

Press 😝 to view this help mes sage. The preterite in Spanish is used to describe a completed action in the La guerra estalló. War broke out. To return to the inflection screen conj LANG DICT LIST GAMES

Information about the tense will be displayed along with usage examples

7. Press back to return to the inflection screen or press clear to return to the word entry screen. Press menu to go to the main menu

3.4 Using Word Lists

Two word lists are available to you to review and learn English and Spanish words

TOEFL® Test Word List

The TOEFL® Test Word List contains English words you might find on the Test of English as a Foreign Language (TOEFL® Test). 1. Press menu

- 2. Press LEARN.

3. Press ▲ or ▼ to highlight TOEFL® Test Word List, then press enter.

Press ▲ or ▼ to scroll through the TOEFL® Test Word List. You can also type a letter to go to the first word beginning with that letter. For example, type **col** to highlight



its translation or to conjugate it. Press back to return to the list.

SAT® Spanish Word List

The SAT® Spanish Word List contains Spanish words you might find on the SAT® Spanish Subject Test.

- 1. Press menu
- 2. Press LEARN.

3. Press ▲ or ▼ to highlight SAT® Spanish Word List, then press enter.

Press ▲ or ▼ to scroll through the SAT® Spanish Word List. You can also type a letter to go to the first word beginning with that letter. For example, type **gre** to highlight SAT® Spanish Word List



its translation or to conjugate it. Press back to return to the list.

4. EXERCISES Menu

Using Exercises, you can test your spelling and improve your vocabulary

4.1 Spelling Bee

- 1. Press menu 2. Press EXER.
- You can choose My Fnalish Spelling

Vocabulary List, My Spanish Spelling

Bee which uses words from My English Bee which uses words from My Spanish Vocabulary List, TOEFL® Test Spelling Bee which uses words from the TOFFI ® Test Word List, or SAT® Spanish Spelling Bee which uses words from the SAT® Spanish Word List.

3. Press ▲ or ▼ to highlight the one you want, then press enter.

A word will flash on the screen for you to

4. Type in the word you just saw and press enter to see if you spelled it right.

5. Press enter to see the translation of the Press back to return to Spelling Bee.

6. Press space for a new word.

7. Press clear or menu when done.

4.2 Flashcards

- 1. Press menu.
- 2. Press EXER.

You can choose My English Flashcards which uses words from My English Vocabulary List, My Spanish Flashcards which uses words from My Spanish Vocabulary List, TOEFL® Test Flashcards which uses words from the TOEFL® Test Word List, or SAT® Spanish Flashcards which uses words from the SAT® Spanish Word List.

3. Press ▲ or ▼ to highlight the one you want, then press enter.

A word will appear on the screen for you to study or translate. If needed, press enter to see the translation. Press back to return to Flashcards.

- 4. Press space for a new word. 5. Press clear or menu when done.
- **5. GAMES Menu**

You have seven fun games to choose from.

5.1 Changing Game Settings Before you play, you can choose the source of

the words, the skill level, the language, and whether or not graphics will be used. 1. Press menu

- 2. Press GAMES.
- 3. Hold down Cap and press ▼ to

highlight Game Settings, then press enter . ■ 911 of them Beginner Spanish On ang: raphics: CONJ LANG DICT LIST GAMES

4. Use ▲ or ▼ to move ► to Words, Skill, Lang or Graphics.

Words chooses the source of the words: All of them. TOEFL® List, My Vocabulary List. Enter your own, Learn a Word List, or SAT® Spanish List. Skill determines how easy or difficult a

- game is. 5. Use ▶ or ◀ to change the setting(s) you
- 6. Press enter when done.

5.2 Selecting a Game

In the Games menu, use ▲ or ▼ to move the highlight to the game of your choice and press

5.3 Getting Help in the Games

During any game you can read instructions by pressing help. You can get a hint by holding cap and

pressing ?* or reveal the game word by pressing 7*. **Note**: If you reveal the game word, you lose

6. SETUP Menu

6.1 Changing the Settings

When using this device, you can activate the Learn a Word feature, adjust the screen contrast, the shutoff time, the type size, and the message language. The shutoff time is how long your product stays on if you forget to turn

- 1. Press menu 2. Press SETUP.
- You can also press ▶ or ◀ until you reach the Setup menu 3. Settings will be highlighted. Press enter
- to select it. Learn a Word: ► Off Contrast: Shutoff: 2 m Type Size: Med Mensajes: Eng
- CONJ LANG DICT LIST GAMES 4. Press ▲ or ▼ to move ► to Learn a Word. Contrast, Shutoff, Type Size, or Mensajes

5. Press ◀or ▶ to change the setting. **Using a Password** Your changes are automatically saved.

6. Press enter when done.

or English vocabulary. Each time you turn

your dictionary on, you can see a random

6.2 Viewing a Demonstration

You can also press ◀or ▶ until you reach

3. Press ▼ to highlight either *Tutorial* or

To stop the demonstration or exit from

The clock displays the current time and date.

Friday, March 17, 2006

∰12:35:11pm

CLOCK | DATA | CALC | CONV | CURR

2. Press enter to set the time and date.

4. Use ▶ or ◀ to move to another field.

7.2 Using the Databank

You can store as many as 100 names,

add depends on the size of each entry

1. Press org and then press DATA.

telephone numbers, and addresses in the

databank. The total number of names you can

CLOCK DATA CALC CONV CURR

2. Highlight Add an Entry and then press

4. Type a phone number and press enter

Note: Q - P will type numbers 0-9

5. Type a postal address or e-mail address

To type an @, hold FN and press M.

2. Highlight View: XX entries (XX% free) and

Type your changes. Use ◀ or ▶ to move

Press enter twice to move to the address

5. Press enter again to save your changes or hold down FN and press back to

2. Highlight Delete an Entry and then press

3. Highlight the entry you want to delete

4. To delete all databank entries, highlight

Erase the List in the Databank Menu and

Press Y to erase all databank entries or N to cancel the deletion.

1. Press org and then press DATA.

3. To edit an entry, highlight it and press

Viewing or Editing Entries

1. Press org and then press DATA.

he cursor; use back to delete.

4. Press enter to move to the number

automatically. To type a letter from this row,

hold **FN** and press the letter key. To type a hyphen, hold **FN** and press **J**.

3. Type a name and press enter.

Press clear to exit without saving the

6. Set the World time the same way you set

in the highlighted field.

5. Press enter when done.

Adding Entries

Databank

View: *Empty* Add an Entry

Set password ` Erase the List

and press enter.

then press enter.

cancel your changes

Deleting Entries

and press enter.

then press enter.

enter .

3. Use ▲ or ▼ to scroll through the options

Press **CLOCK** to toggle between Home time

You can save two times: Home time and World

the Tutorial and return to the Setup menu,

View Demo and press enter.

7. ORGANIZER Menu

7.1 Using the Clock

Learn a New Word

or Tutorial

1. Press menu.

2. Press SETUP.

the Setup menu

press clear.

1. Press org.

and World time.

You can use a password to prevent unauthorized access to the databank Press clear to return to the Setup menu Your dictionary comes with a Learn a Word feature to help you increase your Spanish

password, you will be able to use the databank again only by removing the batteries from your device, which will permanently erase all the

Warning! Always write the password in a safe, separate location. If you lose or forget the information stored in the databank

1. Press org and then press DATA.



 
characters and press enter. Use ◀ or ▶ to move the cursor; use back 4. Press C to confirm or clear to cancel

the password. The password you set will be requested the first time that the databank is used during

5. To change the password, repeat Steps To remove a password, press enter at the

7.3 Using the Calculator

blank password screen



2. Type a number

a session

Note: Q - P will type numbers 0-9 automatically. You can type up to 10 digits. To type a decimal, press (1). To change the sign of a number, press \mathbb{Z} (+/-).

- 3. Press a math function key.
- 4. Type another number. 5. Press enter.

Or press **(%)** to calculate a percentage. To repeat the calculation, press enter

To calculate .. reciprocals squares square roots

press enter

Converter

Press ... A(1/x)D (x²) S (√x)

6. Press clear to clear the current

Using the Calculator Memory Try the following equation to practice using

the calculator memory: $(32 \times 12) - (8 \times 8) = 320$ 1. Press org and then press CALC.

- 2. Press B (MC) to clear the calculator memory, if necessary 3. Type 32, press **K** (x), type 12, and then
- 4. Press (M+) to add the result to м indicates when a number is stored in
- memory. 5. Type 8, press K (x), type 8, and then
- press enter.

 6. Press C (M-) to subtract the result from the number stored in memory.
- 7. Press V (MR) to retrieve the number 8. Press clear to clear the calculator.
- 7.4 Using the Metric

1. Press org and then press CONV. iquids – USA iquids – UK CLOCK | DATA | CALC | CONV | CURR 2. Use ▼ to select a conversion category

- (e.g., Weights). 3. Select a conversion (e.g., grams/ounces). 4. Type a number after one of the units.
- Note: Q P will type numbers 0-9 automatically. Press ▲ or ▼ to move between the lines. Press back to delete a 5. Press enter to convert.

6. Press clear to clear the current

7.5 Using the Currency Converter

1. Press org and then press CURR. Exchange Rate: 10.7765 Home: • Other: CLOCK DATA CALC CONV CURR

2. Enter a conversion rate and press enter The rate should be in units of the other currency per one unit of the home currency (n other/1 home). For example, to convert between U.S. Dollars and Mexican Pesos, enter an exchange rate of 10.7765. This means that 10.7765 Mexican Pesos is the equivalent of 1 U.S. Dollar. 3. Enter an amount for the home or other

currency. Press ▲ or ▼ to move between the lines. Use back to delete a number.

4. Press enter to convert. 5. Press clear to clear the current

8. Additional Information

 
If nothing happens, try Step 2.

8.1 Resetting Your Product If the keyboard fails to respond, or if the screen

performs erratically, perform a system reset by following the steps below 1. Hold clear and press G.

The reset button is recessed in a pin-sized

2. Use a paper clip to gently press the reset



Warning! Pressing the reset button with more than light pressure may permanently disable your product. In addition, resetting the product erases settings and information entered in its built-in books.

8.2 Specifications

Model DBE-1510: Spanish ← English Dictionary

- Batteries: two CR-2032 lithium • **Size**: 3 5/8 x 5 1/4 x 5/8 in
- Weight: 4.868 oz

© 2002-2011 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 U.S.A. All rights reserved. © 2003-2006 Merriam-Webster, Incorporated.

ISBN 978-1-59074-667-7

F©(€ C N681

8.3 Product Care Your device is designed to be light, compact device and must be treated carefully. Putting unneccessary pressure on it or striking the device against other objects can cause damage

- In order to avoid damage to your device, please: Keep the lid closed when you are not using it. This will protect the screen from being broken, scratched or marred in any way.
- Do not drop, crush, bend, or apply excessive force to the device. Do not expose your device to moisture.
- extreme or prolonged heat, cold, humidity or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof. Clean the device by spraying a mild glass
- cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device. • Should the device's display glass break, properly dispose of the product avoiding
- contact with your skin, then wash your hands immediately. Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

8.4 Recycling and Disposal **Device Disposal**

This device should be disposed through your local electronic product recycling system – do not throw into the trash bir **Packaging Disposal**

Please save this User's Guide and all packing

electrical fast transients. Normal operation o this unit may be re-established by pressing the reset key, by pressing or by emoving and replacing the batteries

8.5 License Agreement (U.S.)

materials, as they contain important

Do not dispose of batteries with normal household

This unit may change operating modes,

lose information stored in memory, or fail

to respond due to electrostatic discharge or

your local recycling system.

Battery Disposal

information. In case of disposal, please refer to

normal household waste. Please obey

your local regulations when disposing

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc. Limited Use License

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this PRODUCT. You may not make any copies of the PRODUCT or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary

information which you agree to take adequate steps

to protect from unauthorized disclosure or use. This

license is effective until terminated by Franklin. This license terminates immediately without notice from

FRANKLIN if you fail to comply with any provision of

8.6 FCC Notice This device complies with Part 15 of the FCC Rules. Operation is subject to the following two condition (1) This device may not cause harmful interference,

> ceived, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate

and (2) This device must accept any interference

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and

-Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. NOTE: This unit was tested with shielded cables on

the peripheral devices. Shielded cables must be used with the unit to insure compliance. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the

9. Warranty Information

9.1 Disclaimer of Warranties Except as specifically provided herein, Franklin

makes no warranty of any kind, express or implied, with respect to this product.

9.2 Limited Warranty (U.S.) LIMITED WARRANTY, DISCLAIMER OF

WARRANTIES, AND LIMITED REMEDY FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS

IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE, THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED

WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY, THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY

RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT

NOT LIMITED TO, WARRANTIES OF MERCHANTABLE QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES. CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to: Franklin Electronic Publishers, Inc.

Attn: Service Department One Franklin Plaza

Burlington, NJ 08016-4907 If you return a Franklin product, please include you me, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin stro recommends using a trackable form of deliver to Franklin for your return.

9.3 Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

9.4 Limited Warranty (outside U.S., EU and Switzerland)

above, this product, excluding batteries and liquid crystal display (LCD), is quaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

Notwithstanding the disclaimer of warranties

misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Rev. C

WDT-28000-00

This warranty explicitly excludes defects due to