
Acoustic Research

BiPod □iPhone

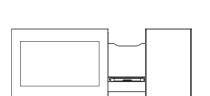

It is important to read this user manual prior to using your new product for the first time. Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

Technical information Product: Digital Photo Frame for iPhone/iPod Brand: Acoustic Research Model: ARS3i

For your records In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number Model No.: Date of Purchase Place of Purchase Serial No.:

Electrical power information AC/DC Adaptor Input: 100 -240 V AC, 50/60 Hz Output: 6 V DC, 3A

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

and iPod touch are trademarks of Apple Inc., registered in the U.S. and other

apparatus.

Dear Acoustic Research customers Thank you for puchasing the Acoustic Research digital photo frame for iPhone/iPod. This product includes a 7' (16:9 Aspect Ratio) TFT Liquid Crystal Display (LCD) monitor, clock function. music playback, photo function, video function and support SD/MMC/MS memory cards or USB flash drives This product plays mp3 and Windows


To start using your digital photo frame

Unpacking the unit You should find the following items in the box:

 AC/DC power adapter Rod support

muvee software CD ROM

Installing the rod support Screw the rod support into the ho the rear to support the unit.

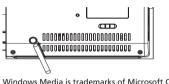

power

Use only with the

specified by the

nanufacturer,

or sold with the

njury from tip-over.

apparatus. When a cart is used

apparatus combination to avoid

lightning storms or when unused for long periods of time.

required when the apparatus has been damaged in any way, such as power-supply cord or plug is

damaged, liquid has been spilled

apparatus, the apparatus has been

exposed to rain or moisture, does not operate normally, or has been

ADDITIONAL SAFETY INFORMATION

The AC/DC adapter supplied with this product is intended to be

correctly oriented in a vertical or

Do not use unauthorized chargers

came with your product or that is

or power adapters. Use only chargers or power adapters that

Apparatus shall not be exposed to

dripping or splashing and no objects filled with liquids, such as vases,

floor mount position.

or objects have fallen into the

Unplug this apparatus during


Refer all servicing to qualified

service personnel. Servicing is

use caution when moving the cart/

cart, stand, tripod, bracket, or table

Connect the supplied power adapter to the product's DC 6V jack, and

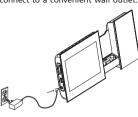

 Once connected with power and switch the ON/OFF button to ON, the Main menu appears.

is equipped with a memory holding n that can be powered with 2 "AAA" batteries (not included). The power failure protection circuit will not operate unless batteries are installed. When normal household power is interrupted, or AC/DC power adapter is unplugged, the batteries will power the digital photo frame to keep track of time settings programmed into memory.

IMPORTANT SAFETY INSTRUCTIONS

shall be placed on the apparatus

not place product in or on a bed

openings. Do not place lighted candles,

cigarettes, cigars, etc. on the

do not fall into the product.

Do not attempt to disassemble

the cabinet. This product does not contain customer serviceable

The marking information is located

of apparatus shall be disconnected

device. The AC/DC adaptor should not be obstructed OR should be

easily accessed during intended use

excessive heat such as sunshine, fire

impeded by covering the ventilation

newspaper, table-cloths, curtains etc.

No naked flame sources such as lighted candled should be placed on

at the bottom of apparatus.

To be completely disconnect the power input, the AC/DC adaptor

AC/DC adaptor is a disconnect

Battery shall not be exposed to

The ventilation should not be

openings with items such as

the mains.

Connect power cord only to AC

power source as marked on the

Care should be taken so that objects

roduct.

components.

or the like.

rug, in a bookcase or cabinet that

may prevent air flow through vent

Always leave sufficient space around the product for ventilation. Do

To install or replace the batteries: 1. Remove battery compartment door (located at the rear of the digital photo frame) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.

· It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock

Ecology the apparatus. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate

climates. Important battery precautions

Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. Non-rechargeable batteries, such as

alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use

it for a month or more. If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly

may cause them to leak Discard any leaky or deformed battery immediately. They may

cause skin burns or other personal Please help to protect the

environment by recycling or disposing of batteries according to federal, state, and local regulations WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as shine, fire or the like.

Help protect the environment - we recommend that you dispose of used

batteries by putting them into specially designed receptacles.

FCC Information

Note: This equipment has been tested

and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures: • Reorient or relocate the receiving

Increase the separation between the

equipment and receiver.
Connect the equipment into an outlet on a circuit different from

This Class B digital apparatus c

that to which the receiver is

Changes or modifications not expressly

approved by Audiovox Electronics Corp

could void the user's authority to operate the

experienced radio/TV technician for

Consult the dealer or an

omplies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003

Important information

iPhone, iPod, iPod classic, iPod nano

Before you begin

CAUTION

SEE MARKING ON BOTTOM / BACK OF PRODUCT

Some of the following information may

however, as with any electronic product, precautions should be observed during

not apply to your particular product;

THIS PRODUCT TO RAIN OR MOISTURE

Read these instructions

Keep these instructions.

Do not use this apparatus near

Do not block any ventilation openings. Install in accordance with

Do not install near any heat sources

stoves, or other apparatus (including amplifiers) that produce heat.

walked on or pinched particularly at

plugs, convenience receptacles, and

the point where they exit from the

Only use attachments/accessories

specified by the manufacturer.

the manufacturer's instructions.

such as radiators, heat registers,

Protect the power cord from being

Clean only with dry cloth


Heed all warnings.Follow all instructions.

handling and use.

Media™ audio (WMA) content


for iPhone/iPod, please follow the instructions in the following sections.


digital photo frame for iPhone/iPod

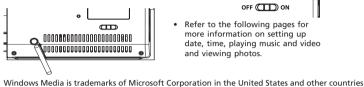

Connect the main unit

connect to a convenient wall outlet

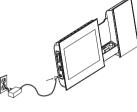

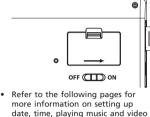


Battery back-up operation This digital photo frame for iPhone/iP

2. Insert or replace 2 AAA batteries

3. Replace the compartment door

Power failure indicator When AC power is interrupted (disconnected) for a short period of time, time settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time settings

General controls

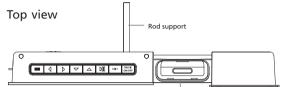

■ - Go to Main menu

4. D. △ or ▽ Menu mode: press to navigate in menus in the indicated directions Photo, music and video mode: press or to skip to previous or next

Photo mode: press and hold \triangleleft or \triangleright to listen to previous or next music if background music is on

MI - Enter the selected mode: press to play/pause music, photo and video playback; press and hold to stop playback and return to music list or

EDIT - Enter or exit the pop-up Edit

MUSIC ON/OFF - Turn on/off the background music during slideshow in Photo mode; turn on/off the music in the music mode

7. Press \triangleleft or \triangleright to select the previous

rewind or fast forward.

change the volume.

Copying music

then press 📶.

next file. Press and hold or to

8. Press △ or ▽ to adjust the volume

The volume bar will be displayed for a while once you

If no music files are found in your selected source, "No file


in the selected device" will be

During playback of music files on SD, MMC or MS card or USB, press

EDIT to enter the pop-up Edit menu. Press **EDIT** in the music list

3. "Copy to internal memory? If the

same file exist will be overwritten.

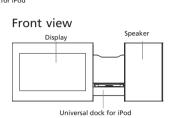


Rack view POWER ON/OFF- To turn on/off the

Battery compartment - To install 2 x AAA batteries



General controls

Side view

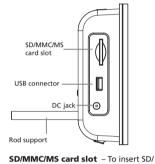

USB connector - To connect to USB

DC jack - Connect to the power

In Main menu mode, when there is no operations for about one minute, slideshow will be automatically started. The priority of photos to be displayed in the slideshow is first photos on Card. then USB devices and lastly photos stored in the internal memory of the unit (i.e. Favorites

Clock

Setting date and time 1. In Main menu, press **◊** or **▷** to select

2. Press △ or ▽ to highlight the Date 3. Press \triangleleft or \triangleright to highlight the option

and then press III to confirm 5. Press △ or ▽ to highlight the Time

and then press 📶 to confirm. 7. Press 🖿 to exit Settings menu. You

Entering clock mode

unit (i.e. Favorites 🧓).

iPod/iPhone

Press III to enter Settings menu.

4. Press △ or ▽ to change the values


6. Press d or b to change the values

Exit to exit Settings menu

can also press △ or ▽ to highlight

2. Slideshow will then be started. The priority of photos to be displayed in the slideshow is first photos on Card, then USB devices and lastly photos stored in the internal memory of the


Connecting iPod/iPhone 1. Slide the speaker to the right to

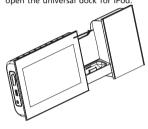

2. Place the appropriate adapter provided with your iPod/iPhone and then place your iPod/iPhone on the universal dock for iPod/iPhone.

Charging the iPod/iPhone You may charge the battery of your the iPod

iPhone 3GS 16GB, 32GBiPhone 3G 8GB, 16GB

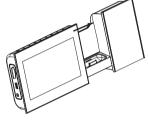

iPod/iPhone through the universal dock for iPod while the unit is turned off (standby mode) or in the Music Photo Press []] to enter Clock mode. Clock or iPod/iPhone mode. Charging Clock and calendar will be displayed. control should be operated on the iPod/ iPhone. It is not necessary to charge in Pod mode, unless you are listening to

· iPod touch 3rd generation 32GB, iPod touch 2nd generation 8GB,

16GB, 32GB, 64GB iPod touch 1st generation 8GB, 16GB, 32GB • iPod nano 5th generation 8GB or 16GB

iPod nano 4th generation (video) 8GB, 16GB · iPod nano 3rd generation (video) 4GB, 8GB iPod classic 80GB, 120GB, 160GB iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB

 iPod nano 1GB, 2GB or 4GB iPod 5th generation (video) 30GB, 60GB, 80GB iPod mini 4GB, 6GB iPod 4th generation 20GB, 40GB iPod 4th generation (color

display) 20GB, 30GB, 40GB, 60GB

Listening to iPod/iPhone Dock your iPod/iPhone to the universal dock.

• In Main menu, press of or b to select

iPod/iPhone (📳). Then press 🕼. Press \triangleleft or \triangleright to select \bigcirc for music,

or select for photo or video and press 👊. Playback of music file from the iPod/

or next music file. Press and hold \triangleleft or b to search backward or forward for a music file. Start playback of photo or video

Press of or b to skip to the previous

iPhone starts automatically.

files on your iPod/iPhone manually first. The iPod/iPhone cannot play video automatically. Use the controls on iPod/iPhone for

photo and video files playback. • If no iPod/iPhone is connected in the iPod mode, the unit will show "The selected device is not

connected". Upgrade the latest iPod/ iPhone firmware from Apple official website.

Music

Playing music • The unit can only support

USB flash drive and memory card which formatted in file system of FAT or FAT32.

include mp3, WMA & WAV.

1. Insert an SD. MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB

The supported music file formats

2. In Main menu, press \triangleleft or \triangleright to select the source of music from Card (), USB () or Favorites (Then press 🕅

4. Press △ or ▽ to select the file you

5. Press 🕅 or **MUSIC ON/OFF** to start playback. To pause the playback, press 📶.

playback.

before playback can also enter the pop-up Edit menu. 3. Press **◊** or **▷** to select **⑥** and press 2. Press △ or ▽ to select Copy and

will be displayed. Press \triangleleft or \triangleright to select Yes and then press III to Press MI again to resume playback Press MUSIC ON/OFF to stop

4. "Copy successfully!" will be displayed. If the unit does not have enough free internal memory, "No enough memory" will be displayed. Delete some files before you try to

copy files again. 5. Press EDIT or press △ or ▽ to select Exit to exit the Edit menu.

memory is viewed now, the "Copy" item is disabled because the video in a

nemory cannot be copied to the

external memory. e.g. an SD card

Music Deleting music 1. During playback of music files in the internal memory of the unit (i.e.

2. Press △ or ▽ to select **Delete**. 3. "Are you sure you want to delete the selected file" will be displayed.

Favorites , press **EDIT** to enter

Press or b to select Yes and then

4. "Delete successfully!" will be

5. Press **EDIT** or press △ or ▽ to

select **Exit** to exit the Edit menu.

Repeat

1. During playback of music files on SD, MMC or MS card, USB or music unit (i.e. Favorites), press **EDIT** to enter the pop-up Edit menu. Press **EDIT** in the music list before

playback can also enter the pop-up 2. Press △ or ▽ to select from

3. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Viewing photo

JPEG is the only supported

2. In Main menu, press **◊** or **▷** to select the source of photo from

(💽) . Then press 🕅.

5. Press III to start photo slideshow. 6. To pause the slideshow playback, press 📶. Press 🕅 again to resume

8. Press and hold **\1** to stop slideshow

Photo

1. Insert an SD. MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB

3. Press \triangleleft or \triangleright to select $\boxed{\begin{tabular}{|c|c|c|c|c|c|}}$ and press 4. Press \langle , \rangle , \triangle or ∇ to highlight the

hold \triangleleft or \triangleright to skip to previous/next music file if background music is on.

Card (), USB () and Favorites

desired file.

7. Press \triangleleft or \triangleright once to select the Effect – Press △ or ▽ to select previous/next photo file. Press and from Color enhancement, Black and white, Old fashion and Normal. Then press [1] to confirm

on) and return to the thumbnail

The volume bar will be displayed for a while once you change the volume. If no photos are found in 101 your selected source, "No file

Press \triangle or ∇ to adjust the volume

displayed.

Settings During slideshow playback, press **EDIT** to pause slideshow and enter the pop-up Edit menu.

2. A pop-up menu shows:

in the selected device" will be

• Rotate – Press III repeatedly to rotate the current photo by 90° clockwise each time. • Zoom – Press III repeatedly to zoom in the current photo. The zoom in feature cycles through X2 X3 and X4, then returns to normal Press △ or ▽ to select Copy and then press \square .

"Copy to internal memory? If the same file exist will be overwritten." will be displayed Press or to select Yes and then press MI to confirm. "Copy successfully!" will be displayed. If the unit does not

will be displayed. Delete some files before you try to copy files again. If the photo in the internal 101 memory is viewed now, the "Copy" item is disabled because the photo in the internal memory cannot be copied to the

have enough free internal memory, "No enough memory

external memory. e.g. an SD card • Delete - Refer to "Deleteing photo" section below for details

Background music – Press △ or

USB, Memory Card and Favorites to select playing music from which source during slideshow. Select **Off**

to turn off background music. Then

press MUSIC ON/OFF to turn on

off the background music during

• Exit - Press III to exit the pop-up 3. Press **EDIT** or press △ or ▽ to select Exit to exit the Edit menu

The effects of "Rotate", "Zoom" and "Effect" will 10 be automatically resumed to normal when the next photo is displayed during the slideshow

1. During playback of photos in the internal memory of the unit (i.e. Favorites (a), press EDIT to pause slideshow and enter the pop-up Edit

2. Press △ or ▽ to select **Delete.**

Deleting photo

3. "Are you sure you want to delete Press or to select Yes and then

4. "Delete successfully!" will be

displayed

Video

Viewing video The PC requirements for muvee software installation are shown below:

1. Processor: Intel Pentium 4, AMD

Athlon 64 (or equivalent), 2GHz

or higher

Memory: 1GB RAM

Video memory: 128MB

Operating system: Microsoft Windows 7 Microsoft Windows Vista, Microsoft XP Service This digital photo frame only plays motion JPEG generated by muvee Reveal. Refer to

the user manual in the CD-ROM, which is included in the package.

This manual provides instructions for

how to install the included muvee

Reveal software and instructions

about how to create a muvee file and save it to the memory card or USB flash drive. 1. Insert an SD, MMC or MS card into

a USB flash drive into the USB 2. In Main menu, press d or b to select

other malware, to loss of media, files,

data or content, or to damage to tapes,

the source of video from

the SD/MMC/MS card slot or insert

Card (), USB () and Favorites (Then press).

3. Press **◊** or **▷** to select **■** and press 4. Press \triangle or ∇ to highlight the

6. To pause the video playback, press ☐. Press ☐ again to resume playback.

5. Press to start video playback

next file. Press and hold \triangleleft or \triangleright to rewind or fast forward 8 Press and hold MII to stop video

7. Press \triangleleft or \triangleright to select the previous/

thumbnail screen. 9. Press \triangle or ∇ to adjust the volume. The volume bar will be displayed for a while once you

change the volume. Copying video 1. During playback of video files on

SD, MMC or MS card or USB, press

menu. Press EDIT in the video list

before playback can also enter the

EDIT to enter the pop-up Edit

pop-up Edit menu.

Video

2. Press △ or ▽ to select Copy and then press 🕅. 3. "Copy to internal memory? If the same file exist will be overwritten.

will be displayed. Press \triangleleft or \triangleright to

displayed. If the unit does not have

enough free internal memory, "No

enough memory" will be displayed.

select **Yes** and then press **III** to

4. "Copy successfully!" will be

Delete some files before you try to copy files again. If the video in the internal 101 memory is viewed now, the "Copy" item is disabled

because the video in the internal

Deleting video 1. During playback of video files in the internal memory of the unit (i.e.

2. Press △ or ▽ to select **Delete**. 3. "Are you sure you want to delete the selected file" will be displayed

Press ◁ or ▷ to select **Yes** and then

press 🕅 to confirm

4. "Delete successfully!" will be

5. Press **EDIT** or press △ or ▽ to

Favorites , press **EDIT** to enter the pop-up Edit menu.

Repeat During playback of video files on SD, MMC or MS card, USB or video files in internal memory of the unit (i.e. Favorites), press EDIT to enter the pop-up Edit menu. Press **EDIT** in the video list before playback can also enter the pop-up Edit menu.

2. Press \triangle or ∇ to select from Repeat one and Repeat all and then press 📶.

3. Press **EDIT** or press △ or ▽ to

select Exit to exit the Edit menu

2. Press \triangle or ∇ to highlight a setting. 3. To change the value of date and time, press \triangleleft or \triangleright to highlight the options and press \triangle or ∇

to change the values. Press MI

to confirm the date and time.

Image Display – To crop a photo to fit the screen or adjust to

• OSD Language - To set the language of the user interface. Options are English, French and

format (12 hours or 24 hours).

Reset Setting - To reset all settings

• Exit - To go back to Main menu.

within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair To obtain repair or replacement

Company) warrants to the original retail purchaser of this product that should electrical systems. this product or any part thereof, under normal use and conditions, be proven product or part thereof which, in the defective in material or workmanship opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal

broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions

caused by computer viruses, spyware or

discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle This Warranty does not apply to any

> COMPANY'S LIABILITY EXCEED THE FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED

TO THE DURATION OF THIS WRITTEN

OF ANY WARRANTY HEREUNDER

WARRANTY. ANY ACTION FOR BREACH

or defacement of the factory serial

number/bar code label(s). THE EXTENT

OF THE COMPANY'S LIABILITY UNDER

THIS WARRANTY IS LIMITED TO THE

INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than

expressed herein in connection with the

Some states do not allow limitations on

how long an implied warranty lasts or the exclusion or limitation of incidental

or consequential damage so the above

limitations or exclusions may not apply

to you. This Warranty gives you specific

legal rights and you may also have

How to make a warranty claim:

· If your product is capable of storing

content (such as an mp3 player,

digital voice recorder, etc), it is

recommended to make periodic

backup copies of content stored

before shipping a product, make

a back up copy of content or data

on the product. If applicable.

other rights which vary from state to

sale of this product.

publication are for representation only and subject to change The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible,

THE RETURNED DEVICE. Product liability in case of damage or loss en will be returned with factory route to Audiovox. Pay any charges billed to you by default settings, and without any



Carmel, IN 46032 Trademark(s) ® Registered Printed in China

Warranty information stored on the device. Also, it is

exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA. OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.

Provide you with a new, or at our • Properly pack your unit. Include option, a refurbished unit. The any remotes, memory cards, cable exchange unit is under warranty for the remainder of the original product's warranty period.

description of the defect. Send via standard UPS or its equivalent to: **Audiovox Electronics Corp**

Hauppauge N.Y. 11788 1-877-833-3491 · Insure your shipment for loss or damage. Audiovox accepts no

Attn: Service Department.

150 Marcus Blvd

the Exchange Center for service not covered by the warranty. A new or refurbished unit will be

shipped to you freight prepaid.

What we will do:

Audiovox Return Centre

c/o Genco 6685 Kennedy Road, Unit#3, Door 16, Mississuaga, Ontario L5T 3A5

Settings

Settings options 1. In Main menu, press **◊** or **▷** to select 🗱. Press 🕅 to enter Settings

change options other than date and time, press or b to change the values and then press MI to confirm. 4. Press = to exit Settings menu

Settings options available are:

• Slideshow Transition - To set

transition effect between two

• Slideshow interval - To set the

interval between two photos. Options are 5s, 15s, 30s and 60s

Brightness - To set the brightness

of the screen. Options are High, Mid

photos. Options are: Random, Blinds, Melt, Mosaic, Roll, Snail and

original aspect ratio.

• Date - To set the date • Time - To set the time

• Time Format – To set the time

About - To show the information of the firmware and the model

Warranty information

Limited warranty 12 Month Limited Warranty **Applies to Acoustic Research Audio/**

within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s),

REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE PURCHASE PRICE PAID BY PURCHASER

Illustrations contained within this

we reserve the right to make any improvement or modification without prior notice.

 \nearrow www.acoustic-research.com



memory cannot be copied to the external memory. e.g. an SD card 5. Press **EDIT** or press △ or ▽ to select Exit to exit the Edit menu

advisable to remove any personal content which you would not want

etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Include evidence of purchase date such as the bill of sale. Also print your name and address and a

For Canada Customers, please ship

AUDIOVOX ELECTRONICS CORP. (the

transportation prepaid, to the Company This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of

Visit http://store.audiovox.com to find the best accessories for your products.