



Wireless / Wired Security Camera PPW-250 Easy Setup Guide



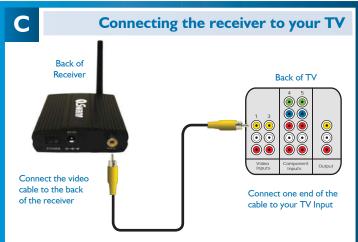

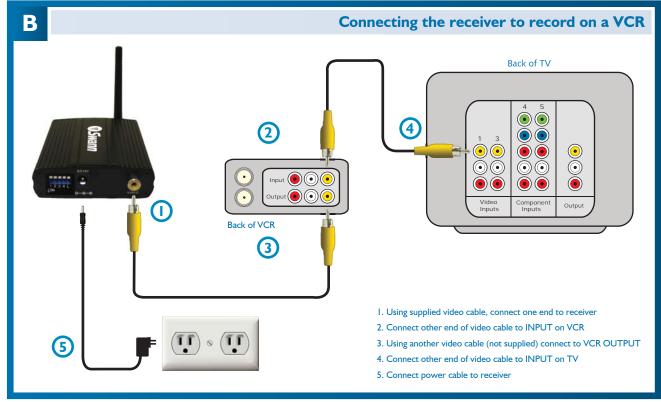


Viewing the camera and recording to VCR


- Power on the receiver, VCR and TV
- Using your TV's remote control tune your TV to the correct INPUT*. In our example above the TV should be set to INPUT 1
- Using your VCR's remote control tune your VCR to the LINE 1 INPUT*
- **4.** You should now see your cameras on the TV screen. Follow your manufacturer's instructions to record to your VCR


*Some VCR's and TV's will list this as INPUT, A/V, SOURCE, L1, Channel 0 - Consult your manufacturer's manual for more information



Wireless / Wired Security Camera PPW-250 Easy Setup Guide

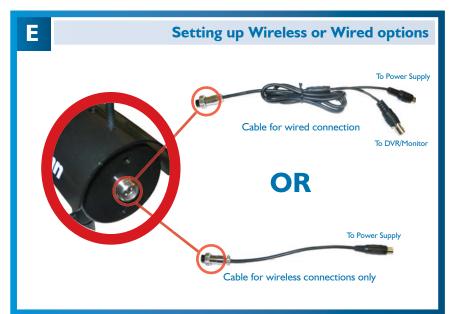

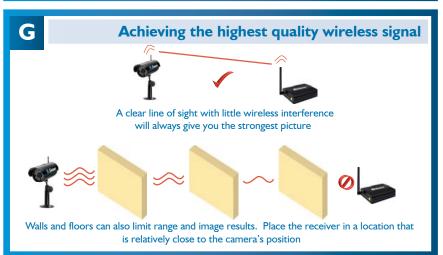

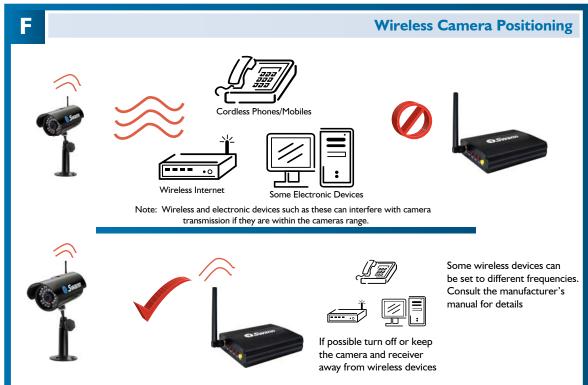

Н

General Installation Notes and Tips

- 1. Test the camera signal before permanently installing the cameras.
- 2. Using battery power is only recommended for testing purposes as the cameras do require constant power to operate.
- 3. IR or night vision will reflect off of glass or windows and overexpose the picture. Try placing cameras in direct line of sight of your subject.
- 4. Never aim the camera directly at the sun as this can permanently damage the lens.
- 5. Never submerge the camera in water. Some shelter is recommended such as an awning or eave.