

LT-32A1



ENGLISH **EXECUTE**

Plane

© 2010 Victor Company of Japan, Limited

Safety Precautions

Thank you for buying this JVC LCD panel television.

 
- Follow this manual regarding setup!
 Connect only to a 110-240 V, 50/60Hz AC outlet.
- Make enough room for inserting and removing the power
- Place the TV as close to the outlet as possible!
- The main power supply for this TV is controlled by inserting or removing the power pluq.
- Never cut or damage the power cord! If the AC plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult
- Unplug the power cord when going out!
- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for
- edridden people.) Do not allow the TV to fall!
- Do not rest your elbows on, or allow children to hang from the TV. There is a risk that the TV will fall and cause injuries. Make use of the hole on the back of the stand to prevent the TV from falling easily.
- If the TV is damaged or behaving strangely, stop using it at once! Unplug the power cord and contact your retailer
- Never place anything on the TV! Placing liquid, naked flames, cloths, paper, etc. on the TV may cause a
- Never expose to rain or moisture! To prevent fire or electric shock, never allow liquids to enter the unit
- Never insert objects into the cabinet
- openings! It may cause a fatal electric shock. Take care when children are near.
- Hold the TV so as not to scratch the Do not touch the screen when carrying the TV
- Do not carry the TV on your own! s, ensure that the TV is carried by two or more people.
- For more details on installation, usage and safety → Consult your retailer.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

- Never insert the power cord by wet hand! Keep the TV set away from direct sunlight!
- TV set can be damaged
- Place the TV set in a neat and dry place. Do not place the product close to source of steam, heat, moisture or oil.
- Because it may cause a fire hazard or electric shock hazard! Don't touch an external metal part of the TV set!
- For keep a distance from potential ignition sources to the components or part in side TV set, customer should install TV set with a stand within ± 10 perpendicularly degree.
- Never dismantle the rear panel It may cause an electric shock
- Never obstruct the ventilation holes! It may cause overheating or a fire Handle LCD panel with care!
- Use a soft, dry cloth when cleaning Never try repair the TV yourself
- If the problem cannot be solved in "Troubleshooting" unplug the power cord and contact your retailer. If a television is not positioned in a sufficiently stable
- location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as: Using cabinets or stands recommended by the manufacturer of the
- Only using furniture that can safely support the television
- Ensuring the television is not overhanging the edge of the supporting
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the television on cloth or other materials placed between the television and supporting furniture. Educating children about the dangers of climbing on furniture to reach the television or its controls
- To prevent accidents, firmly attach the TV stands to the TV shelf before using microphone Make sure that the subwoofer is in good condition before
- installing it on the TV. - If the subwoofer has leakage current, it may damage the TV or cause
- electric shock

Care when setting

- Power requirements Connect the power cord only to a 110-240V, 50/60Hz AC outlet
- Installation requirements To avoid overheating, ensure the unit has ample




200 mm



belt through the hole on the back of the stand and secure it to the TV rack. - Hole for belt

 To prevent the TV from falling thread the



* Please see how to set up the TV and connection in GGT0356-001A-H.

Using the TV's Menu ---> Area - 2 Picture Mode Select the picture as you like. (Standard / Soft / Bright)

Backlight Darker <--> Brighter Picture Lower <--> Higher Brightness Detail Color Tint White Balance **Features**

MTS

Darker <--> Brighter Softer <--> Sharper Lighter <--> Deeper Reddish <--> Greenish *Only NTSC Select the white balance of the picture. (Cool / Mid / Warm)

Finer picture adjustment Clear SD For clearly picture (Off / Mode-1 / Mode-2) Digital VNR Reduces the amount of noise in original picture. (Off / On) Color Management For natural - looking pictures. (Off / On) Picture Management Fix bright / dark pictures. (Off / On)

Color System Zoom

Dynamic Backlight Reduces the brightness of the backlight when the screen is dark. (Off / On) Select an appropriate color system (Auto / NTSC 3 58 / PAI -M / PAI -N) Change the aspect ratio. (Auto / Regular / Panoramic /14:9 Zoom / 16:9 Zoom / 16:9 Zoom Subtitle / Full) Select the stereo and SAP broadcasted programs. (Stereo / SAP / Mono)

(Off / Dynamic / Pure / Living) Bass Compensates low frequencies to widen the frequency band. (Weaker <--> Stronger) Treble Compensates high frequencies to widen the frequency band. (Weaker <--> Stronger) Expands the stereo sound naturally Surround (Narrower <--> Wider) Left Stronger <--> Right Stronger

Sound Meister Set sound theme to match your listening source.

Voice Enhancer Uses sound enhancement technology. (Off / On) Prevent sudden increase or decrease of sound. (Off / On) Al Volume Chooses to connect subwoofer. (Off / On) Adjusts sound level of your subwoofer. Subwoofer Level (Lower <--> Louder) When Subwoofer Out set to On, you can adjust

Subwoofer Level. Karaoke You can enjoy to reduce the vocals for your own karaoke. Karaoke Chooses to reduce the vocals. (Off / Mode-1 / Mode-2)

Main Volume Adjusts volume level. (Lower <--> Louder) Microphone Volume Adjusts volume level of microphone. (Lower <--> Louder)

— 3. Set

Child Lock Auto Shutoff

Sleep Timer

On Timer

Turns on the TV from standby mode. Select a channel. (Air : CH02 - CH69 Cable : CC01 - CC125) On Timer Set a time. (00:00 - 12:00) Turns off the TV to standby mode. (Off / 10 / 20 / ...120) **Channel Guard** Stop children from watching specific channels.

Display a blue screen and mute the sound when the Blue Back signal is weak or absent. (Off / On) Disables the side control buttons of the TV. (Off / On) Set the power to turn off if no TV signal (RF) is received and no operation is performed for about 15 minutes. (Off / On)

Favorite Setting Delete the favourite channel that you registered by **Power Lamp** Sets power lamp lighting while the TV is on. (Off / On) Adjust picture contrast to match your room brightness. Eco Mode

Auto Program Automatically registers channels. Skip Skip the channel by Cancel the skip channel by ID Edit a channel name by (Tellow).

· Channels are to be skipped cannot be selected by the CHANNEL - / + button. • The skip can be set to all channels of Air (CH02 -CH69) and Cable (CC01 - CC125). select your desired on screen display language Video-2 Setting Switch between video and component signal

(Video / Component) TV can turn on quickly. (Off / On) When Rocket Start is On, power consumption at standby mode will more than normal standby mode **Closed Caption** Select the desired caption or text channel. Select to view close caption or text Closed Caption information (Off / CC / Text)

Select the desired caption. Caption (CC1 / CC2 / CC3 / CC4) Select the desired text channel (T1/T2/T3/T4) · Closed Caption is not available for component

■ Carlotte - 2. Adjust

: Normal sound of song

: Only sound of music

—3. Finish

Mode-2: To sing, accompanying with sound of song

· Karaoke function works only for stereo sound system

· If using Karaoke disc, users must choose to remove the

Adjusts volume level. (Lower <---> Louder)

■ Cancel

→ Press " ox " again,

or change the

HDMI Setting Setting for HDMI input. (Size / Audio) Setting for PC input. (Auto / PC Position / Phase / Pixel) * Please see CH/CC List in GGT0356-001A-H.

Chooses to reduce the vocals

vocals from the player

Microphone Volume Adjusts volume level of microphone.

· Microphone Volume is available when plug in microphone

(Lower <---> Louder)

• Microphone to be used with the "Karaoke" function of JVC must

still picture

be of "HIGH GRADE LOW NOISE MICROPHONE CABLE" type:

Channel Guard: Stop children from watching specific channels. **Karaoke**: You can enjoy to reduce the vocals for your own karaoke.

1 Select "Karaoke"

 
Sound Y 🖆

Off

otherwise, noise will result.


Freeze: Take snapshots of the screen.

1 Select "Channel Guard" Features 1. Select a number 2. To the next column





· View a locked channel by use the numerical buttons to enter the channel number. When appeare, press "Display" button and enter your "ID No."

 Subwoofer out: You can enjoy subwoofer sound from Subwoofer out. 1 Select "Subwoofer Out"



Useful functions

 


 



Chooses to connect subwoofer. (Off / On) You cannot save or export the snapshot · When Subwoofer Out set to On, you can adjust Subwoofer Level. Freeze function is not available for HDMI, PC and Component signal. Subwoofer to be used must have a built-in amplifier.


Remote control buttons and functions

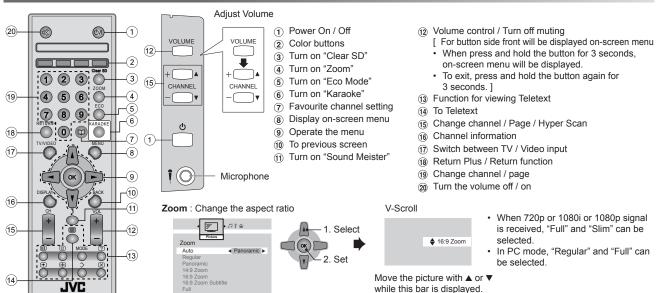

Hyper Scan: Press and hold . PR changes without changing the picture screen. Once you release the button, the picture of the selected PR will appear

Return Plus: Return to the frequently viewed channel. Return Plus Programmed by select the frequently viewed channel then press and hold Return Plus Canceled by press and hold

Return: Return to the previously viewed channel.

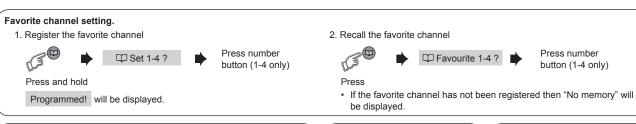

Insert the batteries Use two "AAA/R03" dry cell batteries. Insert the batteries from the
one end, making sure the \bigcirc and \oplus polarities are correct.

LCD



WARNING Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

while this bar is displayed



WARNING:

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

2 Select a language

Initial Settings



 
The power on the unit can also be used.

 


The select the new Country Area after Initial Setting has completed

and hold for 3 seconds.)







Area-1: Asia, Middle East, Europe, Oceania, Africa Area-2: South America. Philippines

Useful functions (continued)

Eco Mode: Adjusts picture contrast according to the brightness of your room to reduce power consumption.

(While the cursor is pointing to Picture menu

: Deactivates the function Eco-1 : Picture is darkened for the 1st level.

Eco-2: Picture is darkened for the 2nd level (more than the 1st level).

Max-Eco: Only sound is available, no picture (this is to save energy in such situation as when you want to listen to the news while doing other house works at the same time)

- After choosing Eco Mode as Max-Eco and exiting the Menu, picture will go off in 3 seconds. When you want the picture to appear again, press any button on the remote control then function will be reset back to "Off" - After unplugging the TV or press "Power off" button, this function will be reset back to "Off"

Viewing Teletext

You can watch the Teletext broadcast channel with Text Functions.



Index

1 TV mode <--> TEXT mode

2 Select a Teletext page by press number button (0-9). Move up or down a page by CHANNEL +/-.

List Mode : Book mark your favorite page Press number button

for select to save for enter the number save • Recall your favorite page by press the color button : Hold the current page. · Cancel by press this button again ② : Display hidden information. · Example : answer to a quiz, etc ⇒ : Double the size of the displayed text.

(E) : Returns to page "100" or a previously designated page.

Useful when running a page search.

· Cancel by press this button agair

: Leave the current page open, while you switch to watch TV.

1 Select the input source · Operate the connected device and play video.

Watching Video or DVDs

2 Select "Set Up" Menu. HDMI setting Size

Audio

Auto

Poor picture quality

Unnatural color >>

an "HDMI" device.

Adjust the "Bass" and "Treble"

PC Setting

: Setting for HDMI input. Auto / 1 / 2 If wrong screen size appears in 480p (525p), change to "1" or "2". Auto / Digital / Analogue If no sound, change to "Analogue " or "Digital". Setting for PC input. Automatic adjust by ▶. Adjust screen position by ▲ / ▼. PC Positio

And set by OK Sets the focus of screen. Pixel Adjusts the horizontal feature of screen.

If receiving a poor signal in "Stereo/I•II" switch to "Mono"

Adjust the channel reception using "Manual"

Switch "Size" in "HDMI Setting" to "1" or "2"

For HDMI signal, No picture / No sound

For HDMI signal, green and distorted screen

For HDMI signal, wrong screen size.

Adjust "Colour" and "Backlight".

Wait a little for the signal to stabilize when switching the signal format for

Check "Colour System". If "Auto" is selected.

Select the specific color system manually.

Troubleshooting If a problem occurs when you are using the TV, check the below troubleshooting guide before calling for repair

Side control buttons do not work

Switch "Child Lock" to "Off"

Severe noise or snow

Check the aerial cable and TV connections. Check the direction of the aerial. Check the aerial or its cable damaged or not.

Patterns, stripes or noise Interference caused by devices such as an amplifier, personal computer, or a hair drier. Move it away from TV. Ghosting (Doubling of images)

Sub-page (19): Display the number of Sub-page.

Interference occurs caused by signal reflection from mountains or building. Try to adjust the aerial's direction or use another antenna. Cannot turn it on Ensure the power cord is connected to the AC outlet correctly.

Cannot operate the remote control. The batteries may be exhausted. Replace with new batteries. Ensure that you are operation the remote control at less than 7 meters from the front of your TV. Remote control stops working Unplug TV, several minutes later plug it in again.

Aspect ratio changed unintentionally Press " button to return to your settings. PC screen alignment is off Adjust the "PC Position" in "PC Setting" of Set Up menu. Blue screen appears on the screen

Switch "Blue Back" to "Off". Strange picture when using an external device If the top of the image is distorted, check the video signal quality itself. If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interlace-scanning).

Use the cable marked with HDMI logo. Check if the device is compliant with HDMI Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices. Some functions do not work. It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation

Black or white dots appear on the screen. LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. It is not a malfunction. No picture, No sound Some input do not output from OUTPUT terminal.

Subwoofer, No sound May be signal source is not low frequency bass signal. Check subwoofer cable connected correctly. Feedback sound symptoms

Keep the microphone away from the TV's speakers. Echo Lower the sound level in "Microphone Volume" in order to prevent the echo

Initial Settings (continued)

If you select Country Area to "Area-1"

4 Select the teletext language group. □pt• 🍲 1. Select



 
5 Automatically register channels (Auto Program).



6 Check what was registered.

Display MENU.

Contrast



 If you want to edit channel, follow Edit function in Set Up menu.

Set Up



If you select Country Area to "Area-2"

5 Searching for the channels (Auto Program)





 
✓/ ► Select Main menu

▲ / ▼ Select function.

✓ / ► Change setting.

If you want to set undesired channels to be skipped, follow Channel Summary

Using the TV's Menu ---> Area - 1



or TV/VIDEO Exit from Menu. Confirm after setting Please see "Menu operation guide" at the bottom of menu on-screen Picture Mode Select the picture as you like. (Standard / Soft / Bright) Backlight Darker <--> Brighte

Darker <--> Brighter Brightness Softer <--> Sharper Sharpness Colour Lighter <--> Deeper Reddish <--> Greenish *Only NTSC White Balance Select the white balance of the picture. (Cool / Mid / Warm) Features Finer picture adjustment For clearly picture (Off / Mode-1 / Mode-2) Digital VNR Reduces the amount of noise in original

Lower <--> Higher

picture. (Off / On) For natural - looking pictures. (Off / On)
Fix bright / dark pictures. (Off / On) Picture Management Dynamic Backlight Reduces the brightness of the backlight when the screen is dark. (Off / On) Colour System Select an appropriate color syst (Auto / PAL / SECAM / NTSC 3.58 / NTSC 4.43 / PAL-M / PAL-N) Zoom Change the aspect ratio (Auto / Regular / Panoramic /14:9 Zoom /

16:9 Zoom / 16:9 Zoom Subtitle / Full) Stereo / I=II Select the stereo, mono or bilingual language. (I/II/O/O)/Mono)Set sound theme to match your listening source. Sound Meister (Off / Dynamic / Pure / Living) Compensates low frequencies to widen the frequency band. (Weaker <--> Stronger) Compensates high frequencies to widen the frequency band. (Weaker <--> Stronger) Treble Expands the stereo sound naturally (Narrower <--> Wider) Left Stronger <--> Right Stronger
Uses sound enhancement technology. (Off / On) Balance Voice Enhancer Prevent sudden increase or decrease of sound. (Off / On) Al Volume Chooses to connect subwoofer. (Off / On) Adjusts sound level of your subwoofe (Lower <--> Louder)

Subwoofer Level.

Sound and Color system in your country or region

Islamic Republic of Iran, Lebanon, Saudi Arabia, etc. B/G SECAM

PC Signals that can be displayed

• If the signal doesn't appear, check that the vertical frequency on the PC is

Main unit

Area 1 P/C/L/D/K/M/N

(Machintosh is a registered trademark of Apple Computer, Inc.)

640 x 480 (VGA) / 1024 x 768 (XGA)

Country or Region

Bahrain, Kuwait, Oman, Qatar, United Arab Emirates.

Yemen, Indonesia, Malaysia, Singapore, Thailand,

Technical information

Philippines, Taiwan, Myanmar, etc.

Czech Republic, Poland, etc.

Republic of South Africa, etc

Agentina, Paraguay, Uruguay

America Chile, Peru, Bolivia, Colombia, Venezuela

* Machintosh* computers are not supported

Germany, Holland, Belgium, etc.

India, etc.

Russia, etc

UK, etc.

Brazil

set to "60Hz"

Resolution

Vertical frequency

Nigeria, etc.

Ecuador, etc.

Egypt, Morocco, etc

Middle

Africa

South

East

China, Vietnam, etc.

Hong Kong, etc.

You can enjoy to reduce the vocals for your own karaoke. Karaoke Chooses to reduce the vocals Karaoke (Off / Mode-1 / Mode-2)
Adjusts volume level. (Lower <--> Louder) Main Volume Adjusts volume level of microphone (Lower <--> Louder)

When Subwoofer Out set to On, you can adjust

System System

SECAN

PAI

-PAL

SECAM

NTSC

B/G

D/K

D/K

B/G

B/G

М

function in Set Up menu.

(Picture / Sound / Features / Set Up) Select sub menu ◄ / ► Change setting. When ▶ is shown ▶ Display function setting

On Timer Turns on the TV from standby mode. Select a channel. (01 - 99) On Timer Set a time. (00:00 - 12:00) Turns off the TV to standby mode. (Off / 10 / 20 / ...120) Sleep Time **Channel Guard** Stop children from watching specific channels. Display a blue screen and mute the sound when the signal Blue Back is weak or absent. (Off / On) Disables the side control buttons of the TV. (Off / On) Set the power to turn off if no TV signal (RF) is received and no operation is performed for about 15 minutes. (Off / On)

 
Auto Shutoff Favourite Setting Delete the favourite channel that you registered by (Blue) **Power Lamp** Sets power lamp lighting while the TV is on. (Off / On) Eco Mode Adjust picture contrast to match your room brightness. (Off / Eco-1 / Eco-2 / Max-Eco) Auto Program Automatically registers channels. Edit / Manual Move Move a channel position by ▶ and Adjust by **▲** / **▼**. Edit a channel name by (Red)

Insert Insert a channel by (Green) Select a CH/CC by ▲ / ▼. Enter number by 0-9 buttons Delete Delete a channel by (Yellow). Register a new channel by Channel fine tunning by (Yellow) and (Blue). If the picture or sound is unnatural by for select a system. Select your desired on screen display language Language Video-2 Setting Switch between video and component signal. (Video / Component)

Rocket Start TV can turn on quickly. (Off / On) When Rocket Start is On, power consumption at standby mode will more than normal standby mode. Select Teletext language group. (Group-1 / Group-2 / Group-3 / Group-4 / Group-5) Teletext Language Setting for HDMI input. (Size / Audio) PC Setting

Setting for PC input. (Auto / PC Position / Phase / Pixel) (continued)

What is "Clear SD"







Use "Clear SD"

Connect "DVI" devices Connect a "DVI" device to "HDMI" using "DVI-HDMI" conversion cable. Connect analogue sound output of the DVI device to L and R terminals in

INPUT VIDEO-2. · Set "Audio" in "HDMI Setting" to "Analogue" or "Auto"

Language group for Teletext

Group Languages Group-1 Turkish, Hungarian, English, German, French, Italian, Spanish, Portuguese, Greek, Swedish, Finnish Group-2 Polish, Serbian, Croatian, Slovenian, Czech, Slovak, Rumanian, German, French Group-3 Russian, Bulgarian, Lettish, Lithuanian, Estonian, Ukrainian,

Group-4 Arabic, Hungarian, English, German, French, Italian, Spanish,

Serbian, Croatian, Slovenian, Czech, Slovak, English, German

Portuguese, Swedish, Finnish Group-5 Farsi, Hungarian, English, German, French, Italian, Swedish,

If the characters are unreadable. ⇒ Select different Teletext language

Terminals / Connectors

Specification

	Broadcasting systems	Area-1	B/G/I/D/K/M/N	
		Area-2	M / N	
	Color systems	Area-1	PAL / SECAM / NTSC 3.58 / NTSC 4.43 /	
			PAL-M / PAL-N	
		Area-2	NTSC 3.58 / PAL-M / PAL-N	
	Channels and frequencies	Area-1	VHF low channel (VL) = 46.25 to 140.25 MHz	
			VHF high channel (VH) = 147.25 to 423.25 MHz	
			UHF channel (U) = 431.25 to 863.25 MHz	
		Area-2	VHF low channel (VL) = 55.25 to 127.25 MHz	
			VHF high channel (VH) = 133.25 to 361.25 MHz	
			UHF channel (U) = 367.25 to 801.25 MHz	
		Receives cable channels in mid band (X to Z+2, S1 to S10),		
		super ba	nd (S11 to S20) and hyper band (S21 to S41)	
	Sound-multiplex	MTS (Multi-channel Television Sound) t systems		
	systems			
	Teletext systems			
	Power requirements			
	Audio output		6 W + 6 W	
	(Rated power output)	J J		
	Speakers	(4 cm x 16 cm) x 2 105 W [0.7 W] [16 W]		
	Power consumption			
	[standby]			
	["Rocket Start" mode			
	standby]		[10 11]	
	Screen size			
	(visible area size		80 cm	
	measured diagonally)			
	Dimensions	791.8 x 571.7 x 203.5		
	(W x H x D: mm)		[791.8 x 520.5 x 103.9]	
	[without stand]			
	Weights		15 kg	
	[without stand]		[12 kg]	
		Power cord x 1		
	Accessories	Remote control unit : RM-C2022 x 1		
		AAA/R03 dry cell battery x 2		
, 10000001100				

Screw x 8

Matching box x 1

Terminal type Signal type (IN) VIDEO-1 RCA connectors x 3 | Composite video, Audio L/R RCA connectors x 5 | Composite video, Analogue component 480i (525i) / 576i (625i), Progressive : 480p (525p) / 576p VIDEO-2 HD: 720p (750p) / 1080i (1125i) 1080p (1125p) Audio L/R HDMI connector x 1 HDMI 480i (525i) / 480p (525p) / Input 576i (625i) / 576p (625p) / 720p terminals HDMI (750p) / 1080i (1125i) / 1080p (1125p) D-SUB (15 pins) x 1 Analogue PC signal PC INPUT HDMI Analog

diameter) HDMI Analog / DVI Analog / PC Audio use terminal common with VIDEO-2.

DVI Analog / PC | RCA connectors x 2 | Audio L / R

mini-jack x 1

(3.5 mm in

Microphone input

We may change the design and specifications without notice.

· HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United

Microphone