




# SCION

## Audio System

TOYOTA PART NO. PT546-00121

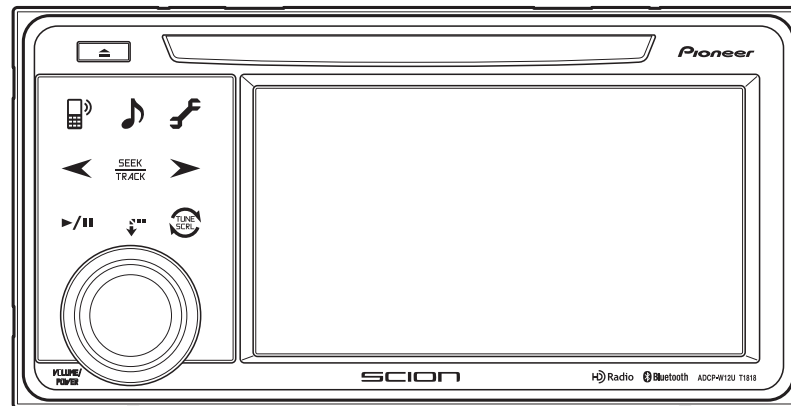

## Owner's Manual

for AM/FM/HD Radio broadcast/CD Player with iPod/  
USB/Bluetooth audio/Pandora/VTR/AUX control

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

FCC ID : AJDK035  
MODEL NO. : CVH-2018ZT  
IC : 775E-K035

This device complies with Part 15 of the FCC Rules and RSS-Gen of the IC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Information to User  
Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

[For Canadian model]  
This Class B digital apparatus complies with Canadian ICES-003.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

**⚠ WARNING**

Handling the cord on this product or cords associated with accessories sold with the product may expose you to chemicals listed on proposition 65 known to the State of California and other governmental entities to cause cancer and birth defect or other reproductive harm.  
***Wash hands after handling.***

**USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.  
THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.**

## Features

### CD playback

Music CD/CD-R/CD-RW playback is possible.

### MP3 file playback

You can play back MP3 files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/Level 2 standard recordings) or USB portable audio player/USB memory.

- Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real-time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

### WMA file playback

You can play back WMA files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/Level 2 standard recordings) or USB portable audio player/USB memory.

### iPod compatibility

When you use this unit, you can control an iPod, iPod classic, iPod nano, iPod touch, iPhone. (Refer to page 30.)

## About WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

### NOTICE

This unit may not operate correctly depending on the application used to encode WMA files.

## About iPod

- Reproducing and playing back non-copyrighted material and material that can legally be reproduced and played back for private use is permitted with the iPod. Infringement of copyright is legally prohibited.
- iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.
- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

4

- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



- In this manual, iPod and iPhone will be referred to as iPod.

## About XM Radio




XM Satellite Radio and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved. **Service not available in Alaska and Hawaii.**

## About Pandora<sup>®</sup> internet radio

Pandora is a registered trademark of Pandora Media, Inc.

## About HD Radio<sup>™</sup> Technology

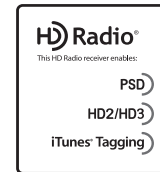

HD Radio<sup>™</sup> Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio<sup>™</sup> and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

## About Bluetooth



The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Pioneer Corporation is under license. Other trademarks and trade names are those of their respective owners.

## ***Important information about this manual***

For safety reasons, this manual indicates items requiring particular attention with the following marks.

### **NOTICE**

This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

### **⚠CAUTION**

This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

## ***To ensure the correct audio system operation***

- Do not allow his unit to come into contact with liquids. Electrical shock could result. Also, this unit damage, smoke, and overheat could result from contact with liquids.
- Do not put anything other than a Compact Disc into the slot.
- The use of cellular phones inside or near the vehicle may cause noise from the audio system speakers you are listening to. However, this does not indicate a malfunction.

## ***The Safety of Your Ears is in Your Hands***

Get the most out of your equipment by playing it at a safe level—a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time, your hearing “comfort level” adapts to

higher volumes of sound, so what sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### **ESTABLISH A SAFE LEVEL:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Once you have established a comfortable sound level, set the dial and leave it there.

### **BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:**

- Do not turn up the volume so high that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

# Contents

Features	3
About WMA	3
About iPod	4
About XM Radio	4
About Pandora® internet radio	4
About HD Radio Technology	4
About Bluetooth	4
Important information about this manual	5
To ensure the correct audio system operation	5
The Safety of Your Ears is in Your Hands	5
Basic Operation	7
Common Operation	14
Listening to the RADIO	16
Listening to the HD Radio broadcast	20
Listening to a XM Satellite Radio broadcast	22
Listening to a CD	24
Listening to a MP3/WMA Disc and USB Portable audio player/USB Memory	26
About handling the iPod	30
Connecting the iPod	31
Disconnecting the iPod	31
Listening to the iPod	33
Listening to the Bluetooth Audio	36
Listening to Pandora internet radio	40
Watching the VTR	44
Connecting an external amplifier	47
Using the AUX	48
Setting Up Audio-Visual	50
Setting Up the Sound Quality	55
Connecting a Bluetooth Cell Phone	58
Using Hands-Free Phoning	60
Setting Up the Phone	63
Using the Phonebook	64
Using Voice Recognition	66
MP3 and WMA files	67
MP3 additional information	67
WMA additional information	68
About folders and MP3/WMA files	68
USB portable audio player/ USB memory compatibility	69
Terms	70
CD player and care	71
CD-R and CD-RW discs	71
DualDiscs	72
Error indications	73
Changing or disconnecting your battery	77
Specifications	77

## Basic Operation

Your audio system works when the ignition switch is in the "ACC" or "ON" position.

If the Audio screen does not display, press [POWER]. (Refer to page 8.)


### NOTICE

To avoid draining the battery, do not leave the car audio on longer than necessary when the engine is not running.

Audio operations are carried out by either of the operations explained below.

- The touch keys on the Display screen, touch buttons or the POWER/MULTI KNOB (Refer to page 8)
- The Steering Switch (Refer to page 9)

The Display screen touch keys, touch buttons and POWER/MULTI KNOB are used by way of example when explaining operations in this manual.

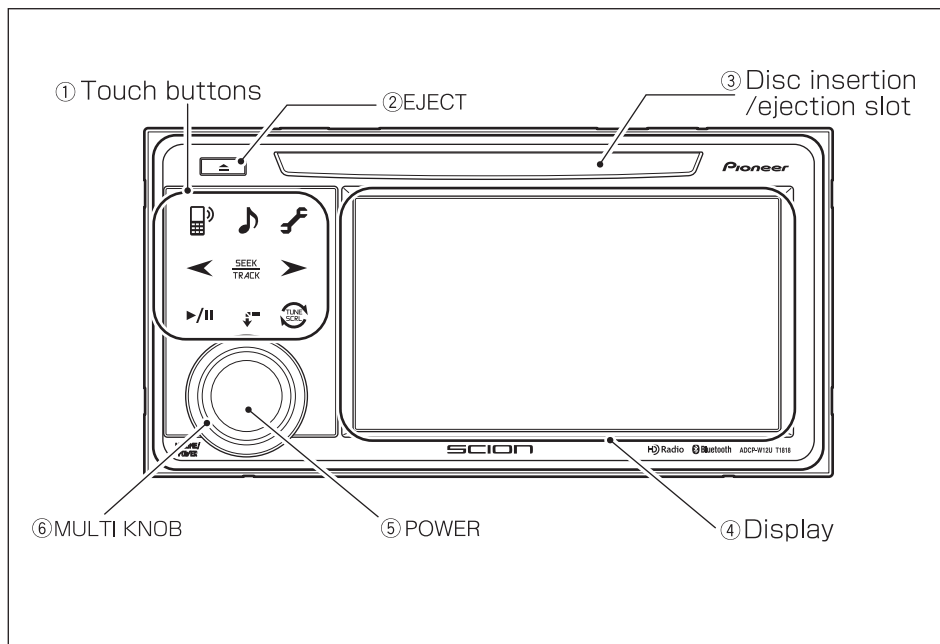

## • The Operations of the Keys Near the Display

### ① Touch buttons

Your audio system is equipped with the following buttons.



Use this button for hands-free phoning and voice operations. These operations are not covered in this manual, which is dedicated to audio operations.



If you touch this button when the SETUP or HANDS-FREE PHONING screens are displayed, the system will switch over to the Source Operations screen that is being selected.



Use this button to create a variety of audio settings. (Refer to page 50.)



Use these buttons for playback and signal reception operations. The exact operations depend on the source. Refer to the operations procedures for the source.



Touch this button to pause playback and to mute the sound. Touch it again to resume playback and turn the sound back on. The exact operations depend on the source. Refer to the operations procedures for the source.



Each time you touch this button, the functions of the MULTI KNOB and POWER button change as indicated below.

MULTI KNOB function: volume adjustment ↔ AM/FM/SAT frequency adjustment or cursor operations of the list screen.

POWER button function: POWER on/off ↔ determination processing.

### ② EJECT

Press to eject the disc.

### ③ Disc insertion/ejection slot

This is where you insert and eject discs.

### ④ Display

Information and images regarding the source being played back are displayed here.

The key to be displayed varies depending on the source that is being selected.

### ⑤ POWER

Press this when adjusting the volume and to turn the system power OFF and ON. Also used as the selector button when CD tracks and other information is displayed in list form.

### ⑥ MULTI KNOB

By touching on [MULTI KNOB], you can switch between the functions below. When in Tune/Scroll mode, the lights that surround the MULTI KNOB blink on and off.

**VOLUME** Turn the MULTI KNOB to raise/lower the volume levels.


**Tune/Scroll** Turn the MULTI KNOB to tune or scroll.

MULTI KNOB operation varies depending on the audio source or Menu. (Refer to page 14.)



## • Steering Switch Operations

This section contains an explanation regarding audio-related operations involving utilization of the steering switch.

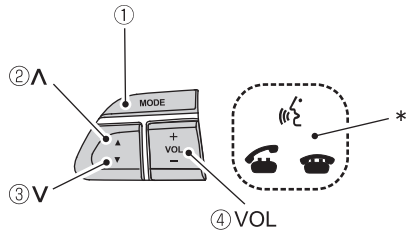

### ① [MODE]

Each time this button is pressed, the source changes in the order indicated below.

**FM → Disk (CD or MP3 or WMA)  
→ USB or iPod → Pandora →  
Bluetooth audio → A/V or AUX  
→ SAT → AM (→ FM)**

\* When the power is on or after the end of a traffic report, the source is automatically switched back to what was being used immediately beforehand.

\* Any unconnected devices, discs or sources that cannot be played back due to antenna errors or the like are skipped over in the above-noted sequence.

If the MODE button is kept pressed down for 0.8 seconds or more, a beep is emitted and the following actions are performed.

If you press the button again, playback is resumed.

Source	Actions when the button is kept pressed down for 0.8 seconds or longer
--------	--

CD	Playback is paused.
----	---------------------

MP3	
-----	--

WMA	
-----	--

USB	
-----	--

iPod	
------	--

Pandora	
---------	--

Bluetooth	
-----------	--

audio	
-------	--

AM	The sound is muted.
----	---------------------

FM	
----	--

SAT	
-----	--

AUX	Video playback continues, but the sound is muted.
-----	---

A/V	
-----	--

### ② [Λ]

Actions vary depending on the source that is being selected and the length of time the button is pressed down.

Source	Actions when pressed down	Actions when the button is kept pressed down for 0.8 seconds or longer
--------	---------------------------	--

CD	The next track is played back.	Nothing happens.
----	--------------------------------	------------------

MP3	The next file is played back.	The first song in the next folder is played back.
-----	-------------------------------	---

WMA	The next file is played back.	The first song in the next folder is played back.
-----	-------------------------------	---

USB	The next file is played back.	The first song in the next folder is played back.
-----	-------------------------------	---

iPod	The next file is played back.	Nothing happens.
------	-------------------------------	------------------

Pandora	The next station is tuned in.	Nothing happens.
---------	-------------------------------	------------------

Bluetooth audio	The next track is played back.	The first song in the next album is played back.
AM HD Radio broadcast	Play is switched over to the next preset channel.	If you remove your hand from the button for less than 1.5 seconds, the system searches for stations where reception is possible in ascending order. When such a station is detected, it is tuned in.

If you press this button down on for 1.5 seconds or longer, even with frequency loops, the SEEK function continues to operate (Non-stop SEEK function). If you release the button during operations of the non-stop SEEK function, this changes to the SEEK function.

FM HD Radio broadcast	Switches over to the next preset channel.	If you remove your hand from the button for less than 1.5 seconds, the system searches for stations where reception is possible in ascending order. When such a station is detected, it is tuned in. The PTY select function becomes active when the PTY genre is established.
-----------------------	---	--

If you press this button down for 1.5 seconds or longer, even with frequency loops, the SEEK function continues to operate (Non-stop SEEK function). If you release the button during operations of the non-stop SEEK function, this will change to the SEEK function. The PTY selection function is cancelled when the non-stop SEEK function is in effect.

XM Satellite Radio broadcast	Switches over to the next preset channel.	If you remove your hand from the button for less than 1.5 seconds, TYPE SEEK is initiated.
	When the SEEK function is in effect, channels that are being tuned in can continue to be listened to.	If you press down on this button for 1.5 seconds or longer, the SEEK function continues to be active during the time the button is pressed down. When you release your hand from the button, you will continue to receive the channel that was tuned in.
AUX	Nothing happens.	Nothing happens.
A/V	Nothing happens.	Nothing happens.

### ③ [V]

Source	Actions when pressed down	Actions when the button is kept pressed down for 0.8 seconds or longer
CD	Playback is returned to the beginning of the track. If you press again, the previous track is played back.	Nothing happens.
MP3 WMA	Playback is returned to the beginning of the file. If you press again, the previous file is played back.	The first song in the previous folder is played back.

---

USB	Playback is returned to the beginning of the file. If you press again, the previous file is played back.	The first song in the previous folder is played back.
-----	--	---

---

iPod	Playback is returned to the beginning of the file. If you press again, the previous file is played back.	Nothing happens.
------	--	------------------

---

Pandora	The previous station is tuned in.	Nothing happens.
---------	-----------------------------------	------------------

---

---

Bluetooth audio	Playback is returned to the beginning of the track. If you press again, the previous track is played back.	The first song of the previous album is played back.
-----------------	--	--

---

AM HD Radio broadcast	Playback is switched over to the previous preset channel.	If you remove your hand from the button for less than 1.5 seconds and a station is detected, it is tuned in.
-----------------------	---	--

---

---

If you press down on this button for 1.5 seconds or longer, even with frequency loops, the SEEK function continues to operate (Non-stop SEEK function). If you release the button during operations of the non-stop SEEK function, this will change to the SEEK function.

---

FM HD Radio broadcast	Switches over to the previous preset channel.	If you remove your hand from the button for less than 1.5 seconds, the station detected is tuned in. The PTY select function is activated when the PTY genre is established.
-----------------------------	---	---

If you press down on this button for 1.5 seconds or longer, even with frequency loops, the SEEK function continues to operate (Non-stop SEEK function). If you release the button during operations of the non-stop SEEK function, you will be switched over to the SEEK function. The PTY selection function is cancelled when the non-stop SEEK function is in effect.

XM Satellite Radio broadcast	Playback is switched over to the next preset channel. When the SEEK function is in effect, you can continue to listen to channels that are being tuned in.	If you remove your hand from the button for less than 1.5 seconds, TYPE SEEK is initiated. If you press down on this button for 1.5 seconds or longer, the SEEK function continues to operate during the time the button is pressed down. When you release your hand from the button, you will continue to receive the channel that was tuned in.
---------------------------------------	---	--

AUX	Nothing happens.	Nothing happens.
A/V	Nothing happens.	Nothing happens.

④ **[VOL]**  
Press on [+] to increase the volume and press [-] to decrease the volume.

## Common Operation


Although the keys displayed for each source vary, the common functions for each source are indicated below.

Refer to Sound Quality Settings (Setting Up the Sound Quality) (page 55) to find out more about establishing the sound quality.

### • Changing the Source

Touch [Source] to display the Source Selection screen. Touch [➡] on the Source Selection screen and the source to be selected will be changed in the order indicated below.

**AM → FM → DISC (CD or MP3 or WMA) → USB or iPod → Pandora → Bluetooth audio → A/V or AUX → SAT (XM Satellite Radio) (→ AM)**

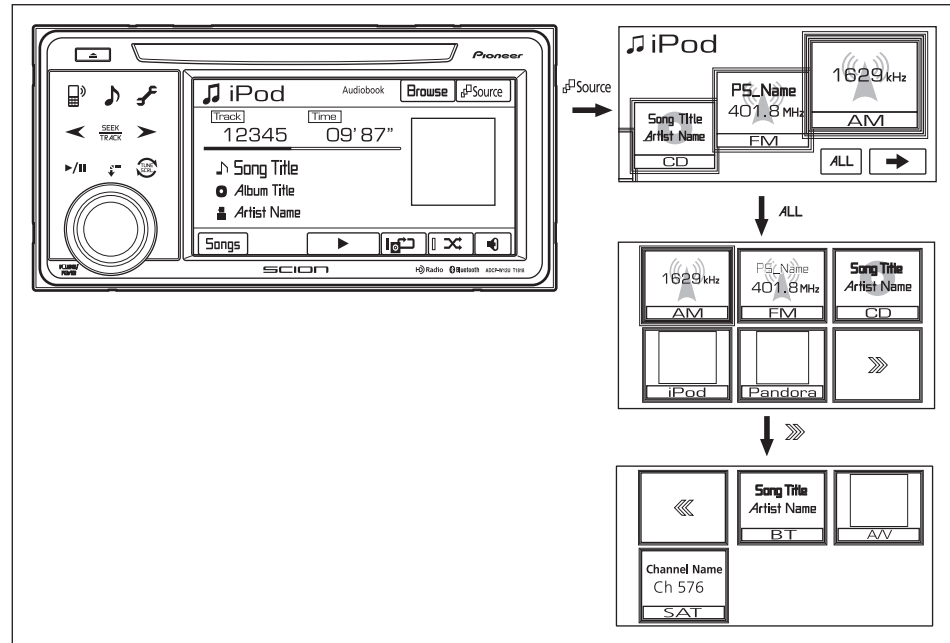

Refer to Listening to the RADIO (page 16) for details on using FM/HD Radio broadcast/XM Satellite Radio.

Refer to Listening to the HD Radio broadcast (page 20) for details on using the unique features of the XM Satellite Radio.

Refer to Listening to a CD (page 24) for details on listening to CDs.

Refer to Listening to a MP3/WMA DISC and USB Portable audio player/ USB memory (page 26) for details on listening to MP3/WMA discs, and using USB portable audio players and memory

Refer to Listening to the iPod (page 33) for details on listening to an iPod.

Refer to Listening to the Bluetooth Audio (page 36) for details on listening to Bluetooth audio.


Refer to Listening to Pandora internet radio (page 40) for details on listening to Pandora.

Refer to Watching the VTR (page 44) for details on watching the VTR.


Refer to Using the AUX (page 48) for details on using AUX.

- **Adjusting the Volume**


Turn the MULTI KNOB to the left to turn the volume down and to the right to turn the volume up.

When songs or stations change without any change in the volume, carry out the operations above after touching .

- **Setting up the audio**

Touch on  to display the audio setup screen (Refer to page 50).

- **Delete the Audio Screen**

If you press [POWER], the display will disappear and the screen will change to black. If you press it again, the source screen that is being selected will be displayed. If the display does not disappear, press [POWER] after touching on .

## Listening to the RADIO


Listen to the AM and FM radio, HD Radio and XM Satellite Radio by following the instructions below.

Refer to Listening to the HD Radio broadcast (page 20) for details regarding the unique features of the HD Radio receiver.

Refer to Listening to a XM Satellite Radio broadcast (page 22) for details regarding the unique features of XM Satellite Radio.

When receiving an AM/FM signal, this is in the DX position.

When receiving an FM signal, if a stereo signal is being picked up, it is switched over automatically to stereo sound.

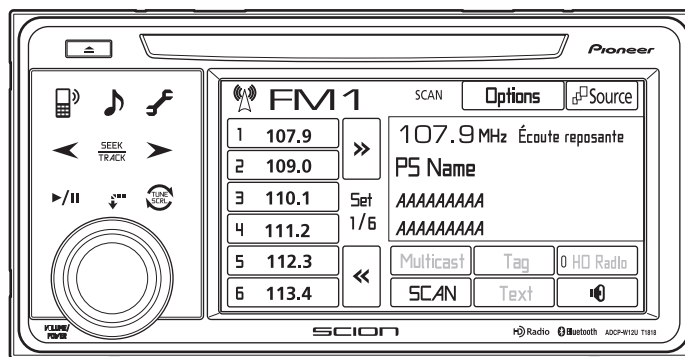



- **Changing the Frequency Manually**

Touch [TUNE] and then, after changing the MULTI KNOB to Tune/Scroll mode, turn the MULTI KNOB to the right to increase the frequency and to the left to decrease the frequency.

- If the volume fluctuates, touch [VOLUME] to change to the Tune/Scroll mode, where you can change the frequency.

- **Searching for Frequencies That Can Be Tuned In**

Touch either [◀] or [▶] to search in either ascending or descending order for stations that can be tuned in. When a station is detected, that station will be tuned in.

If you press down on either of these for 1.5 seconds or longer, even with frequency loops, the SEEK function continues to operate (Non-stop SEEK function). If you release either during operations of the Non-Stop SEEK function, the SEEK function will take over.

For FM, the PTY select function is activated when the PTY genre is established. However, when the Non-Stop SEEK function is active, the PTY selection function is cancelled.

- **Listening to Preset Channels**

Touch [Presets] to display the Preset screen. Touch on any channel from 1 to 6 on the Preset screen.

Frequencies recorded on the preset channel will be tuned in.

Touch [>>] to switch the display to the next preset page, and [◀◀] to switch the display to the previous preset page.

The pages change in the order of AM → FM1 → FM2 → SAT1 → SAT2 → SAT3 (→ Return to AM). (SAT is only displayed when the SAT unit is connected.)

- **Recording the current frequency on the preset channel**

Touch any channel from 1 to 6 on the Preset screen, continuing to touch the channel for 1.7 seconds or longer.

**NOTICE**

You can store up to 6 stations per band.

 
 
 
- **Temporarily Muting the Sound**

Touch [▶/||] to temporarily mute the sound. Touch [▶/||] to resume audio output.

- **Searching for Frequencies That Can be Tuned In (Only for FM/ HD Radio / XM Satellite Radio)**

Touch [SCAN] to search for frequencies that can be tuned in. Audio output will be produced in 5-second snippets for stations that have been located. If you touch on [SCAN] again during the time of the audio output from the station you want to listen to, that station will be tuned in.

When setting the PTY genre, audio from stations applicable to the PTY genre that has been set up is output continuously in 5-second snippets. If you again touch [SCAN], the broadcast being output will continue to be tuned in and you will be able to select a PTY genre. If you loop the search for stations without touching [SCAN], a beeping sound will be emitted and the last radio station to be picked up will be tuned in and then you will be able to select a PTY genre (Only for XM Satellite Radio). Audio broadcasts corresponding to the current categories are continuously output in 5-second snippets. If you touch [SCAN] again, you will continue to receive the broadcast being output. If you loop the detection of stations without touching [SCAN], you will hear a beeping sound and the last station to be received will be tuned in.



- **Searching for, and listening to broadcasts of preferred genres (Only for FM/HD Radio)**

Each time you touch [Options] → [<TYPE] or [TYPE>], the various PTY genres will flash on and off. If you touch on the genre that you want to listen to while the PTY genres are flashing on and off, the system will search stations that can be tuned in and which offer broadcasts corresponding to the PTY genres that you are interested in.

Each time you touch [<TYPE] or [TYPE>], the PTY genre display changes cyclically.

 
 
 
 
 
 


- **Searching for, and listening to broadcasts of preferred genres (Only for XM Satellite Radio)**

Touch [Options] → [<TYPE] or [TYPE>] to search for stations that can be tuned in and which offer broadcasts corresponding to the categories that have been set up.

- **Setting Up the RBDS Message Display (Only for FM)**


Each time you touch [Options] → [FM Info], the RBDS message display toggles between ON and OFF.



## Listening to the HD Radio broadcast

HD Radio™ Technology is a terrestrial digital radio broadcast that utilizes AM/FM analogue broadcasting frequencies to transmit digital signals.

For information regarding viewing methods, refer to Listening to the RADIO (page 16). This section contains explanations solely regarding HD Radio broadcast functions.

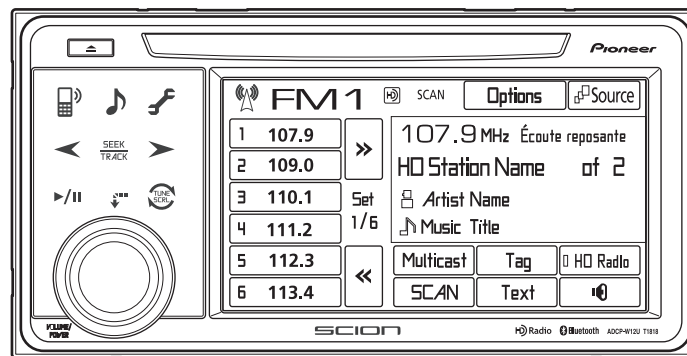

- **Storing Song Information that is Being Tuned In on HD Radio Broadcast**

If you touch [Tag] while the HD Radio broadcast signal is being received, the tag information of the song that being broadcast is stored.

Sometimes when songs are being toggled and the like, tag information cannot be accessed very effectively or multiple tags are recorded.

- **Viewing HD Radio Broadcast Text Information**

Touch [Text] to display the Text Display screen, where music, title, artist name, album title and genre name are displayed.

Touch [Additional Information] to display the Additional Information screen.

Touch [▲] or [▼] to scroll the page.

Touch [↩] to return to the HD Radio Screen.

- **Setting up the HD Radio Broadcast Reception Method**

Touch on [HD Radio] to switch over to analogue mode and tune in analogue broadcasts. Touch [HD Radio] again to switch over to digital mode and tune in digital broadcasts.

- **Multicast Channel Support**

When receiving the HD Radio Broadcast signal and tuning in a Multicast Channel-supported broadcast in something other than analogue, the following actions will occur each time you touch on [Multicast].

---

When receiving MPS signal	The next SPS is tuned in.
---------------------------	---------------------------

---

When receiving SPS signal	The next SPS is tuned in.
---------------------------	---------------------------


---

When receiving last SPS	MPS is tuned in.
-------------------------	------------------

---

## Listening to a XM Satellite Radio broadcast

A satellite radio channel, XM Satellite Radio is immensely popular in the United States. Because the entire US is covered as far as signal reception goes, one can cross the entire country without losing a signal, and thus a user can continue to listen to the same program without interruption the entire way.

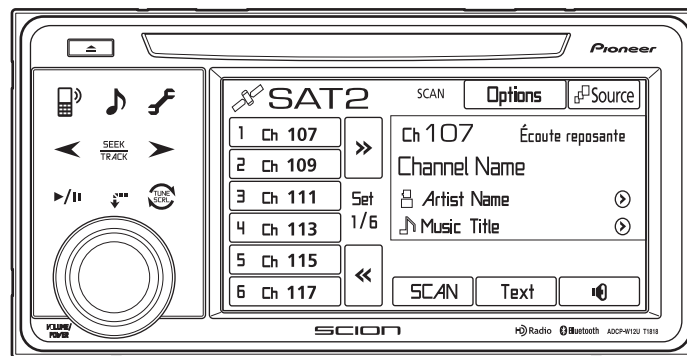

**NOTICE**

An additional Genuine Toyota satellite receiver and antenna must be purchased and installed to listen to Satellite radio broadcast in your vehicle.

**NOTICE**

An XM Satellite Radio subscription is required to listen to Satellite radio in your vehicle.

**⚠ CAUTION**

- This XM tuner supports Audio Services (Music and Talk) of only XM Satellite Radio and \*Text Information linked to the respective Audio Service. \*Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.
- Sirius XM Satellite Radio Inc. is solely responsible for providing services over the air to XM receivers.

**⚠ CAUTION**

- This XM tuner is awarded a Type Approval Certificate from XM Satellite Radio Inc. as a proof of compliance for the services XM Satellite Radio provides.

### ***How to subscribe to XM Satellite Radio <Option>***

**NOTICE**

**All fees and programming are the responsibility of XM Satellite Radio and are subject to change.**

Listeners can subscribe by visiting XM on the Web at [www.xmradio.com](http://www.xmradio.com) or by calling XM's Listener Care toll-free at (800)852-9696. Customers should have their RADIO ID ready.

- **Display the RADIO ID**  
Each XM tuner is identified with a unique RADIO ID. You will need the Radio ID when activating XM service or when reporting a problem.

*How to display RADIO ID*  
If you select CH 000, the ID Code is displayed. Select the Channel Number zero (000) by turning the MULTI KNOB or pressing it to the left or right.

*The RADIO ID is displayed as 8 alphanumeric characters.*

Record your ID Code below

ID CODE \_\_\_\_\_

**NOTICE**

If you select another Channel, display of the ID Code is canceled.

## Listening to a CD

You can listen to CDs using the methods explained below.


### ⚠ CAUTION

Compact disc players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

### NOTICE

- Never try to disassemble or oil any part of the compact disc player. Do not insert anything except a compact disc into the slot.
- Use 12-cm disc. Do not use 8-cm disc or an adapter for 8-cm disc.
- During times of abnormal temperatures, when an abnormal energy source is used, if abnormalities arise during read-in, or if there is some sort of abnormality with the unit itself, the CD may cease to play back, and you also may not be able to switch to another source. Remove the CD to switch to another source.
- Only one CD can be loaded.


24

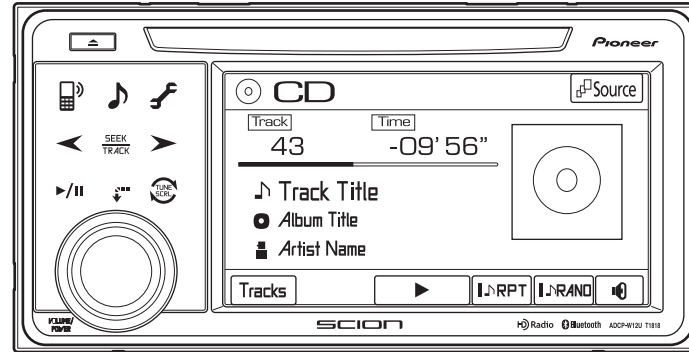



- **Loading the CD**

Load a CD in the disc slot.

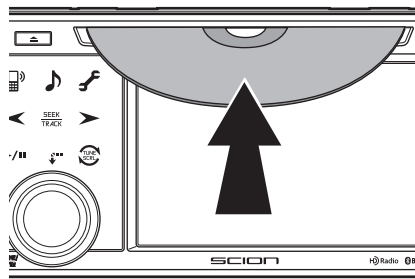

The CD will begin to play.

- **Taking Out the CD**

Press [▲] (EJECT).

- **Playing a CD That is Loaded**

Touch [▶/||] to play the CD  
List of tune of CD screen


- **Selecting Songs**

You can select songs from the CD to be played using any of the following methods.

Selecting the previous/next song  
Touch [◀] to return to the beginning of the song currently being played. Touch [◀] again to play the previous song.  
Touch [▶] to play the next song.

A quick method for selecting the previous or next song  
Touch [⏮] to change the MULTI KNOB to Tune/Scroll mode, then turn MULTI KNOB to the left to begin playback of the previous song. Turning MULTI KNOB to the right will begin playback of the next song.  
• If the volume changes, touch [⏮] and then turn the MULTI KNOB back and forth.

Selecting songs from the list  
Touch [Tracks] and then select the song you want to listen to by touching on it.

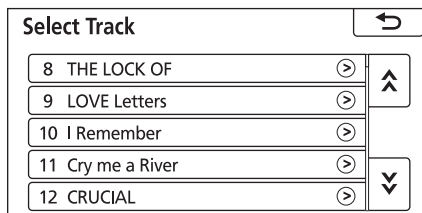

Touch [⏮] while the list is being displayed and then after setting the MULTI KNOB to Tune/Scroll mode, turn MULTI KNOB to the left to move the cursor to the previous song. Turning MULTI KNOB to the right will move the cursor to the next song.  
Press the POWER button to play the song that has been selected.

- If the volume changes when you turn the MULTI KNOB, touch [⏮] and then go through the same procedures.

Scrolling through the pages of the list  
Touch [↶] while the list is being displayed to display the previous page.  
Touch [↷] while the list is being displayed to display the next page.

Returning from the list display to the song that is being played  
Touch [↶].  
Touch [◀] or [▶] when the names of all the songs will not fit on the list display to display letters in a scrolling format.

- **Playing the Songs on a CD in Random Order**

Touch [RAND] to play the songs on the CD in random order.  
Touch [RAND] again and the songs will play in their usual order.

- **Repeating Songs**

Touch [RPT] to repeat play of the song that is currently playing.  
Touch [RPT] again to cancel the repeating of the song.

- **Pausing the Playback of Songs**

Touch [▶/||] while a song is being played to pause playback. Retouch it to resume playback.


## Listening to a MP3/ WMA Disc and USB Portable Audio Player/USB Memory

Explanations regarding how to use your MP3/WMA disc and USB PORTABLE Audio Player/USB Memory are contained below.

Details regarding MP3 and WMA files (page 67).

### ⚠ CAUTION

Compact disc players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

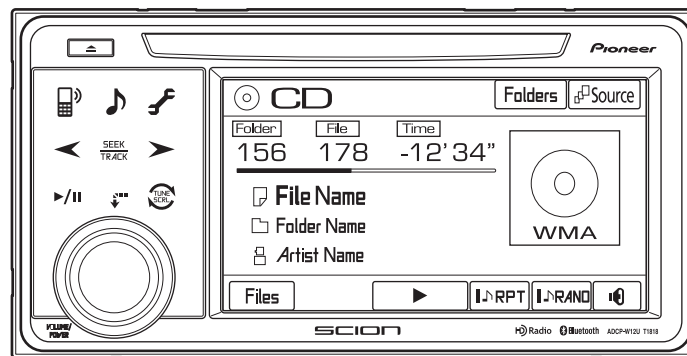

- **Handling MP3/WMA discs**

Load a MP3/WMA disc.  
Load a MP3/WMA disc in the disc slot.  
The MP3/WMA disc will begin to play.  
Removing the MP3/WMA disc  
Press [▲].

- **About handling the USB portable audio player/USB memory**

- For information on USB portable audio player/USB memory restrictions, refer to page 69 "USB portable audio player/USB memory compatibility".
- For information on restrictions on folders in the USB portable audio player/USB memory, refer to page 68 "About folders and MP3/WMA files".

- **Connecting the USB portable audio player/USB memory**

- Connect the USB portable audio player/USB memory to the USB port of the USB connector.
- For instructions on connecting and disconnecting the iPod, refer to page 31 "Connecting the iPod" and page 31 "Disconnecting the iPod".

- **Playing MP3, WMA Disc and USB Portable Audio Player and USB Memory Files**

Touch [▶/■] to play back either an MP3 disc, a WMA disc and USB portable audio player or the USB memory.

- **Selecting a File**

Any of the methods described below can be used to select files from an MP3 disc, a WMA disc and USB portable audio player or the USB memory.

**Selecting the previous/next file**

Touch [◀] to return to the beginning of the file that is being played.  
Touch [◀] again to play the previous file.  
Touch [▶] to play the next file.

**A quick method for selecting the previous/next file**


Touch [⏮] to change the MULTI KNOB to Tune/Scroll mode, then turn MULTI KNOB to the left to begin playback of the previous file. Turning MULTI KNOB to the right will begin playback of the next file.

- If the volume changes, touch [⏮] and then turn the MULTI KNOB back and forth.

**Selecting files from the list**

Touch [Files] and then select the song you want to listen to by touching on it.

Touch [Folders] to display the folder list.

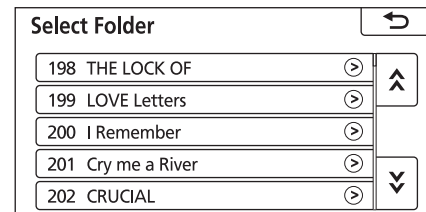

Touch [TUNE] while the list is being displayed and then after setting the MULTI KNOB to Tune/Scroll mode, turn MULTI KNOB to the left to move the cursor to the previous song. Turning MULTI KNOB to the right will move the cursor to the next song.

Press the POWER button to play the song that has been selected.

- If the volume changes when you turn the MULTI KNOB, touch [TUNE] and then go through the same procedures.

#### Scrolling through the pages of the list

Touch [↶] while the list is being displayed to display the previous page.

Touch [↷] while the list is being displayed to display the next page.

#### Returning from the list display to the display for the file that is being played

Touch [↵].

Touch [◀] or [▶] when the names of all the songs will not fit on the list display to display letters in a scrolling format.

- **Playing MP3, WMA Disc and USB Portable Audio Player and USB Memory Files in Random Order**

Each time you touch [RAND] MP3, WMA disc and USB portable audio player and USB memory files are played back as described below.

**Normal playback → files in the folder are played in random order → all files on the disc are played in random order (→ normal playback)**

- **Repeating Files**

 
 
 
 
 
 
 
 
Each time you touch [RPT] MP3, WMA disc and USB portable audio player/USB memory files are played as described below.

**Normal playback → playback of files is repeated → files in the folder are played in random order\* (→ normal playback)**

\* If the random function is available, this is skipped.

- **Pausing Playback of Files**

Touch on [▶/||] while the file is playing. Touch it again and playback resumes.



## About handling the iPod

- This unit supports only an iPod featuring the Dock connector port.
- Operations may vary depending on the software version of iPod.
- The iPod Equalizer set by the iPod is forcibly turned off.
- The Shuffle function of the iPod is operated as Random on this unit.

### ⚠ CAUTION

- Store the data into another media, to avoid losing the data during iPod operation with this unit.
- Do not allow direct sunlight to fall on the iPod when it is not being used. Extended exposure to direct sunlight can result in iPod malfunction due to the resulting high temperatures.
- Do not leave the iPod in high temperatures or direct sunlight.
- Fix the iPod securely when using with this unit. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.

For details, refer to the User Guide of your iPod.

#### • About iPod software version

The iPod software versions that can be used with this unit are as follows (operations verified as of October 2010):


<b>iPod (5th generation)</b>	ver. 1.3
<b>iPod classic</b>	ver. 1.1.2
<b>iPod classic 120 GB</b>	ver. 2.0.1
<b>iPod classic 160 GB</b>	ver. 2.0.4
<b>iPod nano (1st generation)</b>	ver. 1.3.1
<b>iPod nano (2nd generation)</b>	ver. 1.1.3
<b>iPod nano (3rd generation)</b>	ver. 1.1.3
<b>iPod nano (4th generation)</b>	ver. 1.0.4
<b>iPod nano (5th generation)</b>	ver. 1.0.2
<b>iPod nano (6th generation)</b>	ver. 1.0
<b>iPod touch (1st generation)</b>	iOS3.1.3
<b>iPod touch (2nd generation)</b>	iOS4.1
<b>iPod touch (3rd generation)</b>	iOS4.1
<b>iPod touch (4th generation)</b>	iOS4.1
<b>iPhone</b>	iOS3.1.3
<b>iPhone 3G</b>	iOS4.1
<b>iPhone 3GS</b>	iOS4.1
<b>iPhone 4</b>	iOS4.1

\* Please note that no guarantee applies to iPod operations and future updated versions of iPod software.

## Connecting the iPod

Connect the USB connector.  
Connect the iPod as indicated in the figure below using an optional cable.

Push the Dock connector into the Dock connector port until you hear a click to connect firmly. If it does not go in smoothly, it may be upside down so do not force it in as this may result in damage.

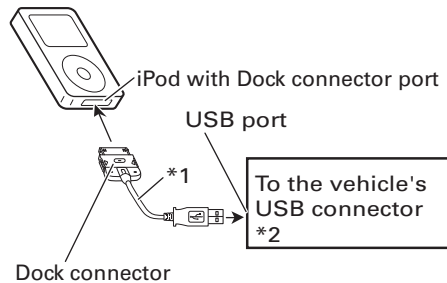

When connecting the iPod, remove a headphone cable from the iPod. When connecting the iPod, it is recommended to use a separately purchased car kit.

\*1 It is recommended to use a USB cable which satisfies USB 2.0 standards.  
(Measurements should satisfy USB 2.0 standards)

\*2 Connection location differs depending on the vehicle.

Vehicle type	Connection location
tC	Connect to the USB connector near the shift knob.
xB	Connect to the USB connector near the parking brake.
xD	Connect to the USB connector near the cup holder.
iQ	Connect to the USB connector near the shift knob.

As soon as the iPod is connected, its power is automatically turned on. While the iPod is connected to this unit, Indicates that an accessory has been connected to the iPod.

- When the ignition switch is set to ACC or ON, the iPod's battery is charged while the iPod is connected to this unit.
- You cannot use the iPod's remote control at the same time.

- You may hear noise if you disconnect during iPod playback.

### NOTICE


- To resolve most problems when using your iPod with the Scion Audio system, disconnect your iPod from the vehicle iPod connection and reset it.
- For instructions on how to reset your iPod, refer to the User Guide of your iPod.
- Connect the Dock connector directly to the iPod with Dock connector port. Do not connect it via the iPod Dock or other connection.
- When the iPod is connected to this unit, sound will also be heard from the headphone of the iPod.
- Disconnect the headphone from the iPod before use.
- If you install an audio system other than a Scion Genuine Audio, you will not be able to use the USB connector.
- If the iPod does not operate with Scion Audio system, disconnect the connector from the iPod and reconnect again.

## NOTICE

- When you are using iPhone by the multitasking, according to the application under use, it might not be able to charge a battery.
- When connecting a Bluetooth-enabled iPod via the Dock connector, the iPod or Pandora may not produce any sound on this unit. If this happens, turn the iPod Bluetooth function off.

## ***Disconnecting the iPod***

Remove the connector.

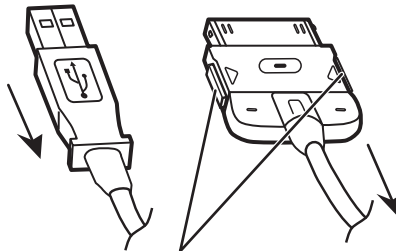

When disconnecting the iPod connector, grasp the connector firmly and pull it towards you.



## Listening to the iPod

An explanation regarding how to listen to your iPod is contained below.

### • Selecting Songs

You can use any of the methods below to select songs from your iPod.

#### Selecting the previous/next song

Touch [◀] to return to the beginning of the song that is being played.


Touch [◀] again to play back the previous song.

Touch [▶] to play back the next song.

#### A quick method for selecting the previous/next song

Touch [TUNE] to change the MULTI KNOB to Tune/Scroll mode, then turn MULTI KNOB to the left to begin playback of the previous song. Turning MULTI KNOB to the right will begin playback of the next song.

- If the volume changes, touch [TUNE] and then turn the MULTI KNOB back and forth.

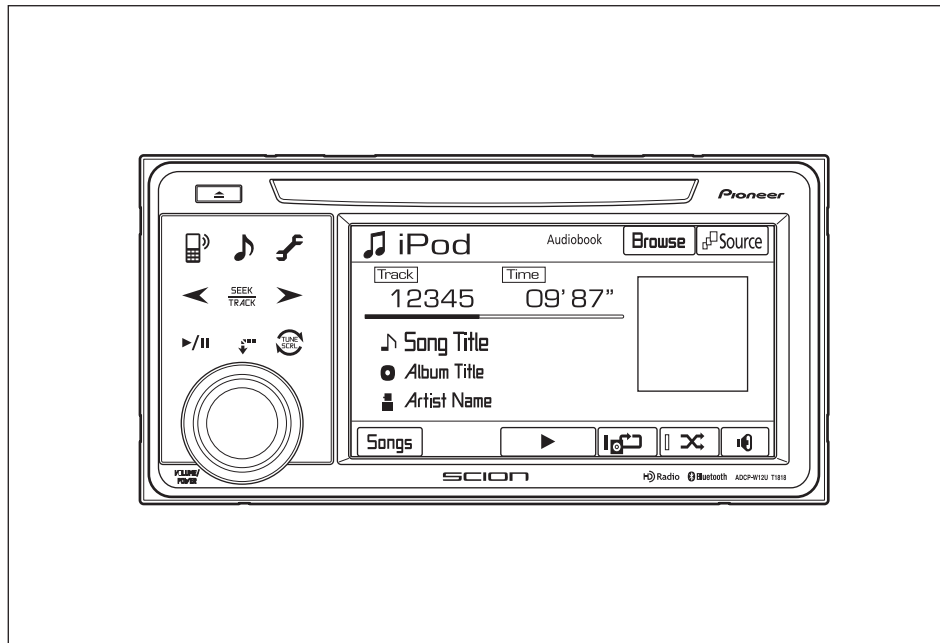

### Selecting songs from the playlist

Touch [Browse] to display the playlist table.  
 Touch on the playlist using any of tabs indicated below and then select a method for searching for songs.  
 Touch [<<] or [>>] to display the previous/next tabs.

If you touch [TUNE] when the list is being displayed and then, after setting the MULTI KNOB to Tune/Scroll mode, turn the MULTI KNOB to the left, the cursor will move to the previous column. If you turn MULTI KNOB to the right, the cursor will advance to the next column. Press the POWER button to select the column that the cursor is positioned at.

- If the volume changes when you turn the MULTI KNOB, touch [TUNE] and then go through the same procedures.



Tab	Action when selected
[Playlists]	Switches over to the screen used for searching for playlists Touch [Playlist Name] to display a list of the playlists that have been saved to the iPod. Touch on a playlist to display a list of the songs contained in the playlist.
[Artists]	Switches over to the screen for searching for artists Touch [Artist Name] to display a list of artist names. Touch on the artist name and then the artist album name to display a list of the songs contained in the album.

[Albums]	Switches over to the screen for searching for albums Touch [Album Name] to display a list of album names. Touch on the album name to display a list of the songs contained in the album.
[Songs]	Switches over to the screen for searching for song names Touch [Song Name] to display a list of song names.
[Podcasts]	Switches over to the screen for searching for Podcasts Touch [Podcast Name] to display a list of Podcast names. Touch on a Podcast name to display a list of files names.
[Audiobooks]	Switches over to the screen for searching for Audiobooks Touch [Audiobook Name] to display a list of Audiobook names.

---

[Genres] Switches over to the screen for searching for genres  
Touch [Genre Name] to display a list of genre names. Touch on the genre name and then the album name to display a list of the songs contained in the album.

---

[Composers] Switches over to the screen for searching for composers  
Touch [Composer Name] to display a list of composer names. Touch on the composer name and then the album name to display a list of the songs contained in the album.

---

### Scrolling through the pages of the list

Touch [⏪] while the list is being displayed to display the previous page.  
Touch [⏩] while the list is being displayed to display the next page.

Returning from the list display to the display for the file that is being played back  
Touch [⏮].  
Touch [◀] or [▶] when the names of all the songs will not fit on the list display to display letters in a scrolling format.

- **Shuffling Playback of iPod Files**

Each time you touch [⏮], iPod tracks are played back as indicated below.

**Normal playback → shuffle playback of tracks on the list → shuffle playback of albums on the list (→ normal playback)**

- **Repeating Tracks**

Touch [⏮] to repeat playback of tracks that are being played back. Suspends shuffle operations during shuffle play and repeats the track that is being played back. If repeat is cancelled, shuffle play is resumed.

- **Pausing Playback of Songs**

Touch on [▶/⏸] while the song is playing. Touch it again and playback resumes.

## Listening to the Bluetooth Audio


In order to listen to Bluetooth audio on this unit, you must first hook Bluetooth audio up to the system. An explanation regarding how to listen to Bluetooth audio is contained below.

- **Bluetooth audio that can be hooked up to the system**

The Bluetooth audio to be hooked up to the system must fulfill the following conditions.

- Bluetooth device that loads A2DP.
- Bluetooth Specification Version 1.1 or higher (Version 2.1+EDR recommended)

The number of Bluetooth devices that can be registered shall be total 5 units with phone and portable device together. It will be counted as 1 unit when phone and portable device is a same device.

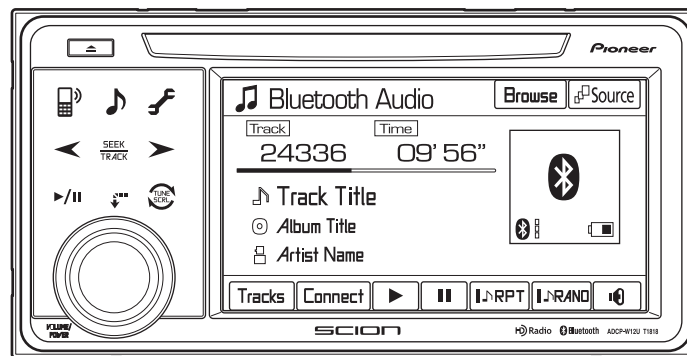

## • Registering Bluetooth Audio Device

There are two methods for registering Bluetooth audio device to this system, both of which are explained below.

If another Bluetooth audio device has already been connected, you will need to cancel this connection prior to beginning the registration process.

You will mainly be working with your Bluetooth audio device to register it with the system. For details, see the user manual for your Bluetooth audio device.

### Sending your pass key for registration

1. Touch [🔌] → [Bluetooth] → [Connect Audio Player] → [Add New]. If a device has already been connected, a screen will appear seeking confirmation of whether this connection is to be cancelled or not. Touch [YES].
2. Using the Bluetooth audio, search for the Bluetooth-enabled device and then select this unit ([CAR MULTIMEDIA]).
3. Send the Passkey that appears on the screen from the Bluetooth audio device to the system. If the Passkey has been sent correctly, Bluetooth audio will register it to the system and it will be connected.

### Registering via SSP (Secure Simple Pairing)

1. Touch [🔌] → [Bluetooth] → [Connect Audio Player] → [Add New]. If a device has already been connected, a screen will appear seeking confirmation of whether this connection is to be cancelled or not. Touch [YES].
2. Using the Bluetooth audio, search for the Bluetooth-enabled device and then select this unit ([CAR MULTIMEDIA]).
  - For some types of devices and authentication methods, number authentication or other means of verification may be required.
  - Bluetooth 2.0 or higher is required

### Connecting a Bluetooth Audio Device

Once the Bluetooth audio device is registered to the System, connection takes place automatically. Up to five Bluetooth audio devices can be registered on the system. You can select the device that you want to listen to and it will be connected.

Touch [🔌] → [Bluetooth] → [Connect Audio Player] to display a list of devices.

Touch the Bluetooth audio device that you want to connect.

## • Selecting Files

Any of the methods used below can be used to select Bluetooth audio files.

### Selecting the previous/next file

Touch [◀] to return to the beginning of the file that is being played back. Touch [◀] again to play back the previous file.


Touch [▶] to play back the next file.

### A quick method for selecting the previous/next file

Touch [⊙] to change the MULTI KNOB to Tune/Scroll mode, then turn MULTI KNOB to the left to begin playback of the previous file.

Turning MULTI KNOB to the right will begin playback of the next file.

- If the volume changes when you turn the MULTI KNOB, touch [⊙] and then turn the MULTI KNOB back and forth.

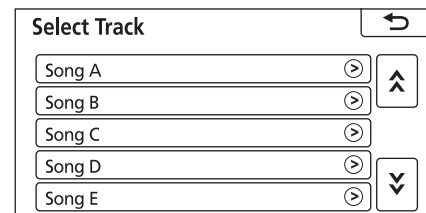

Selecting tracks from the tracklist  
Touch [Track List] and then touch on  
the file that you want to listen to.  
[Tracks] and [Browse] only display  
when AVRCP Ver. 1.4 or greater devices  
are connected.

Selecting files from the folder:  
[Browse] → Touch on the folder to  
display the files contained inside the  
folder.

Touch [↶] while the tracklist/playlist  
is being displayed to display the pre-  
vious page.

Touch [↷] while the list is being dis-  
played to display the next page.

Returning from the list display to  
the file that is being played

Touch [↩].

Touch [<] or [>] when the names of all  
the songs will not fit on the list display  
to display letters in a scrolling format.

- **Playing Bluetooth Audio Files in Random Order**

Each time you touch [RAND],  
Bluetooth audio files are played as  
described below.

**Normal playback → files on the album are  
played back in random order → all files  
are played in random order (→ normal  
playback)**

[RAND] is only display when AVRCP  
Ver. 1.3 or greater devices are con-  
nected.

- **Repeating Files**

Each time you touch [RPT],  
Bluetooth audio files are played as  
described below.

 
 
 
 
 
 
**Normal playback → playback of files is  
repeated → playback of the files on the  
album is repeated\* (→ normal playback)**

\* If the random function is available,  
this is skipped.

[RPT] is only display when AVRCP  
Ver. 1.3 or greater devices are con-  
nected.

- **Pausing Playback of Files**

Touch on [▶/⏸] while the file is  
playing. Touch it again and playback  
resumes.



## ***Listening to Pandora internet radio***


Pandora is an internet radio service that utilizes an extensive music database and song-matching algorithms to provide personalized radio.

To use this system to listen to Pandora, first download the Pandora application on your iPhone and create a registered Pandora account, then connect the iPhone to this system (see detailed information below):

Requirements to access Pandora using this system:

- Apple iPhone (first generation), iPhone 3G, iPhone 3GS or iPhone 4 with firmware version 3.0 or later.
- Latest version of the Pandora application for the iPhone, downloaded to your device. (Search Apple iTunes App Store for "Pandora").
- Registered Pandora account (Free account available from Pandora; create a free account online at <http://www.pandora.com/register> or through the Pandora application for the iPhone).

40

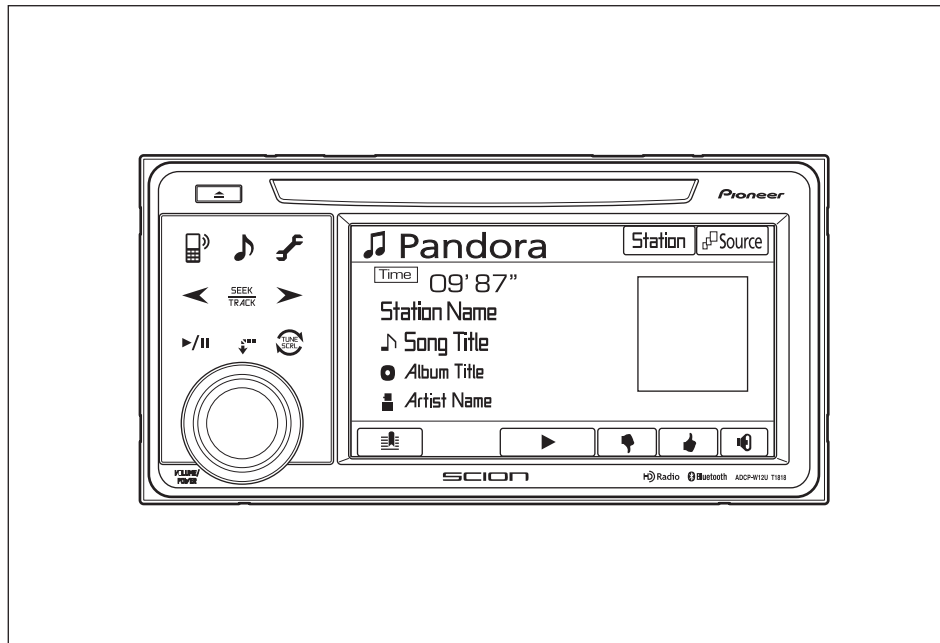



- **iPhone data plan.**

Note: if the data plan for your iPhone does not provide for unlimited data usage, additional charges from AT&T may apply if you access the Pandora service via AT&T's 3G and/or EDGE networks after exceeding your maximum monthly data usage.

- **Connection to the Internet via 3G, EDGE or WiFi network.**
- **Refer to Connecting the iPod (page 31) for information regarding how to connect iPhone.**

**Limitations:**

- **Access to the Pandora service will depend on the availability of a cellular and/or WiFi network for purposes of allowing your iPhone to connect to the Internet.**
- **Pandora's service is currently only available in the U.S.**
- **Ability of this system to access the Pandora service is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of iPhones; compatibility issues with future firmware versions of the Pandora application for the iPhone; changes to the Pandora**

music service by Pandora; discontinuation of the Pandora music service by Pandora.

- **Certain functionality of the Pandora service is not available when accessing the service through this system including, but not limited to, creating new stations, deleting stations, emailing current stations, buying songs from iTunes, viewing additional text information, logging in to Pandora, and adjusting cell network audio quality.**

Pandora internet radio is a music service not affiliated with Pioneer and SCION. More information is available at <http://www.pandora.com>. Pandora is a registered trademark of Pandora Media, Inc.

<b>NOTICE</b>
<b>You will not be able to control Pandora by your iPhone while listening Pandora.</b>

- **Skipping to the Next Track**

Touch [▶].

The next track will be determined by the server.

Refer to the Pandora homepage for more information regarding these operations.

- **Pausing Playback of Songs on Pandora**

Touch [▶/||] while the song is being played back to pause playback.


Touch it again to resume playback.

- **Giving a Thumbs UP/Thumbs DOWN to a Song that is Playing**

Touch on either the thumbs up or the thumbs down sign while the song is playing (or when playback has been paused).

When casting a thumbs up or a thumbs down, this information is saved as a log in the Pandora account on the server and serves as a source of information influencing the content of future song selection.

---

[  ]	Credits the song being played back with a Thumbs UP, which is sent to the server via iPhone.
---	--

---



Gives the song being played back a Thumbs DOWN, which is sent to the server via iPhone. When a song is given a Thumbs DOWN, the next song begins. A song receiving a Thumbs DOWN will not be played in the future on the station you are listening to. If the Track UP restriction number is exceeded, even songs receiving Thumbs DOWN continue to be played back.

• **Bookmarking Songs that are Being Played Back**


Touch [Bookmark] when a song is being played back (or when playback has been paused), and the touch either [SONG] or [ARTIST]. The songs and artists that you enjoy become bookmark-registered information sent to the server via iPhone. This information cannot be called up later. Bookmarked songs can only be referenced via a PC.

Touch [CANCEL] to cancel the bookmark registration.

• **Calling Up Stations Created on a PC**

Touch [Station] to display the Select Station screen.

You can touch either of these to select the order in which your favorite stations come up.






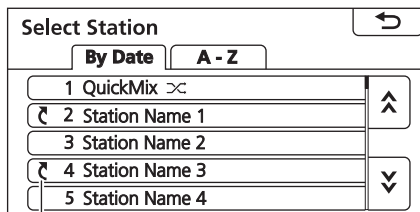


Shared station icon:  
Indicates shared stations that have been registered.

[By Date] Stations created using a PC are displayed as a list in the order that they were registered. Touch on the station that you want to listen to.

[A-Z] Stations created using a PC are displayed as a list in alphabetical order. Touch on the station that you want to listen to.

      Scrolling through the pages of the list Touch [Up Arrow] while the list is being displayed to display the previous page. Touch [Down Arrow] while the list is being displayed to display the next page.




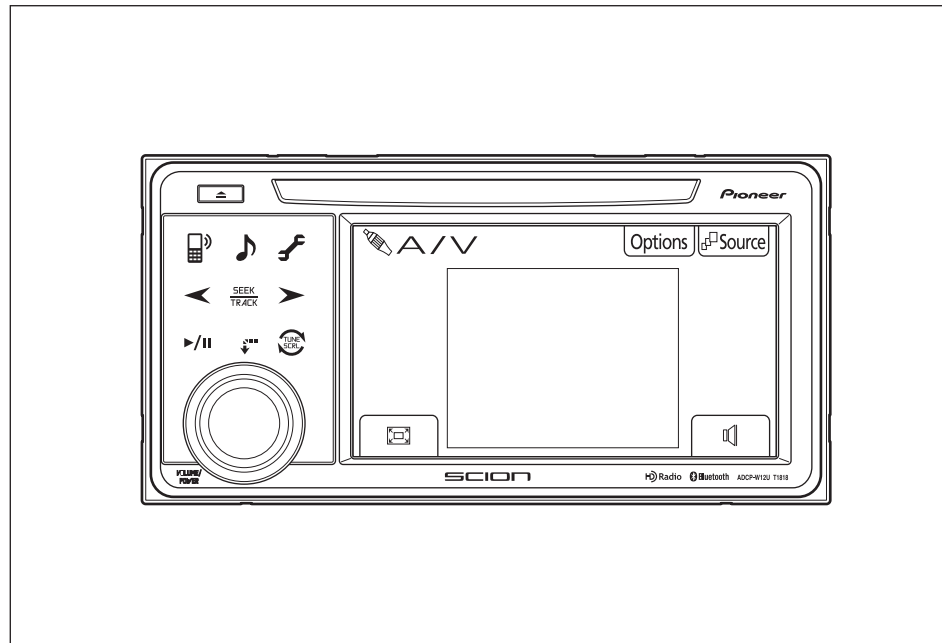
<CRB3643-B/S>43

## Watching the VTR

You can connect Audio/Video devices to the system and watch the VTR. An explanation on VTR viewing is contained below.


- **VTR Viewing on a Full Screen**

Touch  on the A/V Source Operations Screen to set the VTR screen to full screen. To display the standard screen, touch on the screen.




- **Setting up the VTR**

Touch [Options] to display the Options Menu. Touch on any of the below to set up the VTR.

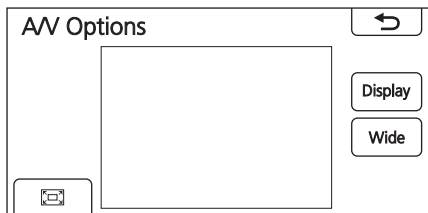

- **Changing to Wide Mode**

Touch [Wide] to display the screen for switching over to wide mode. Each time you touch [Normal/Wide1/Wide2], the display switches over to wide mode as indicated below. After setting up wide mode, touch [Save].

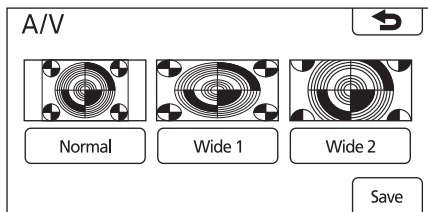



---

[Normal]	Input images are displayed at a 4:3 ratio.
[Wide1]	Input images are uniformly enlarged horizontally for display.
[Wide2]	Input images are uniformly enlarged vertically for display.

---

- **Adjusting VTR Image Quality**

Touch [Display] to display the Image Quality Adjustment screen. Touch [<<] or [>>] to switch to one of the adjustment items indicated below. Touch [OK] after establishing the adjustment setting.

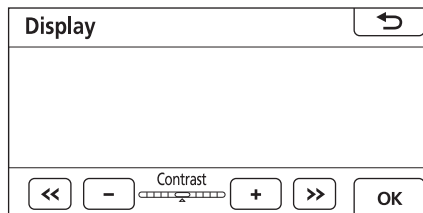


---

[Contrast]	Each time you touch [+], the display contrast level increases up to a maximum level of 5. Each time you touch [-], the display contrast level decreases up to a minimum level of -5. The higher the contrast level, the greater the luminance of the image; the lower the contrast level, the less the luminance of the image.
[Brightness]	Each time you touch [+], the display brightness increases up to a maximum level of 5. Each time you touch [-], the display brightness decreases up to a minimum level of -5. The greater the brightness level, the brighter the image; the lesser the brightness level, the darker the image.

---

---

[Color] Each time you touch [+], the display tint increases up to a maximum level of 5. The higher the tint level, the more blue the display appears. Each time you touch [-], the display tint decreases to a minimum level of -5. The lower the tint level, the more red the display appears.


---

[Tone] Each time you touch [+], the display tone increases up to a maximum level of 5. Each time you touch [-], the display tone decreases up to a minimum level of -5. The more the tone is increased, the denser the colors become; when the tone is decreased, the colors become lighter.

---

## Connecting an external amplifier

When you connect an external amplifier to RCA connectors, please install according to the amplifier manual.

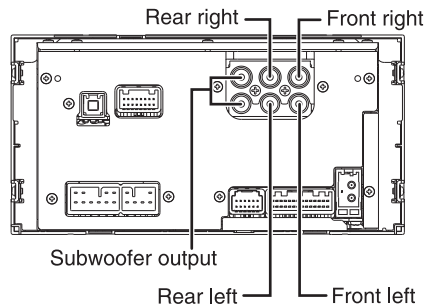

### ⚠ CAUTION

- A standard speaker's input is rated 17.5 W input (largest 40 W input). When an amplifier is connected to the RCA output, make sure to change the speaker that corresponds to the output. If you connect to a standard speaker, this may cause to catch fire, emit smoke, or cause damage.

### NOTICE


- The output of an internal amplifier will not stop even when an external amplifier is connected the RCA output. When cutting off the internal amplifier output cable, protect the cut surface to prevent short circuits.
- Subwoofer output of this unit is monaural. The output level cannot be adjusted with FADER/BALANCE on the AUDIO CONTROL Menu.
- Beeps will not be audible if an external amplifier is connected to the Front output.

## Using the AUX

By inserting a mini plug into the AUX adapter, you can listen to music from a portable audio device through the vehicle's speaker system.

### ⚠ CAUTION

When using a portable audio device connected to the power outlet or cigarette lighter, noise may occur during playback. If this happens, use the power source of the portable audio device.

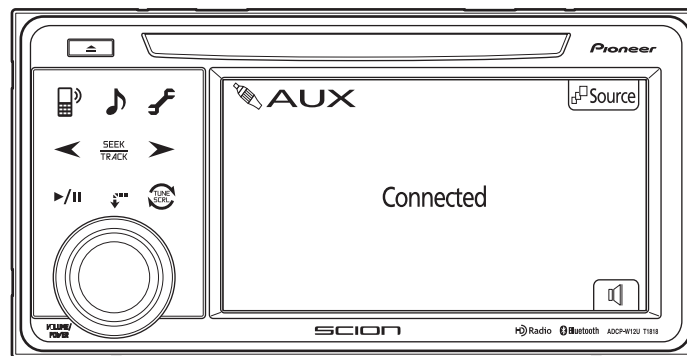



## NOTICE

- If the mini plug of a commercially available cable connected to a portable audio or other component is not connected to the car AUX adapter, the mode will not change to the AUX mode.
- Volume level when playing a component connected with a mini plug differs to that when listening to the built-in CD player or radio so please make adjustments.
- If you install an audio system other than a Scion Genuine Audio, you will not be able to use the AUX adapter.

- **Muting the AUX audio**

Touch [▶/III]. Touch it again to cancel the muting.

## Setting Up Audio-Visual

Touch [🔧] to display the Setup menu. You can then establish various settings using the Setup menu.

### • Setting Up the Display


Touch [Display] on the Setup menu to display the Display Settings menu. Next touch on the settings that follow to set them up. After establishing the settings, touch [OK].

Canceling the screen display  
Touch [Screen Off].

Touch on either [📱], [🎵] or [🔧] or use the other functions of the steering switch to display the screen once again.

### NOTICE

Even if the display does not exhibit properly, you can still carry out SEEK, TRACK, startup, playback, pause, volume adjustment, frequency adjustment and disc insertion/extraction operations.

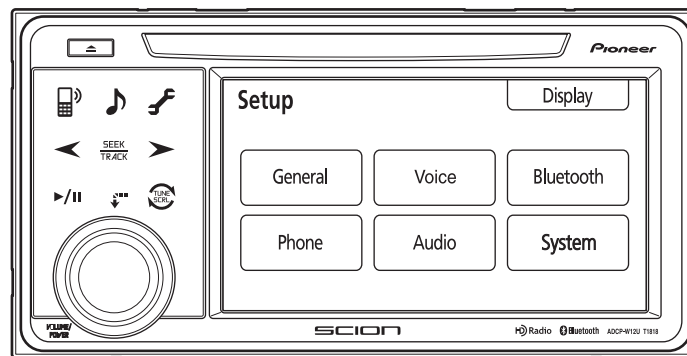

### Adjusting the Image Quality of the Display or Camera

After touching [General] or [Camera], touch either of the settings below to establish them.

You can set this item, when the camera is connected.

[Contrast]	Each time you touch [+], the display or camera contrast level increases up to a maximum level of 5. Each time you touch [-], the display or camera contrast level decreases up to a minimum level of -5. The higher the contrast level, the greater the luminance of the image; the lower the contrast level, the less the luminance of the image.
[Brightness]	Each time you touch [+], the display or camera brightness increases up to a maximum level of 5. Each time you touch [-], the display or camera brightness decreases up to a minimum level of -5. The greater the brightness level, the brighter the image; the lesser the brightness level, the darker the image.

### • Establishing General Settings

Touch on [General] on the Setup menu to display the General Settings menu. Next touch on the settings that follow to set them up  
Changing the display language

After touching [Language], touch the language that you want to display.

[English]	Establishes English as the language to be displayed.
[Español]	Establishes Spanish as the language to be displayed.
[Français]	Establishes French as the language to be displayed.

Producing/muting the beep sound  
After touching [Beep], touch either [ON] or [OFF].

[ON]	This setting establishes the output of a beep sound.
[OFF]	This setting mutes the beep sound.

Displaying/not displaying each source's capture screen on the Audio Source Selection screen  
After touching [Display Album Art], touch either [ON] or [OFF].

[ON]	This setting displays each source's capture screen on the Audio Source Selection screen.
[OFF]	With this setting, there is no display of each source's capture screen on the Audio Source Selection screen.

Validating/not validating the animation effects of the Audio Source Selection screen and background image  
After touching [Animation], touch either [ON] or [OFF].

[ON]	With this setting, the animation effects of the Audio Source Selection screen and background image are made available.
[OFF]	With this setting, the animation effects of the Audio Source Selection screen and background image are not made available.

### Formatting/not formatting personal data recorded on the system

After touching [Delete Personal Data], touch either [Delete] or [Do Not Delete]

[Delete]	Deletes personal data that has been recorded in the system as following: <ul style="list-style-type: none"><li>- The source type that was last played back</li><li>- The last volume setting used</li><li>- Each setting value for the radio source</li><li>- The preset content of the radio source</li><li>- Each setting value for the sound settings</li><li>- Each setting value for the system settings</li><li>- Each setting value for the contrast &amp; brightness</li><li>- Each setting value for the Bluetooth settings</li><li>- The contacts, speed dials and call history for hands-free phoning</li></ul>
[Do Not Delete]	Returns to the General Settings menu without deleting personal data that has been recorded in the system.

### • Setting Up Voice Guidance

Touch on [Voice] on the Setup menu to display the Guidance Settings menu. Next touch on the settings that follow to establish them. You can set this item, when the microphone is connected. Changing the voice output level. Touch one of the following.

[1]-[7]	Establishes the voice output level of Voice Guidance. The lower the setting number, the lower the voice output level and the higher the setting number, the higher the voice output level
---------	---

Setting up/not setting up voice guidance  
After touching [Voice Guidance], touch either [ON] or [OFF].

[ON]	With this setting, Voice Guidance is activated.
[OFF]	With this setting, Voice Guidance is not activated.

Returning the Voice Guidance voice output level to Level 4  
Touch [Default].

### • Setting Up Bluetooth

Touch on [Bluetooth] on the Setup menu to display the Bluetooth Settings menu. Next touch on the settings that follow to set them up

#### Connecting/disconnecting registered Bluetooth devices

Touch on [Registered Bluetooth Device] to display a list of the Bluetooth devices that have been registered. Touch one of the following.

[Add New]	Registers the Bluetooth device.
[Remove]	Excludes the selected Bluetooth device from the list.
[Detail]	With this setting, information regarding the selected Bluetooth device is displayed

### Bluetooth Audio Player

Touch on [Connect Audio Player] to display a list of the Bluetooth audio players that have been registered. Touch one of the following.

---

[Add New]	Registers the Bluetooth device.
-----------	---------------------------------

---

Establishing the detailed Bluetooth settings

Touch on [Detailed Bluetooth Settings] on the Bluetooth Settings menu and then touch on the settings that follow to set them up

---

[Bluetooth Power]	[ON]	Turns the Bluetooth power on.
	[OFF]	Turns the Bluetooth power off.

---

---

[Passcode]	This enables you to change the Passcode for connecting the Bluetooth device and the Passkey. After touching, enter a four-digit number and touch [OK].
------------	--


---

---

[Display Audio Player Status]	[ON]	With this setting, the current status of the Bluetooth Audio Player connection is displayed.
	[OFF]	With this setting, there is no display of the current status of the Bluetooth Audio Player connection.

---

#### Connection Method

[] → [Bluetooth] → [Registered Bluetooth device] → [Details] → [↓] → Touch [Connection Method] and then touch one of the following options:

[From Vehicle]: Start the connection procedures using the system.

[From Audio Player]: Start the connection procedures using the Bluetooth audio device.

Connection procedures are normally carried out automatically, but for some Bluetooth audio devices, you will need to change the connection. For more information, see the instruction manual for your Bluetooth audio device.

### • Setting Up Audio

Touch [Audio] → [External Video Settings] on the Setup menu to display the External Video Settings menu and then touch on the settings that follow to set them up. You can set this item, when the VTR is connected.

Converting external video signals  
By touching either [NTSC] or [PAL], you can convert video signals input from external devices into either NTSC or PAL.

Normally no conversion is necessary other than for VTR viewing in the PAL format.



- **Setting Up the System**

Touch [System] on the Setup menu to display the SYSTEM Settings menu and then touch on the settings that follow to set them up.

Utilizing/Not utilizing the subwoofer  
Touch [Subwoofer Setting] and then touch [ON] or [OFF].

---

[ON]	With this setting, the subwoofer is activated.
------	--

---

[OFF]	With this setting, the subwoofer is not activated.
-------	--

---



- **Setting Up the Vehicle Type**

Touch [Type of Vehicle Setting] and then touch one of the following.

---

[xB]	Sets the vehicle type to xB
------	-----------------------------

---

[xD]	Sets the vehicle type to xD
------	-----------------------------

---

 
[tC]	Sets the vehicle type to tC
------	-----------------------------

---


[iQ]	Sets the vehicle type to iQ
------	-----------------------------

---


Setting Up Hands-Free Phoning  
For more information regarding [Phone], refer to the Setting Up the Phone (page 63).



## Setting Up the Sound Quality

Touch on [  ] for each mode screen to display the SOUND SETTINGS MENU. On the SOUND SETTINGS MENU, a variety of settings related to sound quality can be established.

### • Setting the Sound Quality

Touch [  ] on the Sound Settings menu to display the Sound Settings menu and then touch on the settings that follow to set them up. After establishing the settings, touch [OK] to return to the previous screen.

[TREBLE]	Used to adjust high-pitched tones.
[-] or [+]	Each time you touch [+], the treble level increases up to a maximum level of 5. Each time you touch [-], the treble level decreases up to a minimum level of -5.

[BASS]	Used to adjust low-pitched tones.
[-] or [+]	Each time you touch [+], the bass level increases up to a maximum level of 5. Each time you touch [-], the bass level decreases up to a minimum level of -5.
[BALANCE]	Used to adjust the sound balance between the left and right speakers.
[L] or [R]	Each time you touch [L], the balance steps increase up to a maximum level of 7. Each time you touch [R], the balance steps decrease up to a minimum level of -7.
[FADER]	Used to adjust the sound balance between the rear and front speakers.
[Front] or [Rear]	Each time you touch [Front], the balance steps increase up to a maximum level of 7. Each time you touch [Rear], the balance steps decrease up to a minimum level of -7.

### • Setting Up Digital Sound Processing

Touch [DSP] on the Sound Settings menu to display the DSP Settings menu and then touch on the settings that follow to set them up.

[Automatic Sound Levelizer]	During driving, noise in the car changes according to the driving speed. The automatic sound levelizer (ASL) monitors such varying noise and automatically increases the volume level. If this noise becomes greater, the sensitivity (variation of volume level to noise level) of ASL can be set to one of three levels([Low]/[MID]/[HIGH]). Touch [Off] to deactivate the Automatic Sound Levelizer.
-----------------------------	---

[Advanced Sound Retriever] The Advanced Sound Retriever function provides a wide, deep and rich quality to CD/MP3/WMA/USB/iPod sound, which gives the user a lively impression. Establish the Advanced Sound Retriever mode by touching either [Low Rate] or [High Rate]. Touch [Off] to deactivate the Advanced Sound Retriever.

**NOTICE**

- The Advanced Sound Retriever function can only be selected when playing MP3/WMA from CD and iPod, USB portable audio player/USB memory.
- The Advanced Sound Retriever function does not support external compressed audio media.
- BASS function and TREBLE function values can be set for each of the modes (AM, FM, CD/MP3/WMA, iPod/USB portable audio player/USB memory, XM Satellite Radio, AUX). When you switch modes, the settings change to the BASS and TREBLE values set for the selected mode.
- The ASL function is only effective when the vehicle is moving.

• **Setting Up the Subwoofer**

Touch [Sub-W] on the Sound Settings menu to display the Subwoofer Settings Menu and then touch on the settings that follow to set them up. (This will only display when the subwoofer settings have been activated. You can set this item, when the [Subwoofer Setting] is set to [ON]. (page 54)) After the end of setup, touch [OK] to return to the previous screen.

[Phase] Establish the Subwoofer Output Phase mode by touching either [NORMAL] or [REVERSE].

[Level Adjustment] Each time you touch [+], the subwoofer level steps increase up to a maximum level of 6. Each time you touch [-], the subwoofer level steps decrease down to a minimum level of -24.





- **Establishing the SSP (Scion Sound Processing) Mode**

SSP is a modified DSP (Digital Signal Processing) system that provides a customized sound for your vehicle. Touch [SSP] on the Sound Settings menu to display the SSP Settings Menu. Touch [SSP Settings] and touch one of the following to establish the SSP mode.

---

[SSP Natural]	Natural and smooth sound that gives no listening fatigue but comfort.
[SSP Hear]	A powerful, energetic, live sound.
[SSP Feel]	Player's sound → reproduces the sound on the stage that musicians hear.

---

For more details, please visit the SCION Web site at <http://www.scion.com/>.

## Connecting a Bluetooth Cell Phone

You can connect a Bluetooth-enabled cell phone to the system and enjoy hands-free phoning. You can also use your cell phone for regular calls with the Bluetooth connection.

### ⚠ WARNING


Before connecting the cell phone, always stop your car in a safe location.

### NOTICE

- A Bluetooth-enabled cell phone that supports the HFP profile is required for the operations explained here.
- Make sure and verify that the battery is sufficiently charged before connecting the cell phone.
- Even when using a cell phone that has been connected as a Bluetooth audio player, you will need to carry out the following connection procedures for hands-free phoning.

For the most part, you will be using your Bluetooth cell phone to register the cell phone to the system. For more information, see the instruction manual for your cell phone.

1. Touch [  ] → [Bluetooth] → [Connect Phone] → [Add new].

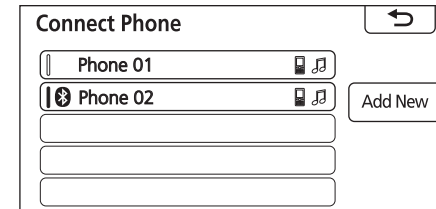

You can connect up to five Bluetooth-enabled cell phones and Bluetooth audio players to the system. If five or more devices have already been connected, you will need to cancel some of these connections. You can accomplish this by touching on the device(s) that you want to cancel.

2. Using your cell phone, search for a Bluetooth-enable device that can be connected, and then select the system.
3. Forward the pass code that appears on the screen from your cell phone.

If the pass code has been sent properly, the cell phone will be connected to the system.

### **Sending your pass key for registration**

1. Touch [👉] → [Bluetooth] → [Connect Phone] → [Add New].  
If a device has already been connected, a screen will appear seeking confirmation of whether this connection is to be cancelled or not. Touch [YES].
2. Using the Bluetooth cell phone, search for the Bluetooth-enabled device and then select this unit ([CAR MULTIMEDIA]).
3. Send the Passkey that appears on the screen from the Bluetooth cell phone to the system.  
If the Passkey has been sent correctly, Bluetooth cell phone will register it to the system and it will be connected.

### **Registering via SSP (Secure Simple Pairing)**

1. Touch [👉] → [Bluetooth] → [Connect Phone] → [Add New].  
If a device has already been connected, a screen will appear seeking confirmation of whether this connection is to be cancelled or not. Touch [YES].
2. Using the Bluetooth cell phone, search for the Bluetooth-enabled device and then select this unit ([CAR MULTIMEDIA]).
  - For some types of devices and authentication methods, number authentication or other means of verification may be required.
  - Bluetooth 2.0 or higher is required

## Using Hands-Free Phoning

Explanations regarding how to use hands-free phoning appear below. You will be able to maintain direct control of your cell phone even when using hands-free phoning.

- **Making Calls**


Touch [  ] to display the Phone screen. You can make outgoing calls using the PHONE screen.


\* This is the same as pressing [Off Hook] on the steering switch.


When the phone and the microphone are not connected, it is not possible to make a call.

- **Dialing phone numbers**

Make phone calls by touching on the number keypads on the screen to dial phone numbers.

Dial phone numbers by touching on the number keypads and then touching [  ] on the Phone screen.


Touch [  ] to cancel the previous number.

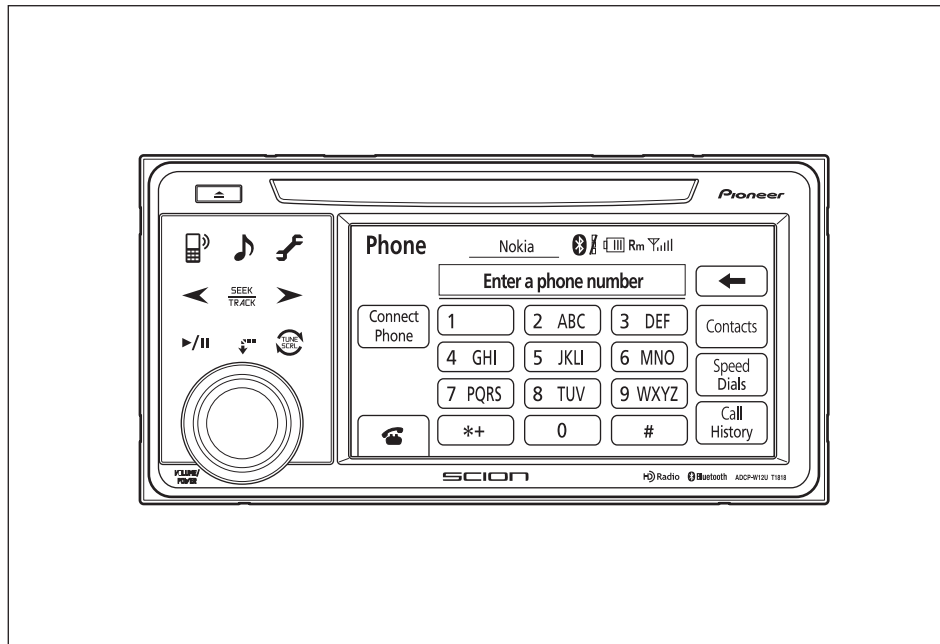

## Making calls to selected contacts

Contacts includes data such as phone numbers and names that are imported from the address book of the cell phone to the system. To use Contacts, you must first import the cell phone data – which will function as contact information – to the system. (Refer to Editing Contacts on page 64.)

1. Touch [Contacts] on the Phone screen.
2. Touch the desired person's name on the Contacts screen.

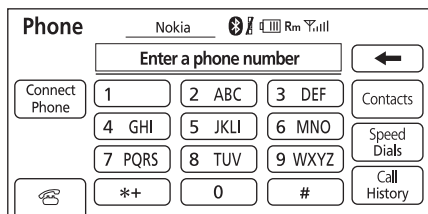


- \* Touch [Transfer] to import the Contacts (Refer to page 64).
  - \* Touch [Options] to edit Contacts and Speed Dial numbers.
  - \* Touch the group of letters on the right to display the corresponding names.
3. If more than one number has been registered for this person, touch one of the numbers and then touch [☎].

## Making calls to selected Speed Dial numbers

The Speed Dial function allows you to quickly call up frequently dialed phone numbers.

You can make calls by selecting numbers registered on Speed Dial. You must first register the phone number to Speed Dial. For more information, see Registering telephone numbers on Speed Dial on page 65.

1. Touch [Speed Dial] on the Phone screen.
2. Touch on any Speed Dial number that has been registered.

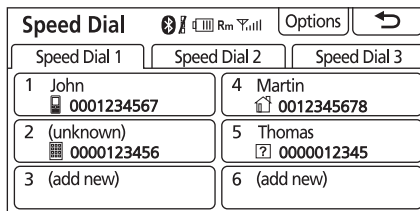


- \* Speed Dial consists of [Speed Dial1] - [Speed Dial3], which are further divided up into six numbers each. Touch on [Speed Dial1] - [Speed Dial3] to toggle between the tabs.
- \* Touch [Options] to edit the Speed Dial entries. For more information, refer to Editing Speed Dial Entries on page 65.

## Making calls to numbers selected from the call history

You can make calls by selecting phone numbers from the call history.


1. Touch [Call History] on the Phone screen.
2. Touch a phone number on Call History, and then touch [☎].

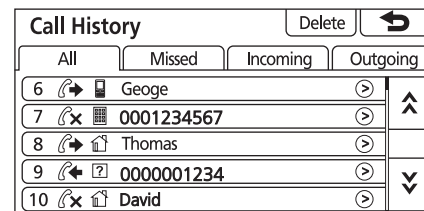

- \* Touch [Add Speed Dial] after touching on a number to register this phone number to Speed Dial.
- \* Touch [All] to display the history of all calls.
- \* Touch [Missed] to display the history of missed calls.
- \* Touch [Incoming] to display the history of incoming calls; touch [Outgoing] to display the history of outgoing calls.
- \* Touch [Delete] to select phone numbers to delete from the Call History. Touch [All Delete] to delete all phone numbers.

## Taking Phone Calls

The following screen appears when a call comes in.

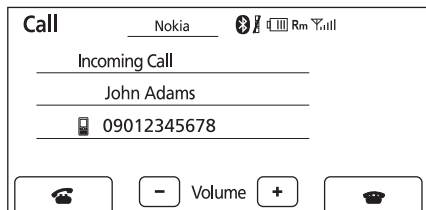

Use to answer the phone.



Use to hang up without answering the phone.

[Volume]

Use to adjust the ring volume. Touch [+] to increase the volume; touch [-] to decrease the volume.

## The Steering Switch (On Hook/ Off Hook) and Microphone

After connecting the hands-free device, you can use the steering switch for simple hands-free phoning operations.



(Off Hook)

When there are no calls, press this icon to display the Phone screen.

Press to answer incoming phone calls. When the phone is set to Call Waiting and a call comes in while you are on the phone, use this to toggle between the calls.




(On Hook)

Press this icon to avoid incoming calls. Press to hang up during a call.

The location of the microphone is shown below. You don't need to talk directly into the microphone; your voice will successfully reach the microphone when you talk in a normal, sitting position as you drive.

## Settings You Can Establish While Using the Phone

When you are on the phone, the following screen appears.

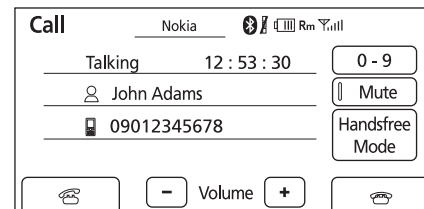

When the phone device is set up for call waiting and a call comes in on another line, use this function to switch to this other call.



Hangs up the phone.  
\* This is the same as pressing [On Hook] on the steering switch.

[Volume]

Adjusts the call volume. Touch [+] to increase the volume; touch [-] to decrease the volume.

[0-9]	Use this to forward the tone data. Input the tone data and touch [Send].
[Mute]	Mutes the dial tone.
[Handsfree Mode]	Touch this to change to hands-free phoning when directly manipulating the cell phone during a call.

- **Changing to a Phone That Will be Connected to the System**

Up to five Bluetooth devices can be registered to the system. You can switch the phone to be used for hands-free phoning to another phone that has been registered. Touch [Connect Phone], and then touch on the phone that you want to connect.

## **Setting Up the Phone**

An explanation regarding how to set up hands-free phoning follows.

- **Establishing the Sound Settings for Hands-Free Phoning**

You can adjust the call and ring tone volumes, as well as the ring tone type.

1. Touch [📞] → [Phone] → [Phone Sound Settings].
2. Touch any of the setting items below to establish the sound settings.

Touch [Default] to return to the factory settings.

[Call Volume]	Touch [+] to increase the call volume incrementally; touch [-] to decrease the call volume incrementally. Touch [OK] after establishing the Call Volume settings.
---------------	---

[Ring Tone Volume]	Touch [+] to increase the ring tone volume incrementally; touch [-] to decrease the ring tone volume incrementally. Touch [OK] after establishing the Ring Tone Volume settings.
--------------------	--

[Ring Tone]	Touch on one of [Tone 1] - [Tone 3] to select the ring tone, and then touch [OK].
-------------	---

3. Touch [Save].

- **Setting Up Automatic Updates for Contacts**

You can set up an option for automatically updating contacts in the system using the address book of the cell phone that is connected.

1. Touch [📞] → [Phone] → [Phonebook].
2. Touch [Automatically Download Contacts], and then touch either [On] or [Off].


## Using the Phonebook


In this manual, Phonebook is an all-inclusive term that refers to the following components.

- **Contacts**, which are made up of phone numbers and other data imported from the address book of the cell phone.
- **Speed Dial**: this function registers phone numbers that are used frequently so that they can be called up easily.
- **Call History**: this is a record of outgoing calls, incoming calls and missed calls.

### NOTICE

Even if a telephone number containing 25 or more digits is recorded in the cell phone's address book, the Phonebook can only hold numbers containing 24 digits or less.

Touch [] → [Phone] → [Phone book] to display the [Phonebook Settings] screen.

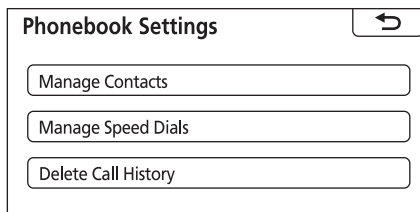

### • Editing Contacts

You can register up to 1 000 contacts.  
Importing Contacts

1. For PBAP-enabled phones  
Touch [Manage Contacts] → [Transfer Contacts] → [Update Contacts] on the Transfer Contacts screen.  
Automatically updates the phonebook.

2. For OPP-enabled phones  
Touch [Manage Contact] → [Transfer Contacts]  
This is the same as touching [Phone] → [Contacts] → [transfer]

[Replace Contacts]	Substitutes contacts that already exist with the contacts that were imported.
[Add Contacts]	Adds the contacts that were imported to the contacts that already exist.

Automatically begins the process of forwarding the phonebook if it has never been sent.

If the phonebook data has already been forwarded, the following selection screen is displayed.

### Deleting contacts

You can select the phone numbers of contacts to be deleted.

1. Touch [Manage Contacts] → [Delete Contacts] on the Contacts Settings screen.
2. Touch the telephone number that you want to delete from the Contacts List.  
\* To delete all contacts, touch [All Delete].



## • Editing Speed Dial Entries

The Speed Dial function allows you to quickly call up frequently dialed phone numbers. You can register up to 18 phone numbers on Speed Dials.

## Registering telephone numbers on Speed Dial

Select phone numbers to be registered to Speed Dial from Contacts or the Outgoing Call History.

1. After touching [Manage Speed Dials] on the Phonebook Settings screen, touch either [New Speed Dial from Contacts] or [New Speed Dial from Call History].

[New Speed Dial from Contacts]	Registers Speed Dial entries from Contacts. First touch the contact that you want to register and then touch the number you want to register.
--------------------------------	---

[New Speed Dial from Call History]	Registers Speed Dial entries from the Call History. Touch the telephone number that you want to register to Speed Dial.
------------------------------------	---

2. Touch the location you want to register on the Select Speed Dial Location screen.

\* Touch on [Speed Dial1] - [Speed Dial3] to toggle the tabs.

## Deleting Speed Dial entries

Cancel phone numbers that have been registered on Speed Dial.

1. Touch [Manage Speed Dials] → [Delete Speed Dial] on the Speed Dials screen.
2. Touch on the number that you want to delete from Speed Dial.

\* To delete all Speed Dial entries, touch [All Delete].

## • Deleting Call Histories

You can select the histories of recent calls, missed calls and outgoing calls and then delete these call histories.

1. Touch [Manage Speed Dials] → [Delete Call History] on the Phonebook Settings screen.
2. Touch on one of the selections from below.

[Delete Resent Calls]	Selects the history of recent calls for deletion.
-----------------------	---

[Delete Missed Calls]	Selects the history of missed calls for deletion.
-----------------------	---

[Delete Incoming Calls]	Selects the history of incoming calls for deletion.
-------------------------	---

[Delete Outgoing Calls]	Selects the history of outgoing calls for deletion.
-------------------------	---

3. Touch on the histories that you want to cancel.


\* To delete all call histories, touch [All Delete].


## Using Voice Recognition

With the voice recognition function, you can control the system using only your voice.

### NOTICE

- When using voice recognition, close the windows and take other steps to eliminate background noise.
- You don't need to talk directly into the microphone; your voice will successfully reach the microphone when you talk in a normal sitting position as you drive.

1. You can activate the voice recognition mode by continuing to touch [  ] for 0.8 seconds or longer.
2. Following the screen display prompts, give the voice commands in a clear voice. (For example, say "Dial 0123456789" to dial the number 0123456789.)

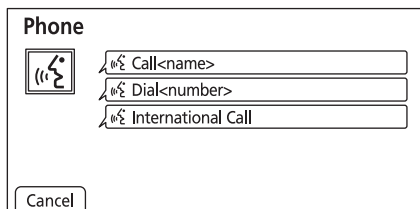

The screenshot shows a 'Phone' screen with a microphone icon and three input fields. The first field is labeled 'Call <name>', the second 'Dial <number>', and the third 'International Call'. A 'Cancel' button is at the bottom left.

\* If you say the words in the "<>" that are shown on the screen, a screen providing you with help-prompts will appear.

### • Voice Recognition Commands

Voice commands	Action
Call Name	Call Name screen will appear.
Dial by name	Phone Name screen will appear.
Dial Name	Phone Name screen will appear.
Call <contact name>	Call Name screen will appear.
Call <contact name> at <mobile/home/work/other>	Call Name screen will appear.
Dial Number	Dial Number screen will appear.
Call Number	Dial Number screen will appear.
Dial by number	Dial Number screen will appear.
Phone Number	Dial Number screen will appear.
Dial <phone number>	Dial Number screen will appear.
International Call	International Call screen will appear.

<contact name>	Enter the contact name on the Call Name screen.
<contact name> at <mobile/home/work/other>	Enter the contact name on the Call Name screen.
<0 - 9/800>	Enter the phone number on the Dial Number screen.
<0 - 9/*/#/+>	Enter the phone number on the International Call screen.
<0 - 9/*/#>	Enter the numeric character or symbol on the Send Tones screen.
Send	Sends the tone
Go Back	Returns to the previous operation

## MP3 and WMA files

- MP3 is short for MPEG Audio Layer 3 and refers to an audio compression technology standard.
- WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player.
- With some applications used to encode WMA files, this unit may not operate correctly.
- With some applications used to encode WMA files, album names and other text information may not be correctly displayed.
- This unit allows playback of MP3/WMA files on CD-ROM, CD-R, CD-RW discs and USB portable audio player/USB memory. Disc recordings compatible with level 1 and level 2 of ISO9660 and with the Romeo and Joliet file system can be played back.
- MP3/WMA files are not compatible with packet write data transfer.
- The maximum number of characters which can be displayed for a file name, including the extension (.mp3, .wma), is 32, from the first character.
- The maximum number of characters which can be displayed for a folder name is 32.
- In case of files recorded according to the Romeo file system, only the first 32 characters can be displayed.

- The folder selection sequence for playback and other operations becomes the writing sequence used by the writing software. For this reason, the expected sequence at the time of playback may not coincide with the actual playback sequence. However, there also is some writing software which permits setting of the playback order.

### IMPORTANT

- **When naming an MP3/WMA file, add the corresponding filename extension (.mp3, .wma).**
- **This unit plays back files with the filename extension (.mp3, .wma) as an MP3/WMA file. To prevent noise and malfunctions, do not use these extensions for files other than MP3/WMA files.**

## MP3 additional information


- Files are compatible with the ID3 Tag Ver. 1.0, 1.1, 2.2, 2.3 and 2.4 formats for display of album (disc title), track (track title), artist (track artist) and comments. Ver. 2.x of ID3 Tag is given priority when both Ver. 1.x and Ver. 2.x exist.
- The emphasis function is valid only when MP3 files of 32 kHz, 44.1 kHz and 48 kHz frequencies are played back. (16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz sampling frequencies can be played back.)
- There is no m3u playlist compatibility.
- There is no compatibility with the MP3i (MP3 interactive) or mp3 PRO formats.
- The sound quality of MP3 files generally becomes better with an increased bit rates. This unit can play recordings with bit rates from 8 kbps to 320 kbps, but in order to be able to enjoy sound of a certain quality, we recommend using only discs recorded with a bit rate of at least 128 kbps.

## WMA additional information

- This unit plays back WMA files encoded by Windows Media Player.
- You can only play back WMA files in the frequencies 32 kHz, 44.1 kHz and 48 kHz.
- The sound quality of WMA files generally becomes better with an increased bit rate. This unit can play recordings with bit rates from 48 kbps to 320 kbps (CBR) or from 48 kbps to 384 kbps (VBR), but in order to be able to enjoy sound of a certain quality, we recommend using discs recorded with a higher bit rate.
- This unit doesn't support the following formats.
  - Windows Media Audio 9 Professional (5.1ch)
  - Windows Media Audio 9 Lossless
  - Windows Media Audio 9 Voice

## About folders and MP3/WMA files

- An outline of a CD-ROM and USB portable audio player/USB memory with MP3/WMA files on it is shown below. Subfolders are shown as folders in the folder currently selected.

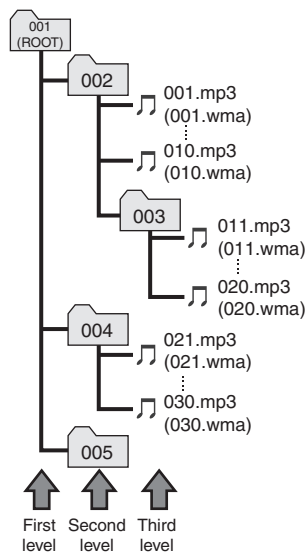

## NOTES

- This unit assigns folder number. The user can not assign folder numbers.
- MP3/WMA files in the USB portable audio player/USB memory are played in the same order as they were copied to the USB portable audio player/USB memory.
- To specify the order in which files in the USB portable audio player/USB memory are played, we recommend the following method.
  - 1 Using a personal computer, add a number indicating the playback order in front of the file name, e.g. [001xxx.mp3] or [099yyy.wma].
  - 2 Put the files into a folder.
  - 3 Copy the folder to the USB portable audio player/USB memory. Depending on the computer environment, it may not be possible to specify the order by this method.

- It is not possible to check folders that do not include MP3/WMA files. (These folders will be skipped without displaying the folder number.)
- MP3/WMA files in up to 8 tiers of folders can be played back. However, there is a delay in the start of playback on discs and USB portable audio player/USB memory with numerous tiers. For this reason we recommend creating discs with no more than 2 tiers.
- It is possible to play back up to 192 folders on one disc.
- It is possible to play back up to 255 folders on one USB portable audio player/USB memory.

## ***USB portable audio player/ USB memory compatibility***

- USB version: 2.0, 1.1 and 1.0
- USB data transfer rate: full speed
- USB Class: MSC (Mass Storage Class) device
- Protocol: bulk
- Minimum amount of memory: 256 MB
- Maximum amount of memory: 250 GB
- File system: FAT32 and FAT16
- Supply current: 500 mA

### **NOTES**

- Partitioned USB memory is not compatible with this unit.
- Depending on the kind of USB portable audio player/USB memory you use, this unit may not recognize the USB audio player/USB memory or audio files may not be played back properly.

- This unit can play back files in the USB portable audio player/USB memory that is USB Mass Storage Class. However, copyright protected files that are stored in above-mentioned USB devices cannot be played back. (If the iPod is connected to this unit, file playback condition depends on the iPod specifications.)
- You cannot connect a USB portable audio player/USB memory to this unit via a USB hub.
- Not all multimedia portable devices are compatible.

## Terms

### **Packet write**

This is a general term for a method of writing on CD-R, etc. at the time required for a file, just as is done with files on floppy or hard discs.

### **Bit rate**

This expresses data volume per second, or bps (bits per second) units. The higher the rate, the more information is available to reproduce the sound. Using the same encoding method (such as MP3), the higher the rate, the better the sound.

### **Multi-session**

Multi-session is a recording method that allows additional data to be recorded later. When recording data on a CD-ROM, CD-R or CD-RW, etc., all data from beginning to end is treated as a single unit or session. Multi-session is a method of recording more than 2 sessions in one disc.

### **CD-DA**

CD-DA is an abbreviation of Compact Disc Digital Audio. It refers to the uncompressed format of regular CDs.

### **ID3 Tag**

This is a method of embedding track-related information in a MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 Tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

### **ISO9660 format**

This is the international standard for the format logic of CD-ROM folders and files. For the ISO9660 format, there are regulations for the following two levels.

Level 1:

The file name is in 8.3 format (the name consists of up to 8 characters, half-byte English capital letters and half-byte numerals and the "\_" sign, with a file-extension of three characters).

Level 2:

The file name can have up to 31 characters (including the separation mark "." and a file extension). Each folder contains less than 8 hierarchies.

Extended formats

Joliet:

File names can have up to 64 characters.

Romeo:

File names can have up to 128 characters.

### **m3u**

Playlists created using the "WINAMP" software have a playlist file extension (.m3u).

### **MP3**

MP3 is short for MPEG1 & 2 Audio Layer3. It is an audio compression standard set by a working group (MPEG) of the ISO (International Standards Organization). MP3 is able to compress audio data to about 1/10 the level of a conventional disc.

### **WMA**

WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.

## CD player and care

- Use only CDs that have either of the two Compact Disc Digital Audio marks as shown below.



 
- Use only normal, round CDs. If you insert irregular, non-round, shaped CDs they may jam in the CD player or not play properly.



- Check all CDs for cracks, scratches or warping before playing. CDs that have cracks, scratches or are warped may not play properly. Do not use such discs.
- Avoid touching the recorded (non-printed) surface when handling the disc.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and do not expose the discs to high temperatures.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- To clean a CD, wipe the disc with a soft cloth outward from the center.



- If the heater is used in cold weather, moisture may form on components inside the CD player. Condensation may cause the CD player to malfunction. If you think that condensation is a problem, turn off the CD player for an hour or so to allow it to dry out and wipe any damp discs with a soft cloth to remove the moisture.
- Road shocks may interrupt CD playback.
- Never put a label, tape or scratches on a disc. These will prevent the disc from being played.



## CD-R and CD-RW discs

- When CD-R/CD-RW discs are used, playback is possible only for discs which have been finalized.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc., on the lens of this unit.
- Playback of discs recorded on a personal computer may not be possible, depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)

- Playback of CD-R/CD-RW discs may become impossible in case of direct exposure to sunlight, high temperatures, or the storage conditions in the car.
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this unit (in the case of audio data (CD-DA)).
- This unit conforms to the track skip function of the CD-R/CD-RW disc. The tracks containing the track skip information are skipped automatically (in case of audio data (CD-DA)).
- If you insert a CD-RW disc into this unit, time to playback will be longer than when you insert a conventional CD or CD-R disc.
- Read the precautions accompanying the CD-R/CD-RW discs before use.
- Recordings on CD-R/CD-RW can not be played back using the DDCD (Double Density CD) system.
- This unit will not play back SACD (Super Audio CD).

## **DualDiscs**

- DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.
- Since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit.
- Frequent loading and ejecting of a DualDisc may result in scratches on the disc. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit.
- Please refer to the information from the disc manufacturer for more detailed information about DualDiscs.



## **Error indications**

If the CD player does not work, the CD stops suddenly during playback, or a similar problem occurs, an error indication will appear on the display. The cause of the trouble will be indicated by an error number, and you should check the corresponding item shown in the table below.

<b>Check DISC</b>	When the disc is dirty or has been inserted upside-down. Check the disc.
<b>DISC Error</b>	There is probably an electrical or mechanical fault in the CD player. Contact your Scion dealer and ask for repair.
<b>No music files found.</b>	This appears when an MP3/WMA file format is unusual and not supported by this unit like WAV format recordings. Please check the MP3/WMA file format.

When problems occur while the iPod is connected to this unit, a message will appear on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

<b>Please check the iPod firmware version.</b>	This appears when an iPod software version is unusual and not supported by this unit. Please check the iPod software version.
<b>Connection error. Please consult your Owner's Manual for instructions on how to connect the iPod.</b>	Communication failure. Or, the overcurrent was detected. Disconnect the cable from the iPod. Once the iPod main menu appears in the iPod display, connect the cable again.
<b>There are no songs available for playback. Please load compatible media to your iPod.</b>	No songs. Transfer the songs to the iPod.
<b>No items available.</b>	There are no songs in the selected list. Select a list that contains songs.
<b>iPod full. Tags cannot be stored.</b>	Because the capacity of iPod was full, Tag was not able to be transferred from this machine.
<b>Transferring data from the iPod. Please wait ...</b>	Because this unit is acquiring data from iPod, it is not possible to operate it. Wait until the data acquisition finished.
<b>iPod authorization failed.</b>	This appears when the iPod is unusual and not compatible with this unit. Please check the iPod compatibility.

When problems occur with the USB portable audio player/USB memory is connected to this unit, a message will appear on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

<b>No compatible audio files found. Please add compatible files to your USB device.</b>	This appears when an MP3/WMA file format is unusual and not supported by this unit like WAV format recordings. Please check the MP3/WMA file format.
<b>Connection error. Please consult your Owner's Manual for instructions on how to connect the USB device.</b>	Communication failure. Or, the overcurrent was detected. Disconnect the USB portable audio player/USB memory and connect again.

When problems occur with the Bluetooth audio player is connected to this unit, a message will appear on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

<b>Audio player battery level is low.</b>	The battery power of the Bluetooth audio player connected with this unit is a little.
<b>Music tracks not supported. Please check your audio player.</b>	This appears when an MP3/WMA file format is unusual and not supported by this unit like WAV format recordings. Please check the MP3/WMA file format.

When problems occur with the XM tuner or HD Radio broadcast, a message will appear on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

<b>Check Antenna</b>	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short-circuit occurring in the antenna or the surrounding antenna cable. Make sure that there is nothing unusual with the antenna or antenna cable.
<b>No Signal</b>	XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
	Even if SPS is received when HD Radio is not active, it doesn't sound it. Touch [HD Radio] to activate HD Radio.
<b>Off Air</b>	The channel you selected is not broadcasting any programming. Select another channel.
<b>Updating</b>	The unit is updating the encryption code. Wait until the update is finished.
<b>The maximum of 50 HD Radio tags have been stored. Please connect your iPod to transfer these tags before storing more tags</b>	Because the HD radio tags saved in this unit had already been saved up to the number (50), the HD radio tags was not able to be saved though [Tag] was touched when iPod was unconnected.
<b>Storing tag information. Please wait...</b>	Unit is acquiring the HD radio tags. Wait until the unit has saved the HD radio tags.

The XM Listener Care Center is also available on the phone, please call (800)-967-2346 during the following hours:

Mon - Sat: 8 AM - 11 PM EST Sun: 8 PM - 8 PM EST

## Changing or disconnecting your battery

### About ASL setting

If the battery is changed or disconnected, you cannot setup the ASL setup option until the vehicle is moving.

## Specifications

### General

Power source . . . . . 13.2 V DC  
(10.5 V to 16.0 V allowable)  
Grounding system . . . . . Negative type  
Maximum current consumption . . . 18 A  
Dimensions (W × H × D)  
. . . . . 205 × 104 × 171 mm  
(80 in.3/8 × 41 in. × 67 in.3/8)  
Weight . . . . . 2.06 kg  
(4.54155 lbs.)

### Audio

Tone controls  
(Bass) . . . . . Frequency : 80 Hz  
Level : ±10 dB  
(Treble) . . . . . Frequency : 10 kHz  
Level : ±10 dB  
Maximum power output . . . . . 50 W × 4  
Load impedance . . . . . 4 Ω

### CD Player

System . . . Compact disc audio system  
Usable discs . . . . . Compact disc  
Signal format  
Sampling frequency . . . . . 44.1 kHz  
Number of quantization bits  
. . . . . 16; linear  
Number of channels . . . . . 2 (stereo)  
MP3 decoding format  
. . . . . MPEG1 & 2 Audio Layer 3  
WMA decoding format  
. . . . . Ver.7, 7.1, 8, 9, 10.11 (2ch audio)  
(Windows Media Player)

### USB

Specification . . . . . USB 2.0 High speed  
Supply current . . . . . 500 mA  
Maximum amount of memory . . 250 GB  
File system . . . . . FAT16, FAT32  
MP3 decoding format  
. . . . . MPEG-1 & 2 Audio Layer 3  
WMA decoding format  
. . . . . Ver. 7, 7.1, 8, 9, 10, 11 (2ch audio)  
(Windows Media Player)

### AM tuner

Frequency range  
. . . . . 530 kHz to 1 710 kHz (10 kHz)

 
 
 
 
 
 
 
 
### FM tuner

 
 
 
 
 
 
Frequency range  
. . . . . 87.75 MHz to 107.9 MHz

### CEA2006 Specifications



Power output . . . 16W RMS × 4 Channels  
(4 Ω and ≤ 1% THD+N)  
S/N ratio . . . . . 90 dBA  
(reference: 1 W into 4 Ω)





<KOMZX> <11A00000> <CVH-2018ZT>  
80

<CRB3643-B/S> UC

<CRB3643-B/S>80