

AKAI

OPERATING INSTRUCTIONS

**37" Wide-Screen LCD TV
LCT3785TA**

AKAI



Safety Guidelines

Caution: Always use a power cable is properly grounded. Please use the AC cords listed below for each area:

USA..... UL
Canada..... CSA/cUL

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Warning

To assure continued FCC compliance, the user must the provided grounded power supply cord and the provided shielded video interface cables to connect to this equipment. Also, any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Important Safeguards

Before using your TV, please read these instructions completely, and keep this manual for future reference.

Carefully observe and comply with all warnings, cautions and instructions placed on the unit or described in the operating instructions or service manual.

The User Manual uses the following symbols, to ensure a safe operation and prevent any damage to operators or properties:



WARNING ----- Ignorance or inappropriate use may cause damage to the product.



ATTENTION --- Ignorance or inappropriate use may cause injury to the user.

Examples:



Prohibition



Warning (Attention) symbol (indicating "Electric Shock").



WARNING

Never place TV on an unstable cart, stand, or table. The TV may fall, causing serious personal injury, death, or serious damage to the TV.



Never overload wall outlets and extension cords.
Never allow anything to rest on or roll over the power cord, and never place the TV where the power cord is subject to wear or abuse.





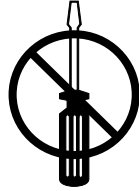






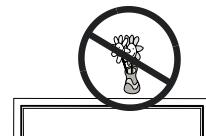

Keep the product away from moisture:
- Do not expose this appliance to rain or moisture.
- If water penetrates into the product, stop the operation; unplug the connector and contact with your dealer. Continuous use in this case may result in fire or electric shock.



WARNING

Never place item such as vases, aquariums, or candles on top of the TV.



<p>Never use a damaged power cord: Heavy objects, heat, or tensile force may damage the power cord and cause fire or electric shock.</p>	
<p>Never block or cover the slots or openings, in the TV cabinet back, bottom, and sides. Never place the TV:</p> <ul style="list-style-type: none"> - on a bed, sofa, rug, or similar surface; - too close to drapes, curtains, or walls; or - in a confined space such as bookcase, built-in cabinet, or any other place with poor ventilation. <p>The slots and openings are provided to protect the TV from overheating and to help maintain reliable operation of the TV.</p>	
<p>Do not use the product if any abnormality occurs: If any smoke or odor becomes apparent, unplug the connector and contact the manufacturer immediately. Do not try to repair the product by yourself.</p>	
 <p>WARNING</p>	
<p>Avoid using dropped or damaged appliances: If the product is dropped and the housing is damaged, the internal components may function abnormally. Unplug the connector immediately and contact the manufacturer for repair. Continuous use of the product may cause fire or electric shock.</p>	
 <p>WARNING</p>	
<p>While it is thundering, do not touch the connecting cables or apparatus.</p>	
 <p>ATTENTION</p>	
<p>Do not install the product close to smoke or moisture: Fire or electric shock may be caused when the product is installed close to smoke or moisture. Do not installed the product in an area with heavy dust or high humidity: Fire or electric shock may be caused when the product is installed in a place with heavy dust or high humidity.</p>	
<p>Instructions for moving the product: Ensure that the power connector and any other leads are unplugged before moving the product.</p>	

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

The power cable should be kept away from heat sources:
The heat produced by any heat source may melt the covering of the power cable.



Hold the power connector when removing the power cable:
Pulling the power cable itself may damage the wires inside the cable and cause fire or electric shock.

Unplug the connector



Do not touch the connector with wet hands:
To avoid risk of electric shock.



ATTENTION

Insert batteries in accordance with instructions:
Insert the batteries with correct polarities (positive \oplus and negative \ominus).
Incorrect polarities may cause breakage and leakage of the batteries, hurt operators and contaminate the remote controller.



Do not block or cover the vents:
Blocking the vents may cause overheating and fire. Do not install the product in a place with little or no ventilation. Never cover the vents with towels, blankets or dusters.




Unplug the connector:
Unplug the power connector when the product will not be used for a long time.



Unplug the connector

Always make sure the antenna system is properly grounded to provide adequate protection against voltage surges and built-up static charges.(see Section 810 of the National Electric Code.)

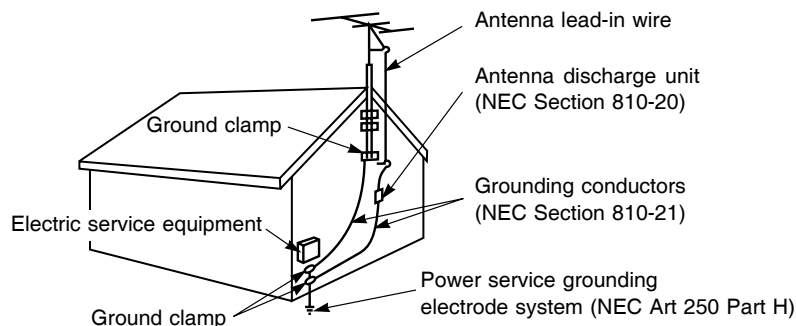


Use extreme care to make sure you are never in a position where your body (or any item you are in contact with, such as a ladder or screwdriver) can accidentally touch overhead power lines. Never locate the antenna near overhead power lines or other electrical circuits. Never attempt to install any of the following during lightning activity:

a). an antenna system; or b).cables, wires, or any home theater component connected to an antenna or phone system.

◆ Notes others

- Although the LCD screen is made with high-precision technology and has effective pixels of 99.99% or more, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
- LCD (Liquid Crystal Display) may cause interference in image, sound, etc. of the other electronic equipment that is easy to receive electromagnetic waves (i.e. AM radios and video equipment) under certain installed condition. In particular, it may affect electronic equipment beyond the residential until where a LCD TV is used.
- The screen on this TV is manufactured from glass. To prevent damage, never strike the glass with a sharp or heavy object.
- Your LCD television contains a small amount of Mercury. When the television is no longer useful, please follow local electronic waste guidelines for proper disposal.
- If you have the LCD screen facing to the sun, the LCD screen will be damaged. Locate the TV in the place such away from windows side or out side of the rooms with windows.
- This product is designed for indoor use only.
- Operating environment:
Temperature: 5°C ~30°C
Humidity: 20% to 85% non-condensing
Atmospheric pressure: 800 to 1100hPa

Precaution

1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with dry cloth.
 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer.
 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. The apparatus shall not be exposed to dripping or splashing and that no objected filled with liquids, such as vase, shall be placed on the apparatus.

Contents

Safety Guidelines	1	Adjustment of "Balance"	24
Important Safeguards.....	2	Selection of "Surround"	24
Precaution	5	Using the Setup Menu	25
1. Before use.....	7	Selection of "Language".....	25
1.1 Open the Package	7	Setting of "V-Chip"	25
1.2 Installation	7	Selection of "Closed Caption"	29
2. Product Features	8	Selection of "Blue Back"	30
3. Supplied Accessories.....	8	Using "Default"	30
4. Names and Functions of Parts	9	Using the TV Menu(Analog)	31
4.1 Side View	9	Using the "Tuner Mode".....	31
4.2 Front View.....	9	Using the "Searching"	31
4.3 Rear View	10	Using the "TV"	31
4.4 Remote Control.....	11	Using the "Channel Skip".....	31
5. Connect Accessory Devices	13	Using the "Channel Name"	32
6. Basic Operation	17	Selecting Channel.....	32
6.1 Power ON/OFF	17	Channel Preview.....	32
6.2 Selection of Input Mode.....	17	Using the Geometric Menu	33
6.3 Other Function	17	Using "Contrast"	33
6.4 Using the PIP/PBP feature	18	Using "Brightness"	33
6.5 OSD Option Adjustment	20	Using "Color Temperature"	33
Using the Video Menu	21	Using "Auto Setting".....	34
Adjustment of "Contrast".....	21	Using "Phase"	34
Adjustment of "Brightness"	21	Using "Manual Clock"	34
Adjustment of "Saturation".....	21	Using "Display Adjustment"	34
Adjustment of "Hue"	21	Using the DTV Menu(Digital)	35
Adjustment of "Sharpness"	22	Using the "General" Menu	35
Selection of "Phase" setting.....	22	Using the "Caption" Menu.....	37
Selection of "Color Temperature"	22	Setting of "Parental"	38
Selection of "Advance Picture		EPG(Electronic Program Guide).....	39
Adjust"	23	Selecting Channel.....	40
Using the Audio Menu	24	Channel Preview.....	40
Adjustment of "Bass"	24	7. Technical Specification	41
Adjustment of "Treble"	24	8. Support the Signal Mode	42
		9. Cleaning Simple Troubleshooting.	42

1. Before use

The product is a 37" WXGA (WXGA resolution) LCD TV Player. It has passed the UL and cUL safety certifications, and is an ideal product for personal and commercial use. The product is a precise electronic product. Users should read the following instructions carefully to maximize the performance and life span of the product:

1.1 Open the Package

- The product is packaged in a carton together with other standard accessories. Any optional accessories shall be packed separately in another carton.
- Due to the size & weight of the product, it is recommended that it should be moved by a minimum of two people.
- The protective glass and the glass substrate are installed on the front of the product. Since both glasses can be broken and scraped easily, move the product gently. Never place the unit with the glass facing downwards unless it is protected with soft pads.
- When opening the carton, check that the product is in good condition and that all standard accessories and items are included.
- Whenever possible, use the handles on the back of the Display for transport.

1.2 Installation

- Please use caution if wall mounting this product. Follow all directions from the manufacturer of the wall mount and be sure to securely fasten the product to the mount.
While the TV can be wall mounted, improper wall installation may void the warranty.
- Due to the higher power consumption, always use the jack exclusively designed for this product. If an extended line is required, please consult with your service agent.
- The product should be installed on a flat surface to avoid tipping. The distance between the back of the product and the wall should be maintained for proper ventilation.
- Avoid installing the product in the kitchen, bathroom or any other places with higher humidity so as not to shorten the service life of the electronic components.
- Please ensure the product be installed horizontally, any 90 degree clockwise or counterclockwise installation may induce poor ventilation and subsequent component damage.

2. Product Features

The 37" LCD TV Player provides quality image displays and is suitable for a variety of multi media applications:

1. Available input signals
 - The product provides HDMI input connector.
 - The product provides VGA (D-Sub 15 PIN) input connector.
 - The product supports PC images resolutions up to (1024 x 768@60Hz) with a vertical frequency of 60Hz.
 - The product provides component video (RCA) input connectors. It supports the quality input images of DVD and HDTV (480p/720p/1080i).
 - The product provides composite video (RCA) and S-Video (DIN 4 PIN) input connectors.
 - The product provides five sets of stereo audio input connectors, one set of audio output connector (RCA) and one set of SPDIF output connector for DTV.

Note: The support signal mode, please refer to page 42.


2. Power Management Function
The machine provides an automatic power control function.
3. WXGA LCD TV Panel
The WXGA LCD TV panel provides high resolution and high contrast image. The number of pixels is 1366 (H) x 768 (V). The contrast is 1000:1.
4. Others
 - The LCD TV unit provides cool, middle, warm and user color temperature options. The user may customize their favorite color temperature.
 - PIP/PBP Function: The user may watch image from two source at same time.

3. Supplied Accessories

Remote control	1
Batteries (AAA).....	2
Owner's manual (This booklet)	1
Warranty Card	1
Insertion Card.....	1
Power Cord	1
* Screws (M5x55).....	4

* It is used for installation Wall Mount adapter brackets on Back Cover.

When the user buys the Wall Mount from PEERLESS. Please see Fig.1.

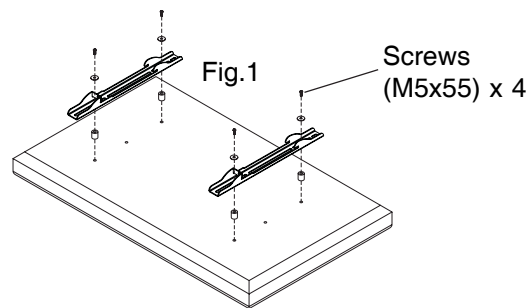


4. Names and Functions of Parts

4.1 Side View

The functions of the buttons are described as follows:

Sketch map

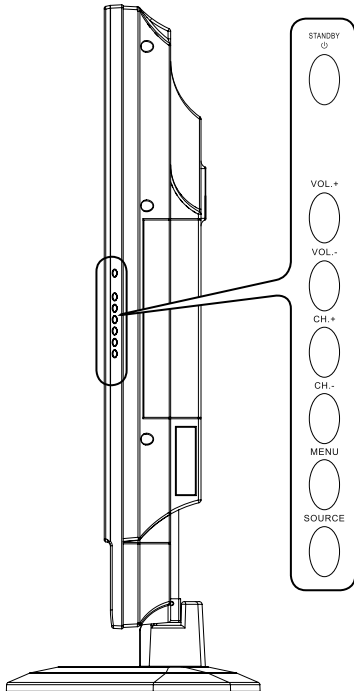

STANDBY: Press \cup (Standby) to turn on and turn off.

VOL.+/-

- A. They are used as \blacktriangleleft / \blacktriangleright buttons in the OSD Menu screen.
- B. Press to adjust the volume.

CH.+/-


- A. They are used as \blacktriangle / \blacktriangledown buttons in the OSD Menu screen.
- B. Press to scan through channels. To scan quickly through channels, press and hold down either channels.

MENU: Press to display the menu. Press again to exit the menu.

SOURCE: Press to cycle display DTV, TV, AV, S-Video, YPbPr1, YPbPr2, VGA, and HDMI source. When display the OSD-menu, press it to confirm.

4.2 Front View

Sketch map

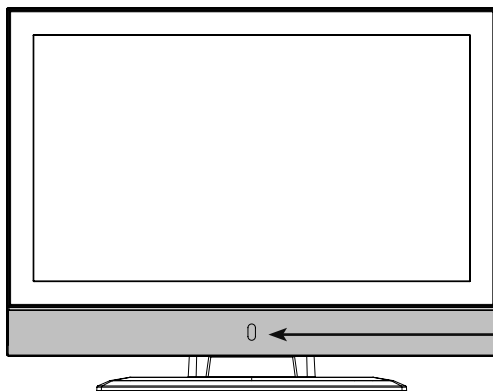


(IR) Infrared Receiver: Receives IR signals from the remote control.

(Power on / Standby) LED: Press \cup (Power) to turn on and off.

Indicator on (Red)
Indicator on (Green)

Standby mode
Power on mode

4.3 Rear View

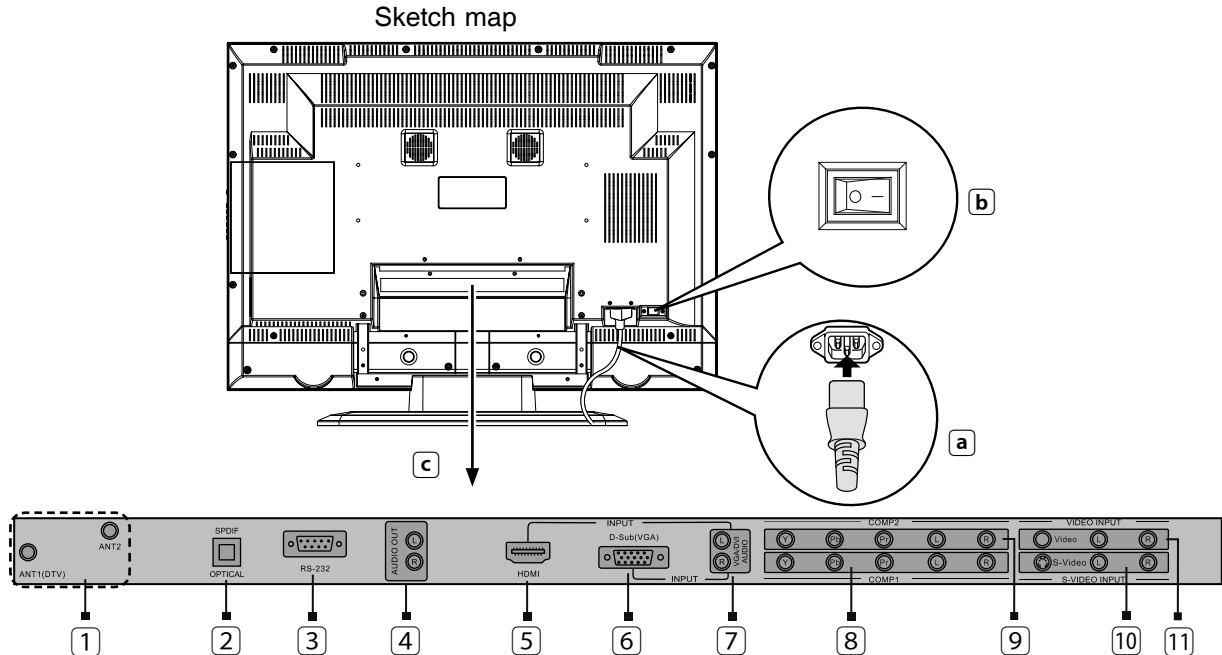

a Push the power switch (O: Off, I: On).


b Use the power cord connect to an earthed 120V, 60Hz AC outlet.

c Signal input and other terminals:

- 1. ANT1 & ANT2:** 75Ω Coaxial connector for Antenna/Cable Network.
Note: ANT 1 is for ATSC (DTV), and ANT 2 is for NTSC. (Refer to page 16.)
- 2. OPTICAL OUTPUT:** Connect the optical output to the optical input connector of the Amplifier. (Only for DTV)
- 3. RS-232:** The D-SUB 9 Pins terminal is used as a control port for serial communication between PC and Panel. (Only for after-sales service & DTV)
- 4. Audio Output:** Connect audio amplifier or other TV set that with audio input.
- 5. HDMI INPUT:** For high quality picture display purposes. Connects to HDMI or DVI (with DVI to HDMI Adapter-not provided) digital output connector of the DVD or HDTV Set-top box.
- 6. D-Sub (VGA) INPUT:** For PC display purposes. Connects to the Mini D-Sub 15 Pins analog output connector of the PC display card.
- 7. VGA/DVI AUDIO INPUT:** Connect the audio input terminal to the audio output terminal of DVD or HDTV Set-top box with VGA/DVI output terminal.
- 8. YPbPr (COMP1) INPUT:** Connect the Component video input terminal to the Component output terminal of the video output device.
YPbPr (COMP1) Audio INPUT: Connect the audio input terminal to the audio output terminal of the video output device.
- 9. YPbPr (COMP2) INPUT:** Connect the Component video input terminal to the Component output terminal of the video output device.
YPbPr (COMP2) Audio INPUT: Connect the audio input terminal to the audio output terminal of the video output device.
- 10. S-Video INPUT:** Connects to the S-Video out jack of your VCR or other video equipment that has S-Video.
S-Video Audio Input: Connect the audio input terminal to the audio output terminal of the S-Video output device.
- 11. Video Input:** Connect the component video input terminal to the video output terminal of the video output device.
Video Audio Input: Connect the audio input terminal to the audio output terminal of the Video output device.

4.4 Remote Control

- 1 **Power** (⏻): Press to turn on and off.
- 2 **Mute** (🔇): Press to mute the sound. Press again or press VOL+/- to restore the sound.
- 3 **0~9 Number Buttons**: In TV mode, press 0~9 to select a channel; the channel changes after 2 seconds.
- 4 **EPG**: Press to display EPG(Electronic Program Guide) menu.
- 5 **Source** (📺): Press to select the signal sources.
- 6 **DTV**: Press to select Digital TV mode.
- 7 **Dot**: Press number buttons with it to select the channels directly in DTV.
- 8 **VOL +/-**: Press to adjust the volume.
- 9 **CH +/-**: Press to changes channels.
- 10 **MTS**: Press to repeatedly to cycle through the Multi-channel TV sound (MTS) options. Such as Stereo, Mono, or Separate Audio Program (SAP broadcast).
- 11 **◀,▲,▼,▶, Enter**: Press ◀,▲,▼,▶ to move the on-screen cursor. To select an item, press Enter to confirm.
- 12 **Exit**: Press to return or exit the OSD menu.
- 13 **Menu**: Press to display the OSD menu.
- 14 **V-Chip**: Press to select the child protect mode.
- 15 **CCD**: Press to select the Closed Caption mode.
- 16 **Freeze**: Press to freeze the picture, press again to restore the picture. (This button is not available for VGA mode.)
- 17 **Display**: Press to display the channel information and it disappear after 3 seconds.
- 18 **Favorite**: Press repeatedly to cycle through the favorite channel list.
- 19 **Add/Erase**: Press to add or delete favorite channel.
- 20 **S.Mode**: Adjust the TV sound by selecting one of the preset factory settings, such as Normal, News, Cinema, Concert, or User.
- 21 **PIC.Size**: Press to change the screen size, such as Full, 4:3, Panoramic. (Note: In VGA mode, it can select picture size is Full. While in DTV mode, it can select picture size is: Full and 4:3.)
- 22 **Recall**: Press to return to previous channel.
- 23 **Sleep**: Press to sleep a time for the TV to turn off automatically, such as 15Min, 30Min, 60Min, 90Min, 120Min and, OFF. To cancel sleep time, press Sleep repeatedly until sleep OFF appears.
- 24 **P.Mode**: Adjust the TV picture by selecting one of the preset factory settings, such as Hi-Bright, User, Cinema, Normal and Vivid.
- 25 **System**: Press repeatedly to cycle through the system options: AUTO, NTSC3.58 and PAL. (This button is activate for AV, S-Video input source.)
- 26 **PIP Pos.:** Press to change the PIP window position under PIP mode.
- 27 **Swap**: Press to switches the Main window or Sub window picture.
- 28 **Zoom**: Press to zoom the image.
- 29 **PIP**: Press this button to enter PIP function.
- 30 **Color Buttons**:
Red: Press this button to access the red item or page.
Blue: Press this button to access the blue item or page.
Green: Press this button to access the green item or page.
Yellow: Press this button to access the yellow item or page.

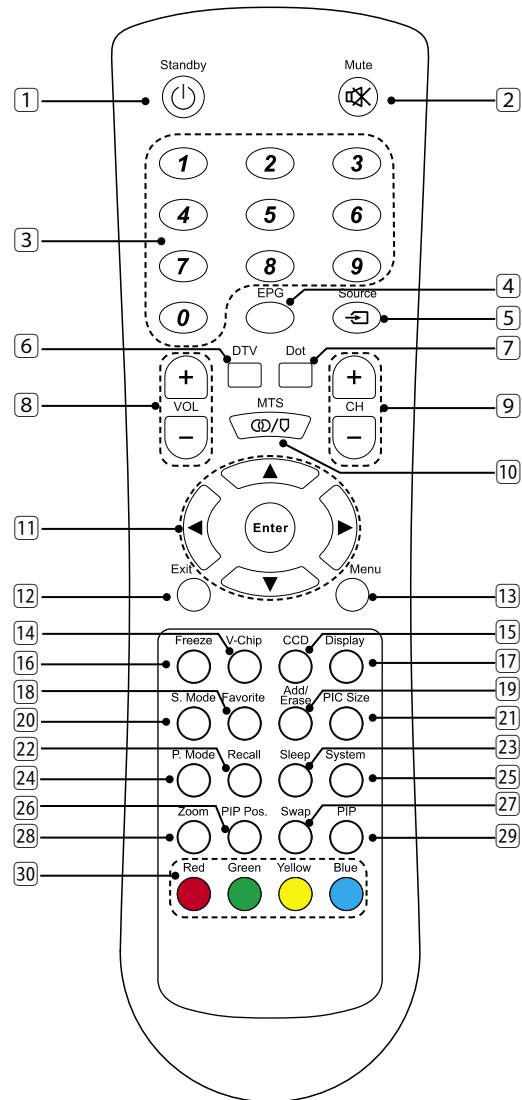


Insertion of Batteries

- Turn the remote control upside down, press and slide off the battery cover.
- Insert two 1.5V (AAA) batteries into the compartment, take care to observe the \oplus and \ominus markings indicated inside.
- Replace the cover and slide in reverse until the lock snaps.

Range of Remote Control


- Ensure the remote control is pointed towards the Remote control window on the display unit.
- No obstacles should be placed between the remote control and the remote control window.
- The effective receiving range for the signal is within 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

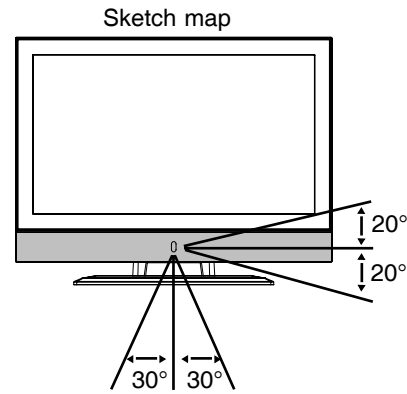

Care For Remote Control


- Avoid spilling liquids on the remote.
- Avoid dropping or otherwise jarring the remote.
- Always store the remote control at dry and normal room temperature place.
- If the remote is not performing satisfactorily, replace the batteries. The batteries should be replaced after one year.
- If the remote control will be idled for a long time (above 1 month) take out the batteries to avoid leakage from the batteries.
- Clean up the entire remote control especially the battery compartment if any leakage found.
- Do not mix using different kind of new and used batteries together to avoid leakage.

 5. Connect Accessory Devices



❑ Connecting a DVD player or other equipment
Switch off LCD TV and external equipment before connecting cables.


1. Connect a DVD player or other equipment's Component Video Out (Y,Pb,Pr/Y,Cb,Cr) to the LCD TV's corresponding Component In (Y,Pb,Pr/Y,Cb,Cr) terminal on COMP1 or COMP2.
2. Connect a DVD player's Audio Out to the TV Component L/R terminal.
3. Press **Power** to turn on the LCD TV, then turn on external equipment.
4. Press **Source** to select YPbPr1 or YPbPr2 signal source.

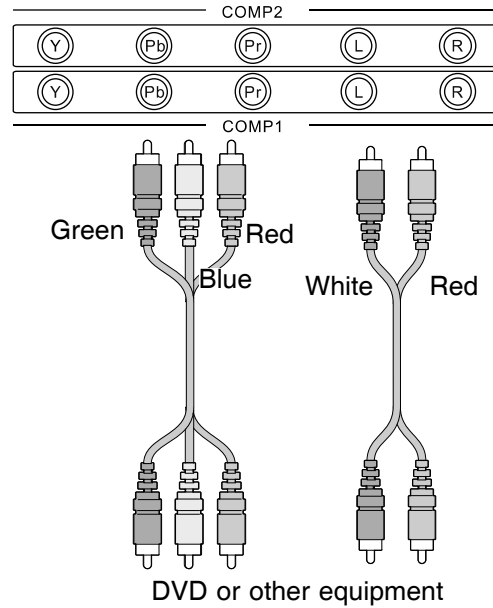

❑ Connecting the Computer

Switch off LCD TV and external equipment before connecting cables.

1. Connect a computer's D-Sub(VGA) Out to the LCD TV's D-Sub(VGA) In terminal.
2. Connect a computer's Audio Out to the LCD TV's VGA/DVI Audio In terminal.
3. Press **Power** to turn on the LCD TV, then turn on external equipment.
4. Press **Source** to select VGA signal source.

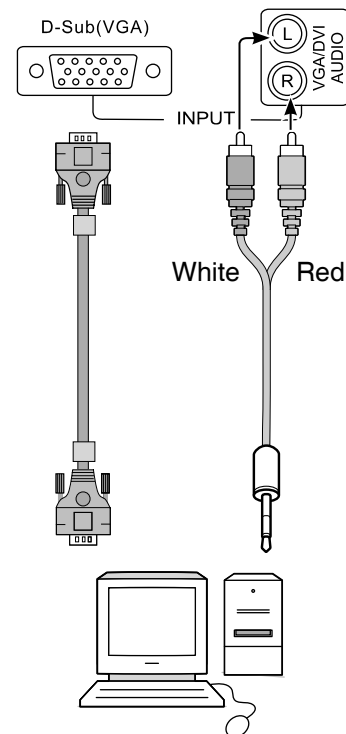

OPERATING INSTRUCTIONS

CONNECT ACCESSORY DEVICES



Connecting the DVD player or HDTV Set-top box using HDMI input

Switch off TV and external equipment before connecting cables.

1. Connect the LCD TV to the DVD player or HDTV Set-top box with the HDMI cable.
2. Connect the DVI AUDIO input terminal to the audio output terminal of HDTV Set-top box with DVI output terminal, and a DVI to HDMI conversion cable should be adopted.
3. Press ensure the power cord is connected and press the power switch button turned on before it is operated.
4. Press **Power** to turn on the TV, then turn on external equipment.
5. Press **Source** to select HDMI signal source.

Note:


1. The above step 2 is used if you connect DVI output to the HDMI input of the LCD TV.
The above step 1 is used if you connect HDMI output to the HDMI input of the LCD TV.
2. HDMI is not compatible with PC.

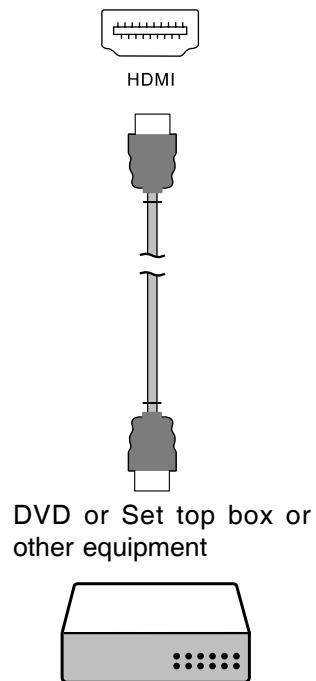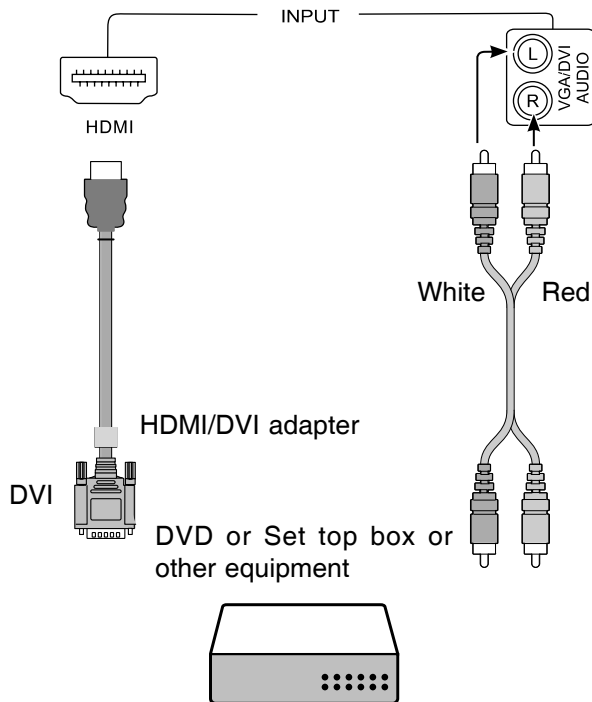

Connecting AUDIO OUTPUT jacks to a stereo amplifier

Switch off TV and external equipment before connecting cables.


1. Connect the TV Audio Output (R/L) to the stereo amplifier In (R/L).
2. Press **Power** to turn on the TV, then turn on external equipment.

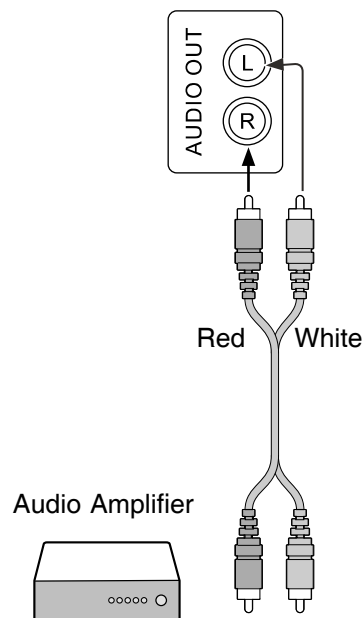

❑ Connecting the DVD or VCR player devices

Switch off TV and external equipment before connecting cables.

1. Connect a DVD or VCR player's Video Out to the TV's Video In terminal by a Video cable.
2. Connect a DVD or VCR player's S-VIDEO Out to the TV's S-VIDEO In terminal by a S-VIDEO cable.
3. Connect a DVD or VCR player's Audio Out to the TV's L/R terminal by a Audio cable.
4. Press **Power** to turn on the TV, then turn on external equipment.
5. Press **Source** to select AV or S-VIDEO signal source.

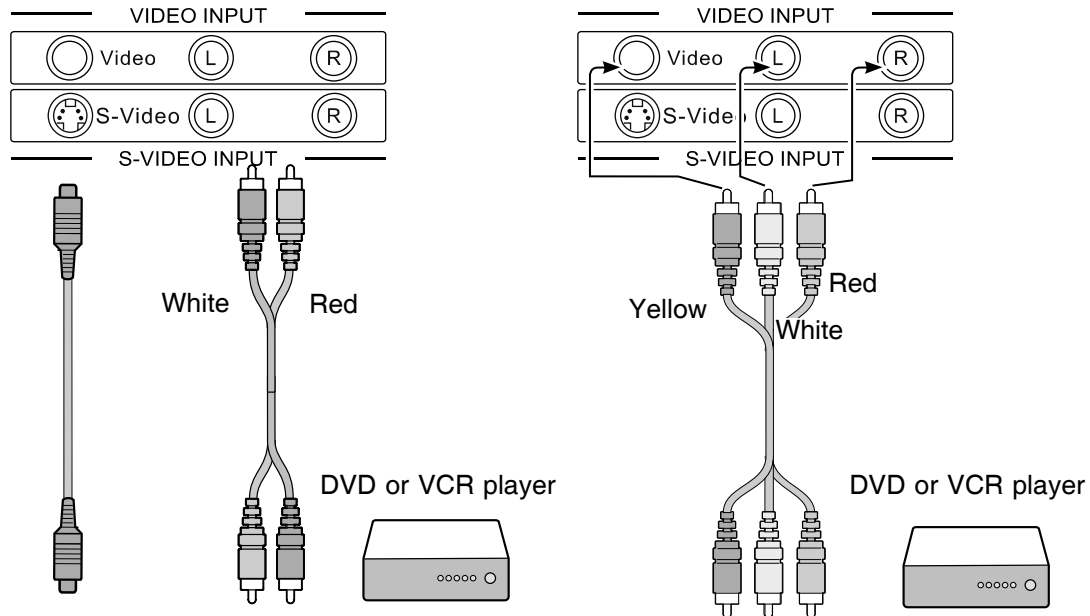

❑ Connecting SPDIF(Optical) terminal to a stereo amplifier

Switch off TV and external equipment before connecting cables.


1. Connect one end of an optical cable to the TV Digital Audio (Optical) Output port.
2. Connect the other end of the optical cable to the digital audio (Optical) input on the audio equipment.
3. Press **Power** to turn on the TV, then turn on external equipment.

Note:

1. When connecting the TV to external audio devices, such as amplifiers and speakers, please be sure to turn the TV speakers off.
2. Only for DTV.

Caution:


Do not look into the optical output port. Looking at the laser beam may damage your vision.

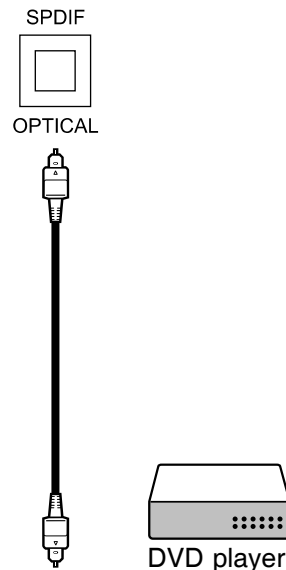


- Connect to antenna

ATSC (DTV) & NTSC input connection config


1. There are two Antennas:
 - ANT 1 is only for ATSC channel of Air.
 - ANT 2 is only for Air or Cable Signal of NTSC.
2. The user can select the Antenna input as below:
 - A. One Antenna is for Air signal config.

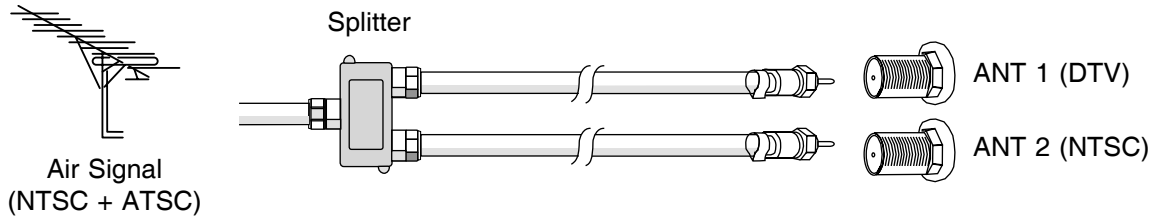

- B. Two Antenna config A
ANT 1 is only for ATSC channel of Air.
ANT 2 is only for Cable signal of NTSC.

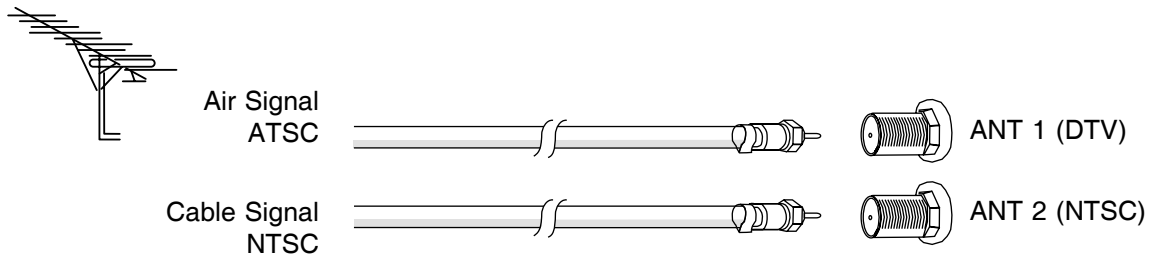

- C. Two Antenna config B
ANT 1 is only for ATSC channel of Air.
ANT 2 is only for Air or Cable Signal of NTSC.

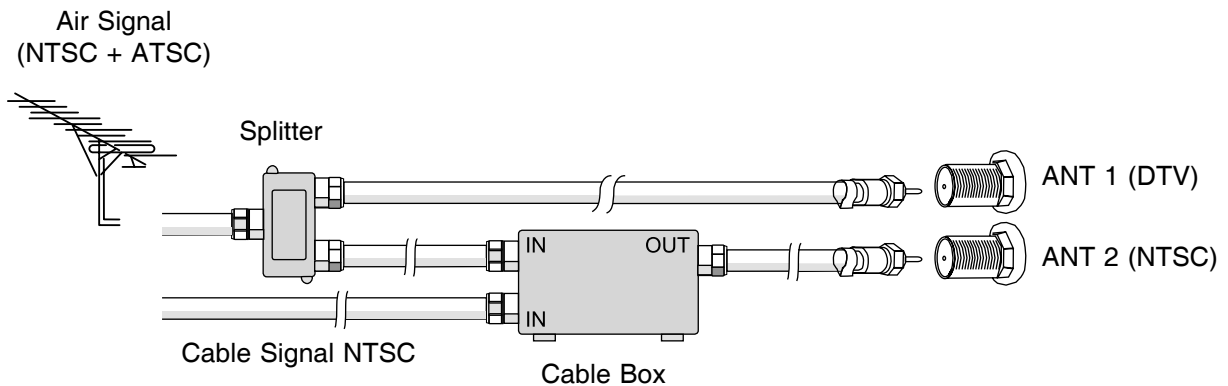



Note: After connection, if your product has the interference, please don't select the connections A or C, use only B.

6. Basic Operation

6.1 Power ON/OFF

The Display is in Standby mode.

- Press the **Power**  on the remote control or on the control panel to turn on the unit. The power indicator changes from red to green.
- Press the **Power**  on the remote control or on the control panel again to return the display to standby mode. The power indicator changes from green to red.

Note: For protecting your LCD TV product, the interval time between turn on the LCD TV product and shut down it should be kept at least one minute.


6.2 Selection of Input Mode

- Press **Source** on the remote control or on the LCD TV control panel to select the signal source you desired.

When no input from the selected signal source, "No signal" will appear, press **Source** on the remote control or on the control panel again to search the next source.

Note:

The LCD-TV will automatically turn itself off after approximately 15 minutes if no signal input. When no signal is inputted for about 14 minutes. A "No signal and going to power down" wording will appear.

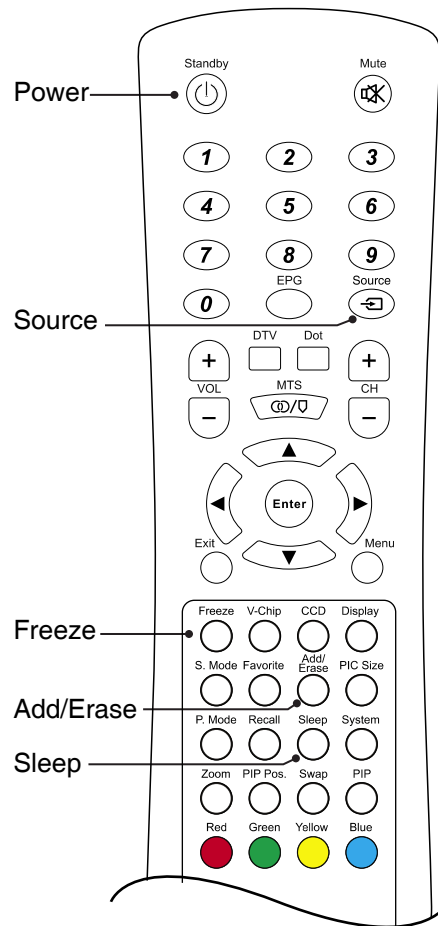

6.3 Other Function

Freeze:



- Press it to hold the current video and press again to cancel and return to normal viewing.

Sleep:

- Press repeatedly until it displays the time in minutes that you want the TV to remain on before shutting off.

Note: When "Turn off by Timer setting?" wording will appear remain one minute on before shutting off, you can press "◀" or "▶" button to selected, press "Enter" to confirm. If select "Cancel" or no operation, the LCD-TV will automatically turn off after one minutes, if select "OK", it will turn off immediately.

Add/Erase:

- Press this button to add/erase current channel to/from the list of favorite directly.
- 1 Add current channel into the list of favorite if a heart shape mark  displaying on the left top of screen.
 - 2 Erase current channel from the list of favorite if a broken heart shape mark  displaying.

Note:


- If you don't want do add/erase this channel to/from the list of favorite, press this button again.
- For addition, it will be put at last of the favorite list and the first channel in favorite list will overflow in case of the list is full.

6.4 Using the PIP/PBP feature

The PIP (picture-in-picture) /PBP (picture-in-picture) feature splits the screen into a double window that allows you to watch two programs at the same time. The POP program can come from a TV broadcast or an external source, such as a VCR.

To enter the PIP/PBP window:


- 1 Press **PIP** for selecting the different PIP modes, such as following;

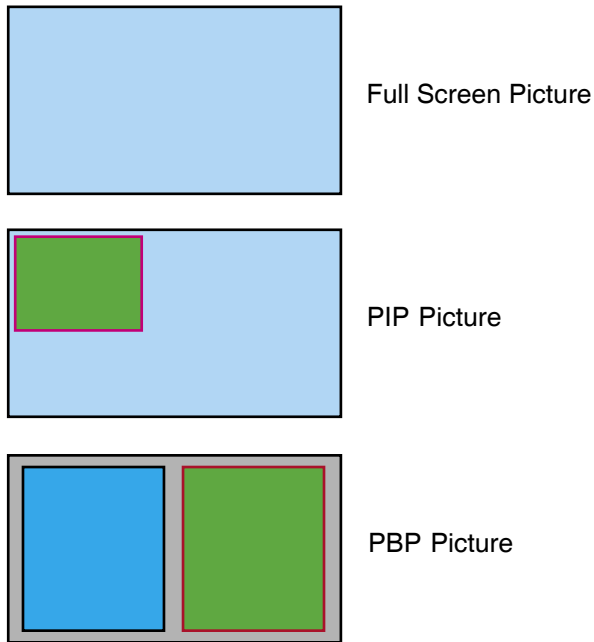

- 2 Use **Swap** button to select the window and active it with a red-colored frame.
- 3 Press **Source** to select the input source for the PIP or PBP window.

To change the next programmed channels, press number buttons (0~9) or CH+/CH-.

- Note:*
- a. For active window, you can change channels, adjust volume, select input source etc.. After power off, the active window will be keep the setting when you power on next time.
 - b. It is must to have second video source connected for basic PIP and PBP modes.


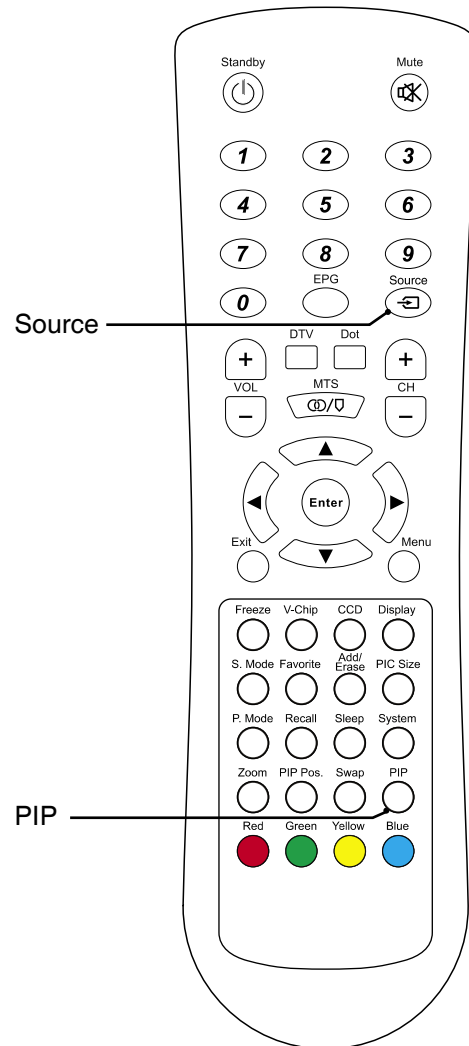


To display a picture from an external source in the PIP/PBP window:

1. Connect the external source equipment. (refer to Connect Accessory Devices page.)
2. Select the TV program you want to watch.
3. Press **PIP** to display the PIP/PBP window.
4. Repeatedly press **Source** to select the input source for the PIP/PBP window.

To change the PIP position:

 Press **PIP Pos.** button to change the PIP window position under PIP mode, it display as following;

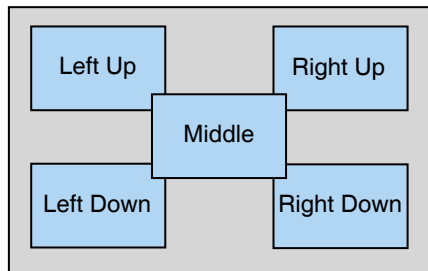


Swap the pictures:

When in Basic PIP mode, press “Swap” button to swap main or sub pictures; When in L/R window mode, press “Swap” button to swap the L/R pictures.

To change Main or Sub sound:

When the red frame is displaying in main window, the sound goes out of main window source. If it display in sub window, the sound goes out of sub window source.

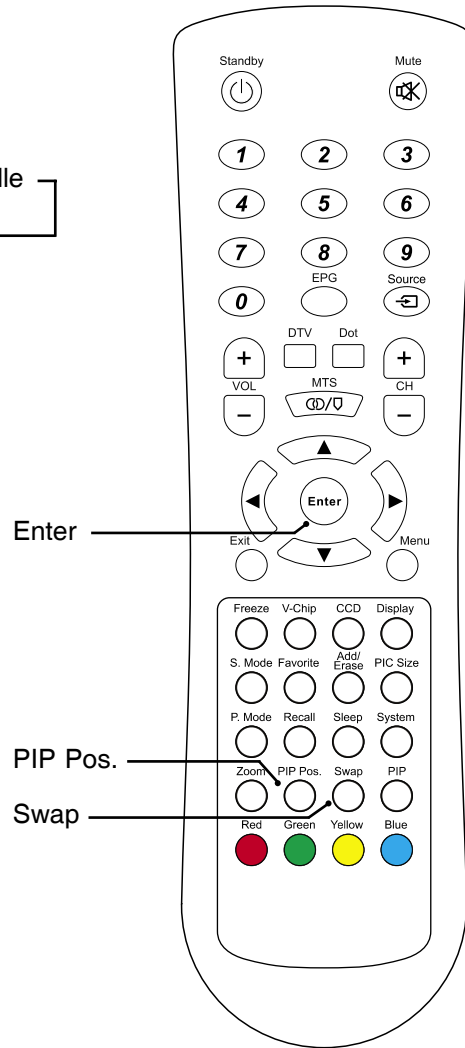

○: PIP and Swap Operate
x: PIP doesn't Operate

PIP Settings

Main \ PIP/PBP	TV	DTV	AV/S-Video	YPbPr1	YPbPr2	VGA	HDMI
TV	x	○	x	○	○	○	○
DTV	○	x	○	○	○	○	x
AV/S-Video	x	○	x	○	○	○	○
YPbPr1	○	○	○	x	x	x	○
YPbPr2	○	○	○	x	x	x	○
VGA	○	○	○	x	x	x	○
HDMI	○	x	○	○	○	○	x

◆ Using the Video Menu

Note: Video Menu is just for TV, AV, S-Video, YPbPr1, YPbPr2, HDMI, and DTV input source mode. It is not available in other input source mode.


■ Adjustment of "Contrast"

- ① Press **Menu** button on the remote control, and then press ◀ or ▶ until the "Video" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button adjust.
- ④ Press **Menu** or **Exit** button to return.



■ Adjustment of "Brightness"

- ① Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to adjust.
- ④ Press **Menu** or **Exit** button to return.

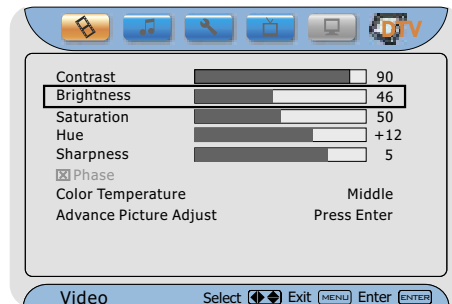


■ Adjustment of "Saturation"

- ① Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to adjust.
- ④ Press **Menu** or **Exit** button to return.



■ Adjustment of "Hue"

- ① Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to adjust.
- ④ Press **Menu** or **Exit** button to return.

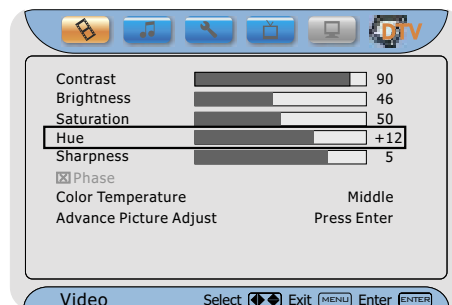

■ Adjustment of "Sharpness"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.



■ Selection of "Phase" setting


- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.




Note: This is a feature just used for YPbPr input source.

■ Selection of "Color Temperature"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Video" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to select one of "Cool", "Middle", "Warm" or "User" for balance of whitening.
- 4 Press **Menu** or **Exit** button to return.

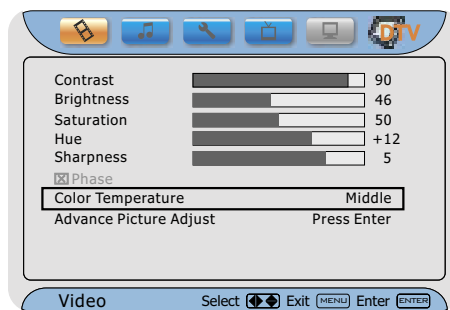

If you select the item of "User", a status bar below comes up for you to adjust the color temperature to you desirable value.

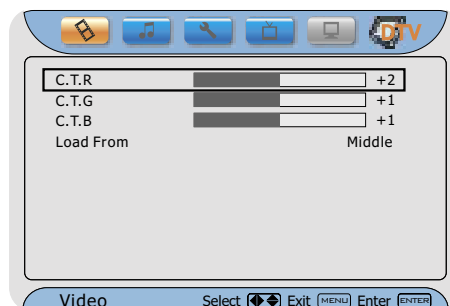

■ Selection of “Advance Picture Adjust”

- ① Press **Menu** button, and then press ◀ or ▶ button until the “Video” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press **Enter** button to confirm for sub-selection as shown in the table below.



Table of Video Adjustment Setting

Item	Status	Description
DNR	Off, Low, Middle, Strong	Selecting to control the sharpness and noise reduction.
CTI	Low, Middle, Strong, Off	Select dynamic color improve level.
Flesh Tone	On, Off	Select “On” to correct the flash tone automatically.
Adaptive Luma Control	On, Off	Selecting to control the lum.


- ④ Press ▲ or ▼ button to highlight the item.
- ⑤ Press ◀ or ▶ button to select.
- ⑥ Press **Menu** or **Exit** button to return.



◆ Using the Audio Menu


■ Adjustment of "Bass"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Audio" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.

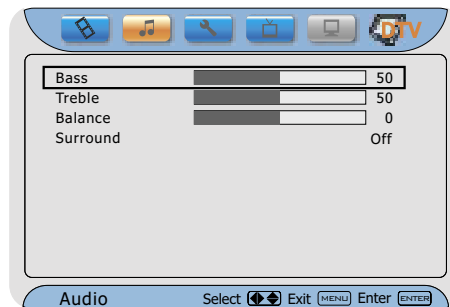


■ Adjustment of "Treble"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Audio" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.

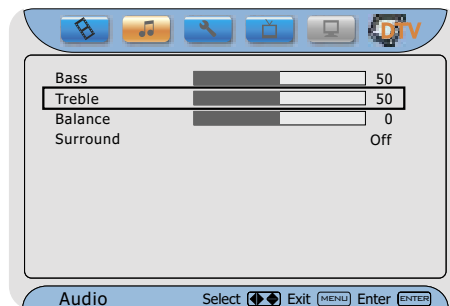


■ Adjustment of "Balance"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Audio" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.

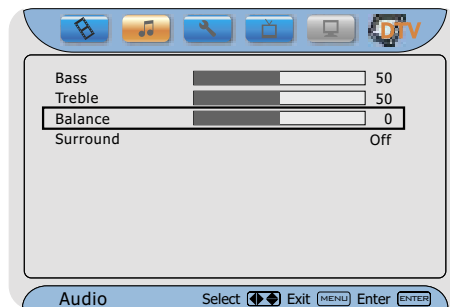

■ Selection of "Surround"


- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Audio" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to select "On" or "Off".
- 4 Press **Menu** or **Exit** button to return.

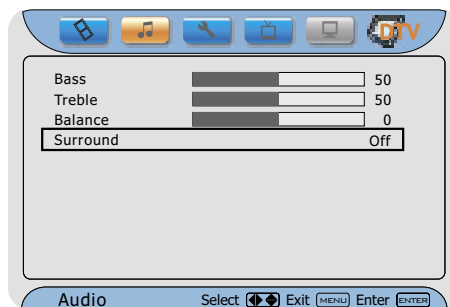

◆ Using the Setup Menu

■ Selection of “Language”

- ① Press **Menu** button, and then press ◀ or ▶ button until the “Setup” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to choose “English” “Francese” or “Español”.
- ④ Press **Menu** or **Exit** button to return.

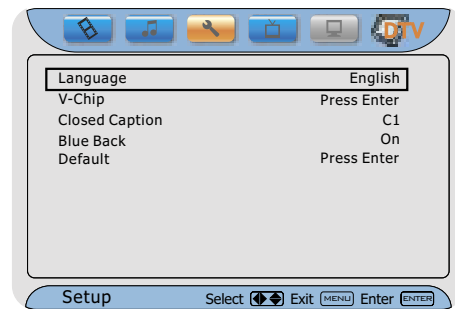


■ Setting of “V-Chip”

Some programs and movies include signals that classify the content of the program (dialog, language, sex, violence). The “V-Chip” control feature in this detects the signals and blocks the programs according to your selections. To use this feature, perform the following setup.

Adjustment only for TV, DTV, AV, S-VIDEO input signal.

- ① Press **Menu** button, and then press ◀ or ▶ button until the “Setup” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press **Enter** button to confirm.

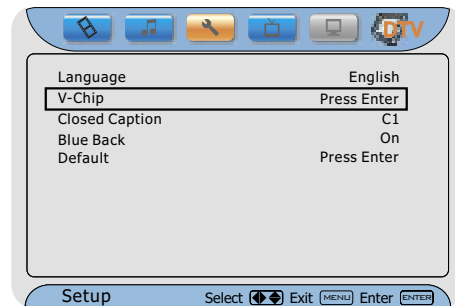


The “V-Chip” menu includes the “V-Chip Enable”, “Block MPAA Rating”, “Block TV Rating”, “Block MPAA Unrated”, “Block TV None Rating” and “Change Password” functions. You can use these functions after entering the correct PIN code.

Entering the PIN code


- Blocking Reset status:
Set your 4-digit code by pressing the Number buttons (0~9), and then press **Enter**.
- When the PIN code is already stored:
Press the Number buttons (0~9) to enter the 4-digit PIN code used for blocking channels, and then press **Enter**.

Note: The initial password for the system is “0000”.

If you had forgotten the password, please contact with service centre.

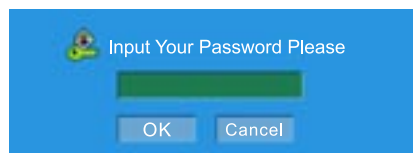

 If the input is invalid, a message will pop up as below;



OPERATING INSTRUCTIONS



TV OPERATIONS ---- SETUP MENU

You can press **Enter** button to display “Input Your Password Please” menu again, then entering the PIN code, or press **◀,▲,▼** or **▶** button move cursor to “Cancel” and press **Enter** button to close up this menu.

* Using the “Change Password” item


- 1 When enter the “V-Chip” menu, select “Change Password”.
- 2 Press **▲** or **▼** button to highlight the “Change Password” item.
- 3 Press **Enter** button to confirm.
- 4 Press Number buttons (0~9) to enter the 4-digit PIN code to change the password, then use **▼** button move to Confirm item, enter the 4-digit PIN code again.
- 5 Press **Enter** button to confirm.

Note: Please operate “Change Password” at the first time.

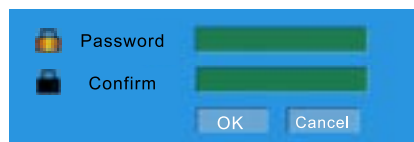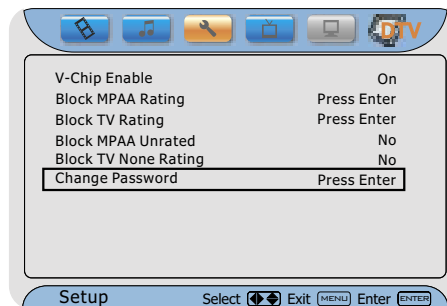


* Using the “V-Chip Enable” item

- 1 When enter the “V-Chip” menu, select “V-Chip Enable”.
- 2 Press **▲** or **▼** button to highlight the “V-Chip Enable” item.
- 3 Press **◀** or **▶** button to select “On” or “Off”.
On : The V-Chip setting functions are activate.
Off : The V-Chip setting functions are not activate.
- 4 Press **Menu** or **Exit** button to return.

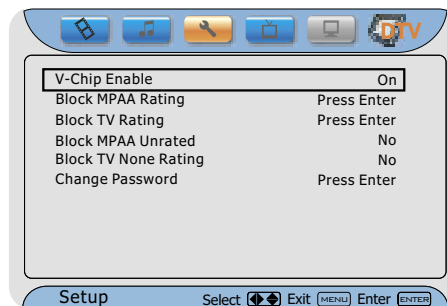

* Using the “Block MPAA Rating” item

- 1 When enter the “V-Chip” menu, select “Block MPAA Rating”.
- 2 Press **▲** or **▼** button to highlight the “Block MPAA Rating” item.
- 3 Press **Enter** button to confirm.
- 4 Press **▲** or **▼** button to select an item, then press **Enter** button to lock (display “☑”) or unlock (display “☒”).

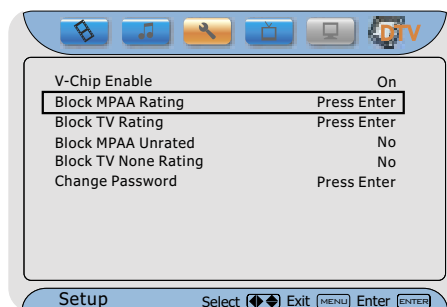

For Movie previously shown in theaters:

- G (general audience)
- PG (parental guidance suggested)
- PG-13 (13 years and older)
- R (Restricted)
- NC-17 (18 years and older)
- X (Adult)


G	x
PG	<input checked="" type="checkbox"/>
PG-13	<input checked="" type="checkbox"/>
R	<input checked="" type="checkbox"/>
NC-17	<input checked="" type="checkbox"/>
X	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Blocked Rating <input checked="" type="checkbox"/> Allowed Rating	

If you set PG-13: G and PG movies be available, PG-13, R, NC-17, and X will be blocked.

- 5 Press **Menu** button to exit the sub-menu.

✳ Using the “Block TV Rating” item

- 1 When enter the “V-Chip” menu, select “Block TV Rating”.
- 2 Press **▲** or **▼** button to highlight the “Block TV Rating” item.
- 3 Press **Enter** button to confirm.
- 4 Press **◀**, **▲**, **▼** or **▶** button to select an item, then press Enter button to lock (display “”) or unlock (display “”).
- 5 Press **Menu** button to exit the sub-menu.

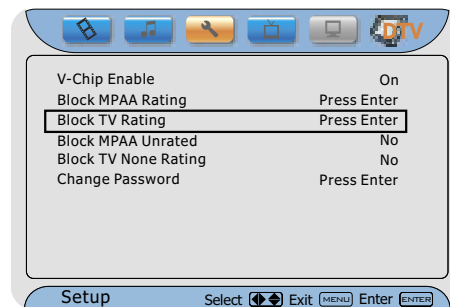

		FV	V	S	L	D
TV-Y	x					
TV-Y7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				
TV-G	<input checked="" type="checkbox"/>					
TV-PG	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
TV-14	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
TV-MA	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> Blocked Rating <input checked="" type="checkbox"/> Allowed Rating						

For Television programs including made-for-TV movies:

General TV Ratings:

- TV-G (general audience) (individual categories do not apply)
- TV-PG (parental guidance suggested)
- TV-14 (14 years and older)
- TV-MA (mature audience)

Children TV Ratings:

- TV-Y (youth) (individual content categories do not apply)
- TV-Y7 (youth, 7 years and up)


Content Categories:

- Dialog - sexual dialogue (applies to TV-PG and Above, TV-14)
- Language - adult language (applies to TV-PG and Above, TV-14 and Above, TV-MA)
- Sex scenes - sexual situations (applies to TV-PG and Above, TV-14 and Above, TV-MA)
- Violence (applies to TV-PG and Above, TV-14 and Above, TV-MA)
- F Violence - fantasy violence (applies only to TV-Y7)

Unlocking programs temporarily

(In TV signal source)

- 1 If you try to watch a TV program that exceeds the TV Rating you set, the TV enters program lock mode. You can either unlock the program temporarily or select a non-locked program to watch, press **CH+/-** button to select the program.
- 2 To temporarily unlock the program, press the Number buttons (0~9) to enter your 4-digit PIN code.

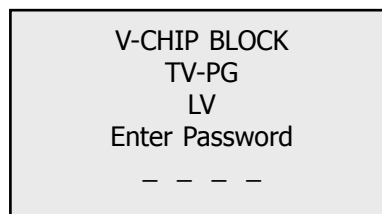

(In DTV signal source)


- 1 If you try to watch a DTV program that exceeds the DTV Guideline you set, the DTV enters program lock mode. You can either unlock the program temporarily or select a non-locked program to watch, press **CH+/-** button to select the program.
- 2 To temporarily unlock the program, press **Enter** button to display follow illustrate, then press the Number buttons (0~9) to enter your 4-digit PIN code.



If the correct code is entered, the program lock mode is released and the normal picture appears.


* Using the "Block MPAA Unrated" item

- 1 When enter the "V-Chip" menu, select "Block MPAA Unrated".
- 2 Press **▲** or **▼** button to highlight the "Block MPAA Unrated" item.
- 3 Press **◀** or **▶** button to select "No" or "Yes".
Yes: You can't watch the "MPAA Unrated" programs.
No: You can watch the "MPAA Unrated" programs.
- 4 Press **Menu** button to exit the sub-menu.

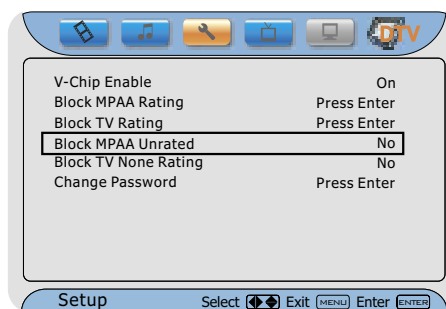

* Using the "Block TV None Rating" item

- 1 When enter the "V-Chip" menu, select "Block TV None Rating".
- 2 Press **▲** or **▼** button to highlight the "Block TV None Rating" item.
- 3 Press **◀** or **▶** button to select "No" or "Yes".
Yes: You can't watch the "TV None Rating" programs.
No: You can watch the "TV None Rating" programs.
- 4 Press **Menu** button to exit the sub-menu.

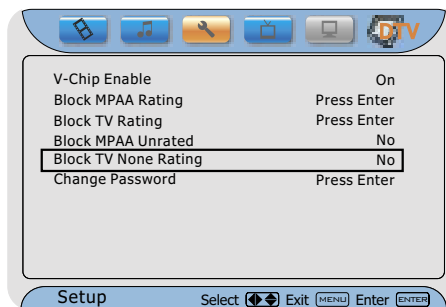

Hot keys:

- You can also press **V-Chip** button on the remote control to enter V-Chip menu.

■ Selection of "Closed Caption"


The closed caption features has two options:

Adjustment only for TV, DTV, AV, S-VIDEO input signal.

- **Captions:** An on-screen display of the dialogue, narration, and sound effects of the TV programs and videos that are closed captioned (usually marked as "C/C" in TV listings).
- **Text:** An on-screen display of information not related to the current program, such as weather or stock data (when provided by individual stations).


To view captions or text:

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Setup" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ to choose one of "C1", "C2", "C3", "C4", "T1", "T2", "T3", "T4", "Off", as follows:
 - To view captions, highlight C1, C2, C3, or C4 (C1 displays translation of the primary language in your area).

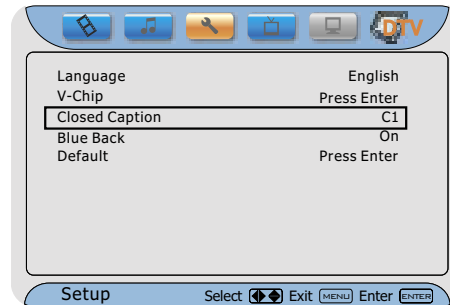

Note: If the program or video you selected is not closed captioned, no captions will display on-screen.

- To view text, highlight T1, T2, T3, or T4.

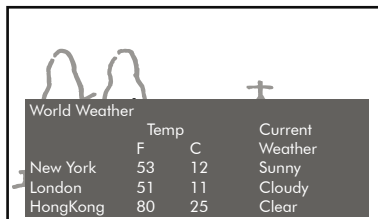

Note: If text is not available in your area, a black rectangle may appear on-screen. If this happens, turn off the Closed Caption feature.

Note: A closed caption signal may not display in the following situations:

- when a videotape has been dubbed
- when the signal reception is weak
- when the signal reception is nonstandard


- 4 Select "Off" to close this function.
- 5 Press **Enter** button to confirm your selection.

Hot keys:

- You can also press **CCD** button on the remote control to select.


■ Selection of “Blue Back”

- 1 Press **Menu** button, and then press ◀ or ▶ button until the “Setup” menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to choose “On” or “Off”, when select “On” to set screen to a pleasant blue background when it detects no signal available if turn on.
- 4 Press **Menu** or **Exit** button to return.

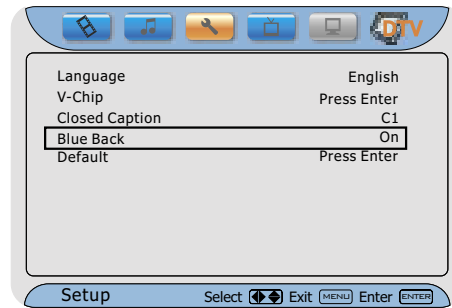

■ Using “Default”

- 1 Press **Menu** button, and then press ◀ or ▶ button until the “Setup” menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press **Enter** button to confirm, it will reset to restore factory default settings. After that, a confirmation message will pop up.

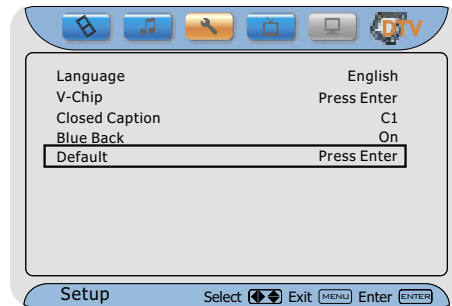

Note: Just reset the items in the setup menu don't include the protected-items (Needs pin code enter, such as password) and properties such as skipped channel, channel name.


◆ Using the TV Menu(Analog)

Note:

TV menu is only for TV input source mode, thus it is not available in other input source mode.



■ Using the “Tuner Mode”

- ① Press **Menu** button, and then press ◀ or ▶ button until the “TV” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to choose “Air” or “Cable”.
- ④ Press **Menu** or **Exit** button to return.

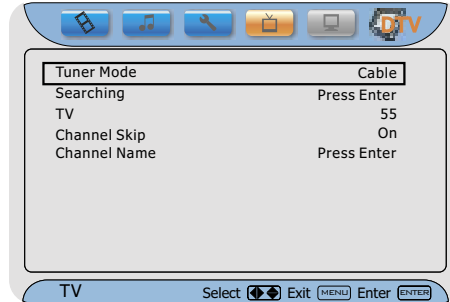


■ Using the “Searching”

 - ① Press **Menu** button, and then press ◀ or ▶ button until the “TV” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press **Enter** button to confirm.
- ④ Press **Menu** or **Exit** button to return.

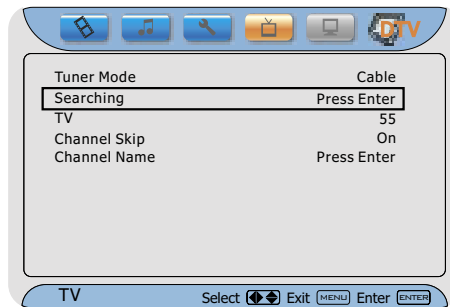


■ Using the “TV”

- ① Press **Menu** button, and then press ◀ or ▶ button until the “TV” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to select the channel number.
- ④ Press **Menu** or **Exit** button to return.

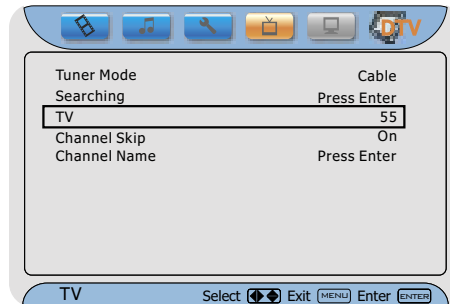

■ Using the “Channel Skip”


- ① Press **Menu** button, and then press ◀ or ▶ button until the “TV” menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to “On” or “Off”, when select “On” the channel is skipped.
- ④ Press **Menu** or **Exit** button to return.

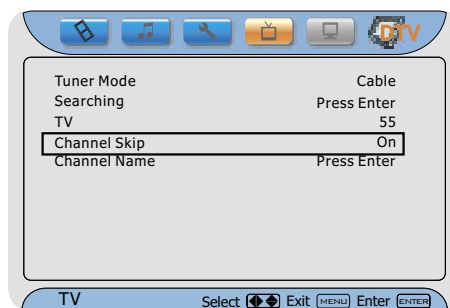

Using the "Channel Name"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "TV" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press **Enter** button to confirm, it will display "Channel Name" list.
- 4 Use ◀, ▲, ▼ or ▶ button for select, and move cursor to "OK", the press **Enter** button for confirm you selection. If you want to cancel this operation, move cursor to "Cancel" and press **Enter** button for close this setting.
- 5 Press **Menu** or **Exit** button to return.

Note: It will be invalid if the current source is not TV.

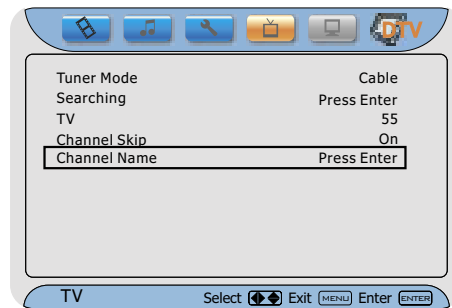

Selecting Channel

- 1 Press **CH +/-** button on the remote control to search the channels, the channel numbers will increase or decrease by 1 for each pressing excluding the skipped channels.
- 2 Press number buttons 0~9 to select the corresponding channel content. If the channel number is bigger than 9, just press the two number buttons successively. If the channel number is bigger than 100, just press the three number buttons successively. The time interval should not exceed 2 seconds.
- 3 If the channel number you pressed is bigger than the maximum channel number that the setting is permitted, the maximum numbered channel content will be remained.

Channel Preview

Press Recall button to switch between present channel and previous channel. (Only for DTV or TV input source.)

Hot keys:

- You can also press **Recall** button on the remote control.


◆ Using the Geometric Menu

Note:

If your current input source is "VGA", push Menu button enter into this menu. It is not available in other input source mode.


■ Using "Contrast"

- ① Press **Menu** button on the remote control, and then press ◀ or ▶ button until the "Geometric" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to adjust.
- ④ Press **Menu** or **Exit** button to return.

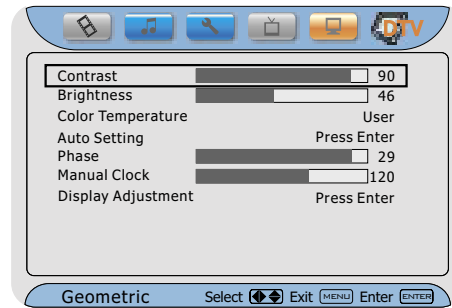



■ Using "Brightness"

- ① Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to adjust.
- ④ Press **Menu** or **Exit** button to return.

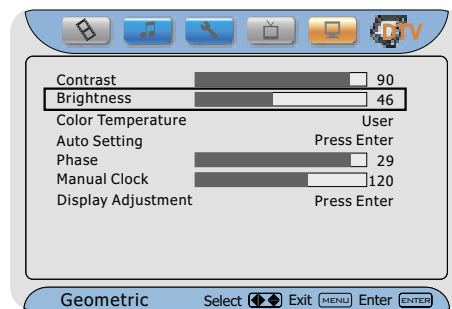

■ Using "Color Temperature"

- ① Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- ② Press ▲ or ▼ button to highlight the item.
- ③ Press ◀ or ▶ button to select one of "Cool", "Middle", "Warm" or "User" for the balance of back light.
- ④ Press **Menu** or **Exit** button to return.

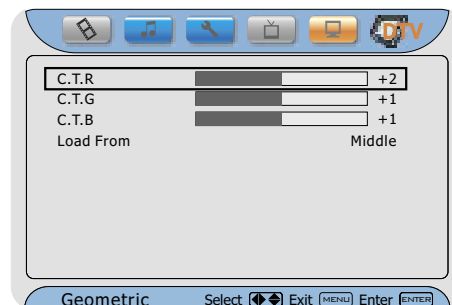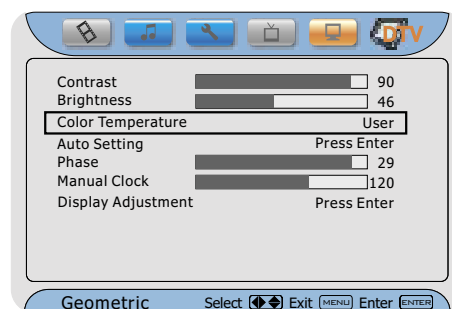


If you select the item of "User", a status bar below comes up for you to adjust the color temperature to you desirable value.

■ Using "Auto Setting"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press **Enter** button to confirm.
- 4 Press **Menu** or **Exit** button to return.


Note:

This item will auto-adjust the picture display.

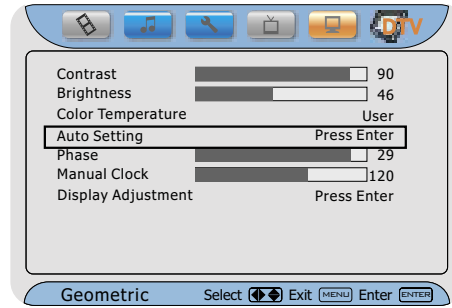


■ Using "Phase"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.

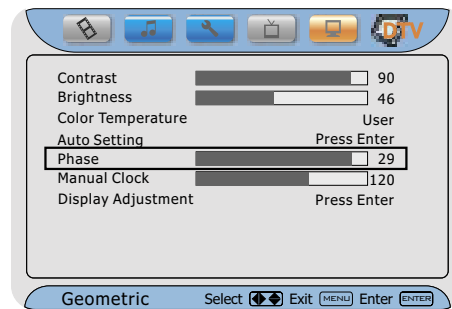

■ Using "Manual Clock"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press ◀ or ▶ button to adjust.
- 4 Press **Menu** or **Exit** button to return.

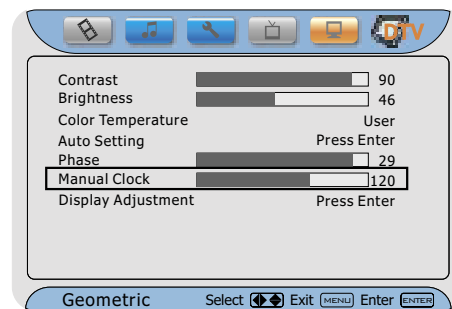

■ Using "Display Adjustment"

- 1 Press **Menu** button, and then press ◀ or ▶ button until the "Geometric" menu appears.
- 2 Press ▲ or ▼ button to highlight the item.
- 3 Press **Enter** button to confirm for sub-selection as shown in the table below.
- 4 Press **Menu** or **Exit** button to return.


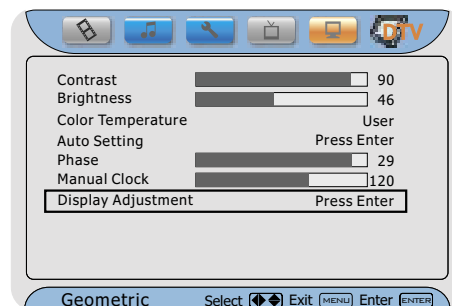


Table of Parental Setting

Items	Description
Horizontal Position	Use “▲” to “▼” to select it. Use “◀” to “▶” to move the image left or right.
Vertical Position	Use “▲” to “▼” to select it. Use “◀” to “▶” to move the image up or down.

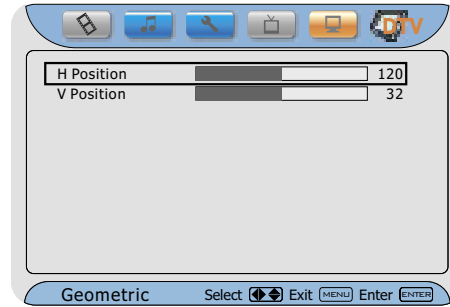

◆ Using the DTV Menu(Digital)

Note:

DTV menu is only for DTV input source mode, thus it is not available in other input source mode.

■ Using the “General” Menu

* Using the “Audio Language” item

- ① When enter the “General” menu, select “Audio Language”.
- ② Press ▲ or ▼ button to highlight the “Audio Language” item.
- ③ Press ◀ or ▶ button to choose “English” “Français” or “Español”.
- ④ Press **Menu** or **Exit** button to exit.




* Using the “Time Zone” item

- ① When enter the “General” menu, select “Time Zone”.
- ② Press ▲ or ▼ button to highlight the “Time Zone” item.
- ③ Press ◀ or ▶ button to choose one of “Eastern Time”, “Indiana”, “Central Time” “Mountain Time”, “Arizona”, “Pacific Time”, “Alaska” or “Hawaii”.
- ④ Press **Menu** or **Exit** button to exit.



* Using the “SPDIF Type” item


- ① When enter the “General” menu, select “SPDIF Type”.
- ② Press ▲ or ▼ button to highlight the “SPDIF Type” item.
- ③ Press ◀ or ▶ button to choose one of “Dolby Digital”, “PCM”, or “OFF”.
- ④ Press **Menu** or **Exit** button to exit.

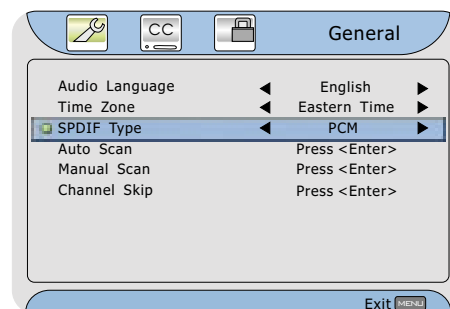

✳ Using the “Auto Scan” item

The TV will begin memorizing all of the available channels. It will takes about several minutes.




- 1 When enter the “General” menu, select “Auto Scan”.
- 2 Press ▲ or ▼ button to highlight the “Auto Scan” item.
- 3 Press **Enter** button to confirm and start.
- 4 Press **Menu** or **Exit** button to exit.

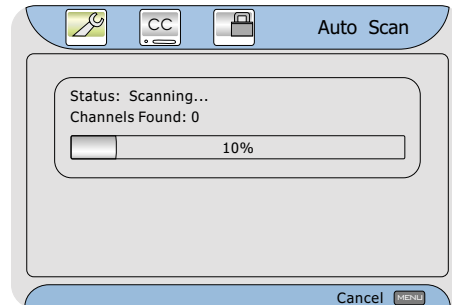

✳ Using the “Manual Scan” item

The TV will begin memorizing all of the available channels. It will takes about several minutes. This option consists of “Add-on Mode” and “Range Mode”.

- 1 When enter the “General” menu, select “Manual Scan”.
- 2 Press ▲ or ▼ button to highlight the “Manual Scan” item.
- 3 Press **Enter** button to confirm.
- 4 Press ◀ or ▶ button to select “Add-on Mode” or “Range Mode”.
 - * Add-on Mode: Scan missing channels.
 - * Range Mode: Scan with a range of channels.
- 5 Press **Menu** or **Exit** button to exit.

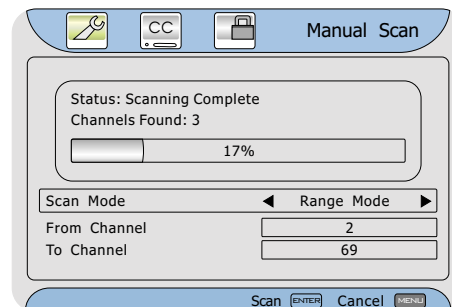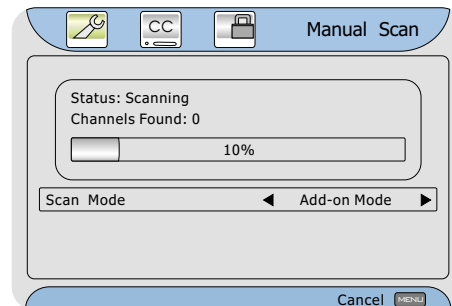
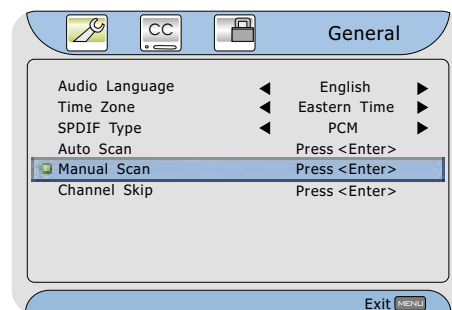


Note:

- The default is “Add-on Mode”.
- If there is no lost channel at last scanning. The channel found will be 0.

* Using the "Channel Skip" item


- ① When enter the "General" menu, select "Channel Skip".
- ② Press ▲ or ▼ button to highlight the "Channel Skip" item.
- ③ Press **Enter** button to confirm and pop up the "Skip" menu.
- ④ Press ▲ or ▼ button to select an item, then press **Enter** button to confirm your selection. When item display "☑", it will skip this channels.
- ⑤ Press **Menu** or **Exit** button to exit.

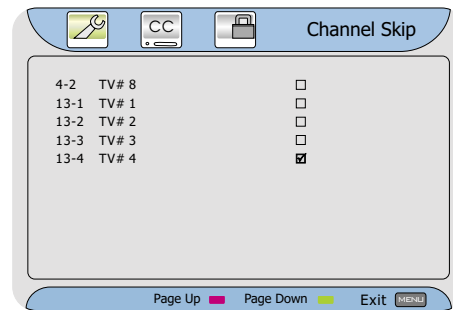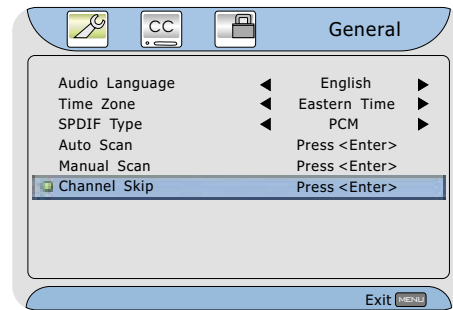

■ Using the "Caption" Menu


* Using the "Analog Closed Caption" item

- ① When enter the "Caption" menu, select "Analog Closed Caption".
- ② Press ▲ or ▼ button to highlight the "Analog Closed Caption" item.
- ③ Press ◀ or ▶ button to choose "CC1~CC4", or "OFF".
- ④ Press **Menu** or **Exit** button to exit.

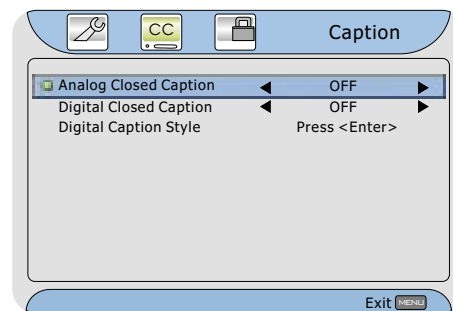

* Using the "Digital Closed Caption" item

- ① When enter the "Caption" menu, select "Digital Closed Caption".
- ② Press ▲ or ▼ button to highlight the "Digital Closed Caption" item.
- ③ Press ◀ or ▶ button to choose "Service1~Service6", or "OFF".
- ④ Press **Menu** or **Exit** button to exit.

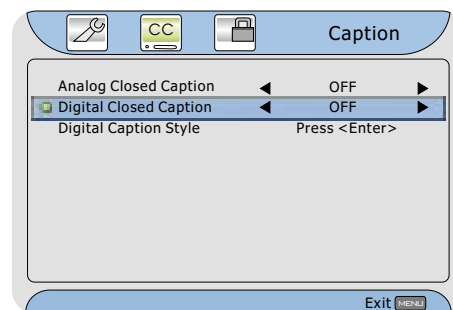


Note:

- When press **CCD** button on the remote control to select digital closed caption, the OSD menu of Caption is not synchronization with hotkey **CCD** button.



* Using the "Digital Caption Style" item

- ① When enter the "Caption" menu, select "Digital Caption Style".
- ② Press ▲ or ▼ button to highlight the "Digital Caption Style" item.
- ③ Press **Enter** button to confirm.
- ④ Press ◀ or ▶ button to choose "As Broadcaster", or "Custom".
- ⑤ Press **Menu** or **Exit** button to exit.

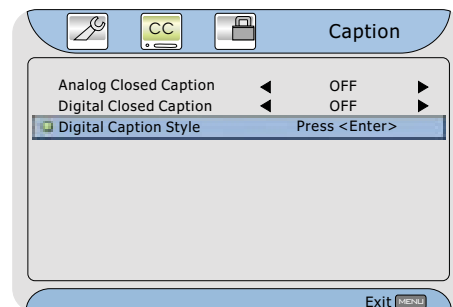

If you select “Custom”, you can change these settings.

- **Font Size:** This option consists of “Large”, “Small”, and “Medium”.
- **Font Color:** This option consists of “White”, “Green”, “Blue”, “Red”, “Cyan”, “Yellow”, “Magenta”, and “Black”. You can change the color of the letter.
- **Font Opacity:** This option consists of “Solid”, “Translucent”, and “Transparent”. You can change the opacity of the letter.
- **Background Color:** This option consists of “White”, “Green”, “Blue”, “Red”, “Cyan”, “Yellow”, “Magenta”, and “Black”. You can change the background color of the caption.
- **Background Opacity:** This option consists of “Solid”, “Translucent”, and “Transparent”. You can change the background opacity of the caption.
- **Window Color:** This option consists of “White”, “Green”, “Blue”, “Red”, “Cyan”, “Yellow”, “Magenta”, and “Black”. You can change the window color of the caption.
- **Window Opacity:** This option consists of “Solid”, “Translucent”, and “Transparent”. You can change the window opacity of the caption.

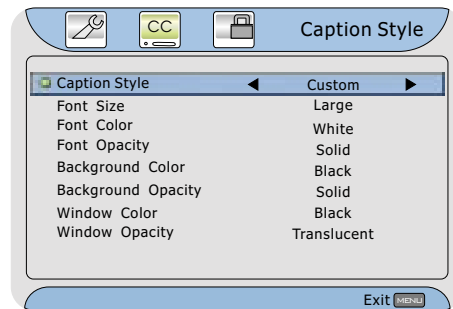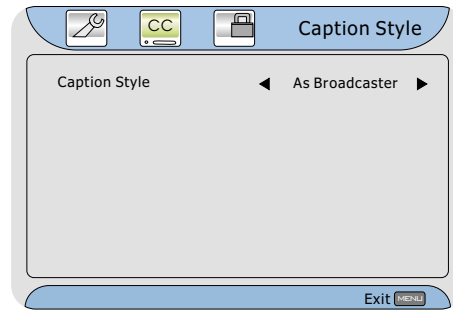

■ Setting of “Parental”

The TV programs and movies shown on TV are given a rating signal based on the following rating systems. To block programs you feel unsuitable for your children, you need to set the TV for the desired rating systems. The TV’s “Parental” control feature functions by receiving the rating signal from your local broadcasting station or cable service provider.




✿ Using the “Password” item

- 1 When enter the “Parental” menu, press Enter button, then press the Number buttons (0~9) to enter the 4-digit PIN code, and then press Enter, it will display the Parental sub page menu.
- 2 Press **Menu** or **Exit** button to exit.

Note:

*The initial password for the system is “0000”.
If you had forgotten the password please contact with service centre.*

If the input is invalid, a message will pop up as side;

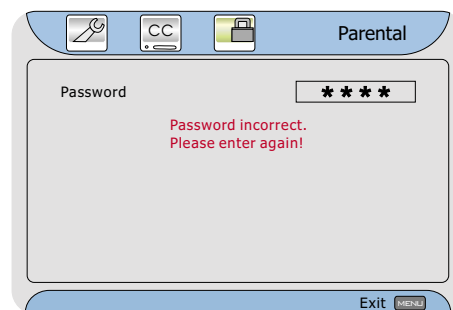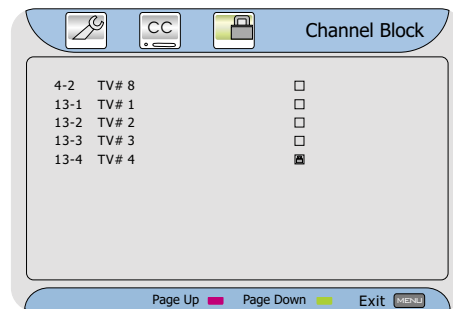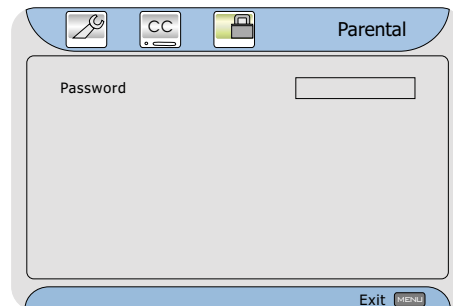

✳ Operate the “Channel Block” as below:

- ① When enter the “Channel Block” menu.
- ② Press ▲ or ▼ button to select an item.
- ③ Press **Enter** button to lock or unlock.
 - * When it display lock, you can not watch the channels.
 - * When it display unlock, you can watch the channels.
- ④ Press **Menu** or **Exit** button to exit.

Note:

- * When there is more than one channel page:
 - To up page, press the Red button.
 - To down page, press the Green button.
- * When there is one channel page:
 - To select the first slot, press the Red button.
 - To select the last slot, press the Green button.

✳ Unlocking channels temporarily


- * If you try to watch a TV program that exceeds the “Channel Block” you set, the TV enters program lock mode. You can either unlock the program temporarily or select a non-locked program to watch, press **CH+/-** button to select the program.
- * To temporarily unlock the program, press **Enter** button to display follow illustrate, then press the Number buttons (0~9) to enter your 4-digit PIN code.



If the correct code is entered, the program lock mode is released and the normal picture appears.

■ EPG(Electronic Program Guide)

Your TV has an “Electronic Program Guide” to help you navigate through all the possible viewing options. The EPG supplies information, such as program lists, start and end times of all available channels. In addition, detailed information about the program is often available in the EPG. (The availability and the amount of program details will vary depending on the broadcaster.)

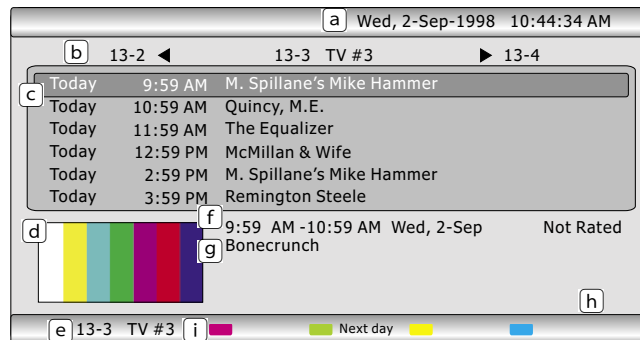

- a Current Date and Time: Displays the local date and time.
- b Channel List: Displays the previous channel number, current channel number, current channel name and next channel number.
- c Program List: Displays the presenting date, starting time, program title, lock indicator and closed caption flag of the programs.(The availability of additional details depends on the broadcaster.)
- d Video: Displays “Channel Locked!” instead of the video when the current channel is block.
Displays “Program Locked!” instead of the video when the current program is block.
- e Channel Info: Displays the channel number and name of the currently selected

- f Program Details: Displays the starting time, ending time, presenting date, content advisory of the selected program. Does not display any data when the current channel is block.
- g Program Description: Displays the details program descriptions of the selected program.
- h Page Index: Displays the page index for the program descriptions. Displays when the program description is more than one page.
- i Help List: Displays the function that is enabled.

Hot Key:


You can press **EPG** button on the remote control to display it.

Note:


- * The EPG begins its list with the channel that is currently active.
- * The EPG will only work when you are receiving digital channels.

Selecting Channel

- 1 Press **CH+/-** button to search the channels, the channel number will increase or decrease by 1 for each pressing excluding the skipped channels.
- 2 Press number buttons and **Dot** button to select the corresponding channel content. The time interval should not exceed 2 seconds. The operation is shown as below:

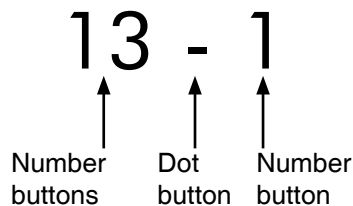

- 3 How to operate in the "Channel List" menu
 - Press **Enter** button to display the "Channel List" menu.

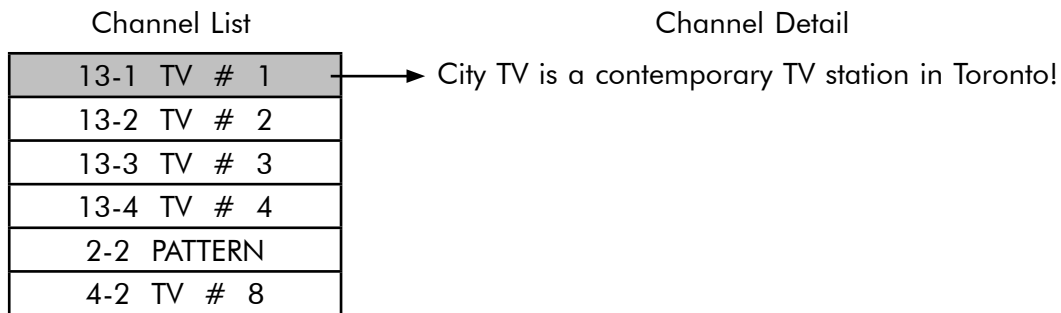

- Press **▲** or **▼** button to select the channel number, and then press **Enter** button to display that channel content. You can also press **CH +/-** button to select the channel.
- Press **Enter** button again to display the channel details.
- Press **Enter** button once to exit the channel details.

Channel Preview

Press Recall button to switch between present channel and previous channel. (Only for DTV or TV input source.)

Hot keys:

- You can also press **Recall** button on the remote control.

7. Technical Specification

Product Model:	LCT3785TA
Screen Size:	37" diagonal
Screen Area:	819.6mm(H) x 460.8mm(V)
Aspect Ratio:	16:9
External Size:	932mm(W) x 727mm(H) x 102mm(D) (w/o Stand)
	932mm(W) x 661mm(H) x 267.5mm(D) (with Stand)
Net Weight:	20kg (with Stand)
Resolution:	1366 (H) x 768 (V) pixels (Each pixel has R/G/B 3 color cells)
Pixel Dot Pitch:	0.6mm(H) x 0.6mm(V)
Color:	16.7 millions of colors (R/G/B each 256 scales)
Gray Scale:	256 (R/G/B each 8-bit)
High Brightness:	550cd/m ²
Contrast (Dark Room):	1000:1 (Typical)
TV System:	NTSC M, ATSC
Sound:	Mono, Stereo, SAP (BTSC)
Sound Effect:	Spatial Effect and Surround
Power Supply:	AC 120V, 60Hz
Power Consumption:	< 230W
Input/Output Terminal:	Antenna Input (F Type) x 2 (NTSC & ATSC)
	RS-232 (D-Sub 9 Pin Type) x 1 (Only for DTV)
	VGA (D-Sub 15 Pin Type) x 1
	HDMI (Ver 1.1) connector x 1
	Component Video - YPbPr x 2 (RCA Terminals)
	Video Input (RCA Terminals)
	S-Video Input Mini Din 4 Pin Terminal
	Stereo, Audio x 5
	1 set of Audio Output terminals (RCA, L&R)
	SPDIF (Optial) x 1 (Only for ATSC)
Agent System:	UL, cUL, FCC

NOTE:

- The specifications shown above may be changed without notice for quality improvement.

8.Support the Signal Mode

A. D-Sub Mode (VGA)

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 480	31.50	60.00
	37.86	72.81
800 x 600	35.16	56.25
	37.90	60.32
	46.90	75.00
	48.08	72.19
1024 x 768	48.40	60.00

B. HDTV Mode (YPbPr)

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
480i	15.734	59.94
480p(720x480)	31.468	59.94
720p(1280x720)	45.00	60.00
1080i(1920x180)	33.75	60.00

C. HDMI Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
480p	31.468	59.94
720p	45.00	60.00
1080i	33.75	60.00

- When the signal received by the Display exceeds the allowed range, a warning message shall appear on the screen.
- You can confirm the input signal format from the on-screen.

9.Cleaning Simple Troubleshooting

1 Important:

- Make sure that the power cable is removed from the AC outlet before cleaning the product.
- Do not use volatile solvent (such as toluene, rosin and alcohol) to clean the Display. Such chemicals may damage the housing, screen glass and remote control, and cause the paint to peel.

2 Cleaning of Housing and Remote Control:

- Use a soft cotton cloth for cleaning.
- If the housing or remote control are seriously contaminated, use a soft cloth moistened with diluted neutral clean the Display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the Display with a dry cloth after cleaning.

3 Cleaning of Screen:

- Use a soft cotton cloth to clean the screen gently.
- The screen glass is very fragile; so do not scrape it with any sharp object. Do not press or tap the screen to avoid cracking. When the screen is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean the Display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the display with a dry cloth after cleaning.

4 Simple Troubleshooting:

Use the following check list for troubleshooting when you have problems with your unit. Contact your local dealer for assistance if problem persist.

SYMPTOMS	POSSIBLE SOLUTIONS
POWER	
TV does not operate.	• Make sure the power cord is plugged in.
	• Try another Wall outlet.
TV Broadcast reception	
Poor sound or No sound.	• Station or Cable TV experiencing problems, tune to another station.
	• Check Volume adjustments.
	• Check for sources of possible interference.
Poor picture or No picture.	• Station or Cable TV experiencing problems, turn to another station.
	• Check antenna or Cable TV connections, reorient antenna.
	• Check for source of possible interference.
	• Check picture control adjustments.
Poor reception on some channels.	• Station or Cable TV experiencing problems, tune to another station.
	• Station signal is weak, reorient antenna to receive weaker station.
	• Check for source of possible interference.
Poor color or no color.	• Station or Cable TV experiencing problems, tune to another station.
	• Check picture control adjustments.
	• Check antenna or Cable TV connections, reorient antenna.
	• Check for source of possible interference.
Picture wobbles or drifts.	• Station or Cable TV experiencing problems, tune to another station.
	• Cable TV company is scrambling signal.
	• Check antenna orientation.
No CATV reception.	• Check all Cable TV connections.
Horizontal or diagonal bars on screen.	• Check antenna connections, reorient antenna.
	• Check for sources of possible interference.
TV shuts off.	• No broadcast on station tuned with Auto off activated.
	• Sleep Timer is set.
	• Power interrupted.
Display is not shown in your language.	• Select proper language in the menu options.
Remote Control	
The remote control does not function.	• Aim the remote control at the remote sensor.
	• Operate within approx.5 meters or reduce the light in the room.
	• Clear the path of the beam.
	• The batteries are weak. Replace the batteries.
	• Check the batteries are inserted correctly.