



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for LG MC-808WAR. You'll find the answers to all your questions on the LG MC-808WAR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG MC-808WAR
User guide LG MC-808WAR
Operating instructions LG MC-808WAR
Instructions for use LG MC-808WAR
Instruction manual LG MC-808WAR



[Your user manual](#)
[LG MC-808WAR](#)

Manual abstract:

We will keep it on file and help you access the information if needed. This will also enable us to contact you in the unlikely event that any adjustments or modifications are ever required for your range. 4 **IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING IMPORTANT SAFETY NOTICE AND WARNING** The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer or reproductive harm and requires businesses to warn customer of potential exposures to such substances. Users of this appliance are hereby warned that when it is engaged in the self-clean cycle, there may be low level exposure to carbon monoxide, a chemical known to the State of California to cause reproductive harm. Exposure can be minimized by properly venting the oven to the outdoors during the self-clean cycle, by opening a window and/or door in the room where the appliance is located. **WARNING** All ranges can tip and injury could result. To reduce the risk of tipping of the appliance from abnormal usage by excessive loading of the oven door, the appliance must be secured to wall and floor by installing the Anti-Tip device supplied. If it is not, there is a possible risk of the range tipping over and causing injury if you or a child stand, sit or lean on an open door. Please refer to the Anti-Tip device information in the Installation Manual. 6 Do not repair or replace any part of appliance unless specifically recommended in this manual.

All other servicing should be referred to a qualified technician. Drawer or near surface units. Do not store or use combustible materials, gasoline or other flammable vapors and liquids in the vicinity of this appliance. 7 Do not store flammable materials in an oven, Microwave 8 Do not use water on grease fires.

Smother a flame or use a dry chemical or foam-type extinguisher.

Flaming grease outside a pan can be put out by covering it with baking soda or, if available, by a multi-purpose dry chemical or foam-type fire extinguisher. on hot surfaces may result in burns from steam. Do not let potholders touch hot surfaces, radiant surface units or heating elements. Do not use a towel or other bulky cloth. **CAUTION** Do not store items of interest to children in cabinets above a range or on the backsplash of a range.

Children climbing on the range to reach items could be seriously injured. 9 Use only dry potholders - a moist or damp potholder 10 11 Do not touch the surface units, heating elements or the To check if the device is properly installed and engaged, look underneath the range with a flashlight to make sure one of the rear leveling legs is properly engaged in the bracket slot. The Anti-Tip device secures the rear leveling leg to the floor when properly engaged. You should check this anytime the range has been moved. interior surface of the oven. These surfaces may be hot even though they are dark in color. These surfaces may become hot enough to cause burns. During and after use, do not touch or let clothing or other flammable materials contact surface units, heating elements or interior surfaces of oven until they have had sufficient time to cool. Other potentially hot surfaces include: cooktop, areas facing the cooktop, oven vent opening, surfaces near the vent opening, oven door and window and area around the door. breaker or fuse.

Mark it for easy reference. **SAFETY PRECAUTIONS** When using electrical appliances, basic safety precautions should be followed, including the following: 1 Use this appliance only for its intended purpose as 12 Have the installer show you the location of the circuit 13 Before performing any service, disconnect the range power supply at the household distribution panel by removing the fuse or switching off the circuit breaker. described in this manual. 14 Do not allow anyone to climb, stand or hang on the 2 Be sure your appliance is properly installed and grounded by a qualified technician in accordance with the provided installation instructions. door, Microwave Drawer or cooktop. They could damage the range and even tip it over, causing severe personal injury. part of the range. 3 Never use appliance for warming or heating the room..



[Your user manual](#)
[LG MC-808WAR](#)