

HANNSpree Quick Start Guide

ST59-23H1 23" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.


Front View

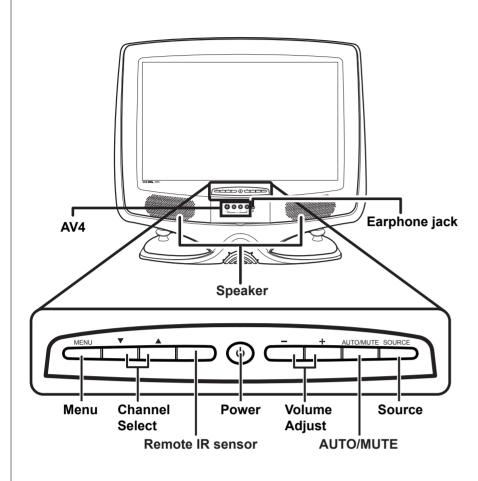

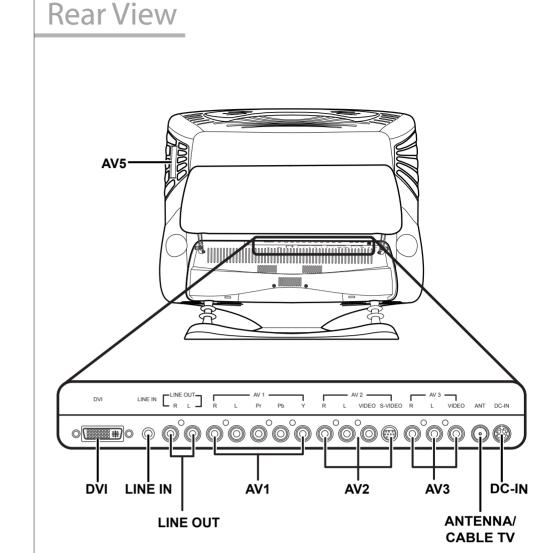


Making Connections

Connecting to Antenna/Cable TV/ PC/AV Devices

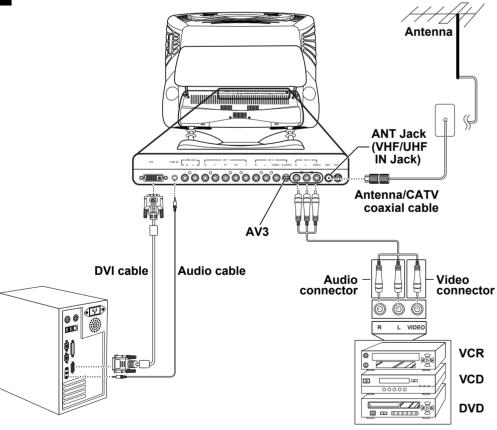

Connecting the Power Adapter

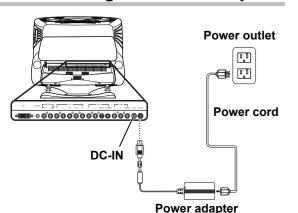

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel
- 3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

Images are for illustration only and may vary by model or region.

 
Getting Started


Watching Broadcast or Cable TV

- 1. Press the **POWER** button to turn on your LCD TV.
- 2. Press the **SOURCE** button to select "TV".
- 3. Press the **MENU** button to open the OSD menu.
- 4. Press the **CH**▲ or **CH**▼ button to select "TV".
- 5. Press the **VOL +** button to enter "TV MENU"
- 6. Press the CH▲ or CH▼ button to select "SYSTEM". 7. Press the VOL + button to select "AUTO, B/G, D/K, I".

Selecting A/V Sources

- 1. Make sure your TV is turned on and a device such as a DVD player is connected.
- 2. Press **SOURCE** key on the control panel to select different source signals. The TV channel number, PC or



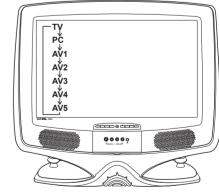

Auto Program

Auto Channel Setup

Please follow the instructions by using the control panel.

- 1. Press the **MENU** button to enter the OSD menu.
- 2. Use the CH ▼ button to select "TV".
- 3. Press the **VOL +** button to enter the TV setting.
- 4. Press the **CH** ▼ button until the "Auto Program" feature is selected.
- 5. Press the **VOL +** button to begin "Auto Program".
- 6. Your television will begin automatically memorizing the available channels.

TV Menu

