

**CANON**

**FAX – L900**

**SIMPLIFIED**

**GUIDE**

# CONTENTS

	<b>PAGE</b>
<b>SUPER G3 FAX-L900</b>	
I To Register Sender's Identification	3
II Sending Documents	4
III Setting Up Speed Dialing	
A One-touch Speed Dial	5
B Coded Speed Dial	6
C Group Dial	7
IV To Erase Auto-Dialing Numbers	
A One-touch Speed Dial	8
B Coded Speed Dial	8
C Group Dial	8
V Sending To More Than One Location (Sequential Broadcasting)	9
VI Sending At A Preset Time (Delayed Transmission)	10
VII To Print Documents Received In The Memory	11
VIII To Re-send Documents Received In Memory To A Different Destination (If No. VII above is not possible)	12
IX To Print Reports & Lists	
A Speed Dial Lists	13
B Activity Management Report	13
C Document Memory List	13
X To Make A Photocopy	14
XI To Request For A Transmission (TX) Report Only For A Particular Sending	15

	<b>PAGE</b>
<b>SUPER G3 FAX-L900</b>	
XII Setting Up Transmission (TX) Report For Every Document Sent Out	16
XIII Erasing A Document That Is Queuing To Be Sent From The Memory	17



## TO REGISTER SENDER IDENTIFICATION

### I. INPUT YOUR FAX NUMBER AND COMPANY NAME

1. Open panel cover
2. Press **DATA REGISTRATION**
3. Press **SET** to display “1. USER SETTINGS”
4. Press **SET** to display “1. DATE & TIME”
5. Press **▼** to display “2. UNIT TELEPHONE #”
6. Press **SET**
7. Enter your fax number
8. Press **SET** to display “3. UNIT NAME”
9. Press **SET**
10. Enter your company or personal name  
Register the name by pressing the buttons on the numeric keypad

### CODE NUMBERS FOR ALPHABETS AND SYMBOLS

<u>NUMERIC KEY</u>	<u>ALPHABETS</u>	<u>NUMERIC KEY</u>	<u>ALPHABETS</u>
2	A,B,C	6	M,N,O
3	D,E,F	7	P,Q,R,S
4	G,H,I	8	T,U,V
5	J,K,L	9	W,X,Y,Z
#	symbols		

Press **>** to enter next alphabet

Press **SPACE** to enter a space

Press **\*** to enter a digit

11. Press **SET**
12. To end, press **STOP**

## **II SENDING A DOCUMENT**

### **A. DIRECT SENDING**

1. Place documents face down on the fax
2. Press **DIRECT TX**
3. Enter fax number
4. Press **START/SCAN**

### **B. MEMORY SENDING**

1. Place documents face down on the fax
2. Make sure **DIRECT TX** is “off”
3. Enter fax number
4. Press **START/SCAN**
5. Take note of “TX / RX ” number

### **C. ONE-TOUCH / CODED DIAL SENDING**

1. Place documents face down on the fax
2. Press the appropriate one-touch key OR  
Press **CODED DIAL** and a three-digit code
3. Take note of “TX / RX ” number

**N.B.** If direct sending is required, activate **DIRECT TX** before step No. 2

### **TO STOP SENDING**

- A. During a **DIRECT TX** sending, press **STOP**
- B./C. During a memory sending, press **STOP**, then \* to confirm

### **III TO STORE FAX NUMBERS**

#### **A. ONE-TOUCH SPEED DIAL ( 01-KEY TO 72-KEY )**

1. Open panel cover
2. Press **DATA REGISTRATION**
3. Press **▼** to display “**2. TEL REGISTRATION**”
4. Press **SET** twice
5. Press **▼** (if necessary) until an empty space appears
6. Press **SET** twice
7. Enter fax number
8. Press **SET** twice
9. Enter name  
Register the name by pressing the buttons on the numeric keypad

#### **CODE NUMBERS FOR ALPHABETS AND SYMBOLS**

<u>NUMERIC KEY</u>	<u>ALPHABETS</u>	<u>NUMERIC KEY</u>	<u>ALPHABETS</u>
2	A,B,C	6	M,N,O
3	D,E,F	7	P,Q,R,S
4	G,H,I	8	T,U,V
5	J,K,L	9	W,X,Y,Z
#	symbols		

Press **>** to enter next alphabet

Press **SPACE** to enter a space

Press **\*** to enter a digit

10. Press **SET**
11. To continue, press **DATA REGISTRATION**
12. Repeat steps **No. 5** to **No. 10**
13. To end, press **STOP**

**B. CODED SPEED DIAL (\*000 TO \*127)**

1. Open panel cover
2. Press **DATA REGISTRATION**
3. Press **▼** to display “**2. TEL REGISTRATION**”
4. Press **SET**
5. Press **▼** to display “**2. CODED SPD DIAL**”
6. Press **SET**
7. Press **▼** (if necessary) until an empty space appears
8. Press **SET** twice
9. Enter fax number
10. Press **SET** twice
11. Enter name (refer to **A.9.** on III : TO STORE FAX NUMBERS : ONE-TOUCH SPEED DIAL)
12. Press **SET**
13. To continue, press **DATA REGISTRATION**
14. Repeat steps **No. 7** to **No. 12**
15. To end, press **STOP**

### **C. TO PROGRAM GROUP DIAL**

1. Open panel cover
2. Press **DATA REGISTRATION**
3. Press **▼** to display “**2. TEL REGISTRATION**”
4. Press **SET**
5. Press **▼** to display “**3. GROUP DIAL**”
6. Press **SET**
7. Press **▼** (if necessary) until an empty space appears
8. Press **SET** twice
9. Close panel cover & press desired one-touch keys & / or the coded speed dial numbers
10. Press **SET** twice
11. Enter name for the above group dialer (refer to **A.9.** on III : TO STORE FAX NUMBERS : ONE-TOUCH SPEED DIAL)
12. Press **SET**
13. To continue, press **DATA REGISTRATION**
14. Repeat steps **No. 7** to **No. 12**
15. To end, press **STOP**



#### **IV TO ERASE A SPEED DIAL**

##### **TO CANCEL A NUMBER IN THE ONE-TOUCH SPEED DIAL**

1. Follow steps **A.1.** to **A.4.** (Refer to III : TO STORE FAX NUMBERS : ONE-TOUCH SPEED DIAL)
2. Close panel cover & press desired one-touch key
3. Press **SET** twice
4. Press **CLEAR**
5. Press **SET**
6. Press **STOP**

##### **TO CANCEL A NUMBER IN THE CODED SPEED DIAL**

1. Follow steps **B.1.** to **B.6.** (Refer to III : TO STORE FAX NUMBERS : CODED SPEED DIAL)
2. Press **CODED DIAL** followed by the relevant 3-digit code
3. Press **SET** twice
4. Press **CLEAR**
5. Press **SET**
6. Press **STOP**

##### **TO CANCEL A GROUP DIALER**

1. Follow steps **C.1.** to **C.6.** (Refer to III : TO STORE FAX NUMBERS : GROUP DIAL)
2. Close panel cover & press the desired group dialer using one-touch key OR **CODED DIAL** & the relevant 3-three digit code
3. Press **SET** twice
4. Press **CLEAR** for each of the speed dialers that are to be deleted
5. To confirm, press **SET**
6. Press **SET** again if the name of the group dialer remains unchanged
7. Press **STOP**

**V**                    **SENDING TO MORE THAN ONE LOCATION**  
**(SEQUENTIAL BROADCASTING)**

**A.    USING ONE-TOUCH / CODED SPEED DIAL**

1. Place documents face down on the fax
2. Press all the relevant one-touch / coded-dial numbers one right after another
3. Press **START/SCAN**
4. Take note of “ TX / RX ” number

**B.    MANUAL DIALING FROM THE NUMERIC 10-KEY PAD**

1. Place documents face down on the fax
2. Enter one fax number
3. Press **SET**
4. Continue steps 2. & 3. until all the fax numbers (maximum 10 destinations) have been entered
5. Press **START/SCAN**
6. Take note of “ TX / RX ” number

**C.    COMBINATION OF (A) & (B)**

If some destinations are from auto-dialers and some are not, follow steps **A.1.** & **A.2.** then **B.2.** to **B.6.**

**N.B.** Please check on the ***MULTI TRANSACTION REPORT*** which will be generated out after the broadcast is completed to ensure that the broadcast is successful.

**VI TO SEND DOCUMENTS AT A LATER TIME**  
**(DELAYED TRANSMISSION)**

1. Open panel cover
2. Press **DELAYED TRANSMISSION**
3. Enter the desired time (time set must be within 24hours from the time on the display)
4. Press **SET**
5. Enter the fax number
6. Press **SET** twice
7. Place documents face down on the fax
8. Take note of “TX / RX ” number

Machine will now scan documents into the memory.

**TO CANCEL A DELAYED TRANSMISSION**

Refer to *XIII* on “Erasing A Document From The Memory”

## **VII WHEN THE FAX DISPLAYS “RECEIVED IN MEMORY”**

Display screen flashes message “**RECEIVED IN MEMORY**” repeatedly.

1. Refill paper supply or replace toner cartridge
2. Press **START/SCAN**

Machine will start to print the received documents from the memory.

## VIII RE-SENDING

*IF No.VII ABOVE IS NOT POSSIBLE*, EACH DOCUMENT RECEIVED IN THE MEMORY CAN BE RE-SENT INDIVIDUALLY TO ANOTHER DESTINATION FOR PRINTING

1. Open panel cover
2. Press **MEMORY REFERENCE**
3. Press **▼** to display “**4. RESEND DOCUMENT**”
4. Press **SET**
5. Press **▼** if necessary to select a new “**TX/RX No.**” (must be greater than 5000)
6. Press **SET** to display “**SELECT LOCATIONS**”
7. Dial the fax number
8. Press **SET** twice

Machine will now start to send the document as specified.

## IX TO PRINT REPORTS AND LISTINGS

### A. SPEED DIAL LIST

1. Open panel cover
2. Press **REPORT**
3. Press **√** to display **“2. SPEED DIAL LIST”**
4. Press **SET**
5. Press **√** to search for desired list  
i.e. “1. 1-TOUCH LIST”, “2. CODED DIAL LIST” or  
“3.GROUP DIAL LIST”
6. Press **SET**
7. (a) If Group Dial list is selected, machine will now start to print  
(b) If 1-Touch or Coded Dial list is selected, display will show  
**“SORTED OUTPUT”**
8. Press **√** to select “1.NO” or “2.YES”  
(a) “1.NO” - list is printed in order of Speed Dial numeric list  
(b) “2.YES” - list is print in alphabetical order
9. Press **SET**

### B. TO PRINT A LIST OF PREVIOUS 40 TRANSACTIONS

1. Open panel cover
2. Press **REPORT**
3. Press **SET**

### C. TO PRINT DOCUMENT MEMORY LIST

To check the list of documents currently stored in the memory

1. Open panel cover
2. Press **REPORT**
3. Press **√** to select **“4.DOC MEMORY LIST”**
4. Press **SET**

**X MAKING COPIES**

1. Place documents face down on the fax
2. Press **COPY**
3. Press **√** to select paper cassette, if needed
4. Enter the number of copies required  
To re-enter the number, press **CLEAR**
5. Press **START/SCAN** to start copying  
To cancel the printing, press **STOP**

## **XI CONFIRMATION REPORT**

To Request For A Transmission (TX) Report Only For One Particular Sending

1. Press **PROGRAM**
2. Press \* to confirm
3. Start the usual sending

After the transmission, the machine will print TX REPORT for that sending only.



## **XII TRANSMISSION REPORT**

To set up Transmission (TX) Report For Every Document Sent Out

1. Open panel cover
2. Press **DATA REGISTRATION**
3. Press **SET**
4. Press **▼** to display **“2.REPORT SETTINGS”**
5. Press **SET** twice
6. Press **▼** to select **“OUTPUT YES”**
7. Press **SET**

### **XIII ERASING A DOCUMENT FROM THE MEMORY**

#### **A. Using the DELETE FILE Button**

1. Press **DELETE FILE**
2. Press **▼** to select the desired TX/RX number to be deleted
3. Press **SET**
4. To check the destination and time of the fax number, press **>**
5. Press **\*** to confirm deletion

#### **B. Using The MEMORY REFERENCE Button**

1. Press **MEMORY REFERENCE**
2. Press **▼** to select “**DELETE DOCUMENT**”
3. Press **SET**
4. Press **▼** to display the desired TX/RX number
5. Press **SET**
6. Press **\*** to confirm deletion
7. Press **STOP**