



PLAY SWING WITH CARRIER SEAT



**Assembly Instructions.
Adult Assembly Required.
Read all instructions before use.
Save instructions for future use.**

MODEL NUMBER:

01550

VERSION CODE:

1.0/0309/HF



Visit us online at www.badgerbasket.com

Toll-Free Customer Service: 1-800-236-1310 (Monday to Thursday 7:30 AM-4:30 PM CST)

Web: <http://www.badgerbasket.com/parts> • **E-mail:** parts1@badgerbasket.com

Mail: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163



BEFORE YOU BEGIN ASSEMBLY:

Check all parts and hardware. If anything is missing or not satisfactory, please **DO NOT** call the store or return the product to them. Contact Badger Basket. Most problems are resolved without you needing to leave home. When contacting us, please have this instruction manual, your product model number, and your product version code ready. For fastest service, go to <http://www.badgerbasket.com/parts>
Your Product Version Code is: 1.0/0309/HF

USE AND CARE INSTRUCTIONS:

Wipe metal and plastic parts clean with a damp cloth and mild soap as needed. Spot clean fabric as needed.



**WARNING - FAILURE TO FOLLOW THESE WARNINGS
AND THE INSTRUCTIONS COULD RESULT IN
SERIOUS INJURY OR DEATH**

READ ALL INSTRUCTIONS before use of this product. Keep instructions for future use. Use only the parts and hardware provided by Badger Basket. Do not use the product if it is damaged or broken. Product must be assembled by an adult. Product and/or hardware may include small parts or screws with sharp points. **Choking Hazard!** Keep unassembled parts out of the reach of small children. **DO NOT** allow anyone to climb or play on this product. **Periodically check** to make sure all the parts remain tight. **This item is designed for children who are THREE (3) YEARS OF AGE AND OLDER. IT IS A TOY ONLY AND NOT FOR USE WITH REAL INFANTS OR PETS.**


PARTS INCLUDED:

(A) 2 x PLASTIC BRACKETS

(B) 1 x TOP TUBE WITH STRAPS


(C) 2 x LEG FRAMES

(D) 1 x SWING SEAT/CARRIER SEAT

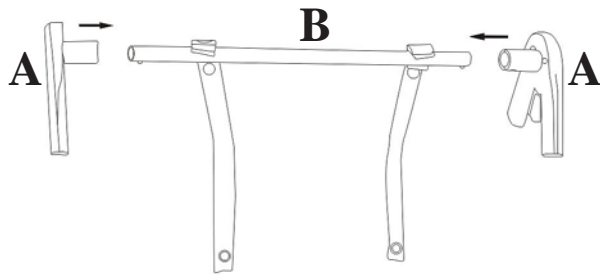


STEP 1:

Fully insert the ends of the TOP TUBE WITH STRAPS (B) into the posts on the PLASTIC BRACKETS (A).

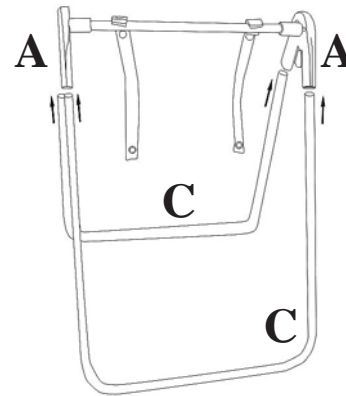

STEP 2:

Insert the LEG FRAMES (C) into the holes on the ends of the PLASTIC BRACKETS (A). Be sure the frames are inserted far enough to be tight and stable.

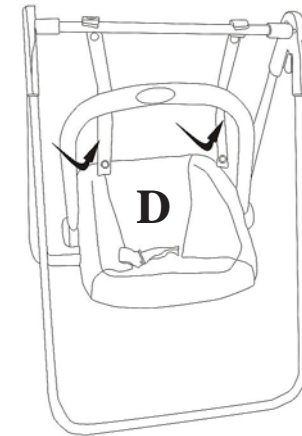

STEP 3:

Wrap the straps on the TOP TUBE (B) around the handle of the SWING SEAT/CARRIER SEAT (D) and secure the straps together.



The Swing is now ready for play!
For use with dolls up to 20 inches (50 cm).

The SEAT can be removed and reattached as needed to convert the item from a swing to carrier seat.

The angle of the seat can be adjusted by grasping the head and foot of the seat and tilting it back and forth to the desired position.

Seat harness can be buckled by threading the free end of the strap through both of the plastic loops (PHOTO 1). Then thread the end of the strap back through only one of the loops and pull tight (PHOTO 2).



PHOTO 1



PHOTO 2